



## PLASTIC SKID PLATE

# HONDA

## TRX 500 Foreman

Code 02.1120

Version 24082023





**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Skid plate	02.1121	1
2	Front part	02.1122	1
3	Front left arm protection	02.1116	1
4	Front right arm protection	02.1115	1
5	Rear protection (aluminium)	02.903K	1
6	Bracket	02.11122	1
7	Bracket	02.1018	2
8	Bracket	02.906	1
9	Bracket	02.907	2
10	Clamp 60mm	Fm 62	2
11	Bolt M6x16 DIN 933	OT.02.02.050	4
12	Bolt M6x25 DIN 7991	OT.02.04.040	4
13	Bolt M6x35 DIN 933	OT.02.02.090	2
14	Bolt M6x60 DIN 933	OT.02.02.140	2
15	Bolt M8x20 DIN 933	OT.02.02.180	11
16	Bolt M8x25 DIN 933	OT.02.02.190	6
17	Bolt M8x45 DIN 933	OT.02.02.230	2
18	Bolt M8x130 DIN 603	OT.02.05.100	4
19	Dished washer	14.503	13
20	Conical washer Ø6	14.502	4
21	Washer Ø6/15 SFS 3738	OT.04.03.020	12
22	Washer Ø8/20 SFS 3738	OT.04.03.030	12
23	Washer Ø8/24 DIN 9021	OT.04.02.040	2
24	Nyloc nut M6 DIN 985	OT.03.02.030	4
25	Nyloc nut M8 DIN 985	OT.03.02.040	6

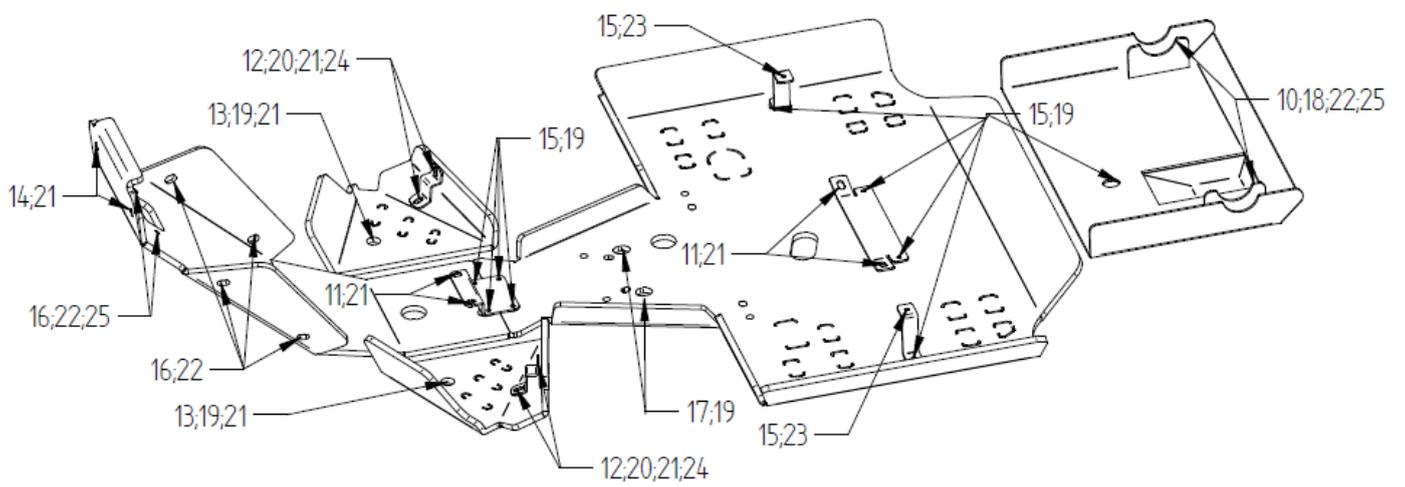
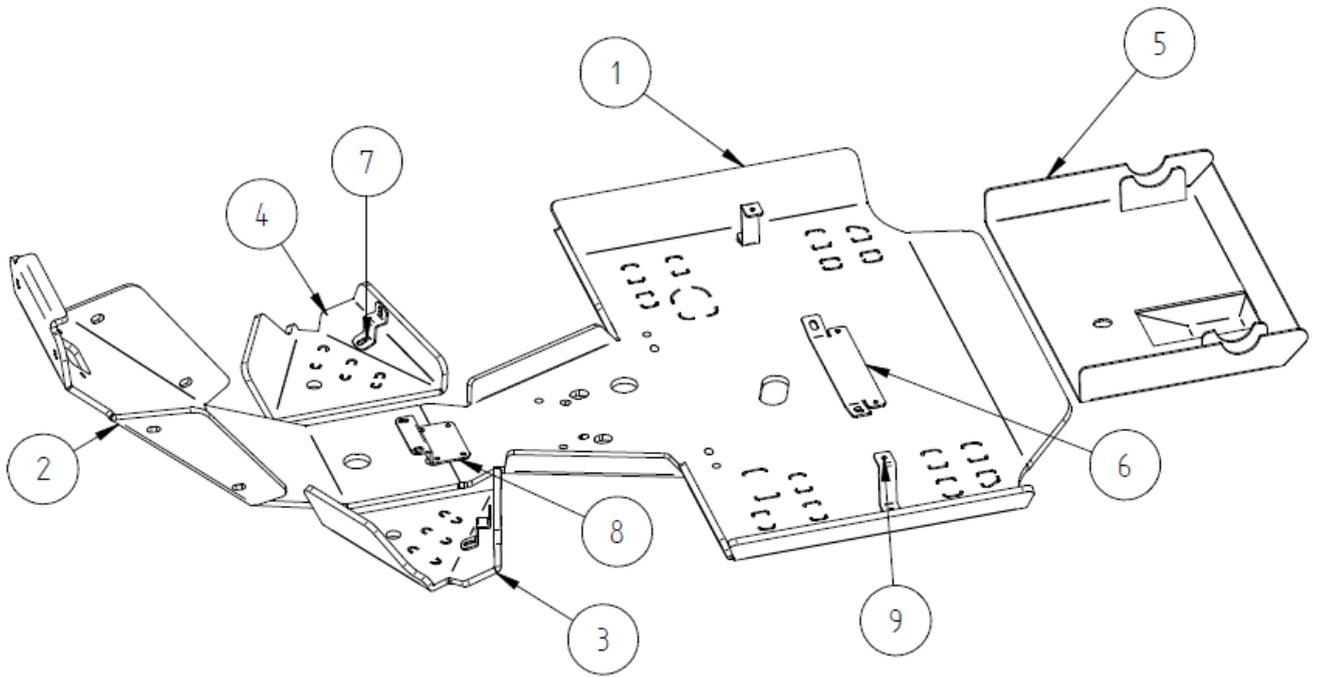


# FITTING INSTRUCTIONS



**Step 1** Remove all standard plastic covers and roller.





**Step 2** Instal brackets 02.906, 02.907 and 02.1112.

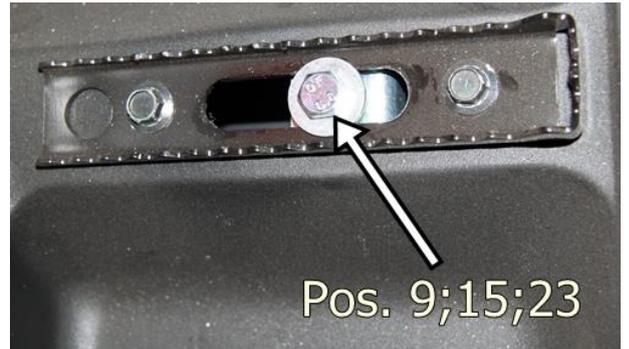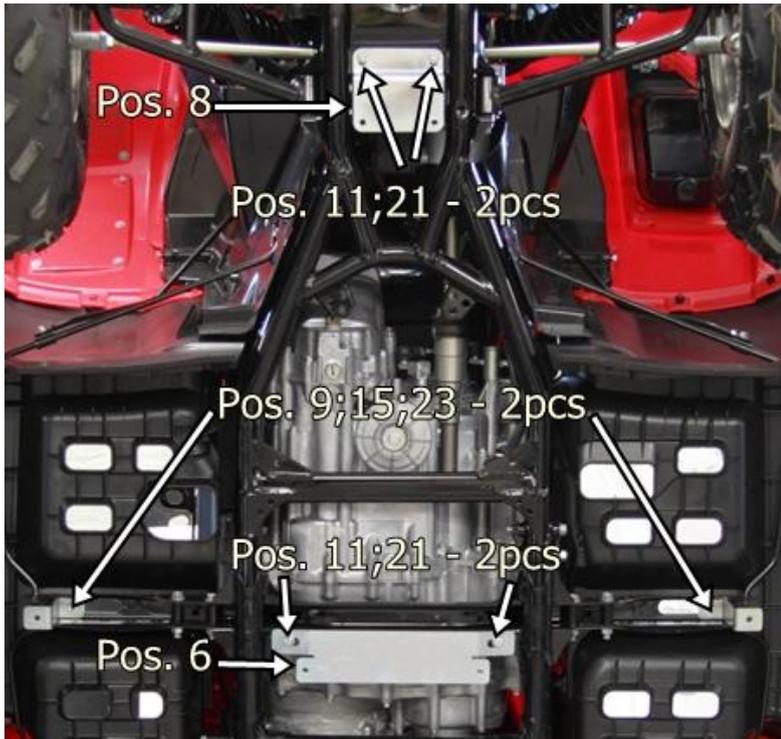

**Step 3** Instal skid plate 02.1121.

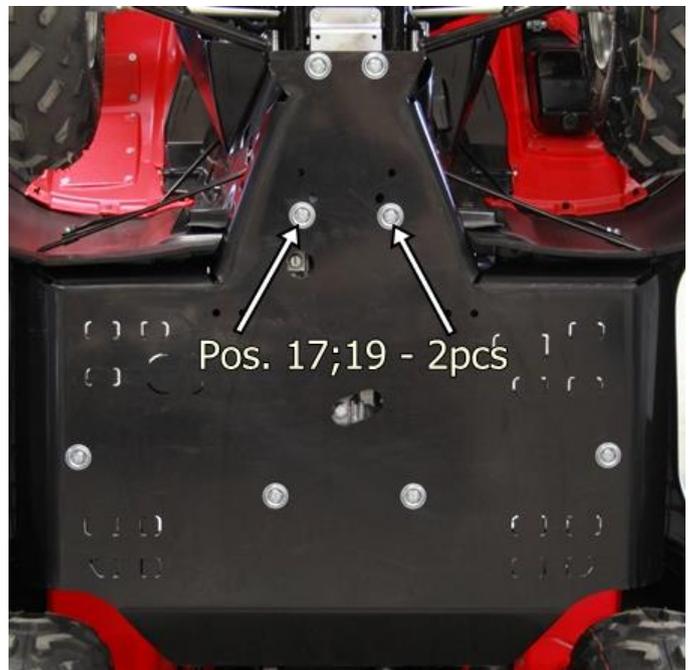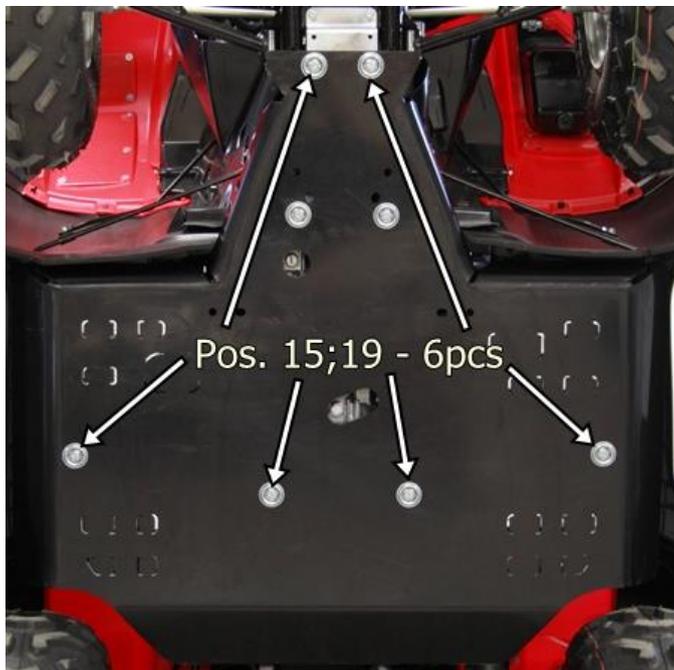


**Step 4** Instal front part, 02.1122.

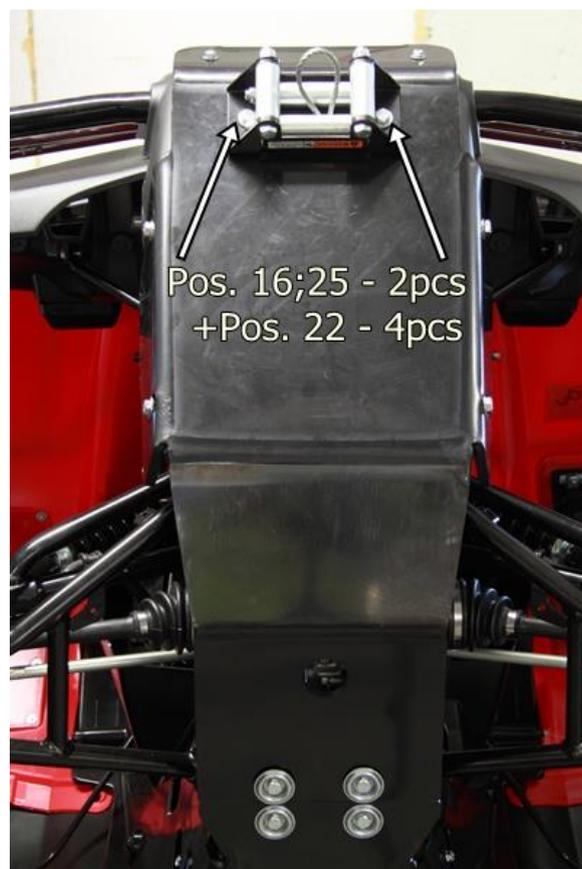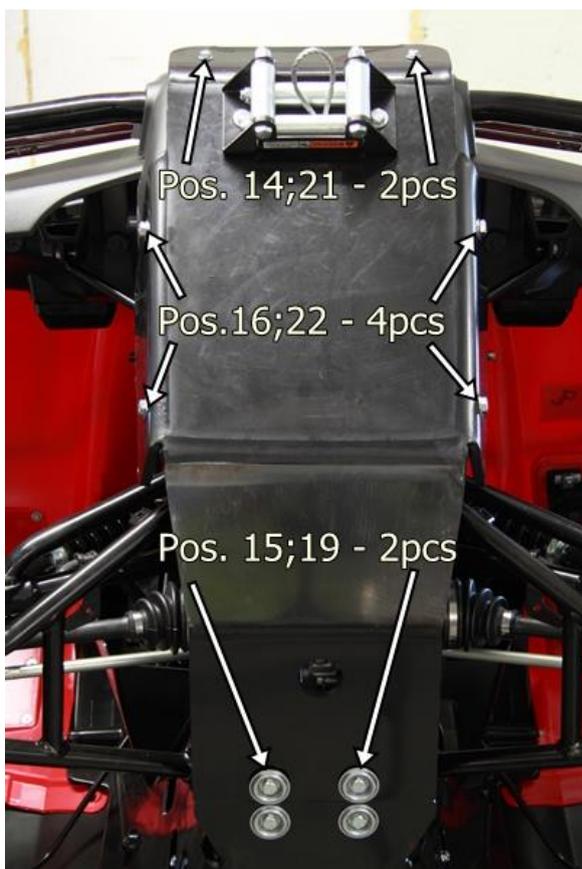


**Step 5** Instal front A-arms protections 02.1115, 02.1116.



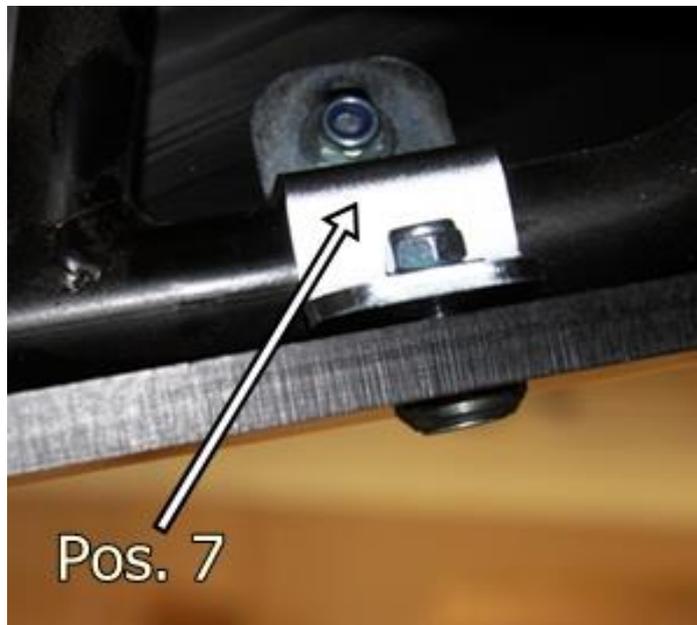

**Step 6** Instal rear part 02.903K.

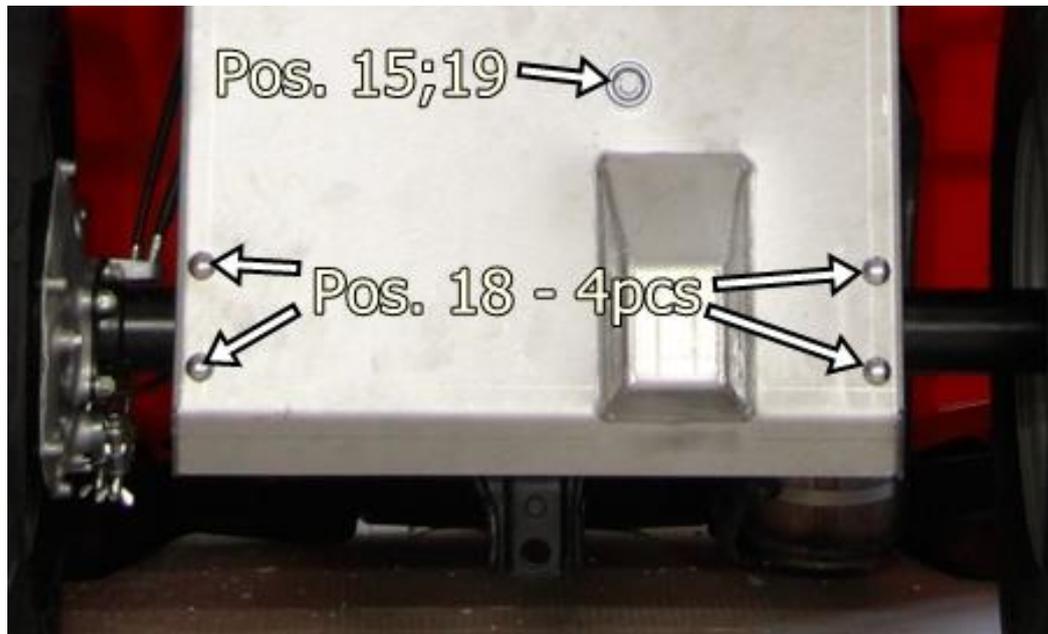

# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticld](https://www.youtube.com/user/ironbalticld)

