

IRON BALTIC

PLASTIC SKID PLATE

ARCTIC CAT MUDPRO 1000

Code 02.11300

Version 24082023

DOWNLOAD MULTILINGUAL
USER MANUAL





code.ironbaltic.com/u/ylcVpgtD

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Skid plate middle part	02.11301	1
2	Skid plate front part	02.11302	1
3	Skid plate rear part	02.11103	1
4	Front left arm protection	02.11104	1
5	Front right arm protection	02.11105	1
6	Rear left arm protection	02.11107	1
7	Rear right arm protection	02.11106	1
8	Bracket (shorter)	02.6609	2
9	Bracket (longer)	02.6610	2
10	Installation plate	02.5006	5
11	Installation bracket	02.4606	4
12	Dished washer	14.503	38
13	Bolt M6x16 DIN 933	OT.02.02.050	10
14	Bolt M6x25 DIN 7500D	OT.02.06.010	16
15	Bolt M6x30 DIN 933	OT.02.02.080	4
16	Bolt M8x25 DIN 933	OT.02.02.190	4
17	Bolt M8x40 DIN 933	OT.02.02.220	4
18	Bolt M8x45 DIN 933	OT.02.02.230	4
19	Washer Ø6/15 SFS 3738	OT.04.03.020	30
20	Washer Ø8/20 SFS 3738	OT.04.03.030	8
21	Nylock nut M8 DIN 985	OT.03.02.040	4

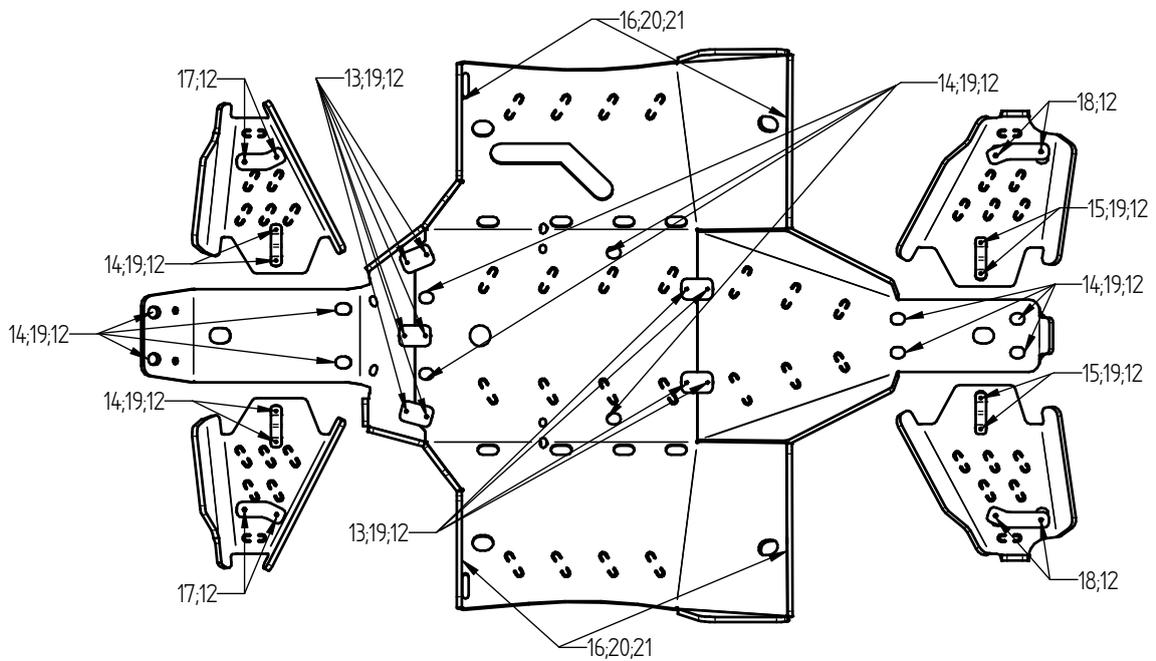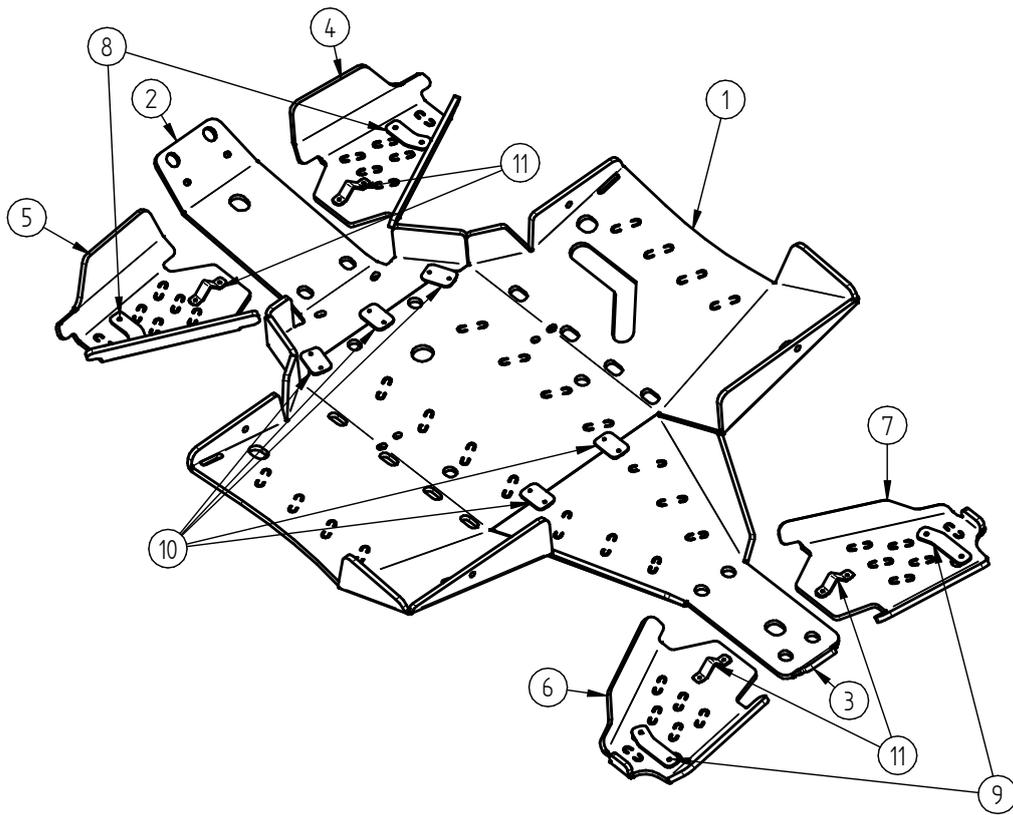


FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers.




Step 2

Install front swingarm protections 02.11104 and 02.11105.

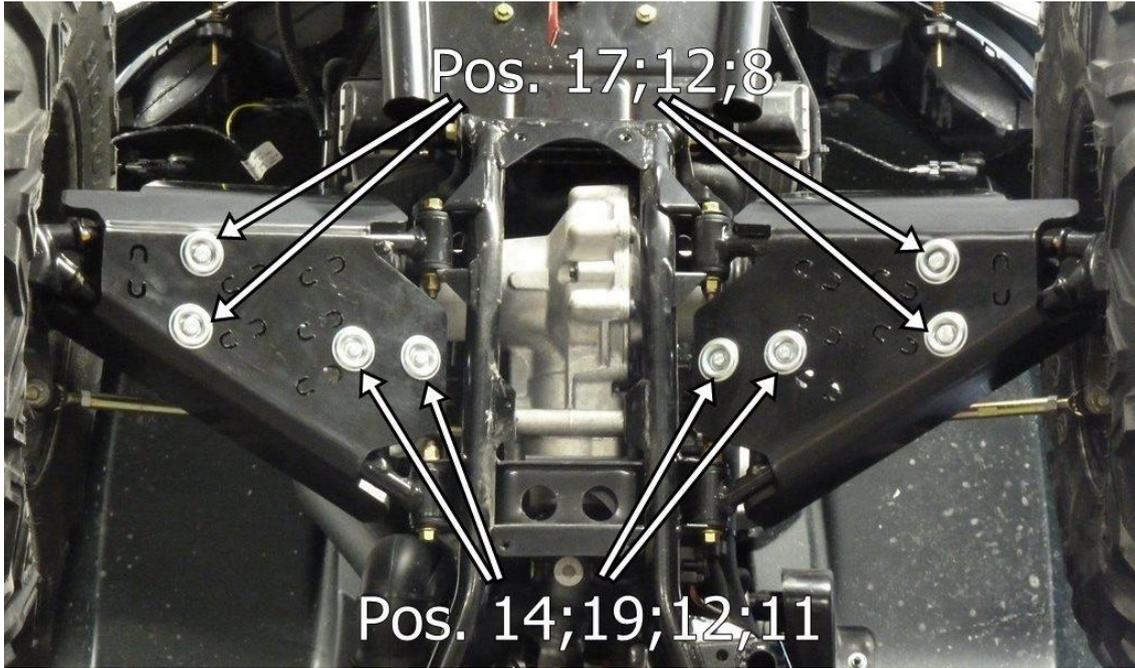


Step 3


Install rear swingarm protections 02.11106 and 02.11107.

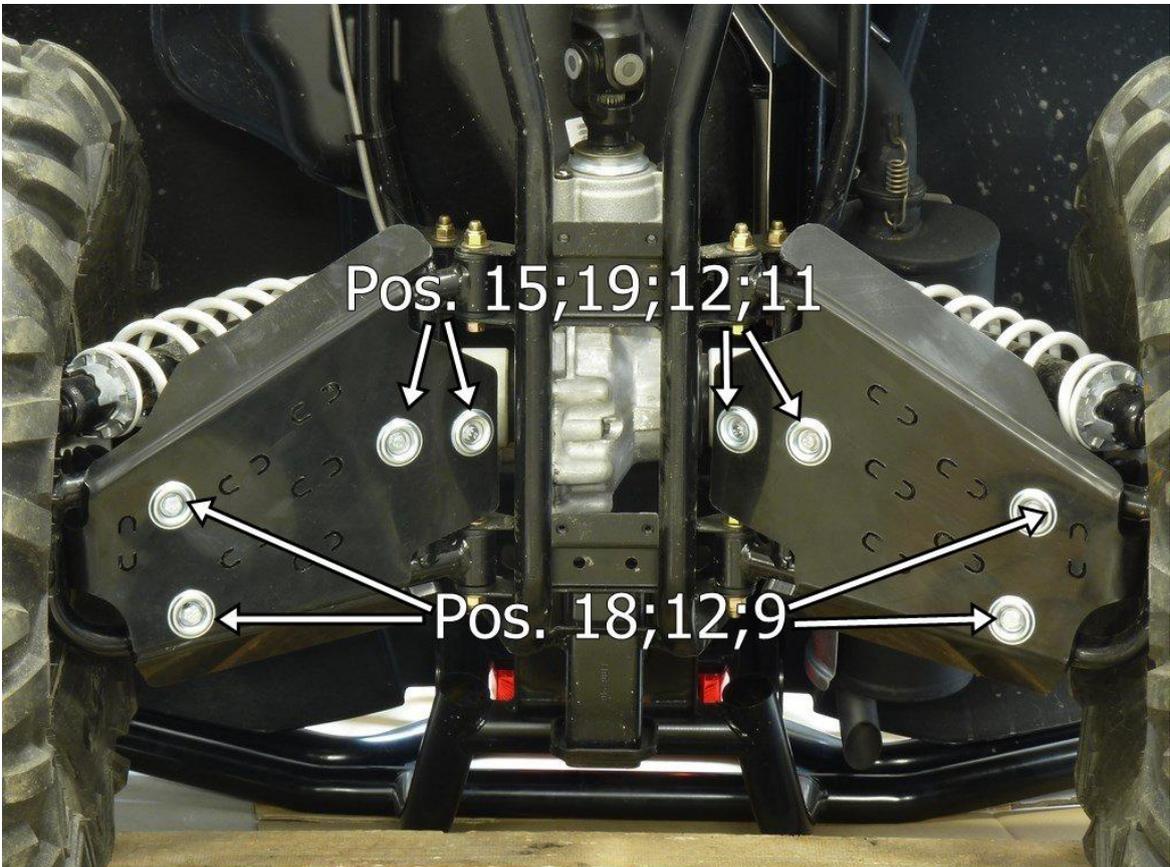


Step 4 Install middle protection 02.11301.

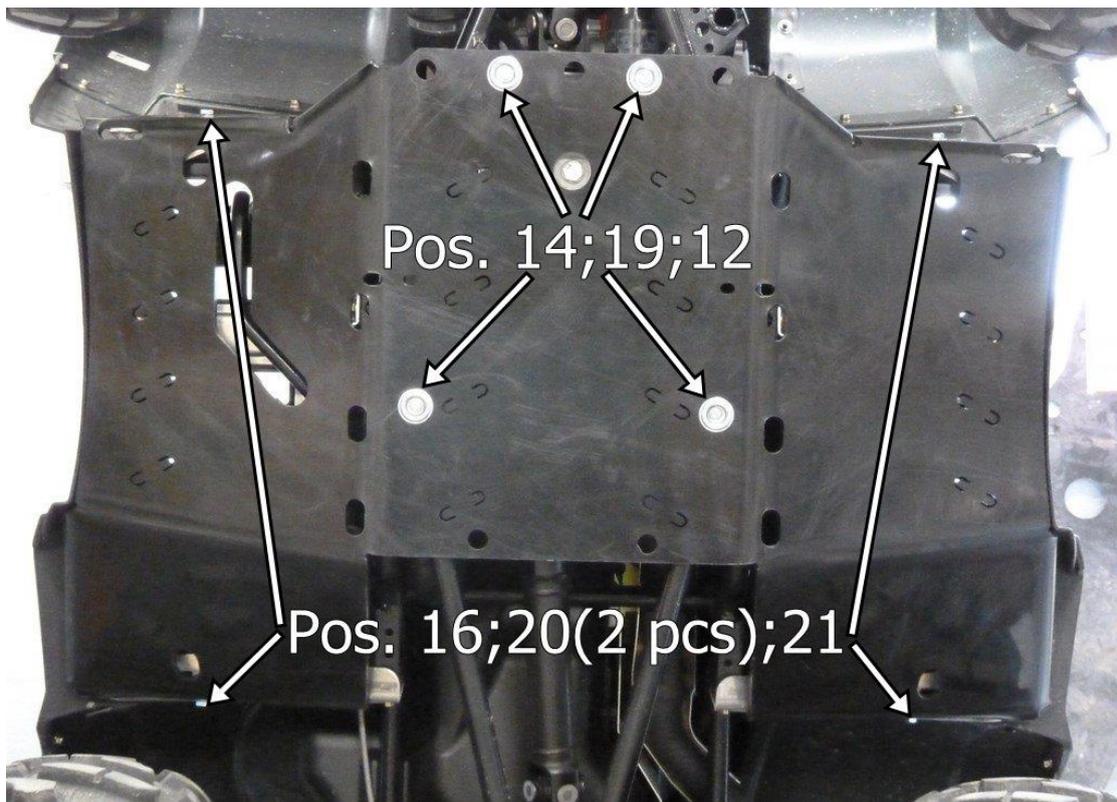


Step 5 Install plates 02.5006 to middle protection.

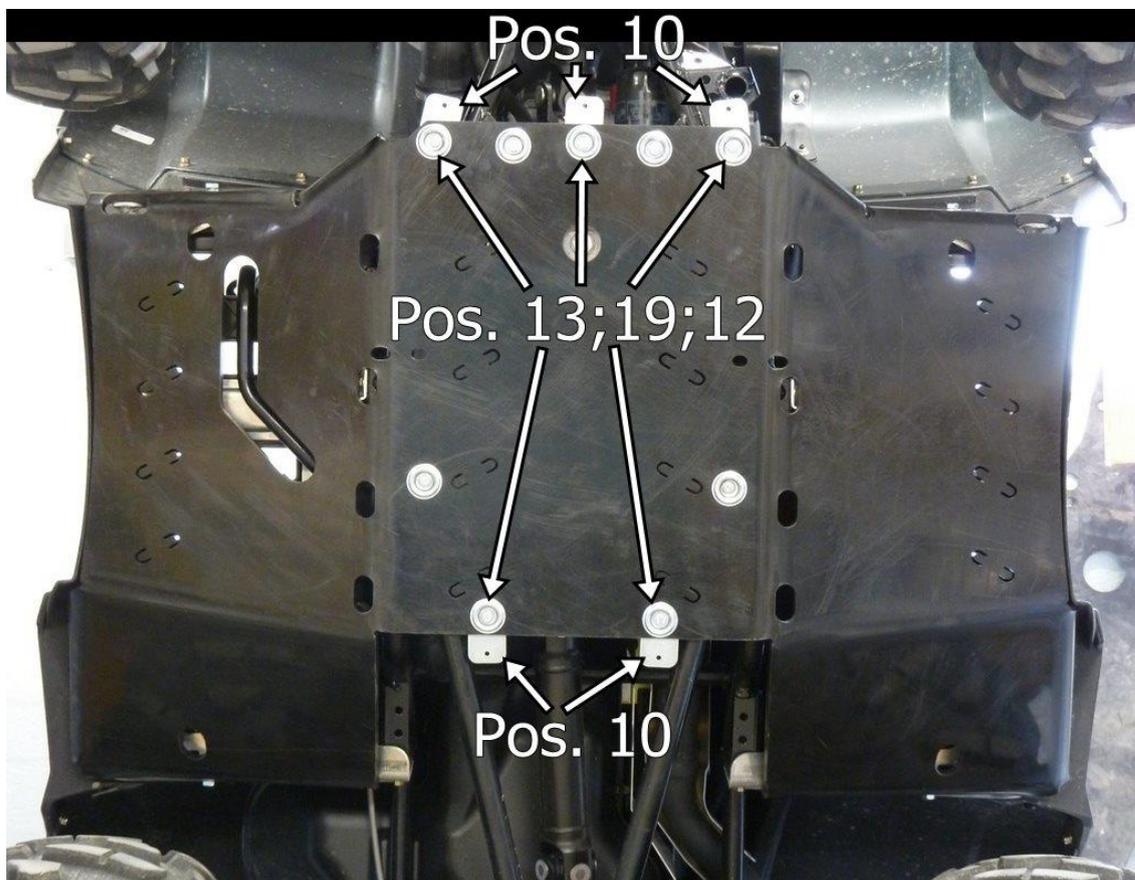

Step 6 Install front protection 02.11302.

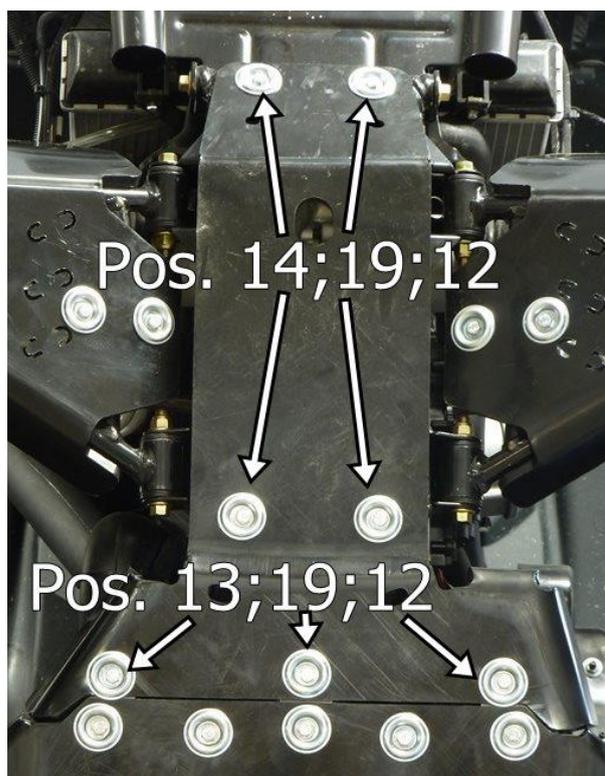

Step 7 Install rear protection 02.11103.

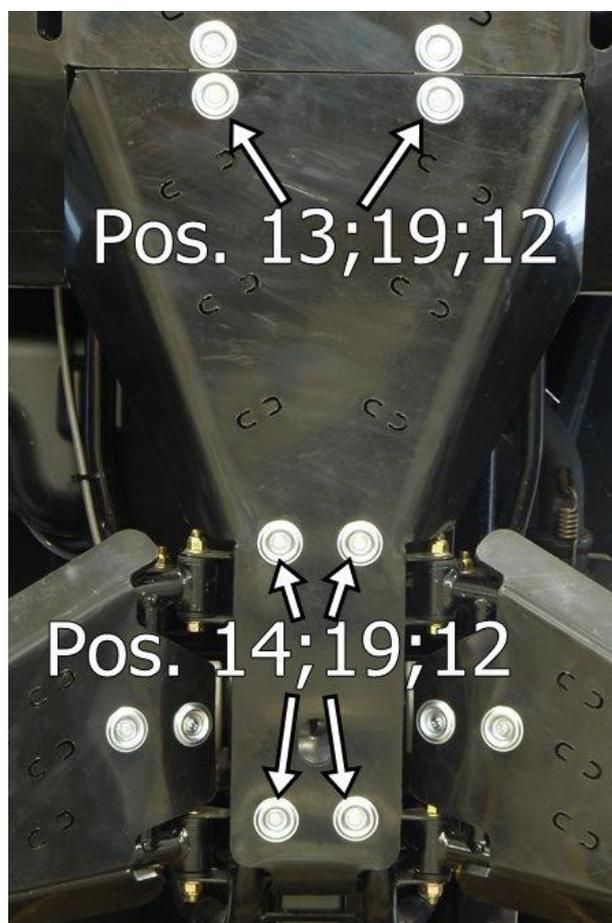

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

