

# IRON BALTIC

## PLASTIC SKID PLATE

# KAWASAKI

## KVF 650 / 750 BRUTEFORCE 4x4

Code 02.1150

Version 24082023

DOWNLOAD MULTILINGUAL  
USER MANUAL





[code.ironbaltic.com/u/TLFnSUNi](https://code.ironbaltic.com/u/TLFnSUNi)

**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)


# SPECIFICATION

Pos.	Description	Code	Amount
1	Skid plate	02.1155K	1
2	Front part	02.1156K	1
3	Front right arm protection	02.1157P	1
4	Rear right arm protection	02.1158P	1
5	Front left arm protection	02.1157V	1
6	Rear left arm protection	02.1158V	1
7	Plate	02.5006	2
8	Bolt M6x20 DIN 7991	OT.02.04.030	4
9	Bolt M6x25 DIN 7991	OT.02.04.040	6
10	Bolt M6x30 DIN 7991	OT.02.04.050	10
11	Bolt M6x40 DIN 7991	OT.02.04.070	4
12	Bolt M6x50 DIN 7991	OT.02.04.080	2
13	Bolt M6x60 DIN 7991	OT.02.04.090	2
14	Bolt M8x25 DIN 7991	OT.02.04.160	1
15	Washer Ø6	14.502	28
16	Washer Ø6/18 DIN 9021	OT.04.02.020	4
17	Washer Ø8	14.501	1
18	Nyloc nut M6 DIN 985	OT.03.02.030	4

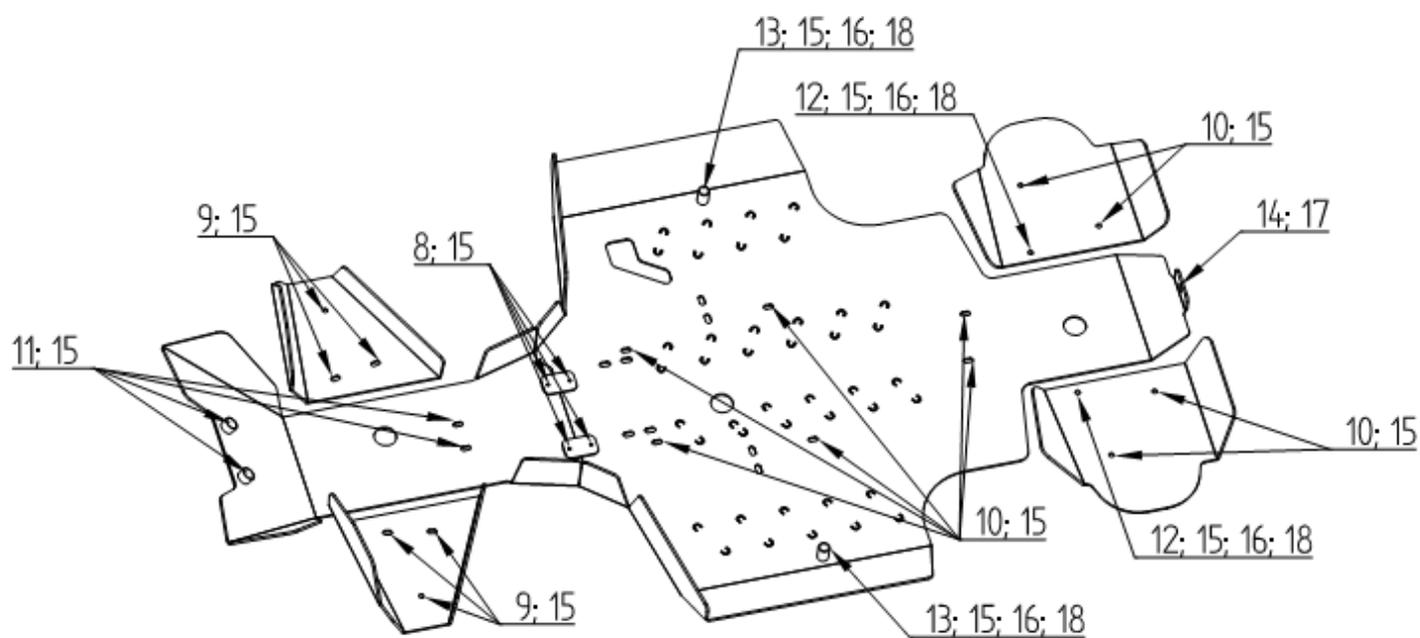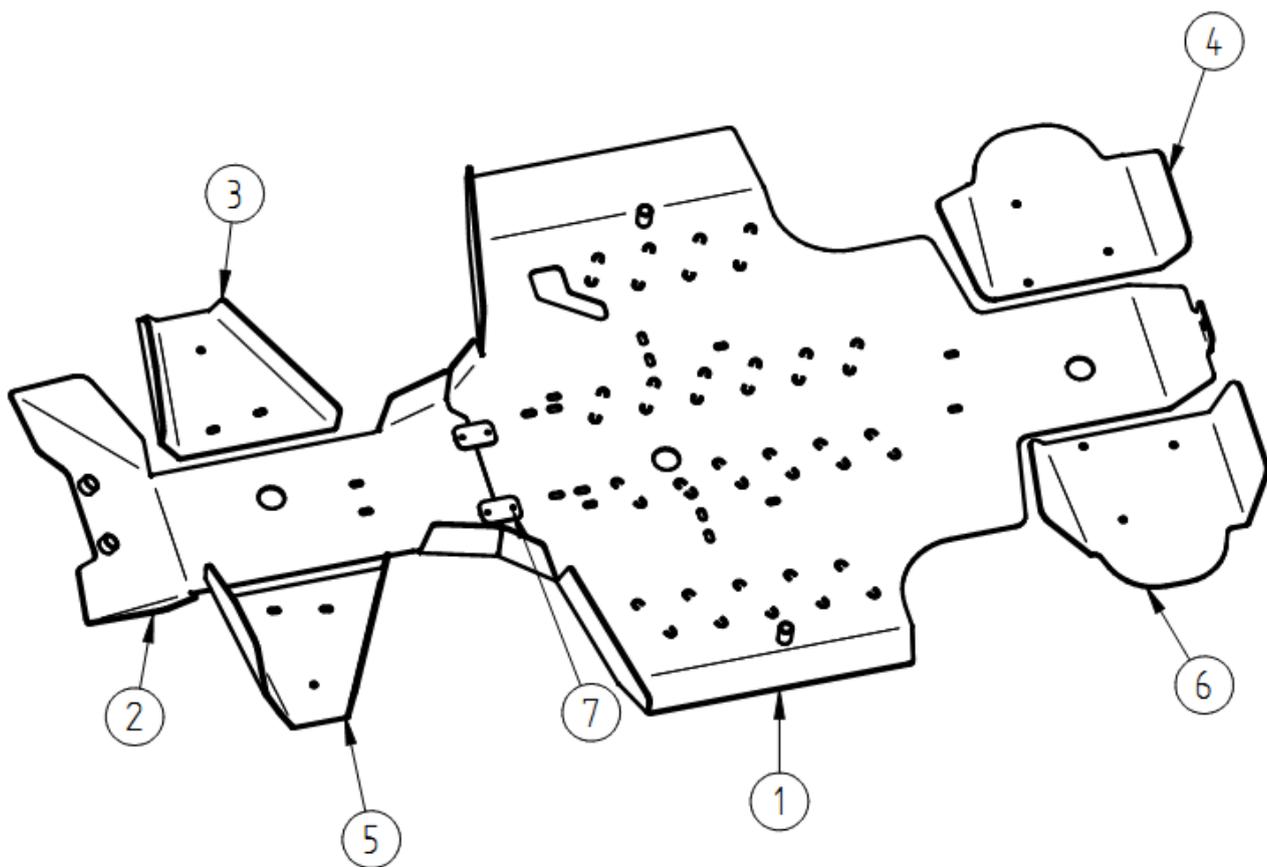


# FITTING INSTRUCTIONS


**Step 1** Remove all standard plastic covers.

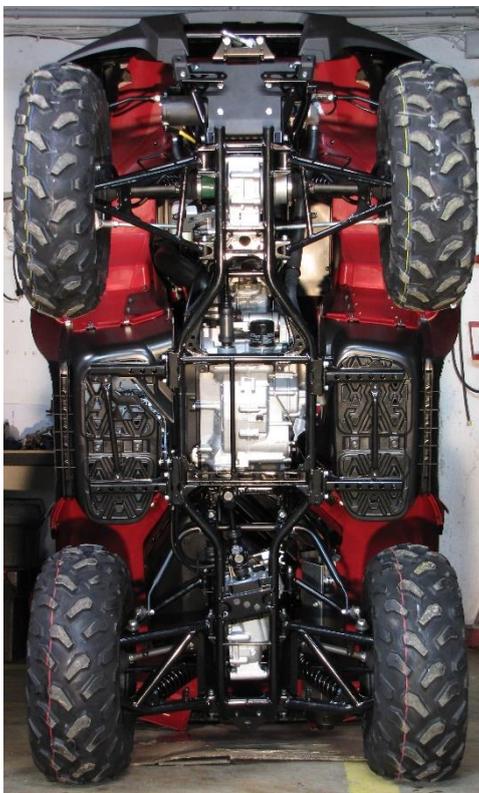


**Step 2** Install skid plate, use bolts M6x30, M6x60, M8x25 and nyloc nuts M6.

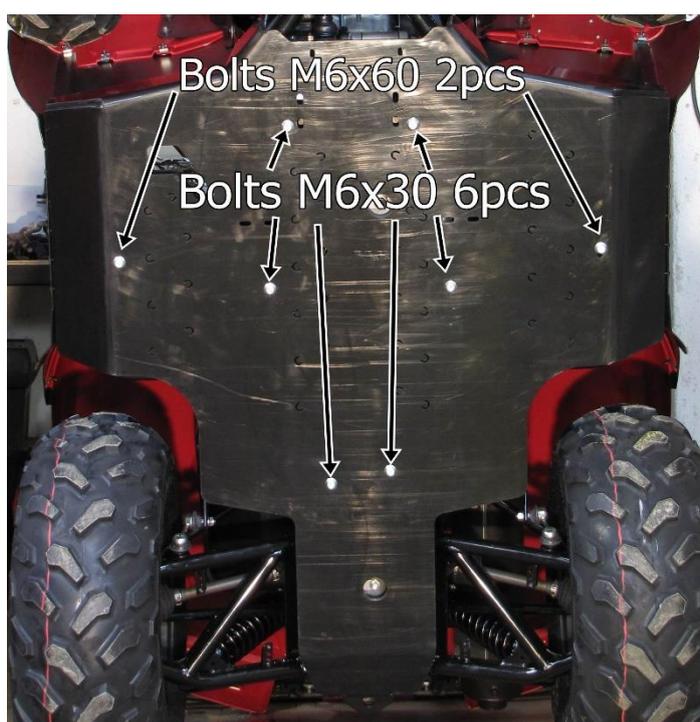


**Step 3** Install plates 02.5006 to skid plate, use bolts M6x20.

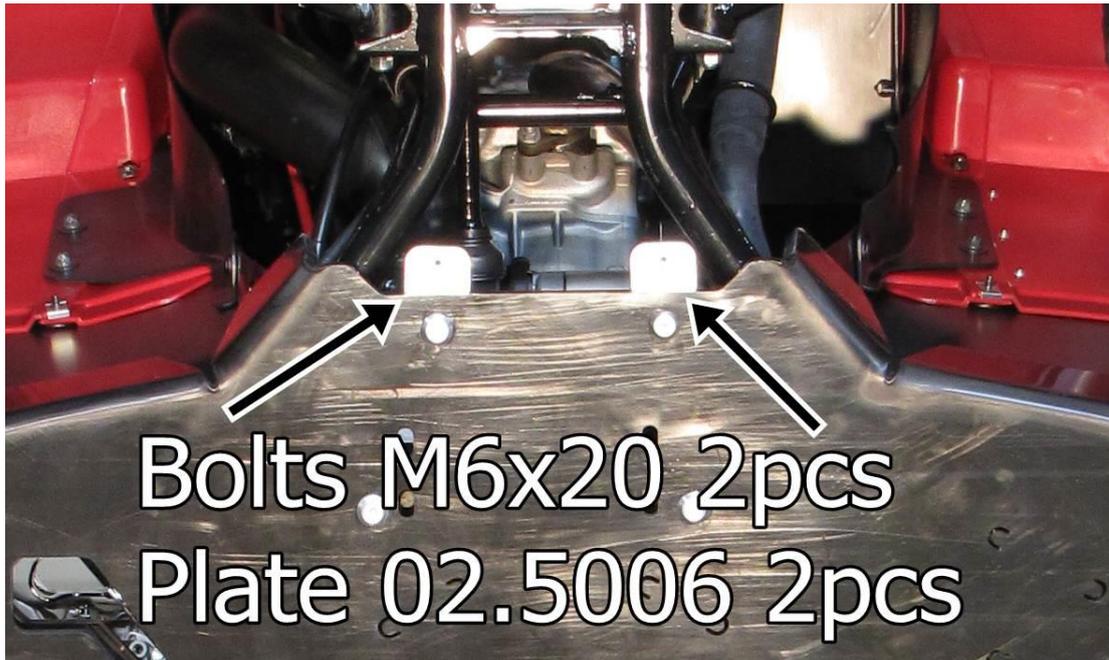


**Step 4** Install front part, use bolts M6x40 and M6x20.

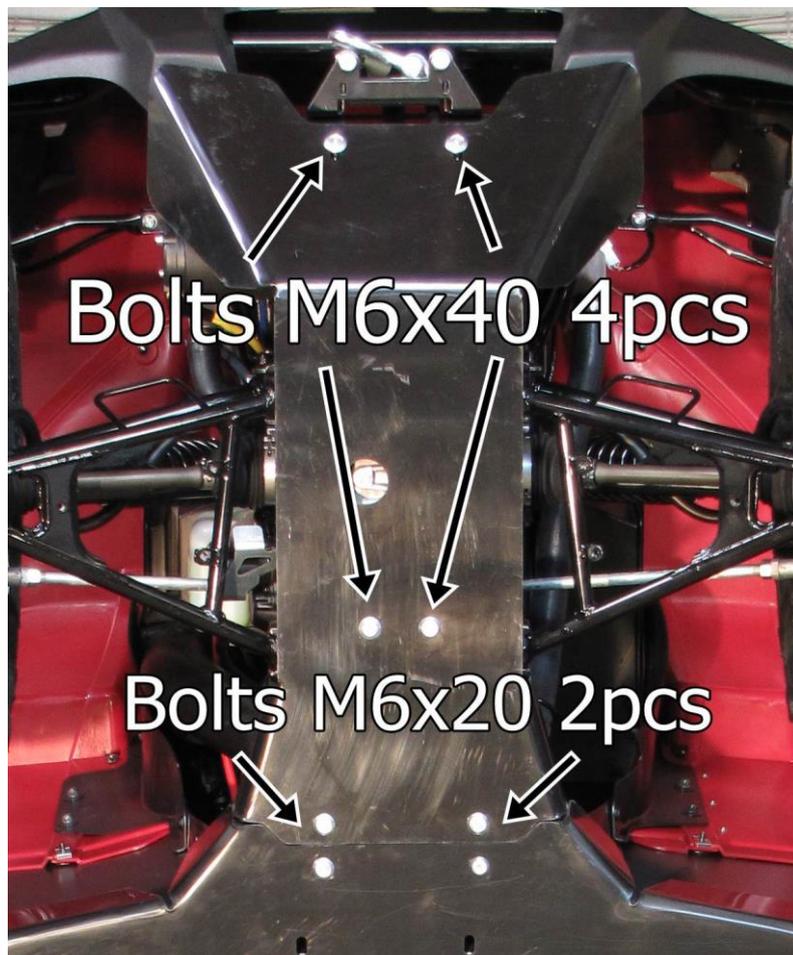

**Step 5** Install rear arms protections, use bolts M6x30, bolts M6x50 and nyloc nuts M6.

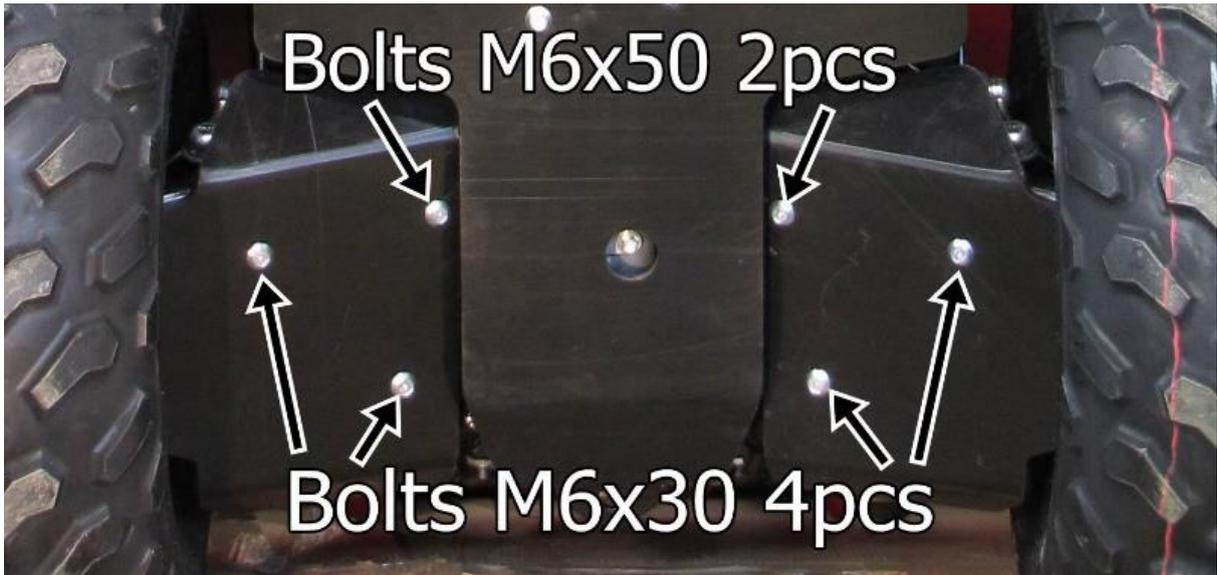

**Step 6** Install front arms protections, use bolts M6x25.

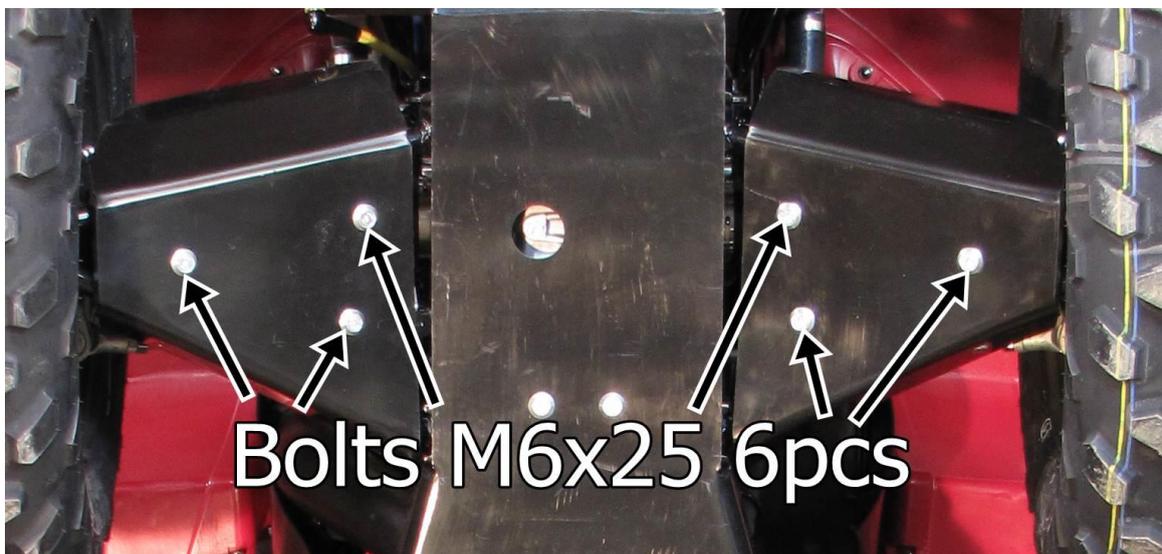



# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

