

IRON BALTIC

ALUMINIUM SKID PLATE


ARCTIC CAT

550 / 700 LIMITED

Code 02.11800

Version 25082023

DOWNLOAD MULTILINGUAL
USER MANUAL

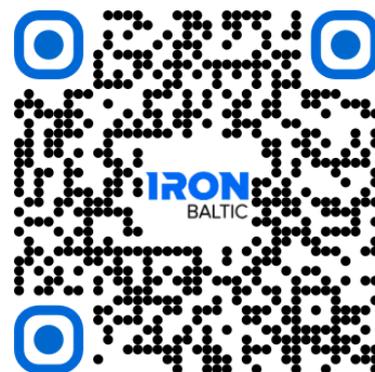



code.ironbaltic.com/u/pgpWz6eC

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Skid plate front part	02.11801	1
2	Skid plate middle part	02.9401K	1
3	Skid plate rear part	02.9403	1
4	Front right arm protection	02.6605	1
5	Front left arm protection	02.6606	1
6	Rear right arm protection	02.6607	1
7	Rear left arm protection	02.6608	1
8	Bracket (shorter)	02.6609	2
9	Bracket (longer)	02.6610	2
10	Installation plate	02.5006	5
11	Dished washer	14.503	30
12	Bolt M6x14 DIN 933	OT.02.02.040	10
13	Bolt M6x16 DIN 933	OT.02.02.050	10
14	Bolt M6x25 DIN 933	OT.02.02.070	2
15	Bolt M8x30 DIN 933	OT.02.02.200	6
16	Bolt M8x40 DIN 933	OT.02.02.220	4
17	Washer Ø6/15 SFS 3738	OT.04.03.020	24
18	Washer Ø8/20 SFS 3738	OT.04.03.030	2
19	Nylock nut M6 DIN 985	OT.03.02.030	2

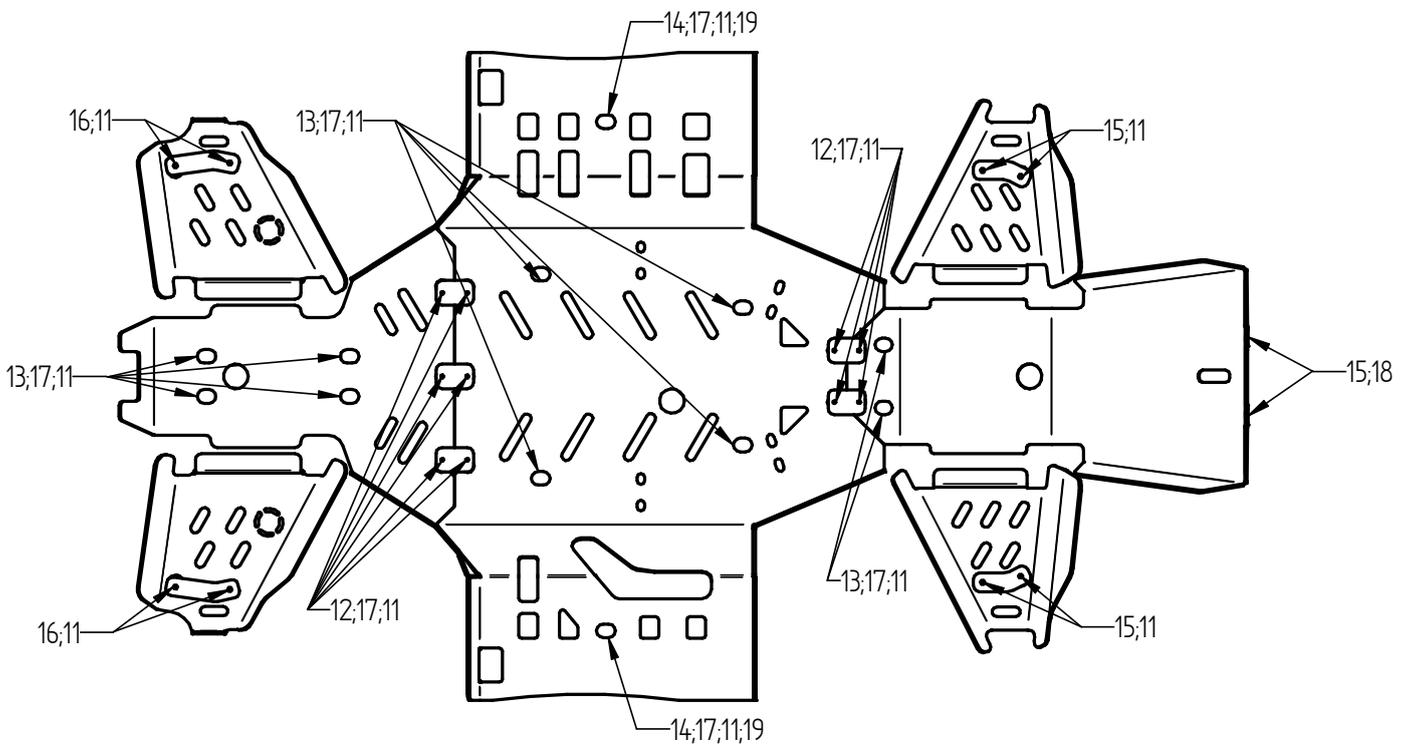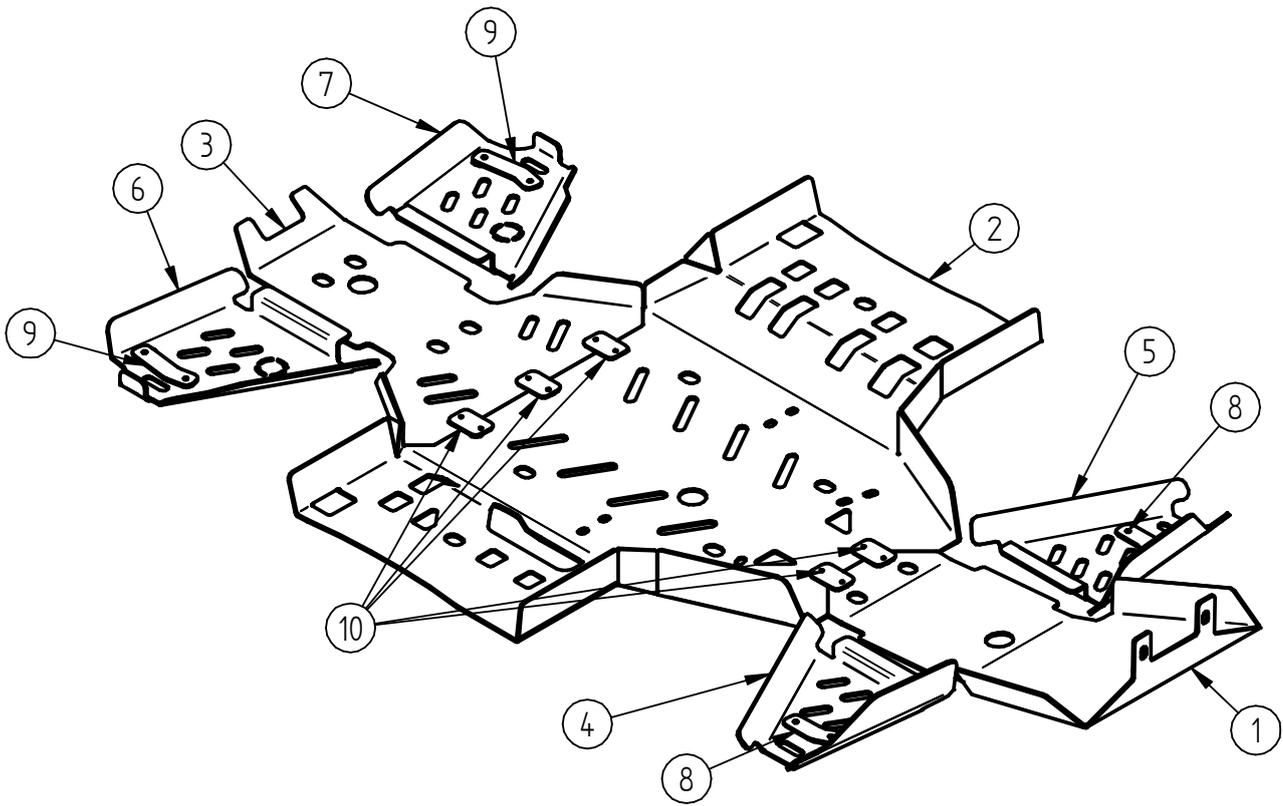


FITTING INSTRUCTION

Step 1 Remove all standard plastic covers.




Step 2 Install front swingarm protections 02.6605 and 02.6606.

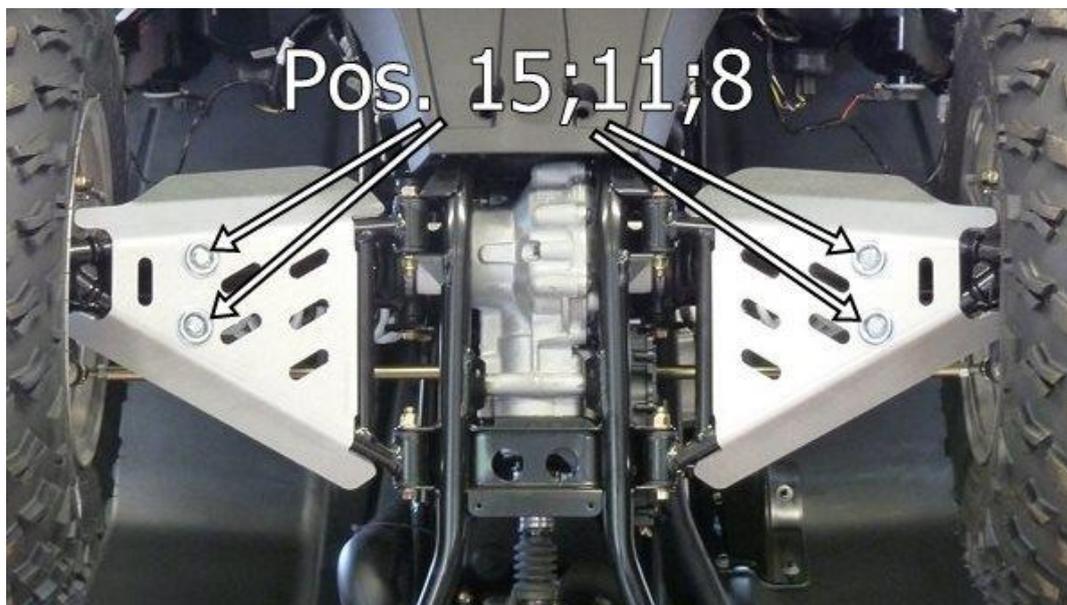


Step 3

Install rear swingarm protections 02.6607 and 02.6608.

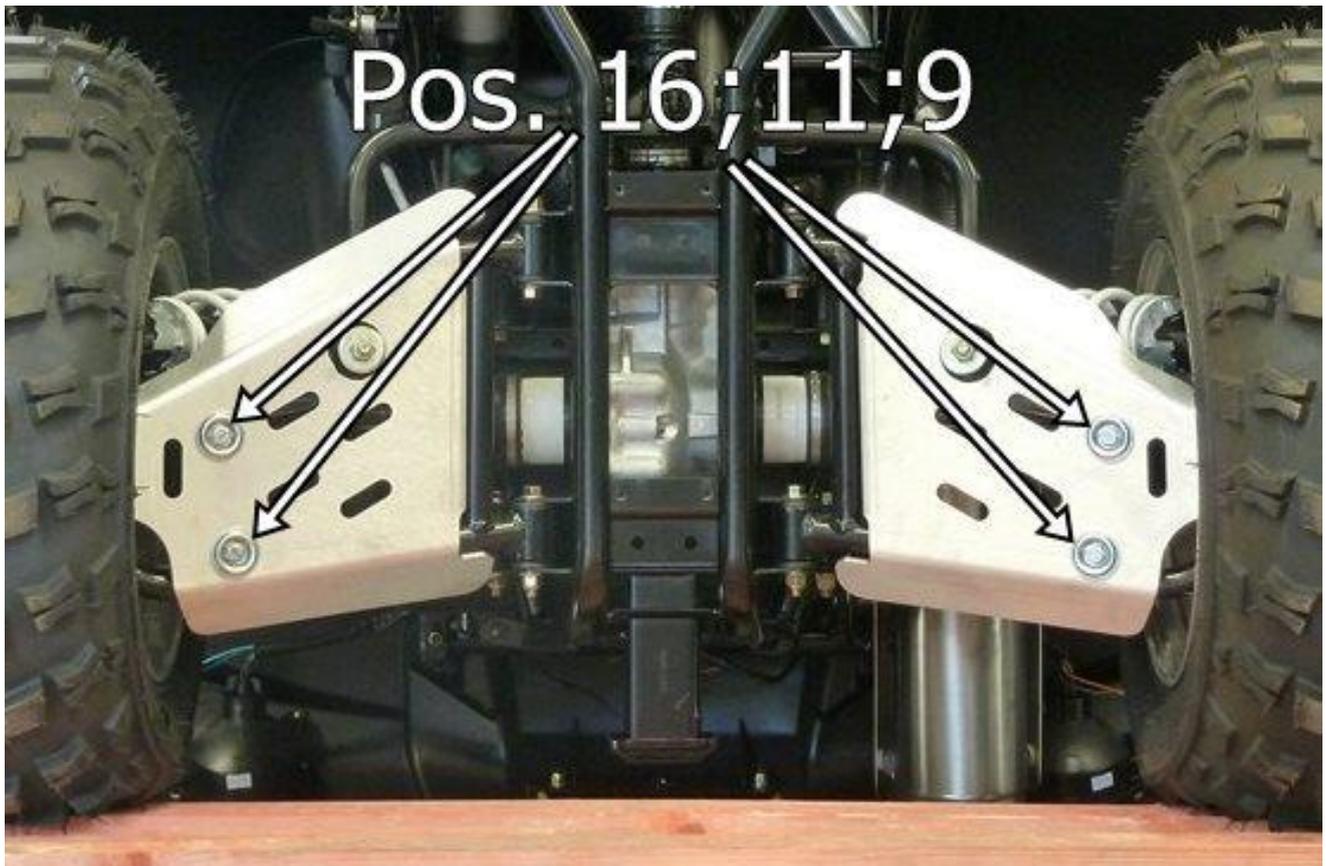


Note:


If ArcticCat is fitted with rear sway bar, then remove the cutout, indicated with arrow, from the rear protection.

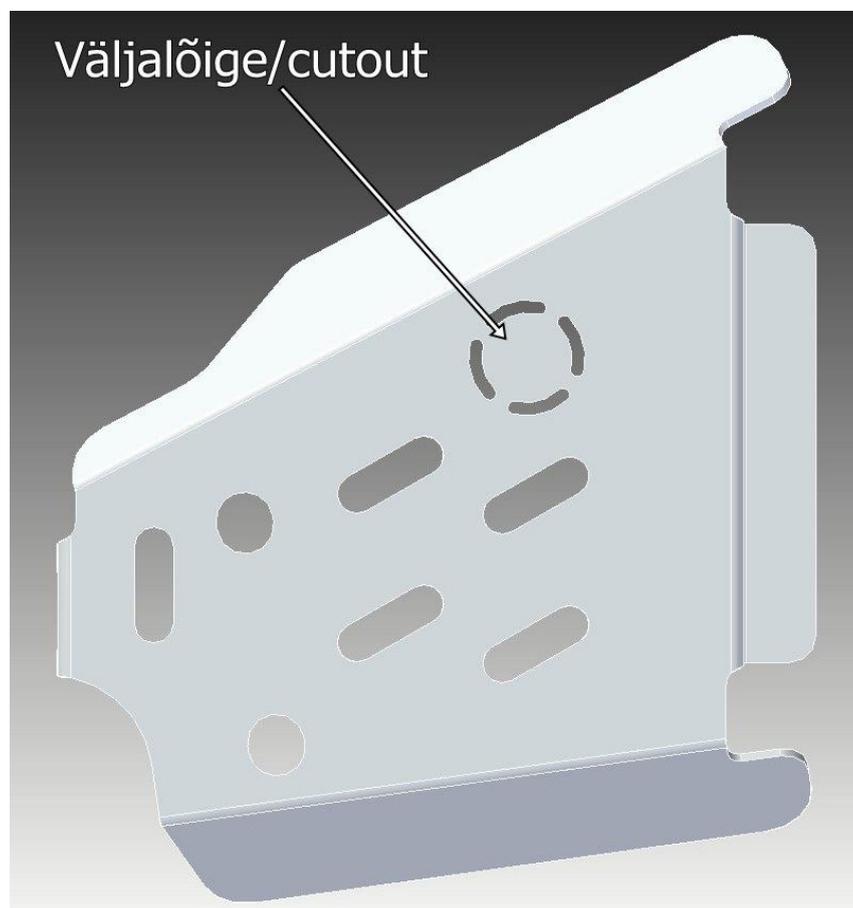

Step 4 Install middle protection 02.9401K.

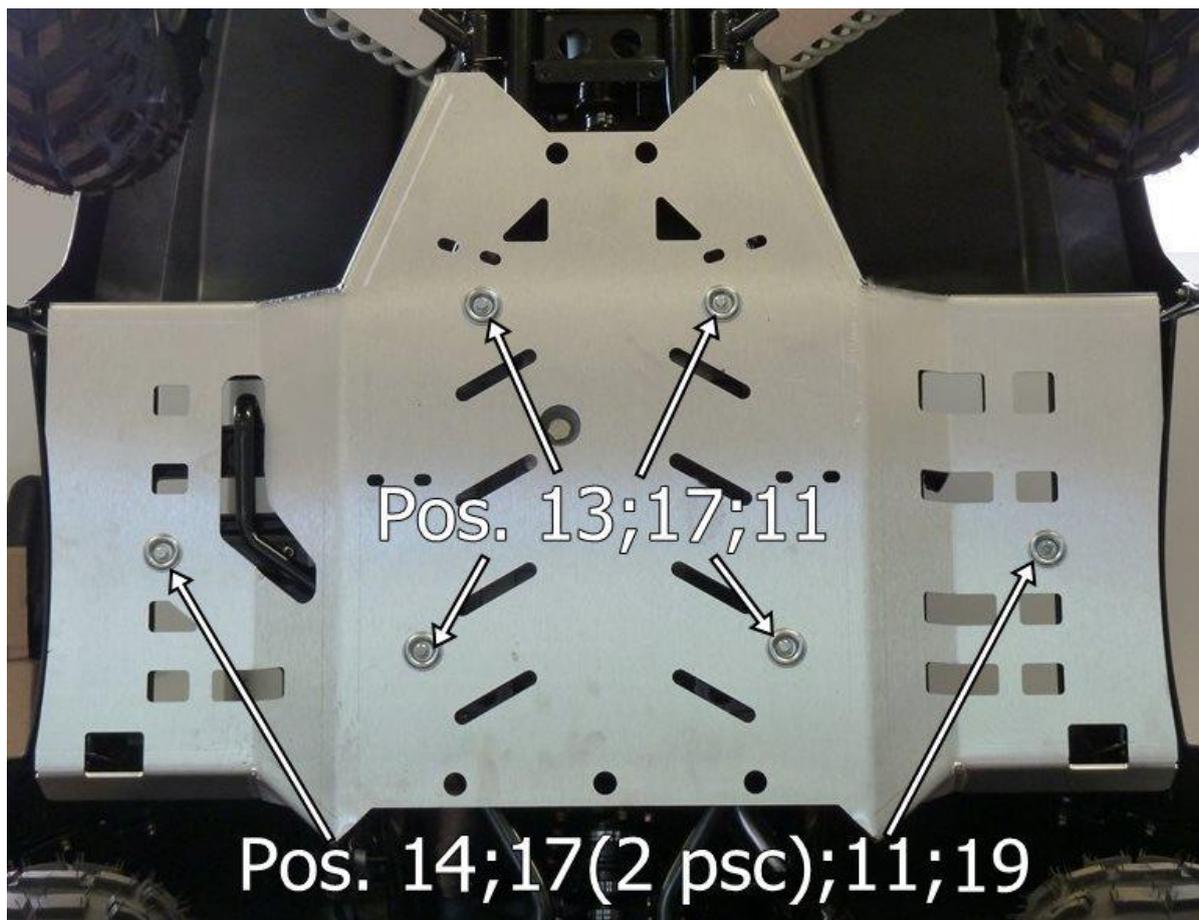


Step 5 Install plates 02.5006 to middle protection.

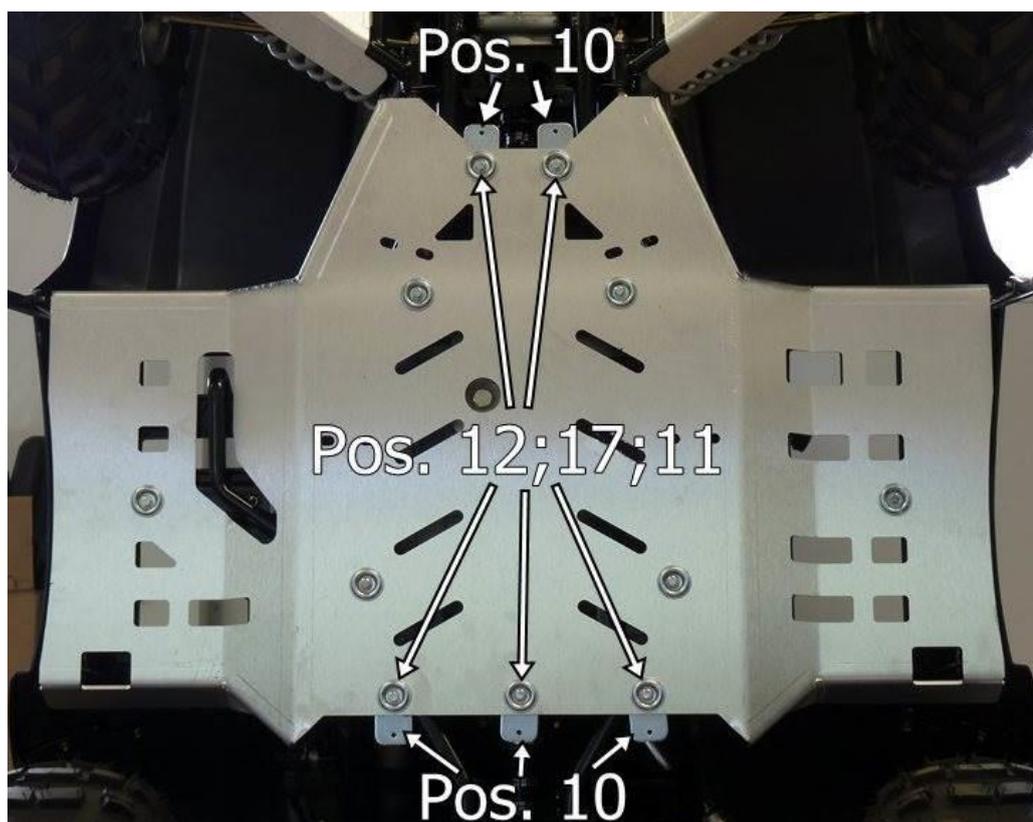

Step 6 Install front protection 02.11801.



Step 7 Install rear protection 02.9403.

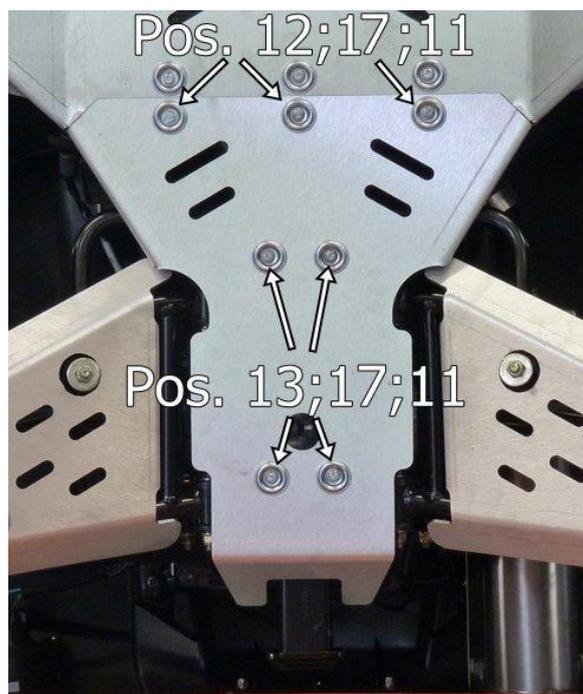

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

