

IRON BALTIC

DOWNLOAD MULTILINGUAL
USER MANUAL




code.ironbaltic.com/u/DhOMBo8r

PLASTIC SKID PLATE

ARCTIC CAT 550 / 700 LIMITED

Code 02.11900

Version 25082023


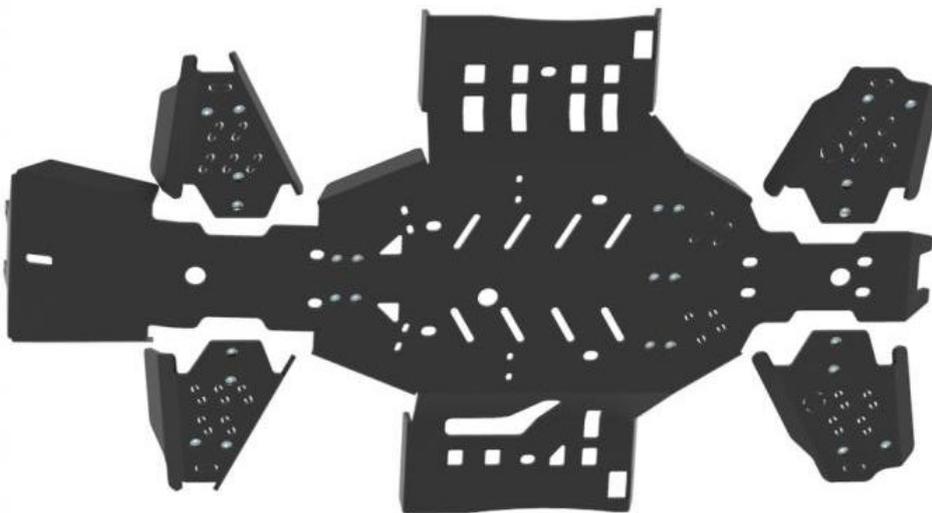


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Skid plate middle part	02.9501	1
2	Skid plate front part	02.11901	1
3	Skid plate rear part	02.9503	1
4	Front left arm protection	02.11104	1
5	Front right arm protection	02.11105	1
6	Rear left arm protection	02.11106	1
7	Rear right arm protection	02.11107	1
8	Bracket (shorter)	02.6609	2
9	Bracket (longer)	02.6610	2
10	Installation plate	02.5006	5
11	Installation bracket	02.4606	4
12	Dished washer	14.503	38
13	Bolt M6x16 DIN 933	OT.02.02.050	10
14	Bolt M6x20 DIN 933	OT.02.02.060	14
15	Bolt M6x30 DIN 933	OT.02.02.080	6
16	Bolt M8x35 DIN 933	OT.02.02.210	2
17	Bolt M8x40 DIN 933	OT.02.02.220	4
18	Bolt M8x45 DIN 933	OT.02.02.230	4
19	Washer Ø6/15 SFS 3738	OT.04.03.020	32
20	Washer Ø8/20 SFS 3738	OT.04.03.030	2
21	Nylock nut M6 DIN 985	OT.03.02.030	2

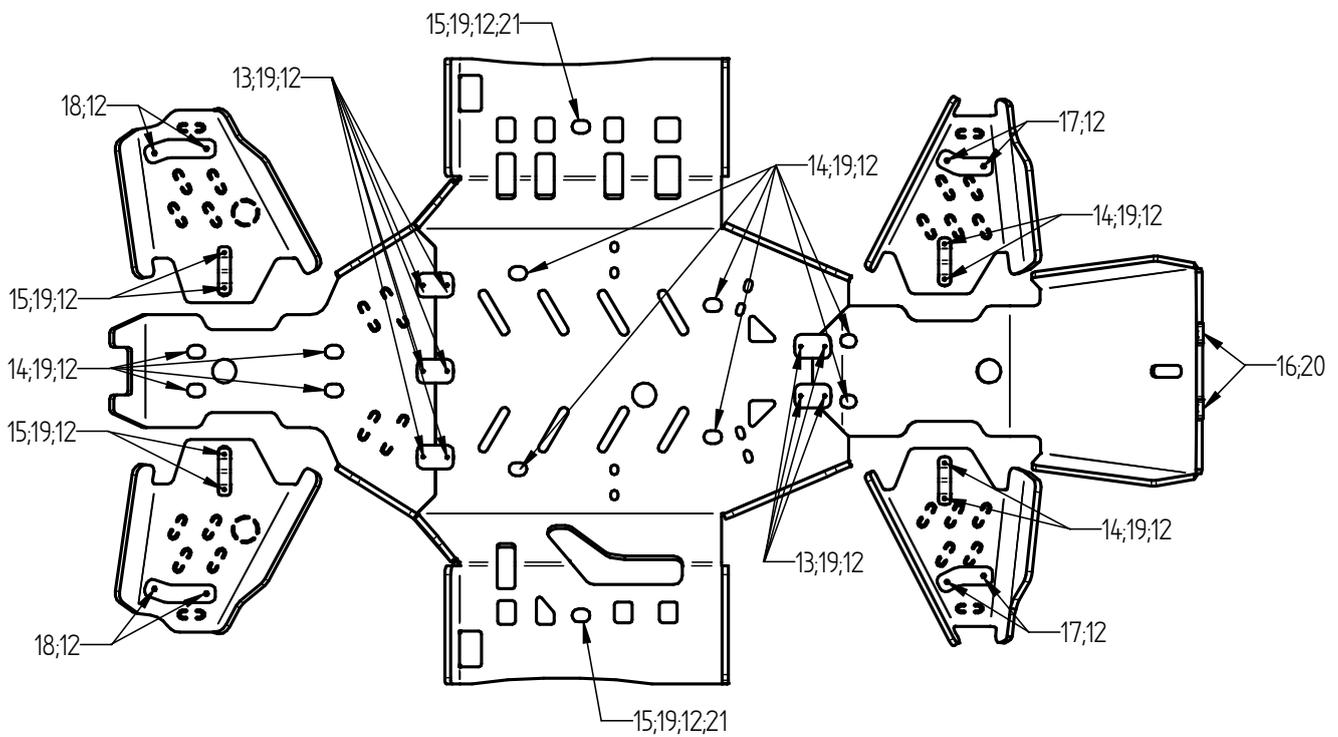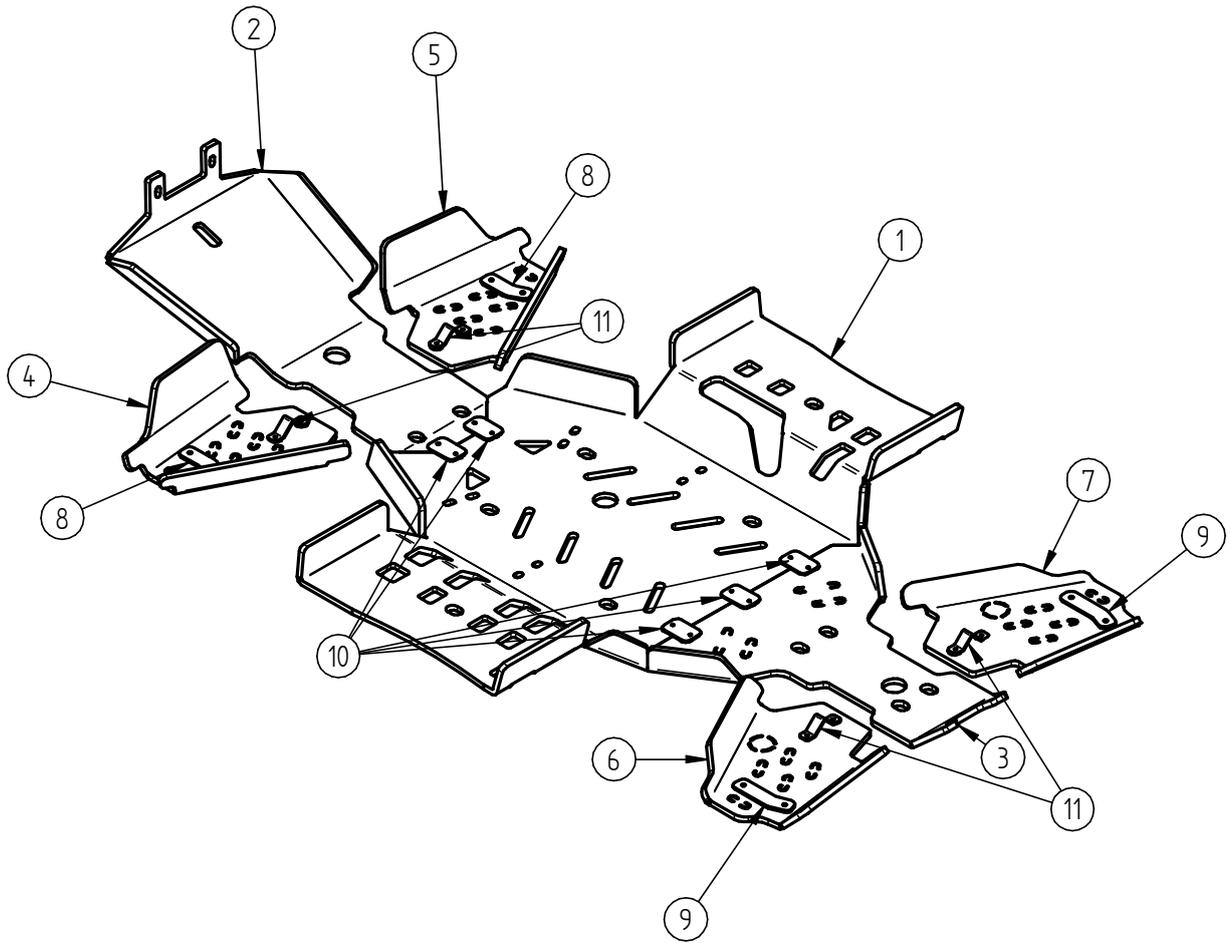


FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers.




Step 2 Install middle protection 02.9501.

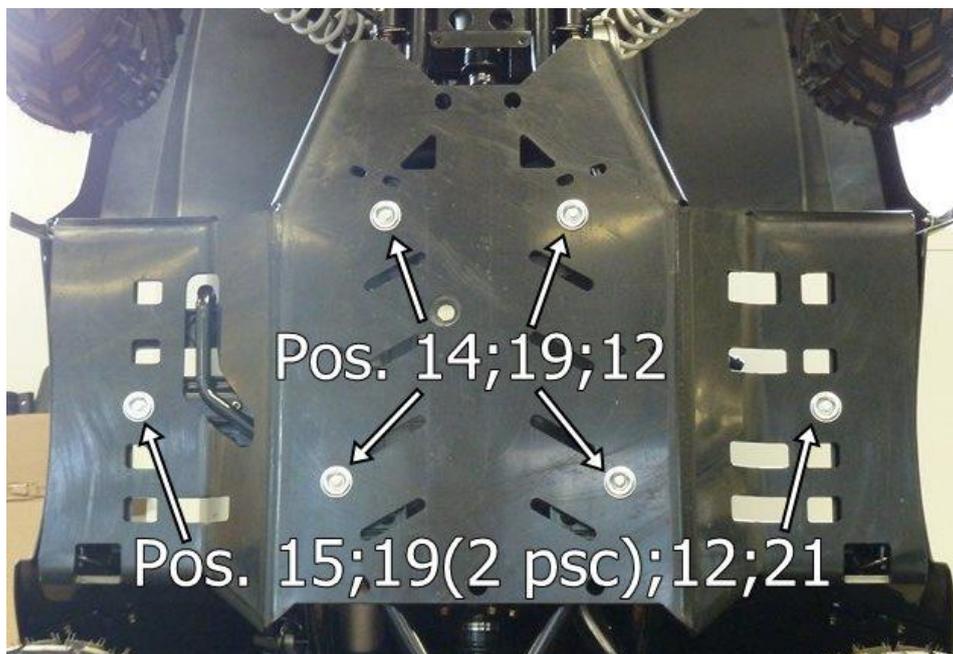

Step 3

Install plates 02.5006 to middle protection.

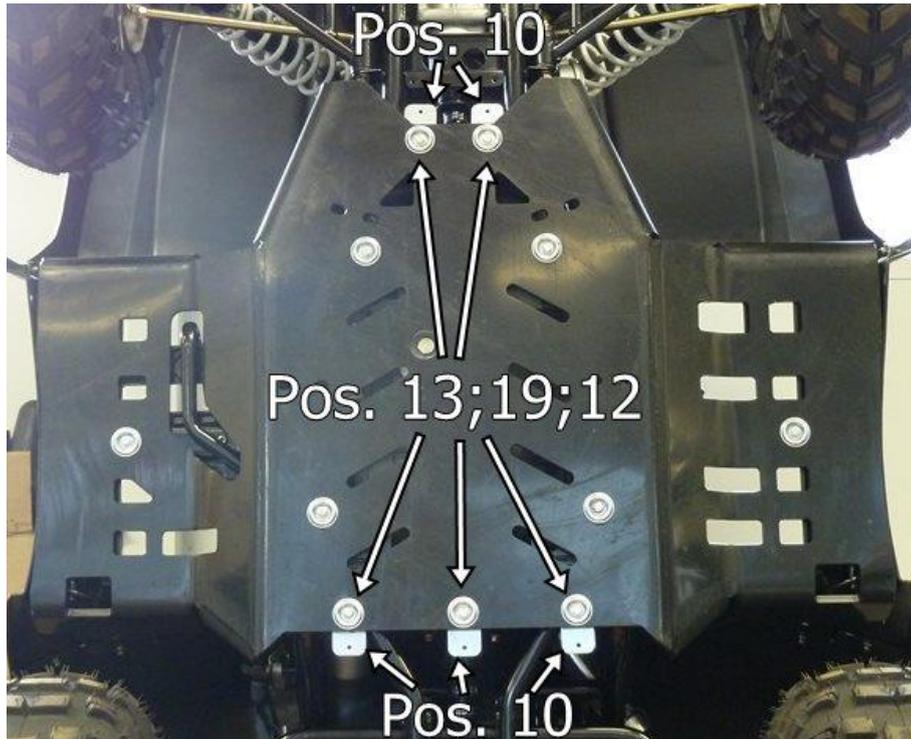


Step 4


Install front protection 02.11901.




Step 5 Install rear protection 02.9503.

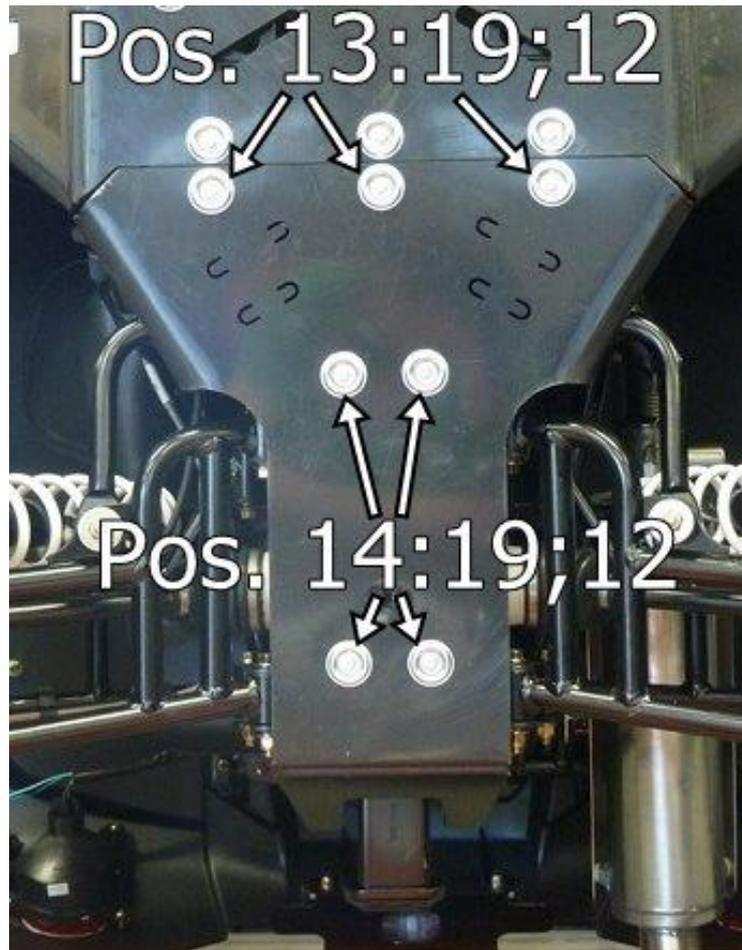


Step 6 Install front swingarm protections 02.11104 and 02.11105.

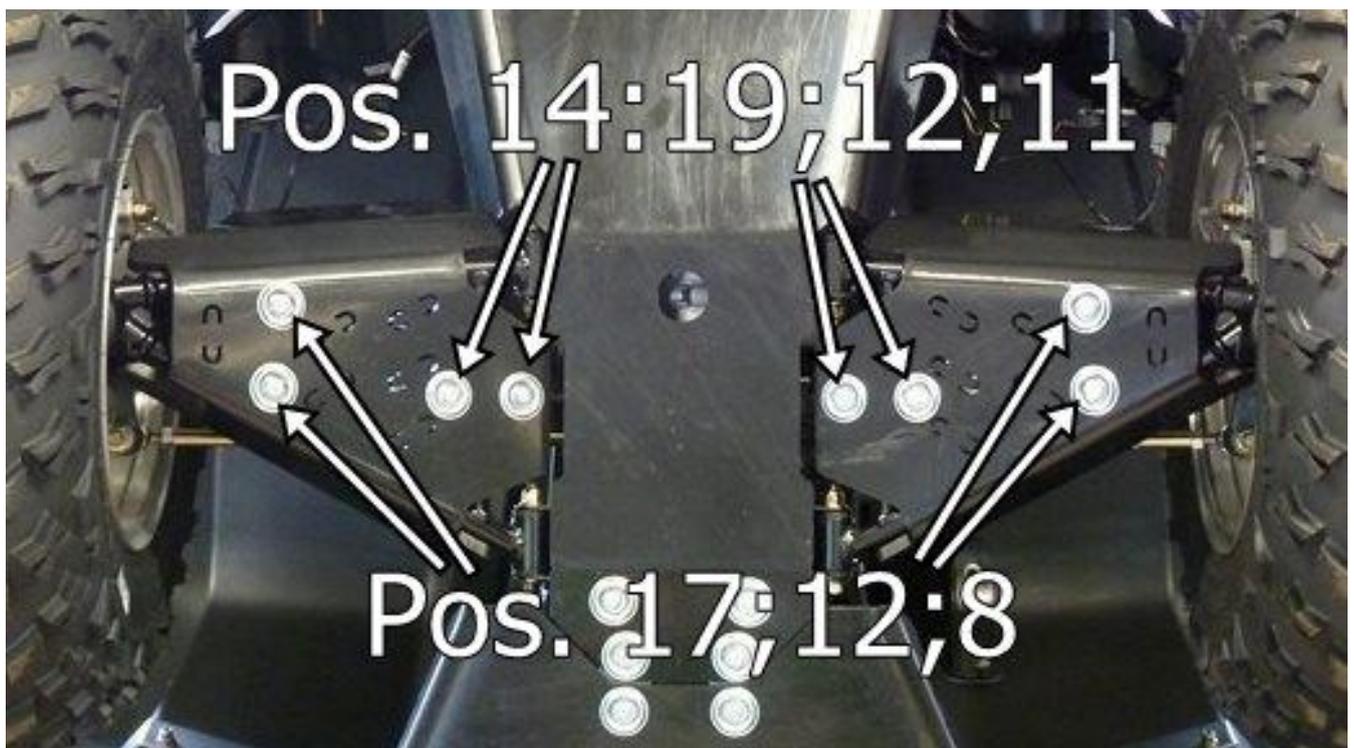

Step 7 Install rear swingarm protections 02.11106 and 02.11107.

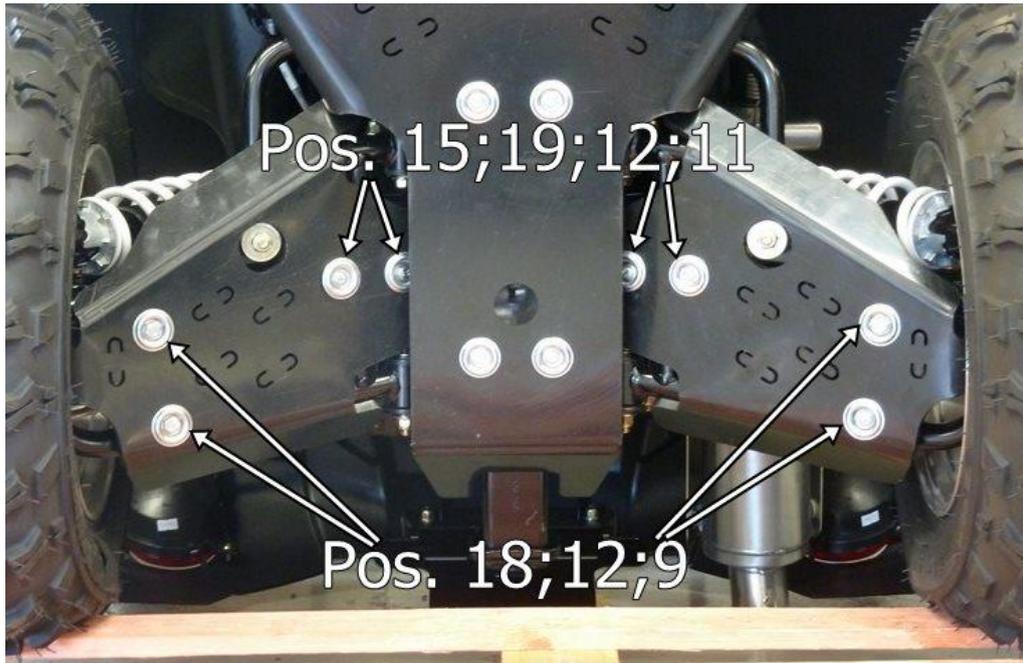

Note: If ArcticCat is fitted with rear sway bar, then remove the cutout, indicated with arrow, from the rear protection.

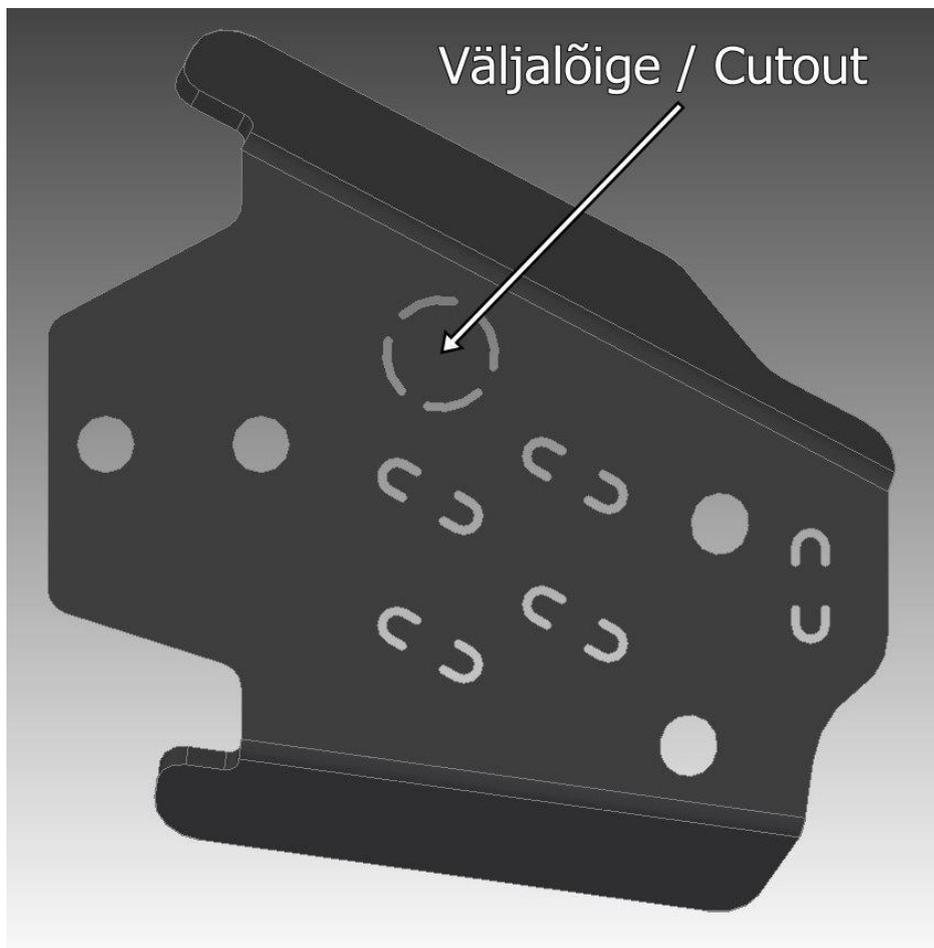

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

