

IRON BALTIC

SKID PLATE

HONDA

TRX 420 FE / FM

Code 02.1200

Version 25082023

DOWNLOAD MULTILINGUAL
USER MANUAL





code.ironbaltic.com/u/cnkRL973

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Skid plate	02.1201K	1
2	Front protection	02.1202	1
3	Front right arm protection	02.1207	1
4	Front left arm protection	02.1208	1
5	Rear protection	02.1204K	1
6	Bracket	02.1209	1
7	Bracket	02.11122	1
8	Klamp	02.1419	4
9	Plate	02.5006	2
10	Bolt M6x16 DIN 7991	OT.02.04.020	4
11	Bolt M6x20 DIN 7991	OT.02.04.030	16
12	Bolt M6x25 DIN 7991	OT.02.04.040	2
13	Bolt M6x35 DIN 7991	OT.02.04.060	2
14	Bolt M6x40 DIN 7991	OT.02.04.070	2
15	Bolt M6x80 DIN 7991	OT.02.04.110	4
16	Bolt M8x20 DIN 7991	OT.02.04.150	6
17	Washer Ø6/18 DIN 9021	OT.04.02.020	12
18	Washer Ø 6	14.502	30
19	Washer Ø 8	14.501	6
20	Nyloc nut M6 DIN 985	OT.03.02.030	12

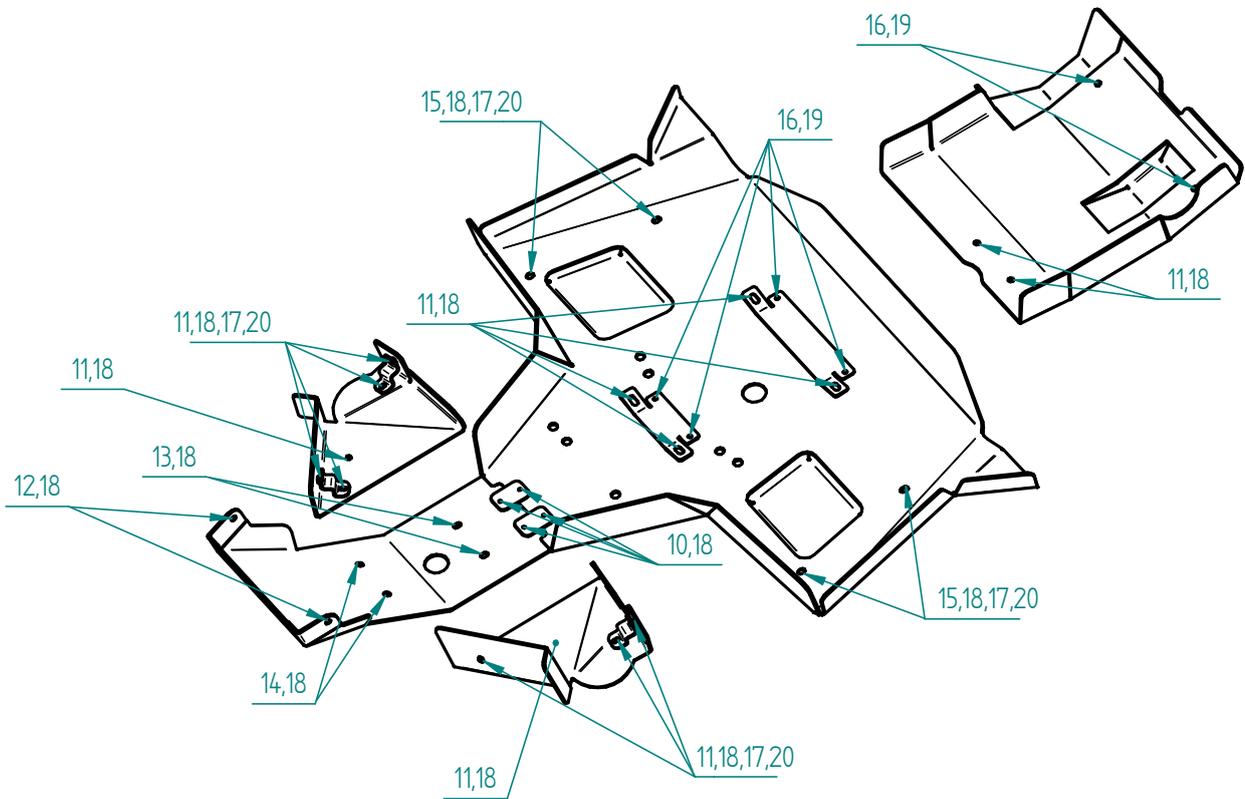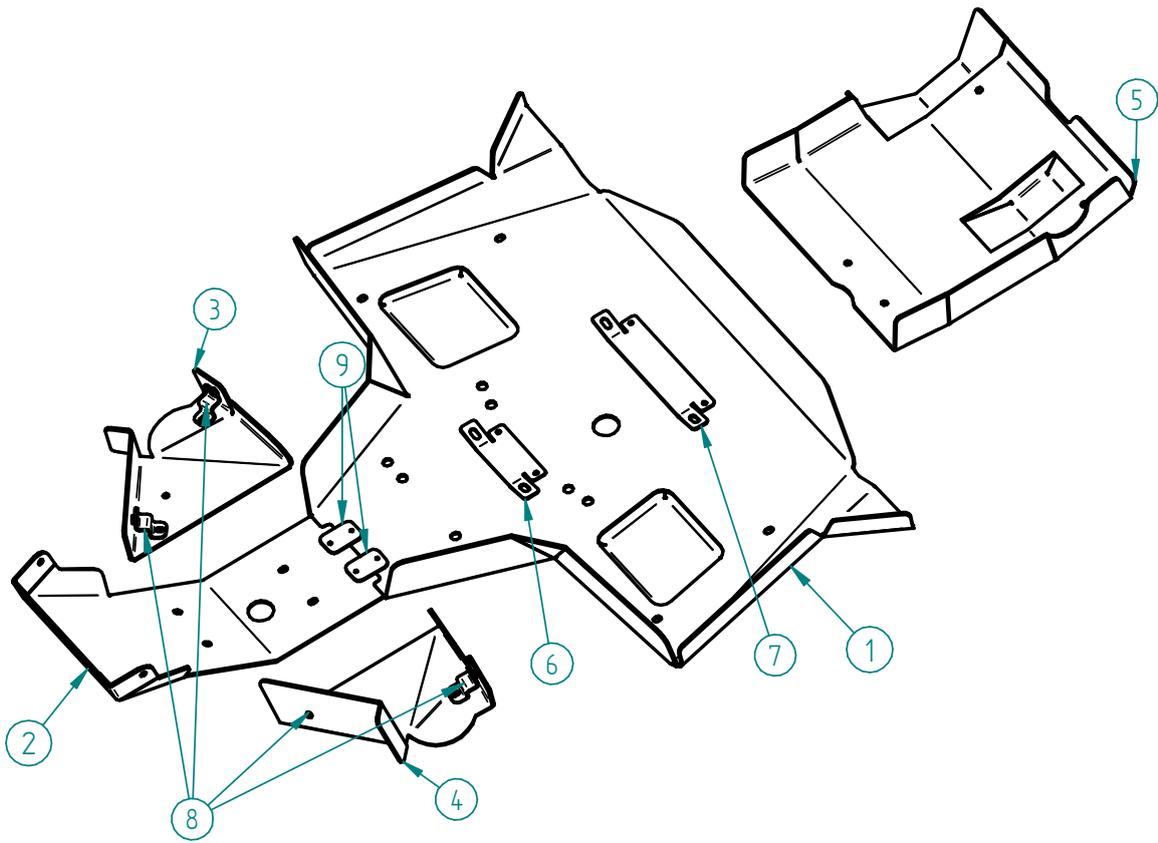

FITTING INSTRUCTIONS


Step 1 Remove all standard plastic covers.




Step 2 Install brackets 02.1209 and 02.1112, use bolts M6x20.




Step 3 Install skid plate, use bolts M8x20, bolts M6x80, washers $\varnothing 6/18$ and nuts M6.

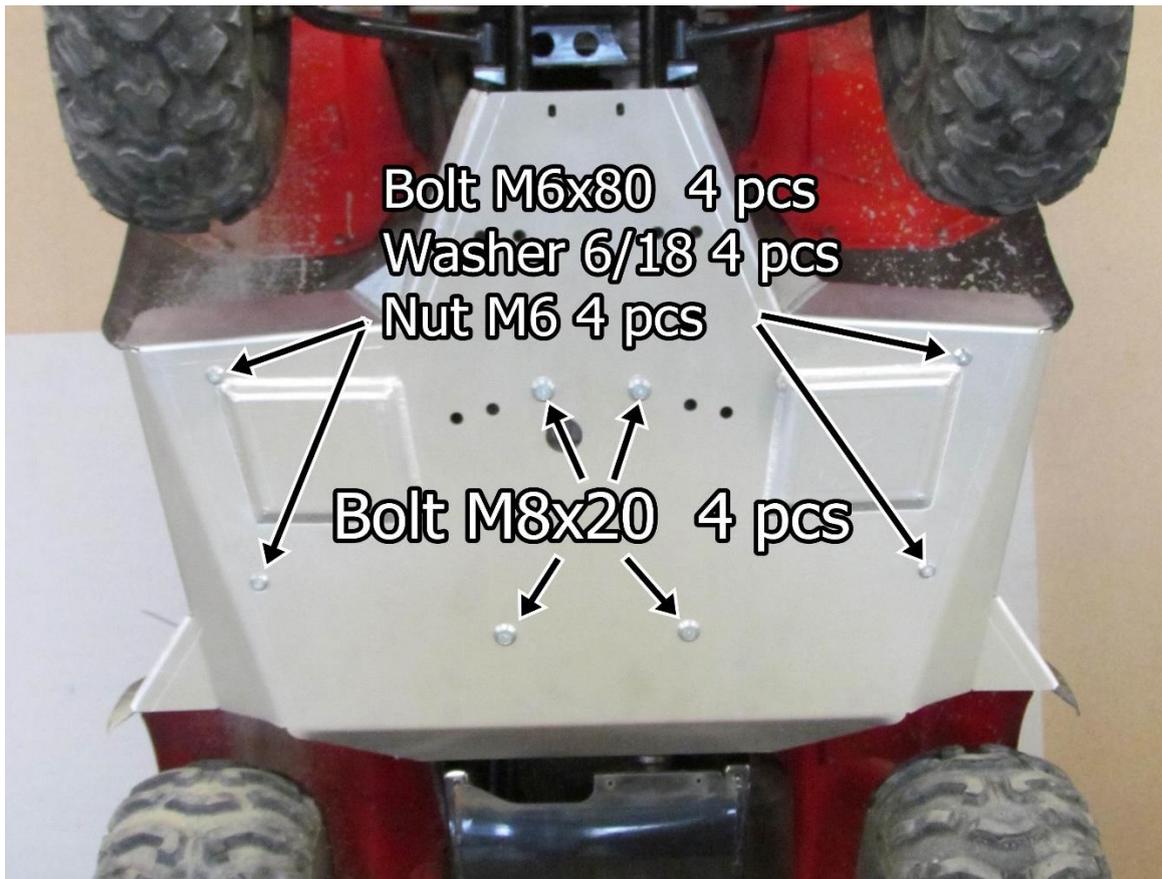


Step 4 Install plates 02.5006, use bolts M6x16.

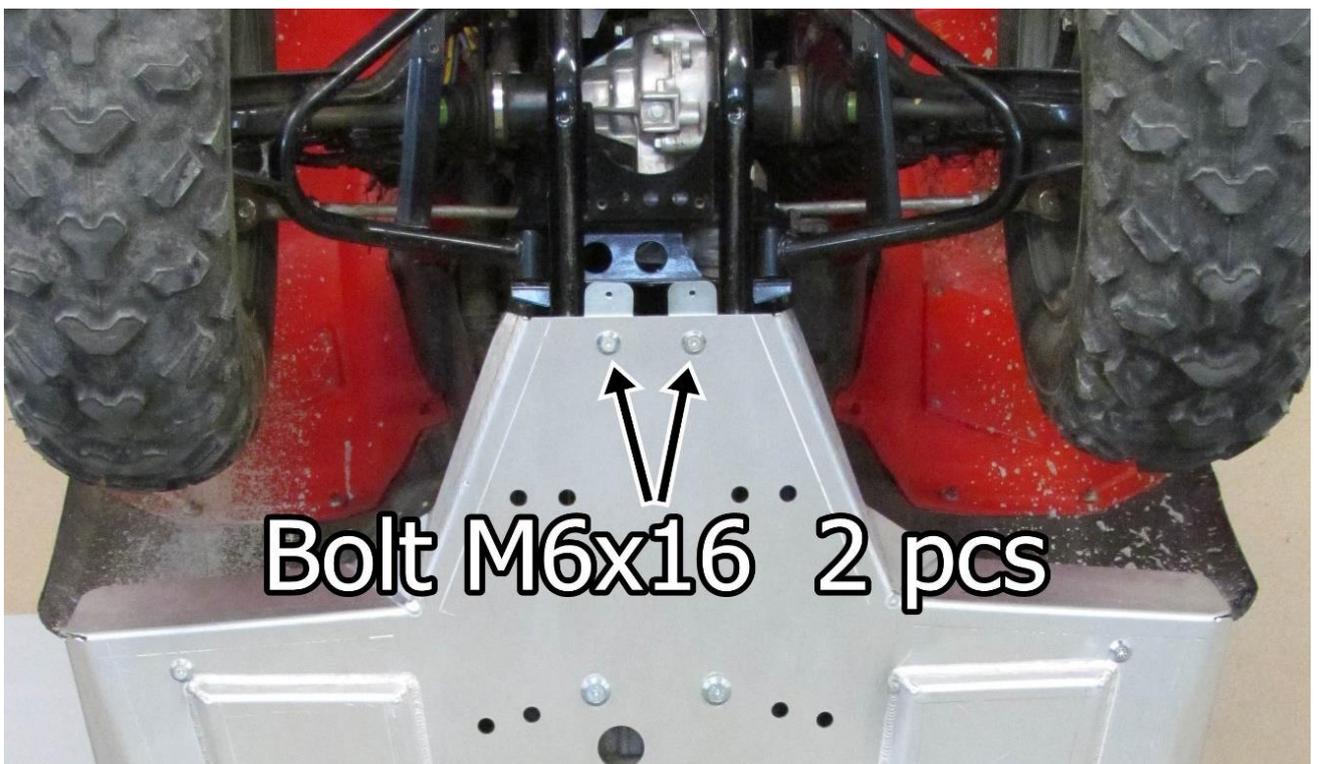


Step 5 Install front protection, use bolts M6x16, M6x35, M6x40 and M6x25.

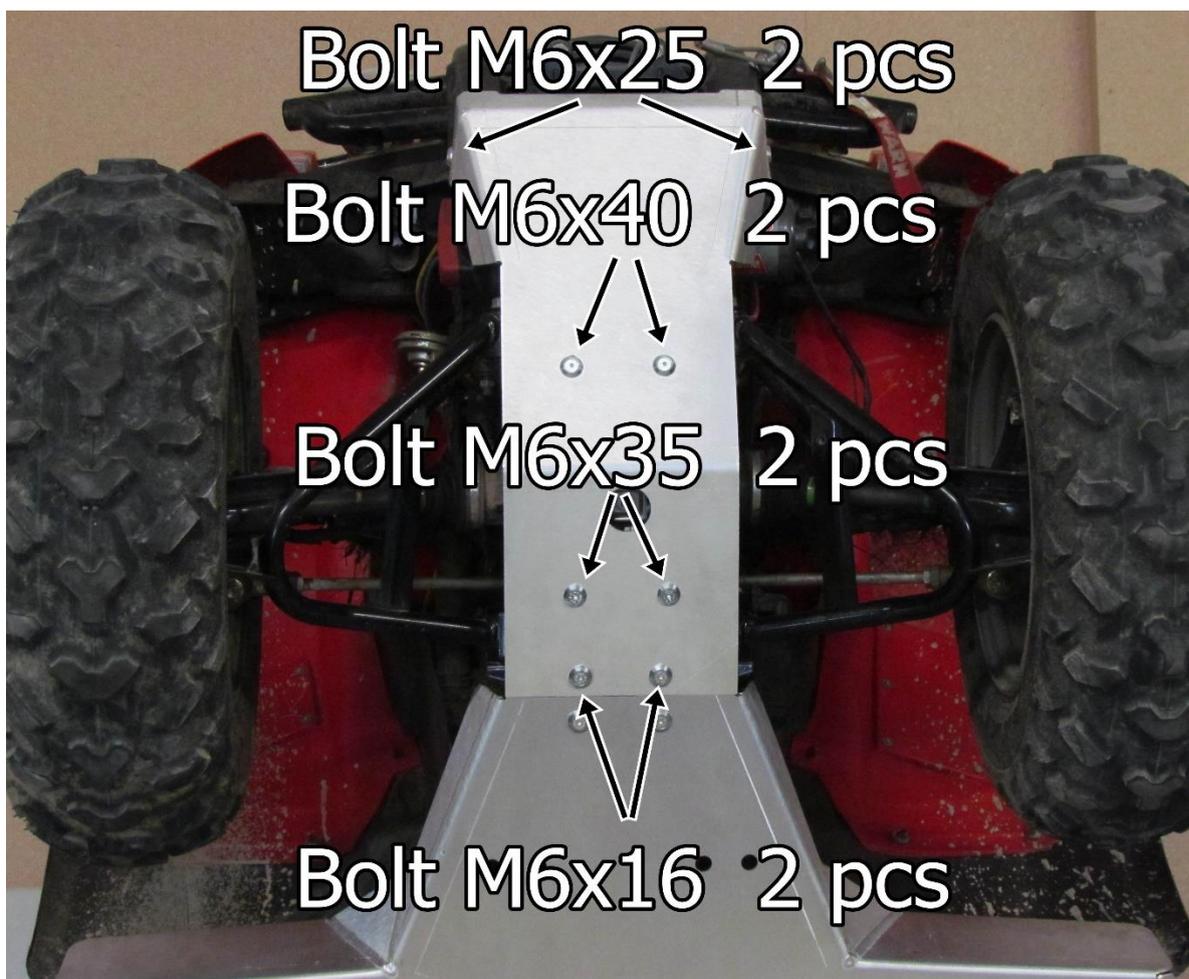

Step 6 Install rear protection, use bolts M6x20 and M8x20.

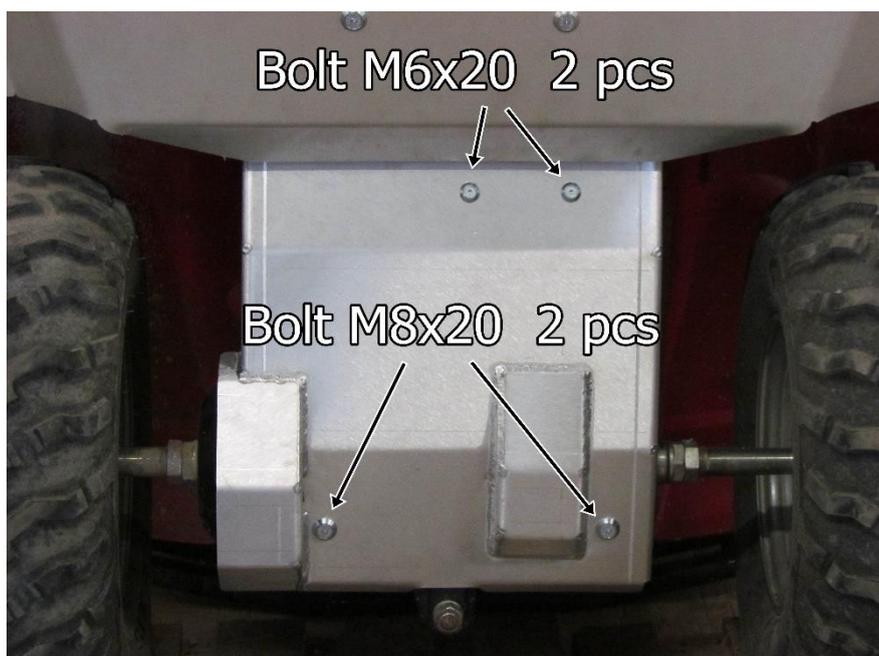

Step 7 Install front A-arms protections, use bolts M6x20, washers $\varnothing 6/18$ and nuts M6.

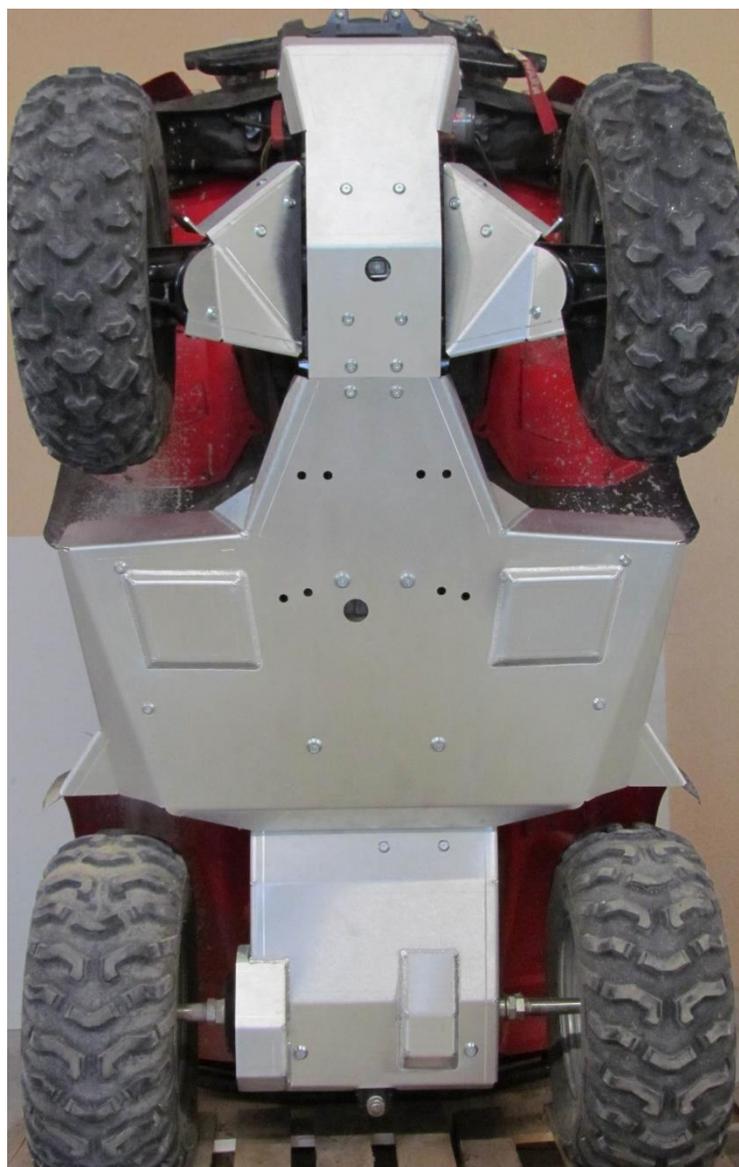

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

