



code.ironbaltic.com/u/rabg3zjs

ALUMINIUM SKID PLATE

LINHAI

550 EFI V-TWIN

Code 02.12000

Version 25082023




Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Middle part	02.12001K	1
2	Front part	02.12002	1
3	Rear part	02.12003	1
4	Front protection	05.5701	1
5	Front left arm protection	02.12004V	1
6	Front right arm protection	02.12004P	1
7	Rear left arm protection	02.12005VK	1
8	Rear right arm protection	02.12005PK	1
9	Intallation plate	02.5709	4
10	Plate	02.5006	4
11	Clamp 32mm	OT.05.01.020	2
12	Bolt M5x25 DIN 933	OT.02.02.010	6
13	Bolt M6x16 DIN 933	OT.02.02.050	12
14	Bolt M6x16 DIN 7991	OT.02.04.020	8
15	Bolt M6x30 DIN 933	OT.02.02.080	8
16	Bolt M6x80 DIN 933	OT.02.02.160	2
17	Bolt M8x20 DIN 933	OT.02.02.180	4
18	Washer Ø6	14.502	8
19	Dished washer	14.503	22
20	Washer Ø5/15 DIN 9021	OT.04.02.010	6
21	Washer Ø6/15 SFS 3738	OT.04.03.020	32
22	Washer Ø8/20 SFS 3738	OT.04.03.030	12
23	Nyloc nut M6 DIN 985	OT.03.02.030	10
24	Nyloc nut M8 DIN 985	OT.03.02.040	8

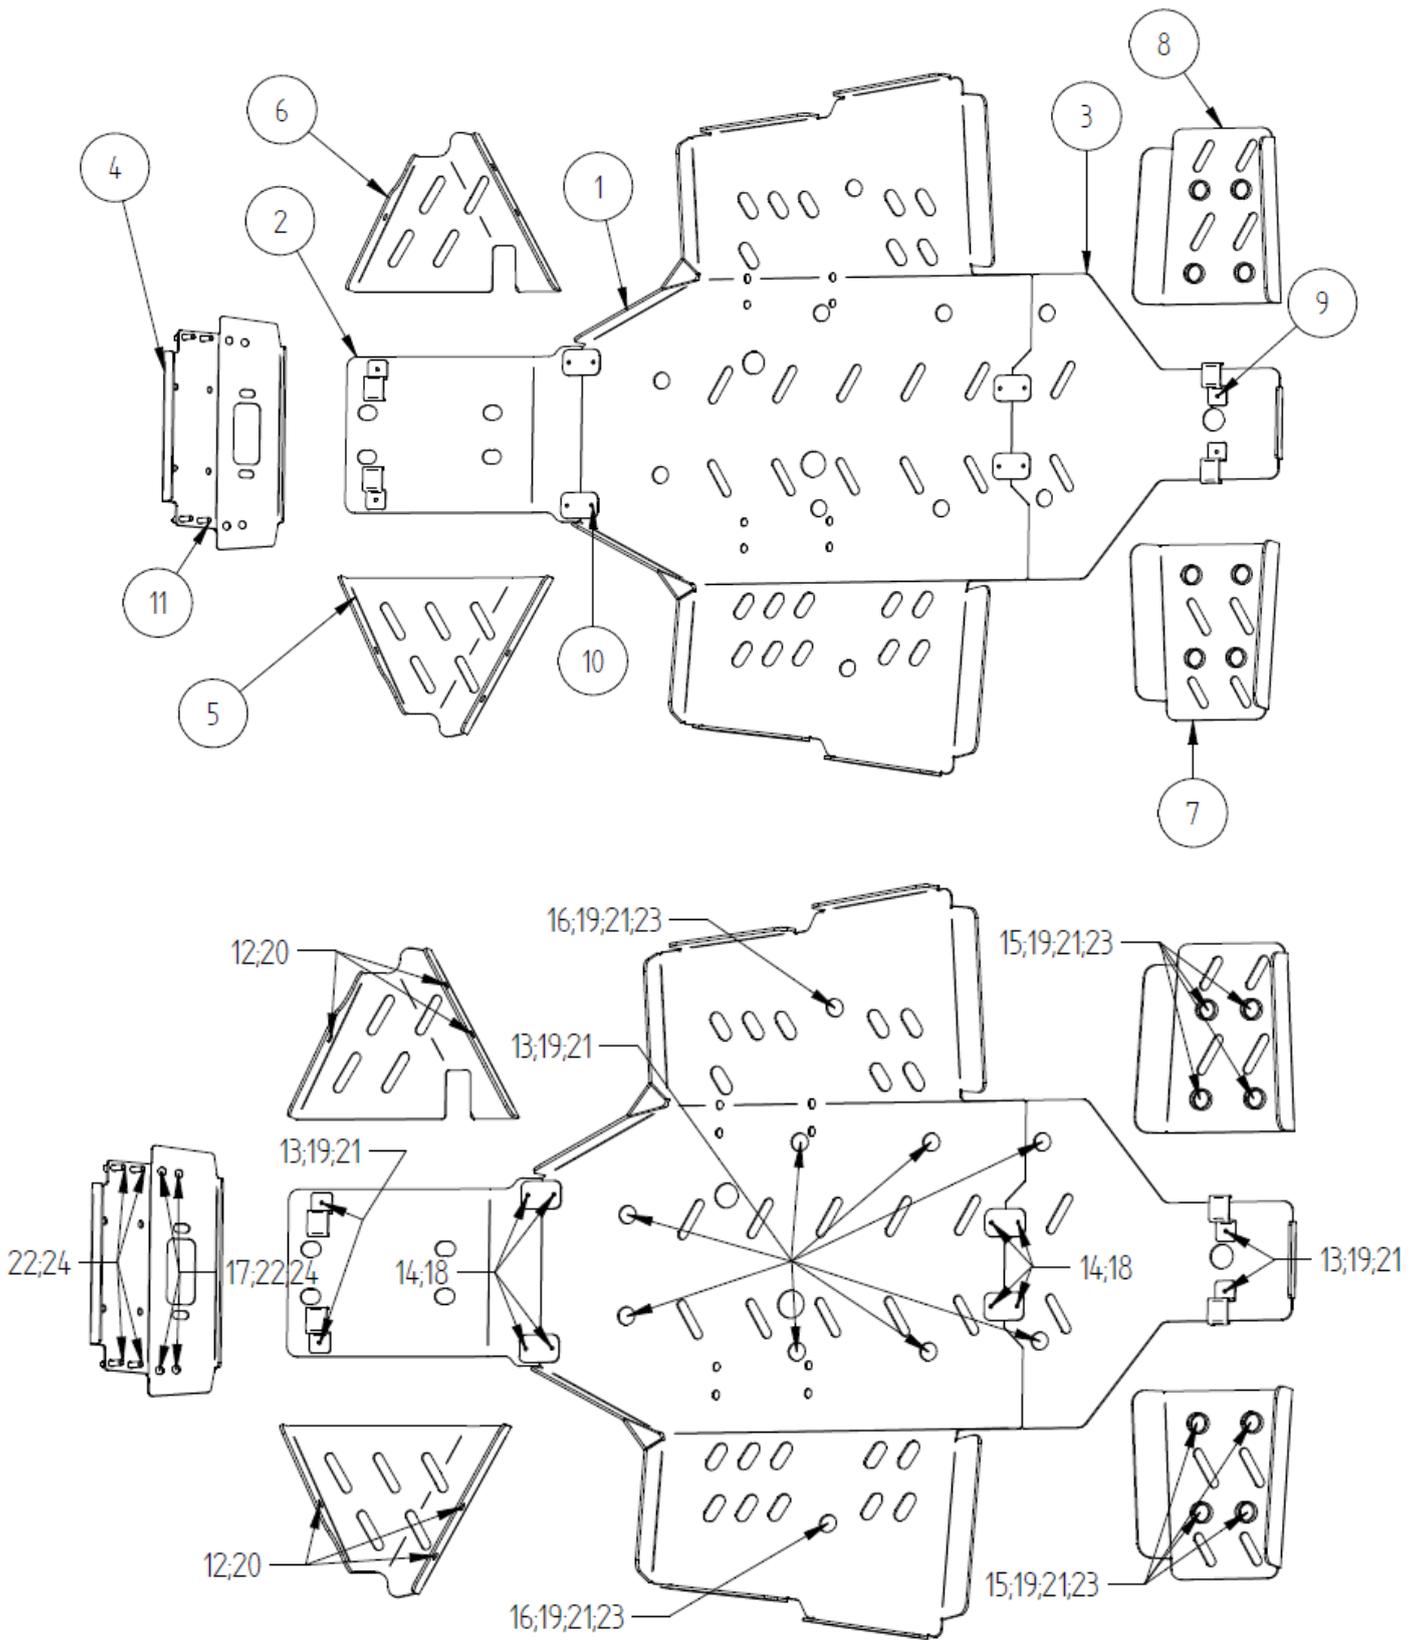


FITTING INSTRUCTIONS

Step 1 Remove all standard covers, plate and 2 bolts.




Step 2 Install middle part 02.12001K.

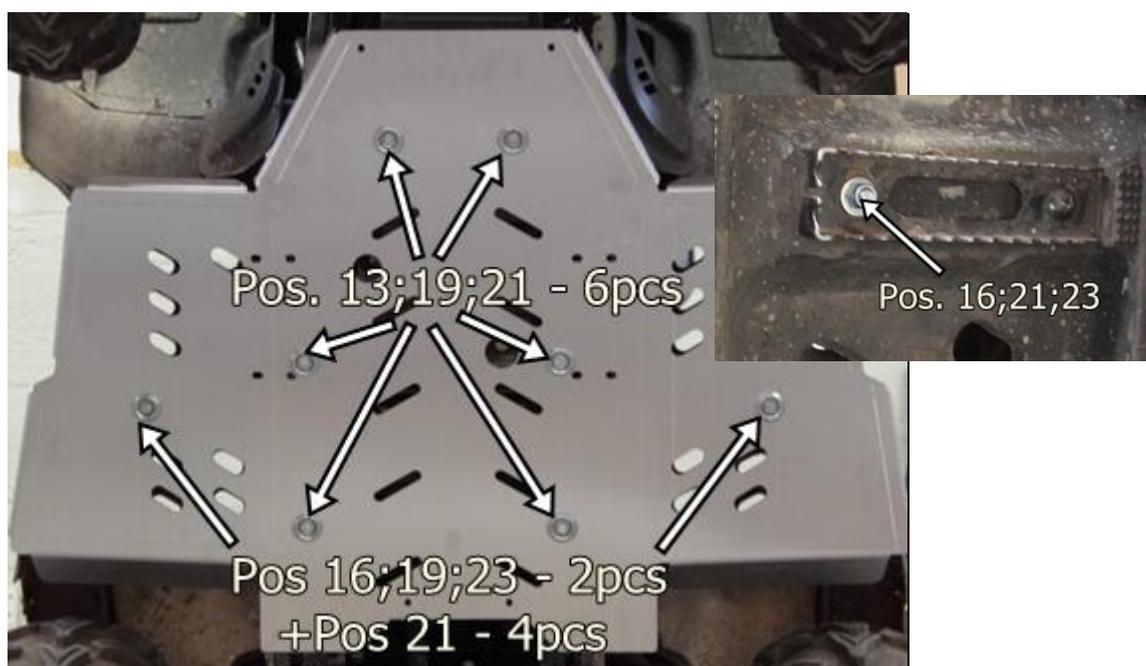


Step 3

Install plates 02.5006 to the middle part.

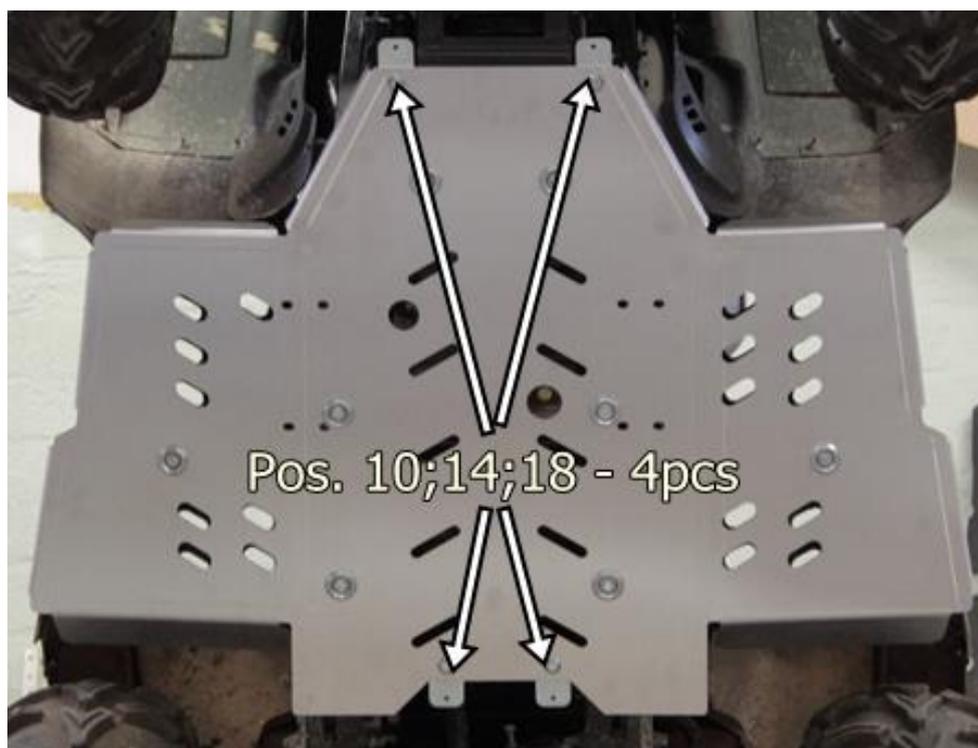


Step 4


Install rear part 02.12003.

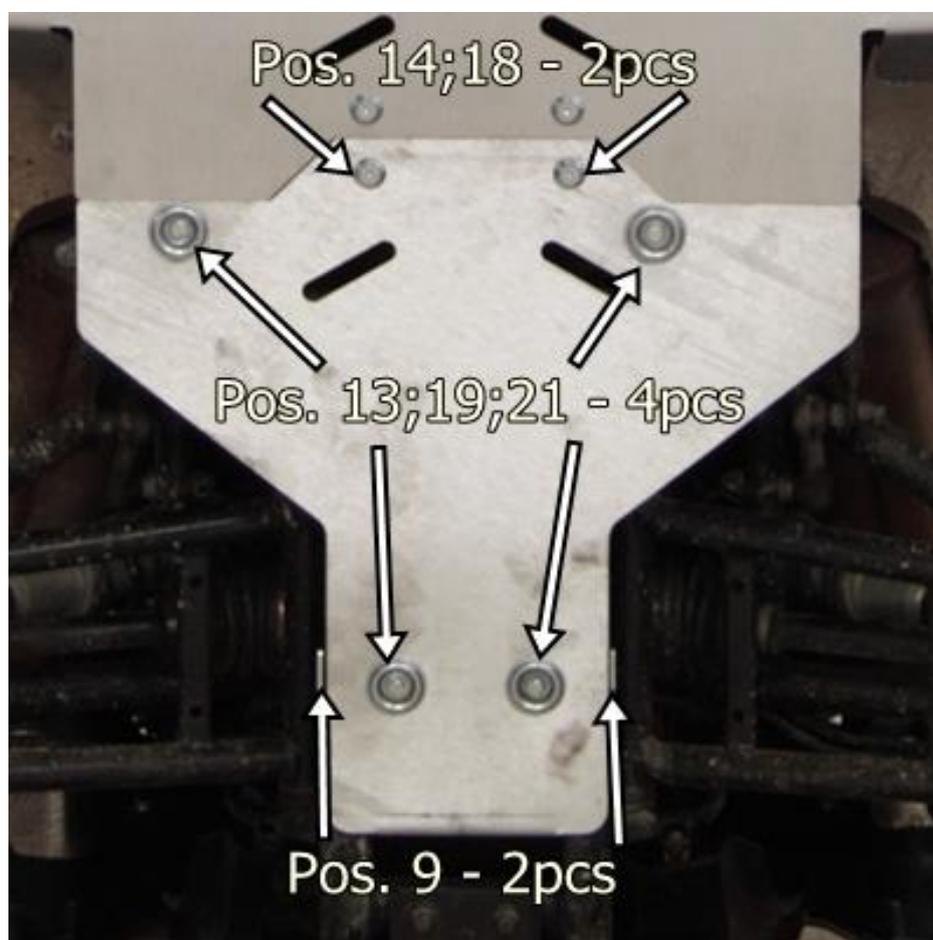

Step 5 Install front part 02.12002.

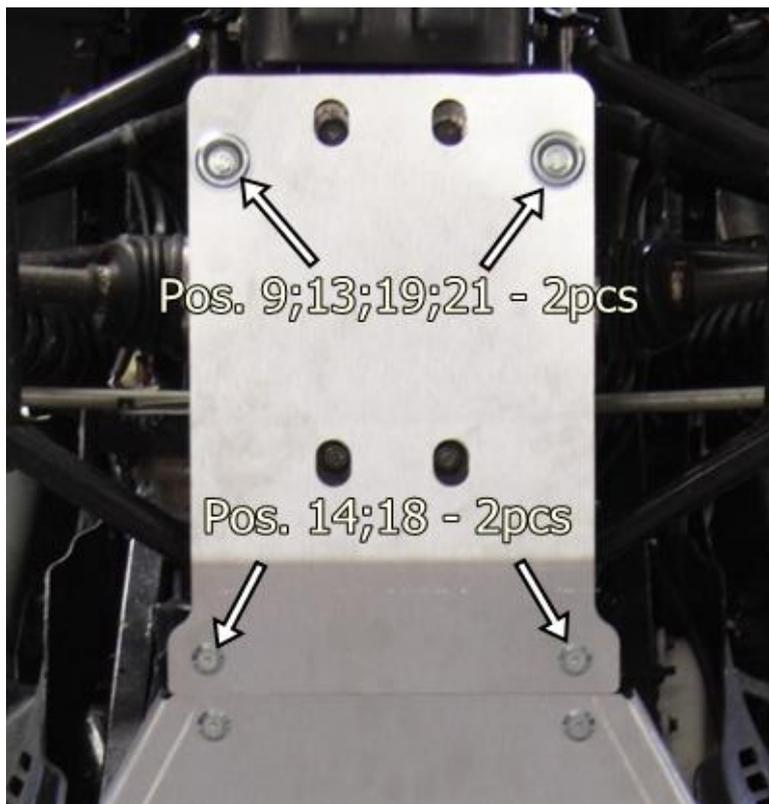


Step 6 Install front protection/winch adapter 05.5701. For winch installation remove radiator plastic cover.

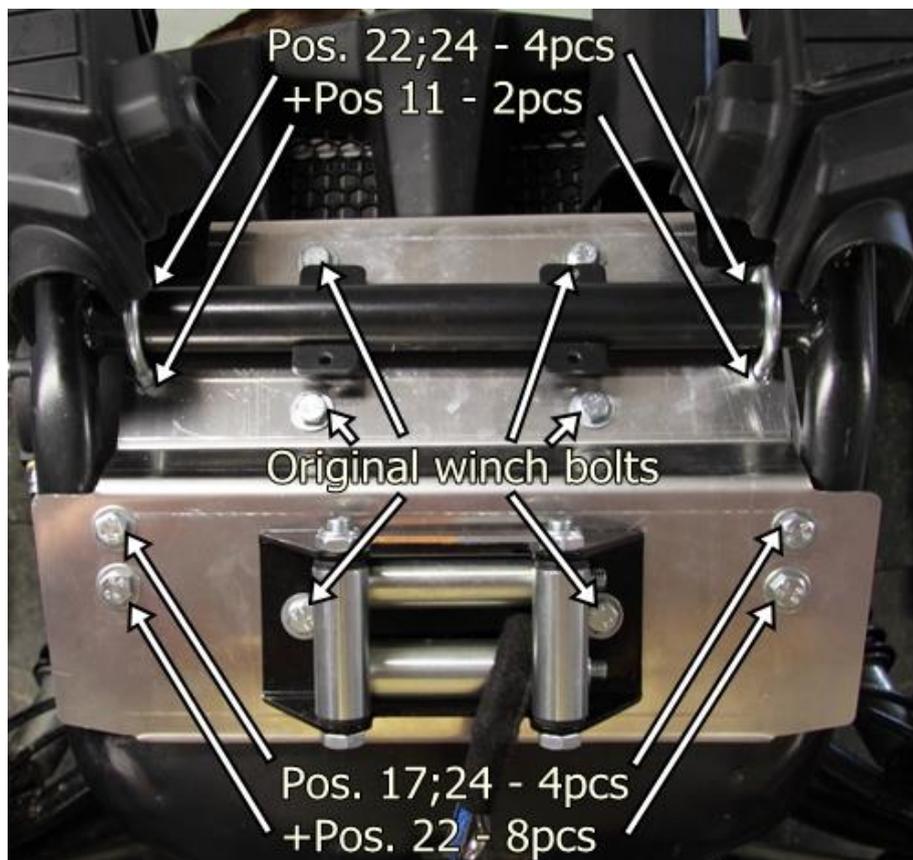




Step 7 Install rear arms protections 02.12005P and 02.12005V.

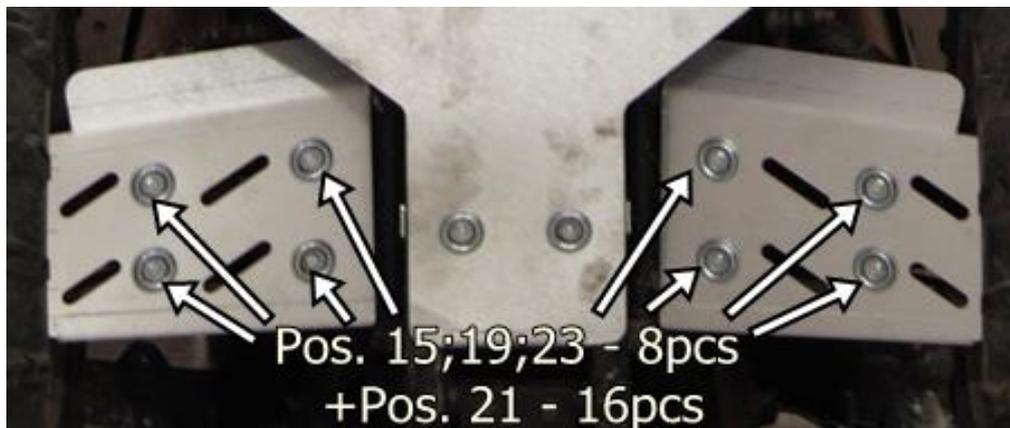

Step 8 Install front arms protections 02.12004P and 02.12004V.

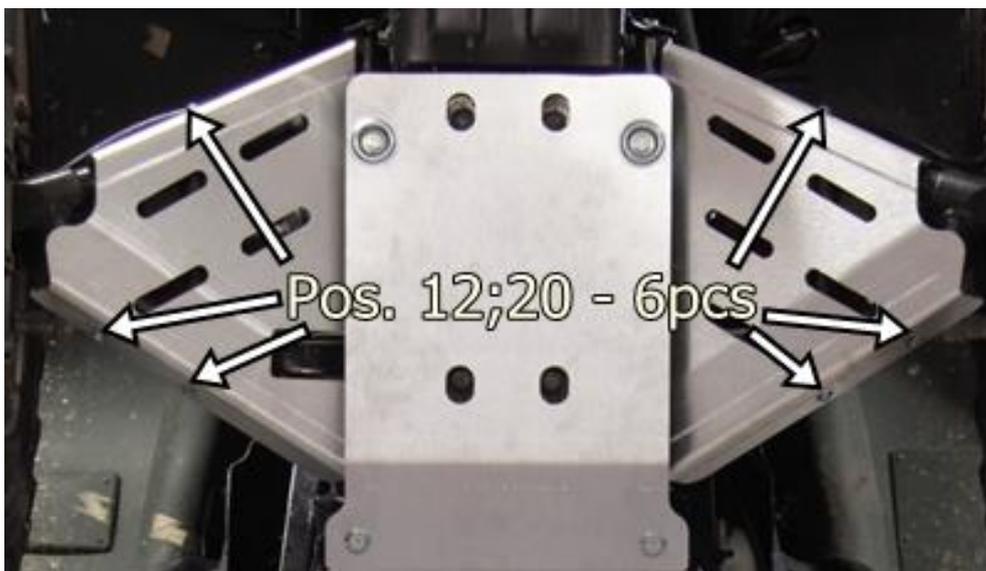

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

