

IRON BALTIC

ALUMINIUM SKID PLATE

CAN AM MAVERICK

Code 02.12200

Version 25082023

DOWNLOAD MULTILINGUAL
USER MANUAL





code.ironbaltic.com/u/1rmxTt8c

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Skid plate front part	02.12201	1
2	Skid plate middle part	02.12202	1
3	Skid plate rear part	02.12203	1
4	Skid plate right side protection	02.12204	1
5	Skid plate left side protection	02.12205	1
6	Front left arm protection	02.12206	1
7	Front right arm protection	02.12207	1
8	Rear left arm protection	02.12208	1
9	Rear right arm protection	02.12209	1
10	Skid plate bumper protection	02.12210K	1
11	Installation bracket (front)	02.12213	2
12	Installation bracket (rear)	02.12214	2
13	Installation plate	02.5006	12
14	Installation bracket	02.5710	1
15	Installation bracket	02.4606	4
16	Installation plate	02.2305	4
17	Pipe clamp bracket 38mm	OT.05.04.030	2
18	Dished washer	14.503	67
19	Bolt M6x14 DIN 933	OT.02.02.040	25
20	Bolt M6x20 DIN 933	OT.02.02.060	24
21	Bolt M6x25 DIN 933	OT.02.02.070	14
22	Bolt M6x30 DIN 933	OT.02.02.080	4
23	Bolt M8x30 DIN 933	OT.02.02.200	4
24	Bolt M8x80 DIN 933	OT.02.02.270	4
25	Washer Ø6/15 SFS 3738	OT.04.03.020	75
26	Washer Ø8/20 SFS 3738	OT.04.03.030	8
27	Nylock nut M6 DIN 985	OT.03.02.030	8
28	Nylock nut M8 DIN 985	OT.03.02.040	4

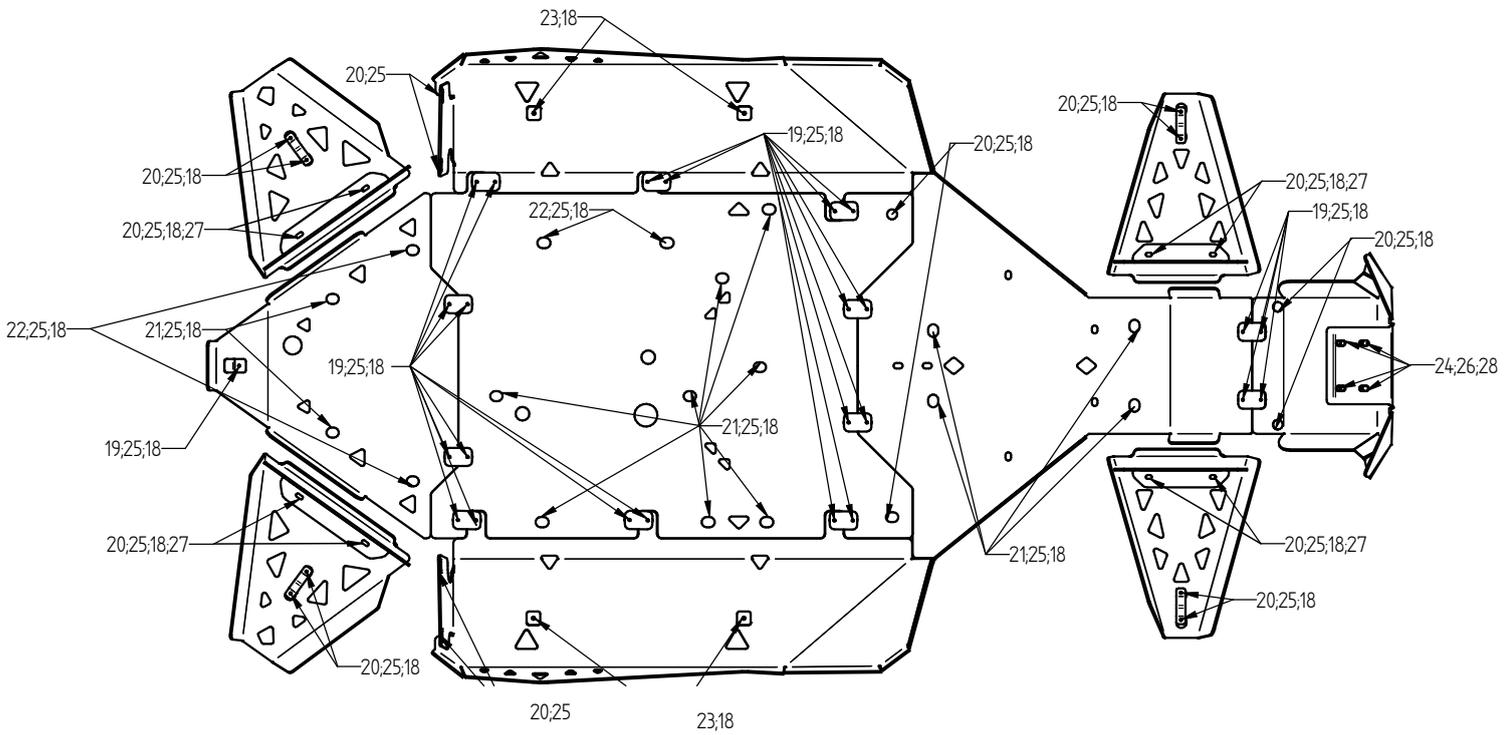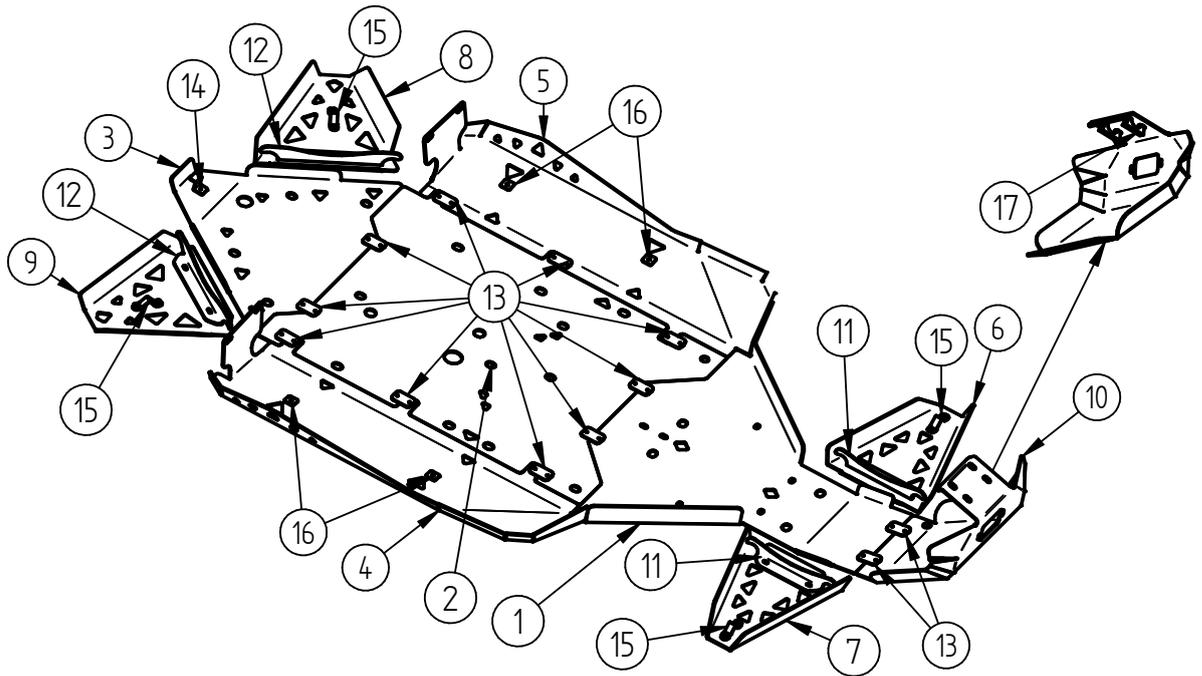

FITTING INSTRUCTIONS


Step 1

Remove all standard plastic covers. Drill out pop-rivets that hold in place side- and front swingarm protections.



Step 2

Install front swingarm protections 02.12206 and 02.12207.

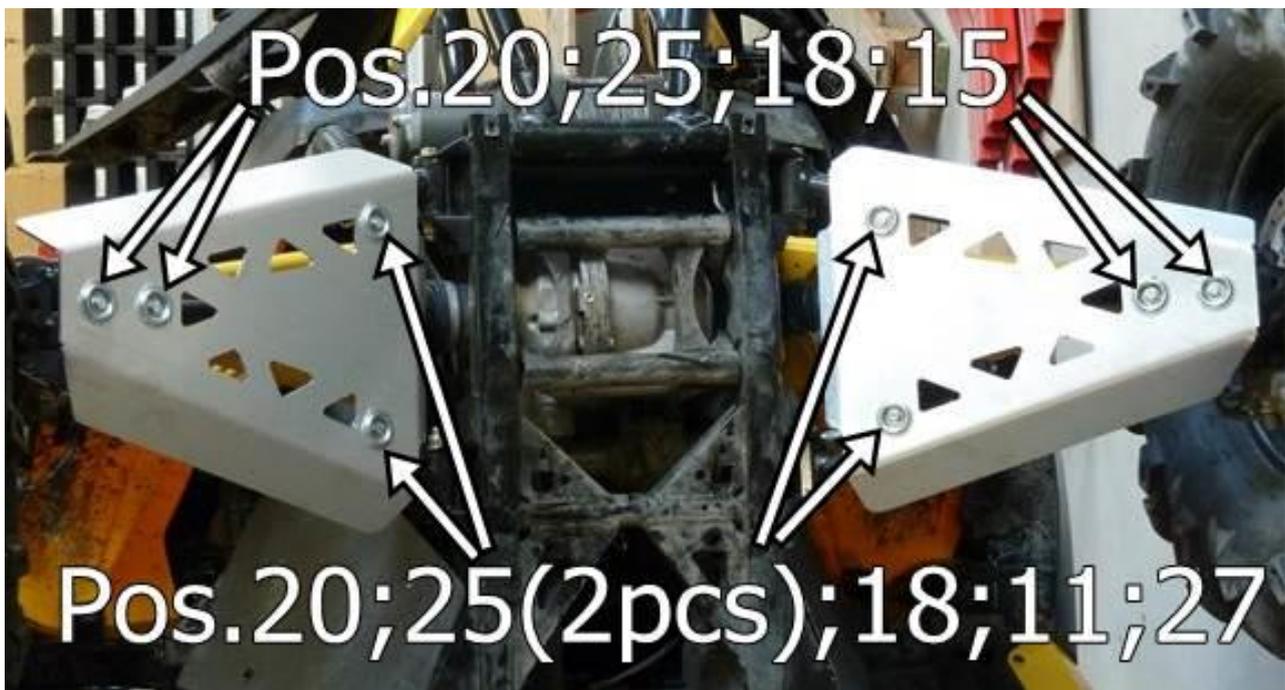


Step 3

Install rear swingarm protections 02.12208 and 02.12209.




Step 4


Install middle protection 02.12202.

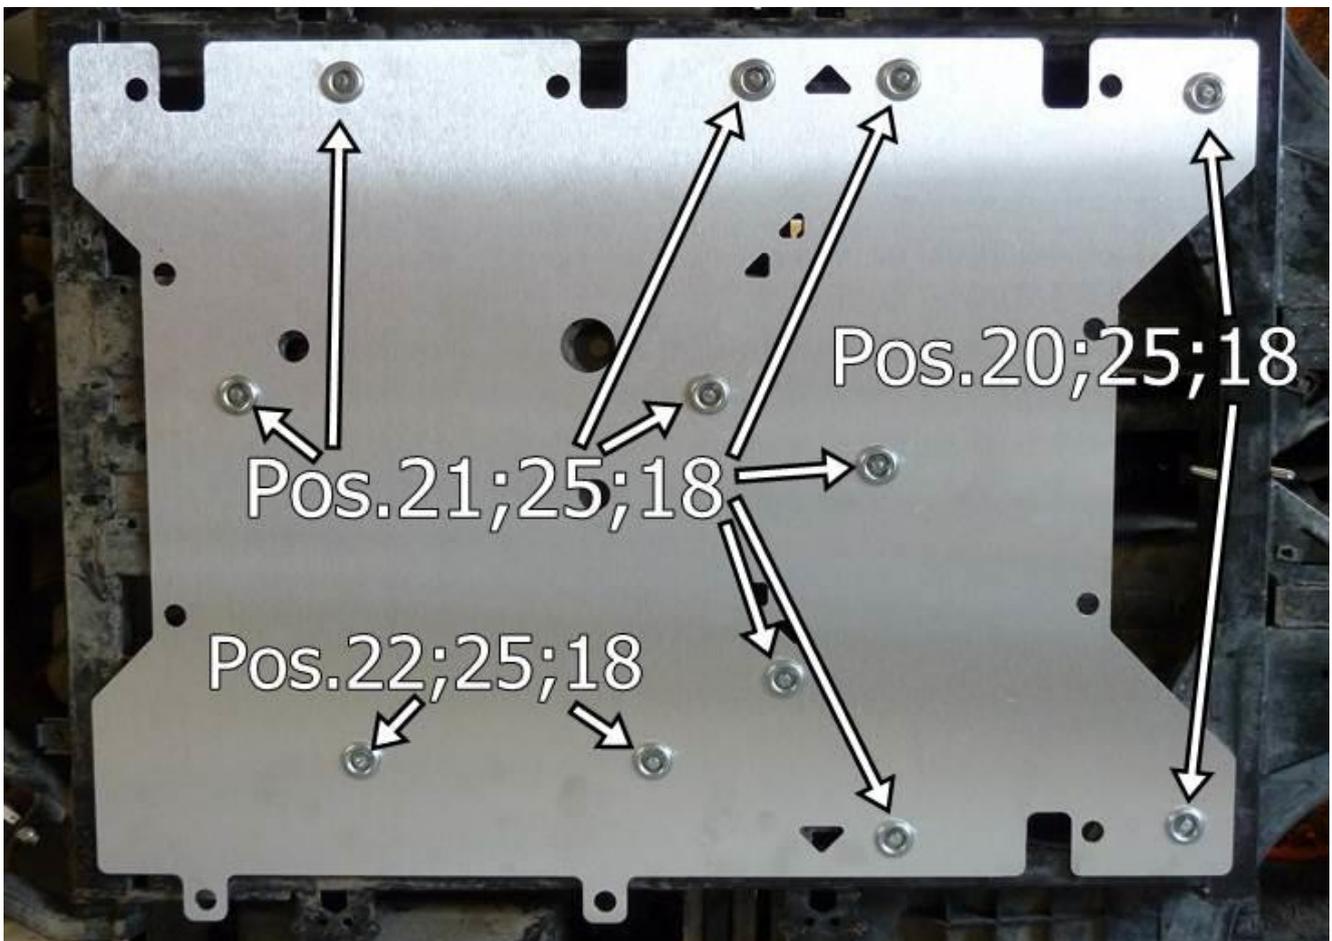


Step 5 Install plates 02.5006 to middle protection.

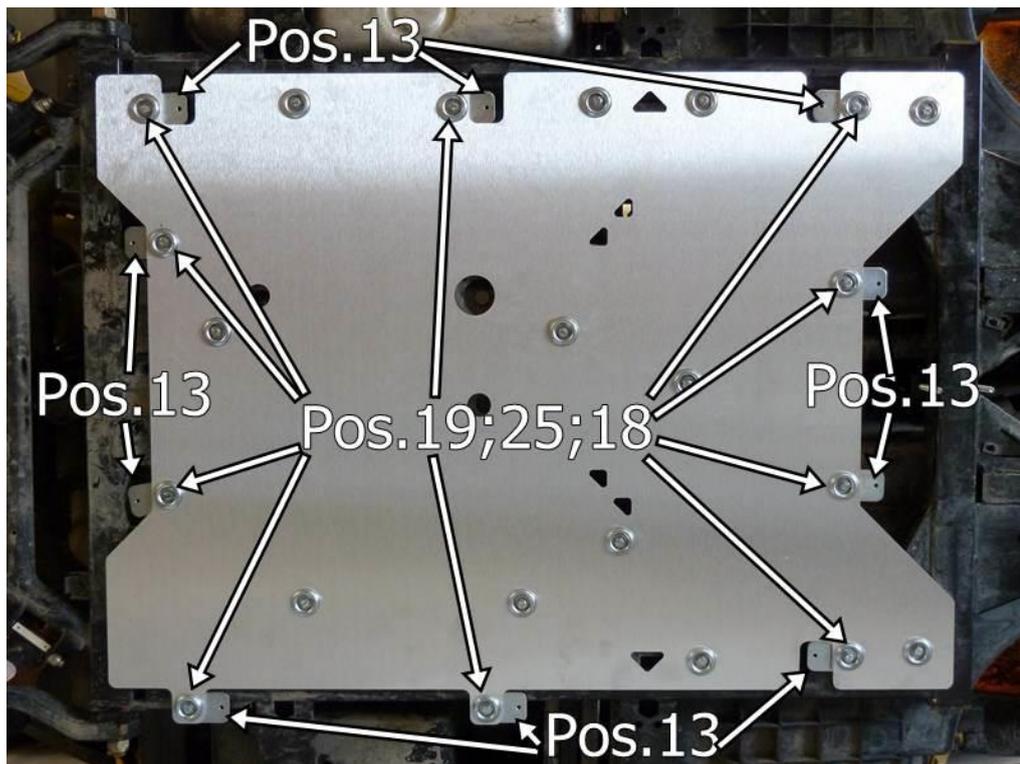


Step 6 Install rear protection 02.12203.

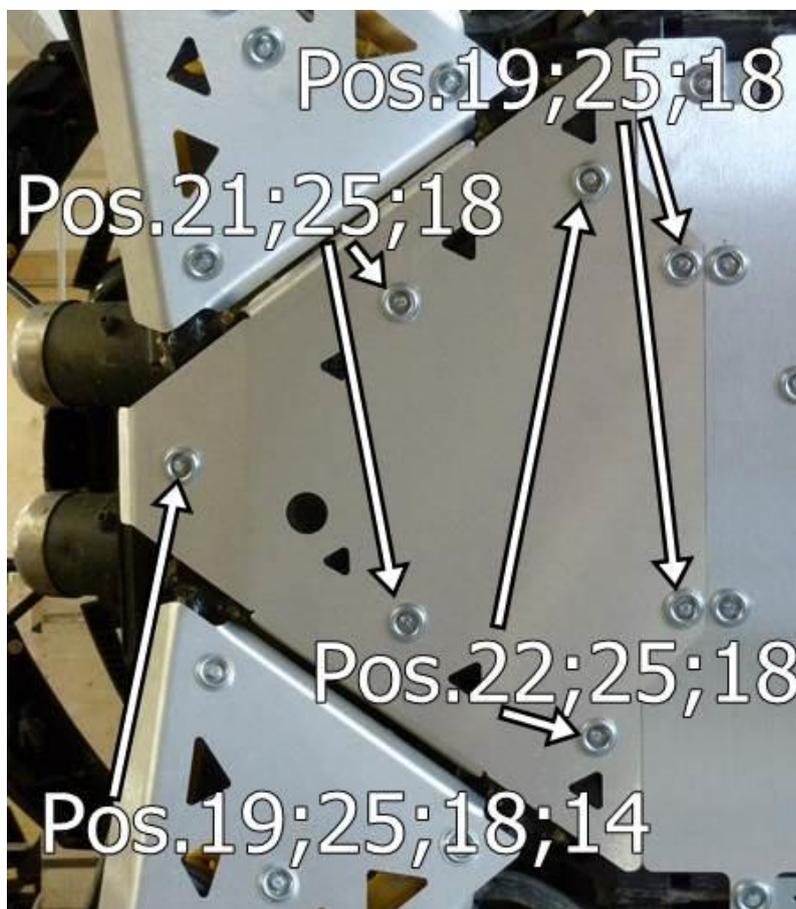


Step 7 Install front protection 02.12201.

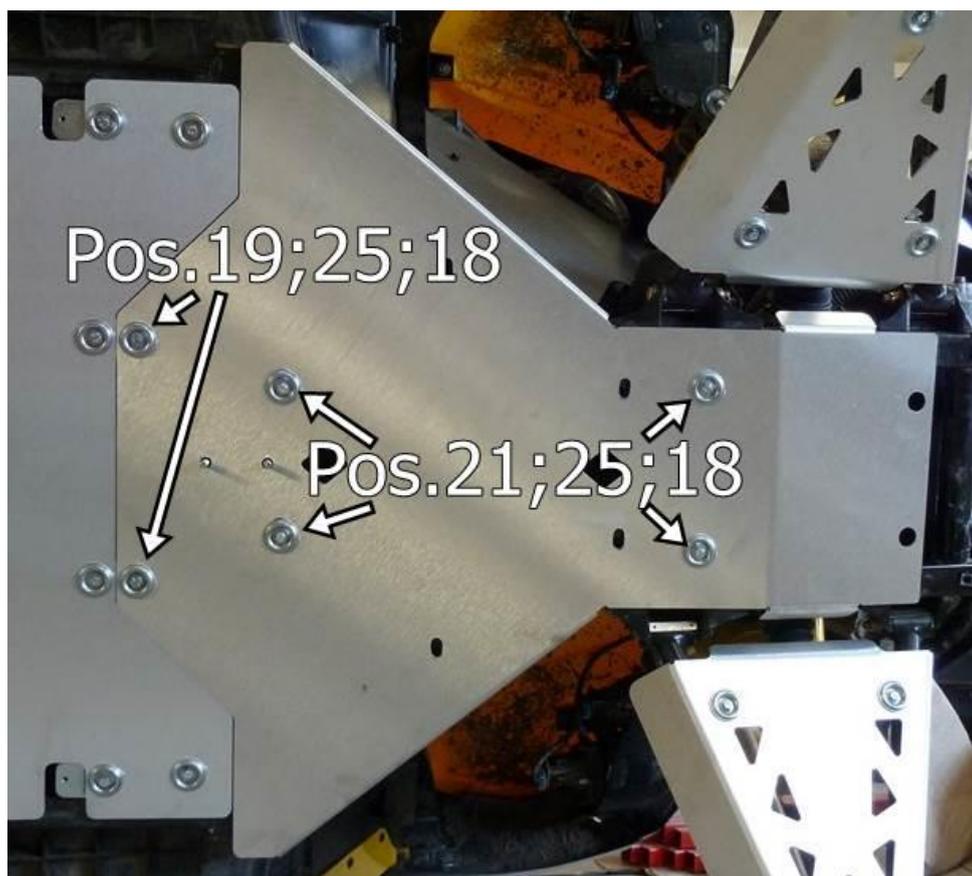



Step 8 Install plates 02.5006 to front protection.

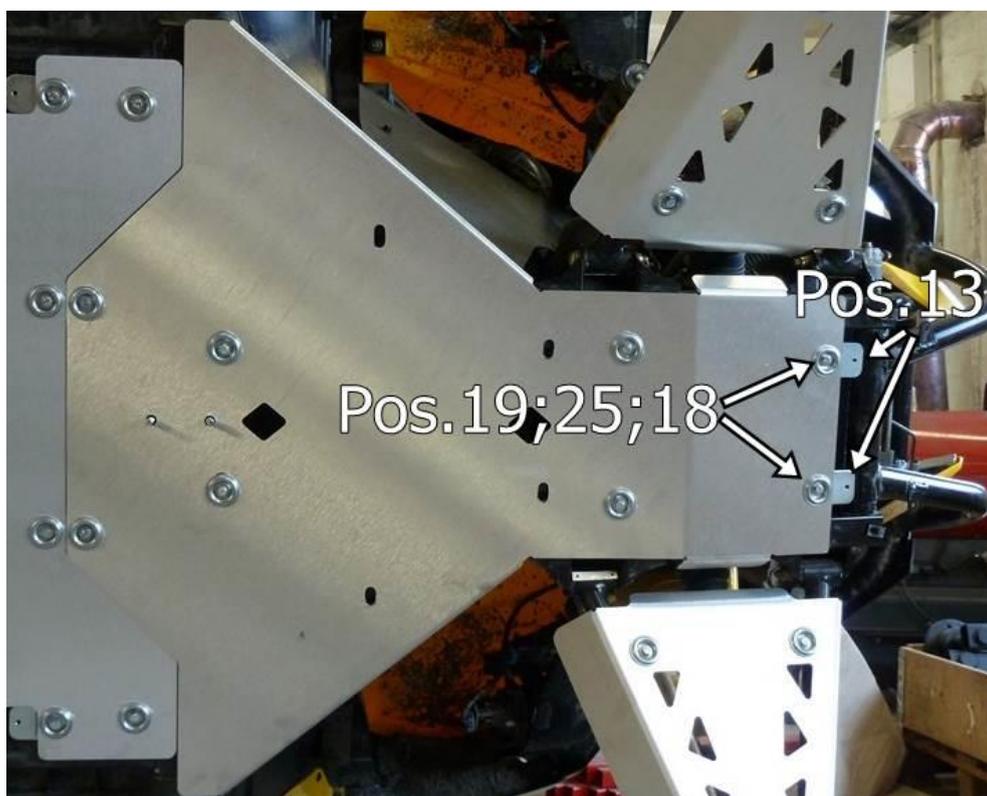

Step 9 Install skidplate bumper protection 02.12210K.

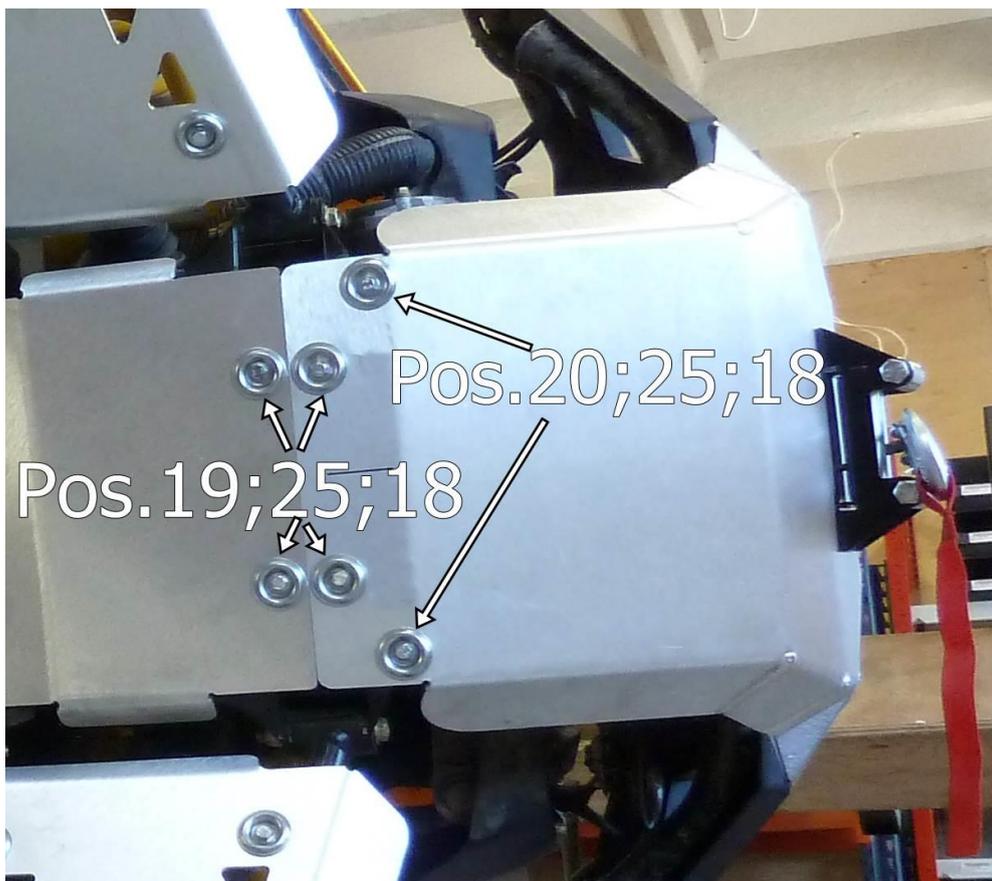

Step 10 Install left and right skidplate side protection 02.12204 and 02.12205.

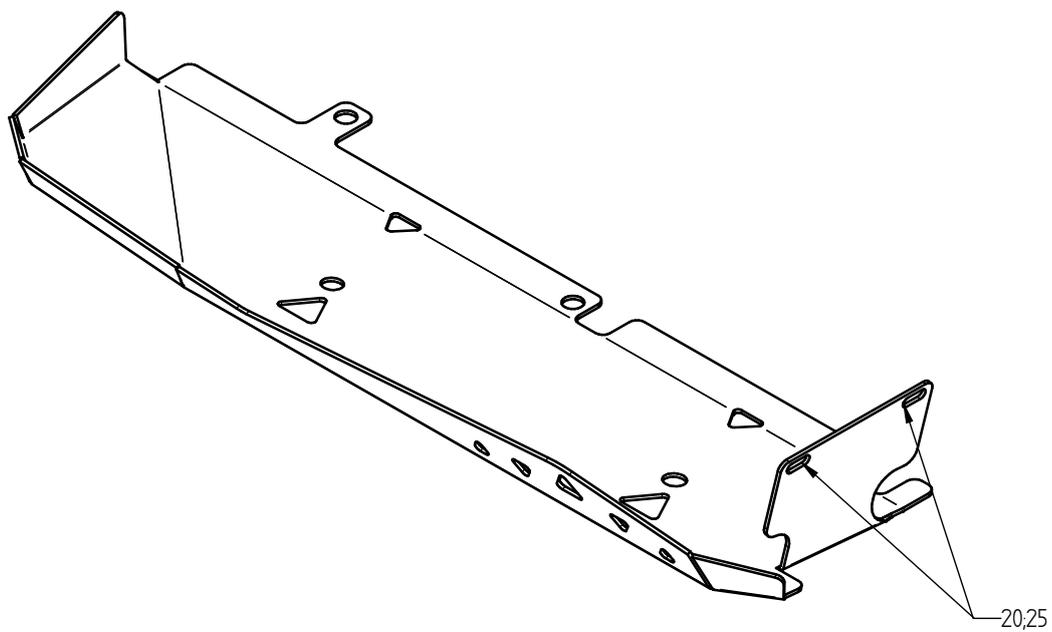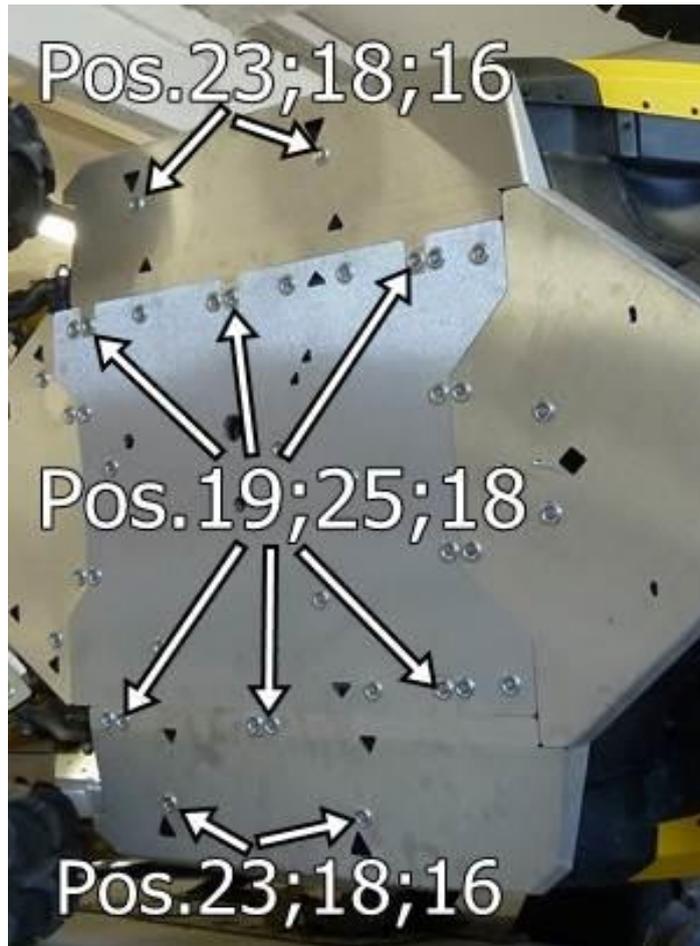

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

