

IRON BALTIC

ALUMINIUM SKID PLATE

POLARIS

570 Sportsman / ETX

Code 02.12500

Version 28082023

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/ARfU3UkJ

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION



| Pos. | Description | Code | Amount |
|------|---|--------------|--------|
| 1 | Middle part | 02.12501 | 1 |
| 2 | Front part | 02.12502 | 1 |
| 3 | Rear part | 02.12503 | 1 |
| 4 | Intallation plate left | 02.12504K | 1 |
| 5 | Intallation plate right | 02.12505K | 1 |
| 6 | Front right arm protection | 02.1402 | 1 |
| 7 | Front left arm protection | 02.1403 | 1 |
| 8 | Rear right arm protection | 02.1404 | 1 |
| 9 | Rear left arm protection | 02.1405 | 1 |
| 10 | Front part bracket (models ...-2015) | 02.5602 | 1 |
| 10-1 | Front part bracket 2 (models 2015 +...) | 02.12506 | 1 |
| 11 | Clamp for front arm protection | 02.1416 | 1 |
| 12 | Clamp for front arm protection | 02.1417 | 1 |
| 13 | Clamp for rear arm protection | 02.1418 | 2 |
| 14 | Installation plate | 02.4011 | 2 |
| 15 | Installation plate | 02.5006 | 6 |
| 16 | Installation plate | 02.2305 | 3 |
| 17 | Dished washer | 14.503 | 25 |
| 18 | Bolt M6x12 DIN 933 | OT.02.02.030 | 12 |
| 19 | Bolt M6x16 DIN 7991 | OT.02.04.020 | 8 |
| 20 | Bolt M6x20 DIN 7991 | OT.02.04.030 | 12 |
| 21 | Bolt M8x20 DIN 933 | OT.02.02.180 | 9 |
| 22 | Bolt M8x25 DIN 933 | OT.02.02.190 | 4 |
| 23 | Bolt M8x25 DIN 7991 | OT.02.04.160 | 2 |
| 24 | Screw UNC 10 x 1" DIN 912 | OT.02.07.021 | 4 |
| 25 | Washer Ø5/15 DIN 9021 | OT.04.02.010 | 4 |
| 26 | Washer Ø6/15 SFS 3738 | OT.04.03.020 | 20 |
| 27 | Washer Ø6 | 14.502 | 12 |
| 28 | Washer Ø8 | 14.501 | 2 |
| 29 | Nyloc nut M6 DIN 985 | OT.03.02.030 | 8 |


FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers.




Step 2 Install bracket 02.5602 or 02.12506, use original bolts. Bracket 02.12506 will fit models starting from manufacturing year 2015. Install plates 02.12504 and 02.12505 (use 10mm spanner, 10mm socket wrench and 4mm hex key).

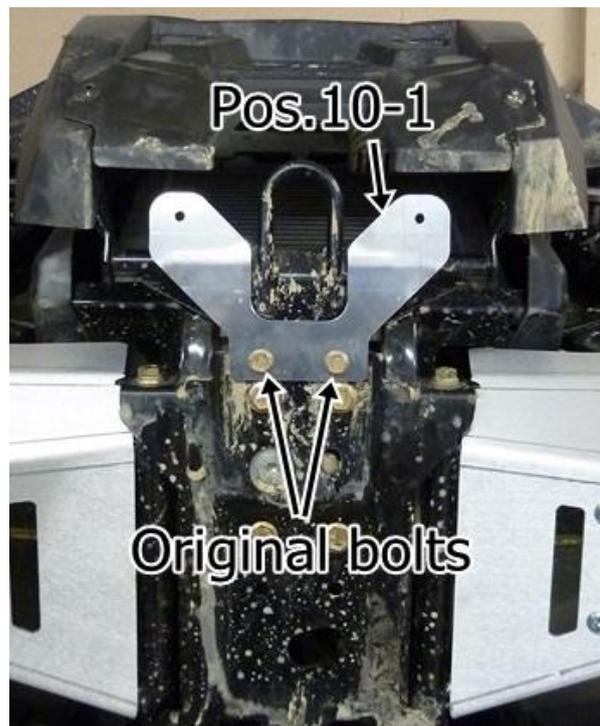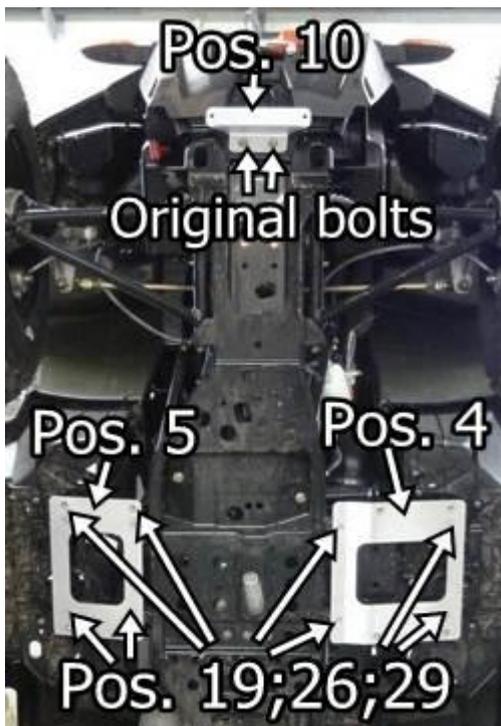


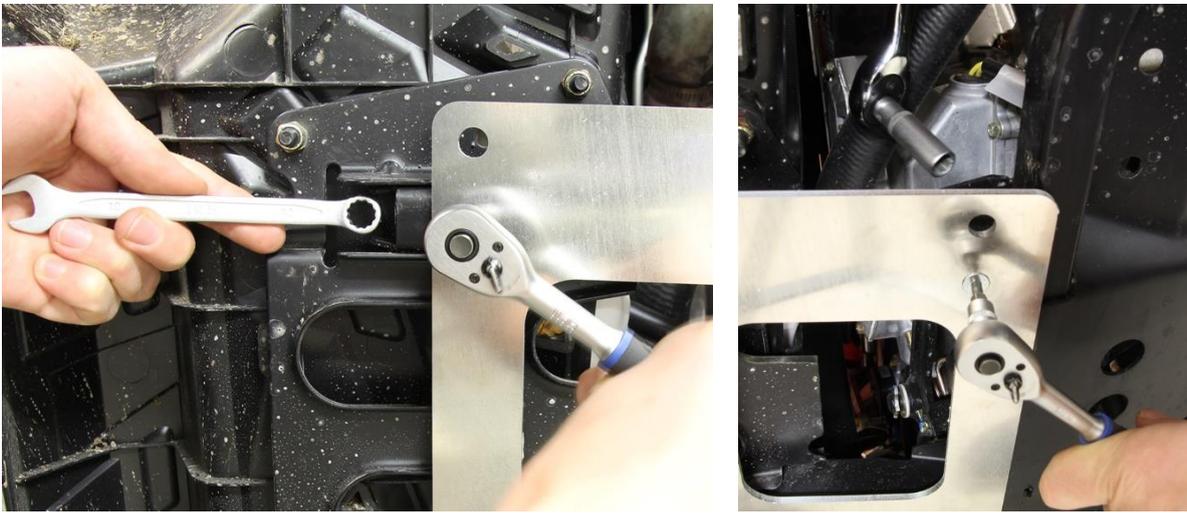

Step 3 Install front arm protections 02.1402 and 02.1403.

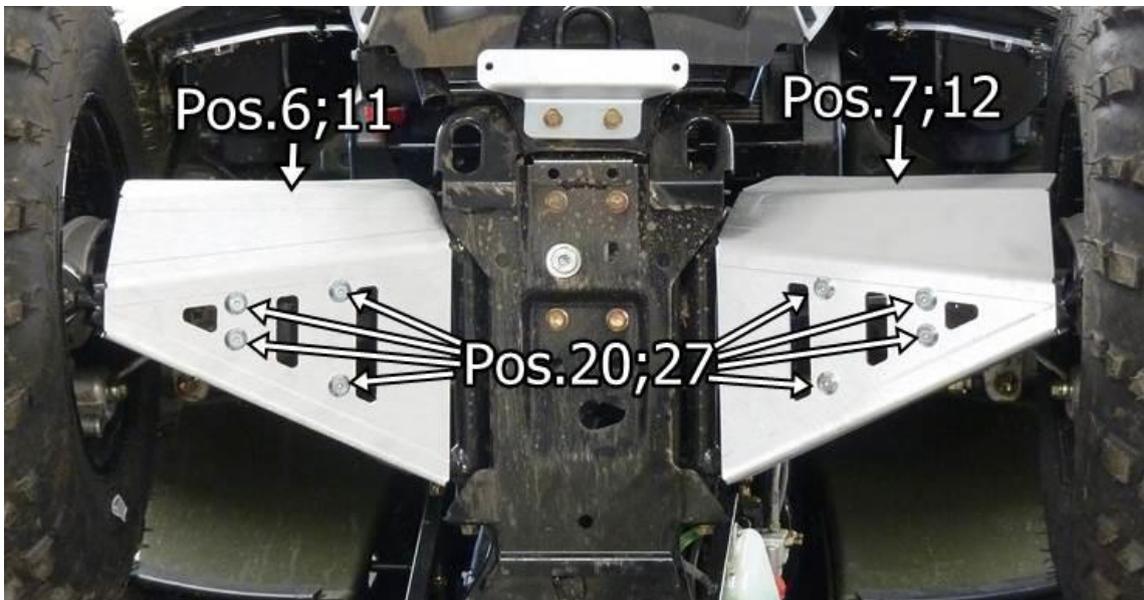


Step 4 Install rear arm protections 02.1404 and 02.1405.

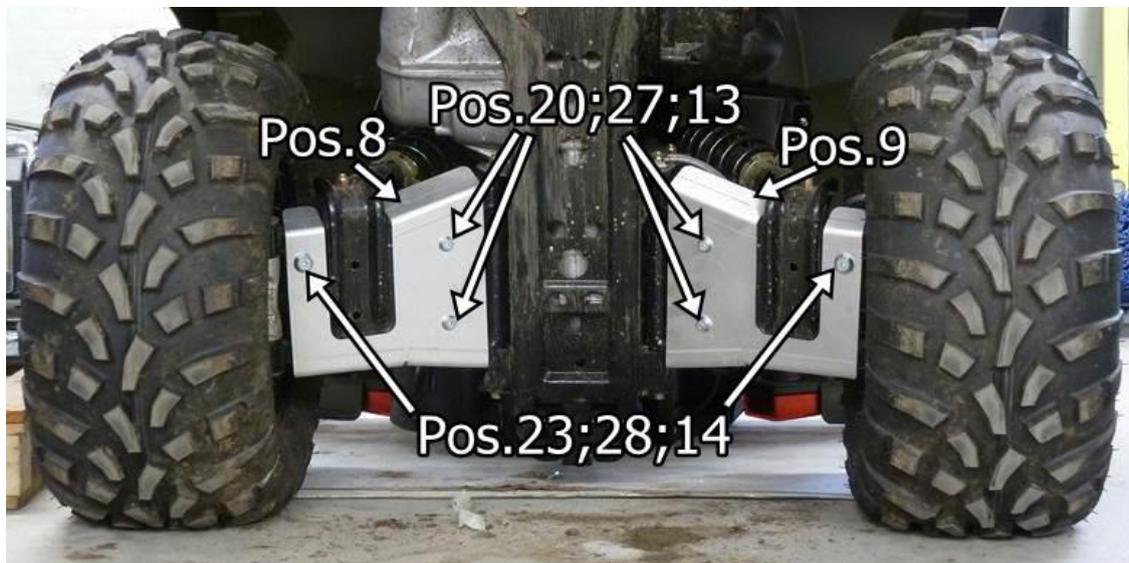




NB!

On some models, bracket holding the brake line, may be in the way of installing Pos.12 bracket. In that case install Pos.12 bracket to the second hole, as show on the picture below.

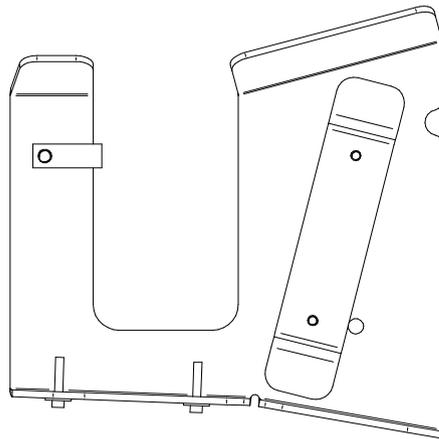


Installation with brake line in the way

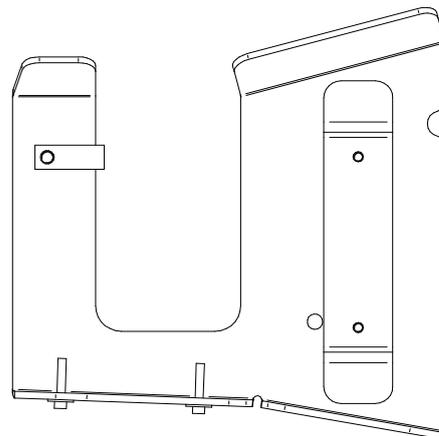


Original installation


Step 5 Install middle protection 02.12501.

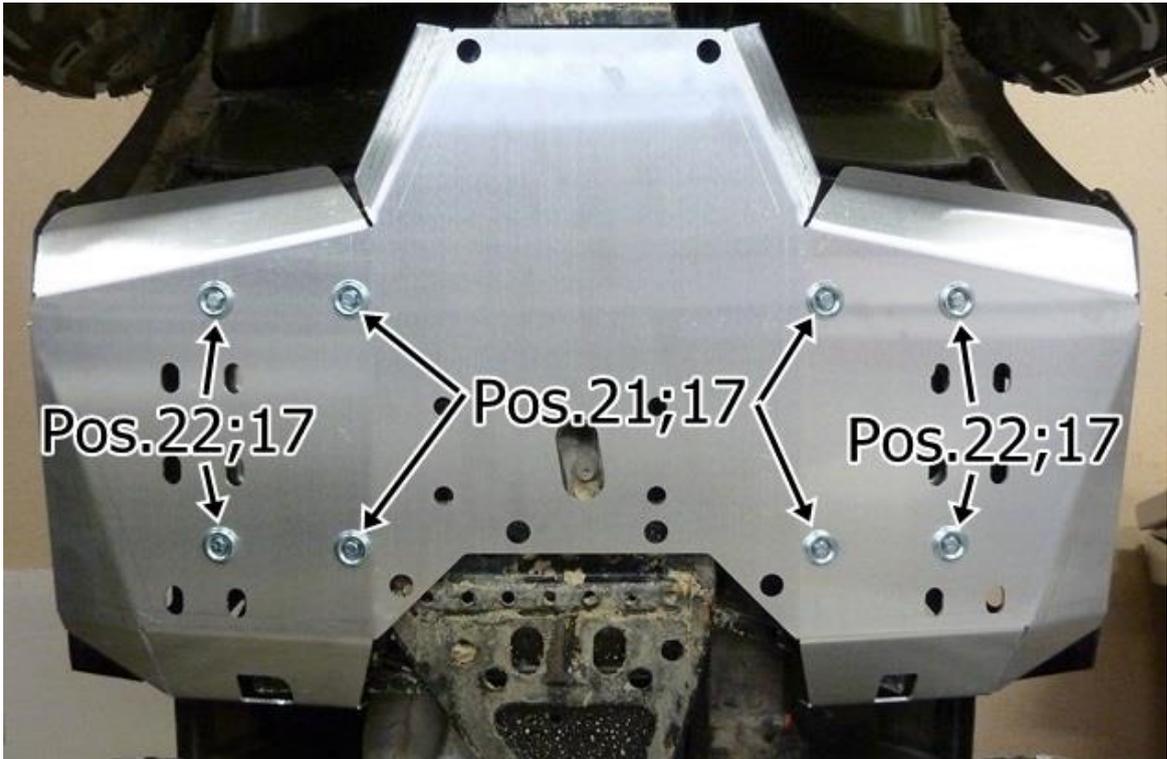

Step 6 Install plates 02.5006 to middle part.

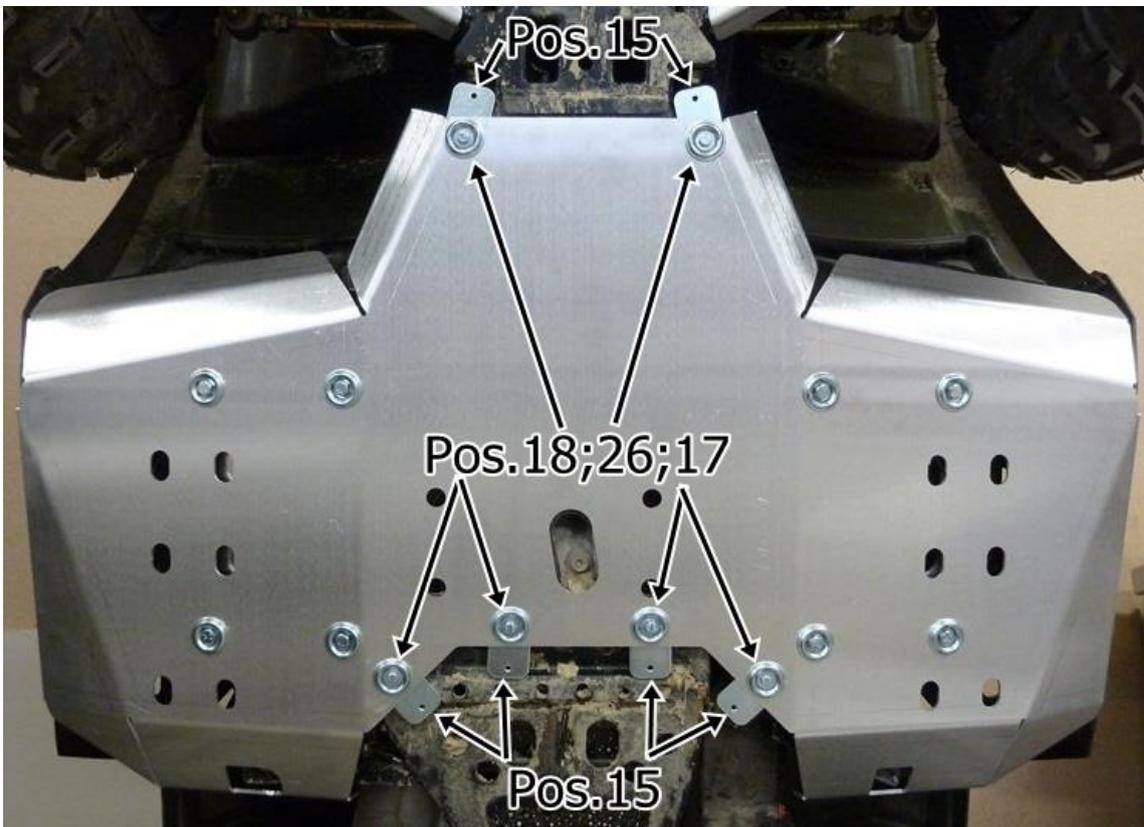

Step 7 Install front protection 02.12502.

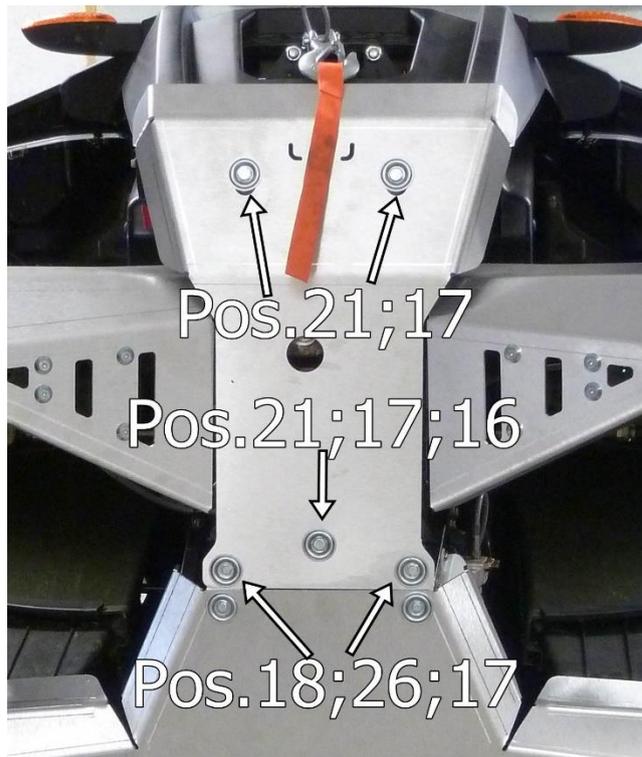

Step 8 Install rear protection 02.12503.



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

