

# IRON BALTIC

## PLASTIC SKID PLATE

# POLARIS

## 570 Sportsman / ETX

Code 02.12600

Version 28082023

DOWNLOAD MULTILINGUAL  
USER MANUAL





[code.ironbaltic.com/u/QIUAIF4q](https://code.ironbaltic.com/u/QIUAIF4q)

**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Middle part	02.12601	1
2	Front part	02.12602	1
3	Rear part	02.12603	1
4	Intallation plate left	02.12504K	1
5	Intallation plate right	02.12505K	1
6	Front right arm protection	02.1412	1
7	Front left arm protection	02.1413	1
8	Rear right arm protection	02.1414	1
9	Rear left arm protection	02.1415	1
10	Clamp for front arm protection	02.1416	1
11	Clamp for front arm protection	02.1417	1
12	Clamp for rear arm protection	02.1418	2
13	Installation plate	02.2305	3
14	Installation plate	02.4011	2
15	Installation plate	02.5006	6
16	Front part bracket	02.5602	1
16-1	Front part bracket 2	02.12506	1
17	Dished washer	14.503	25
18	Bolt M6x16 DIN 933	OT.02.02.050	12
19	Bolt M8x20 DIN 933	OT.02.02.180	2
20	Bolt M8x25 DIN 933	OT.02.02.190	7
21	Bolt M8x30 DIN 933	OT.02.02.200	4
22	Bolt M6x16 DIN 7991	OT.02.04.020	8
23	Bolt M6x25 DIN 7991	OT.02.04.040	12
24	Bolt M8x25 DIN 7991	OT.02.04.160	2
25	Screw UNC 10 x 1" DIN 912	OT.02.07.021	4
26	Washer Ø5/15 DIN 9021	OT.04.02.010	4
27	Washer Ø6/15 SFS 3738	OT.04.03.020	20
28	Washer Ø6	14.502	12
29	Washer Ø8	14.501	2
30	Nyloc nut M6 DIN 985	OT.03.02.030	8

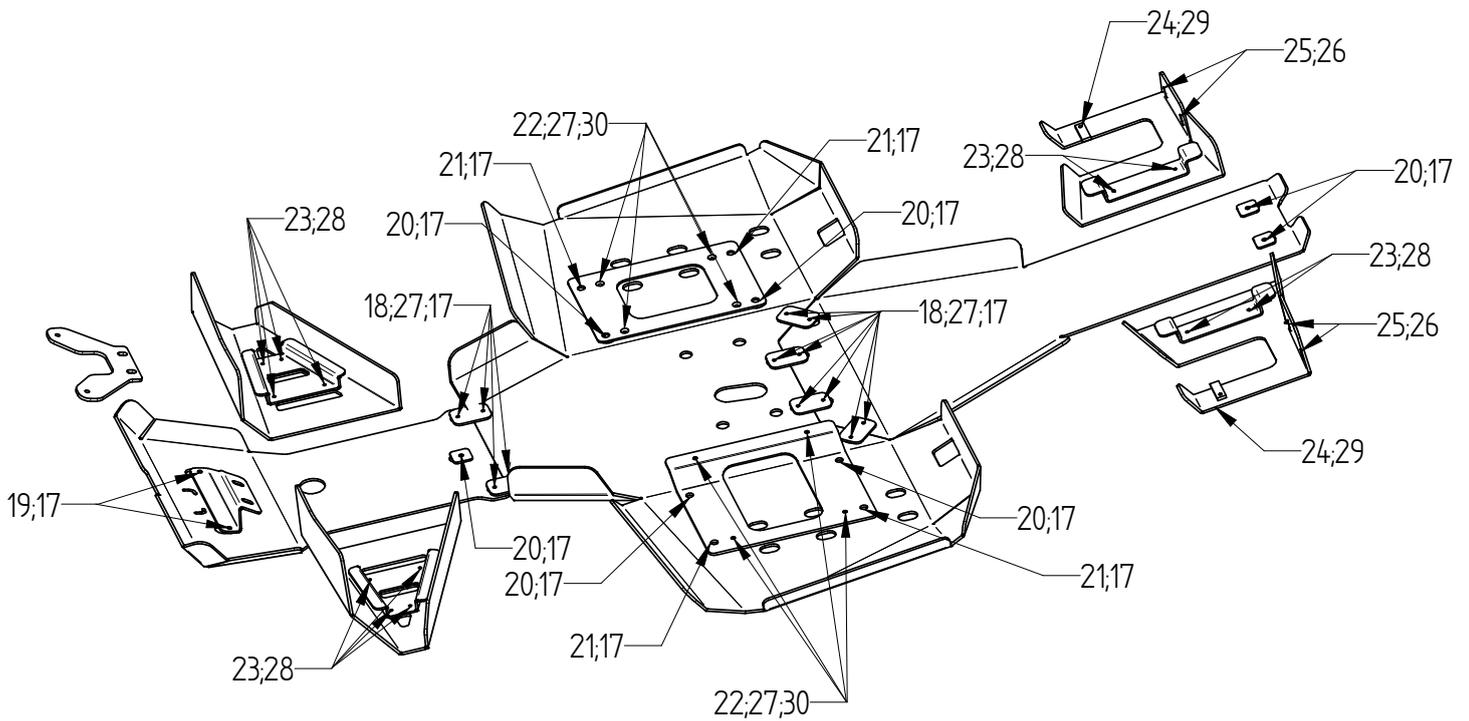
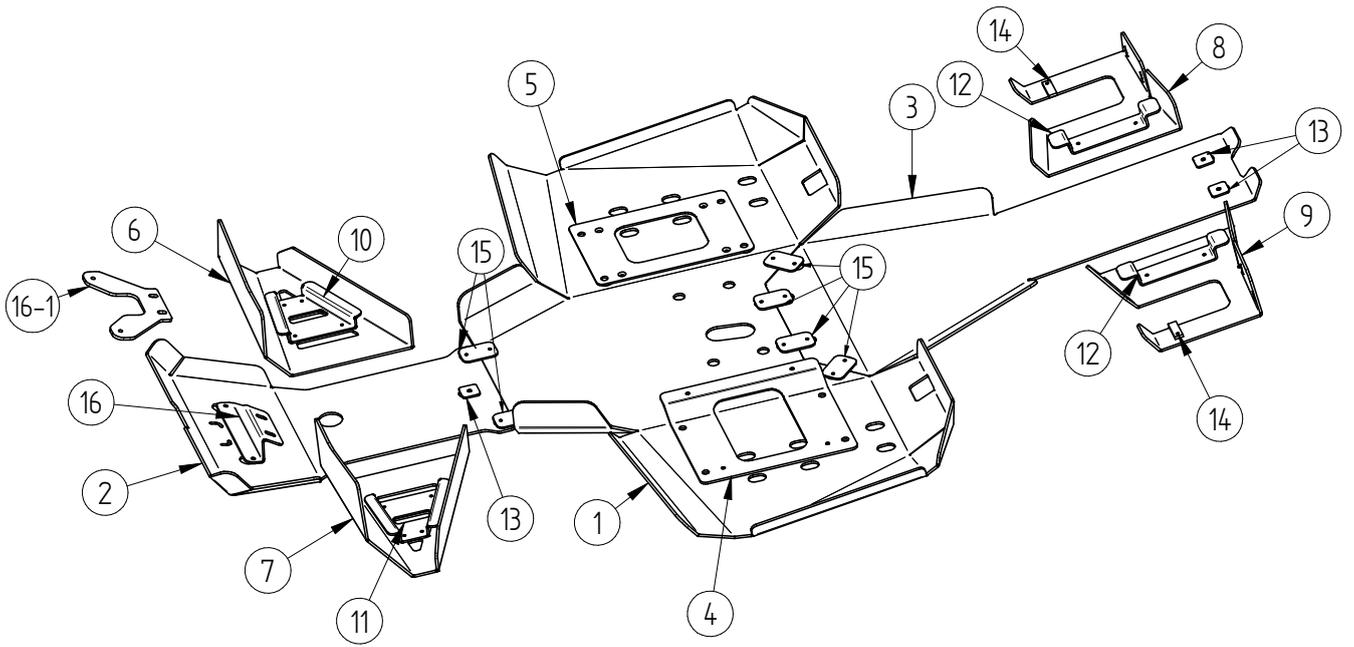



# FITTING INSTRUCTIONS

**Step 1** Remove all standard plastic covers.




**Step 2** Install bracket 02.5602 or 02.12506, use original bolts. Bracket 02.12506 will fit models starting from manufacturing year 2015. Install plates 02.12504 and 02.12505 (use 10mm spanner, 10mm socket wrench and 4mm hex key).

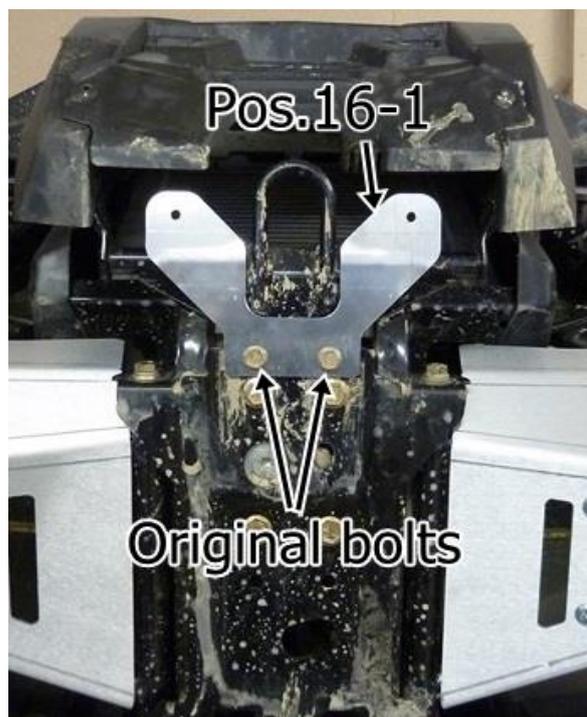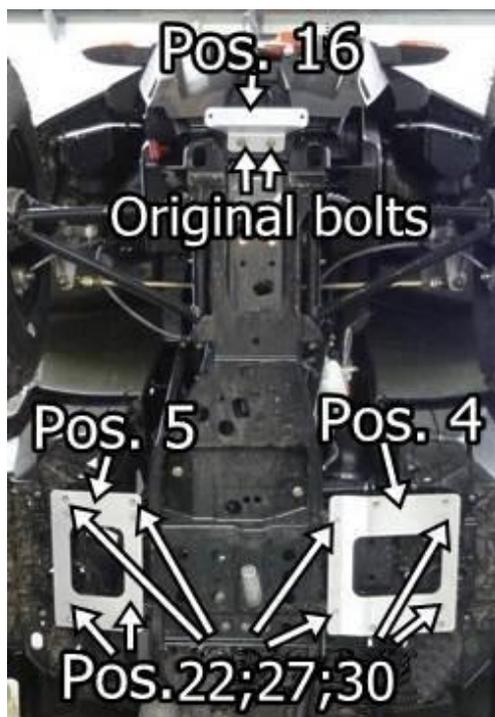


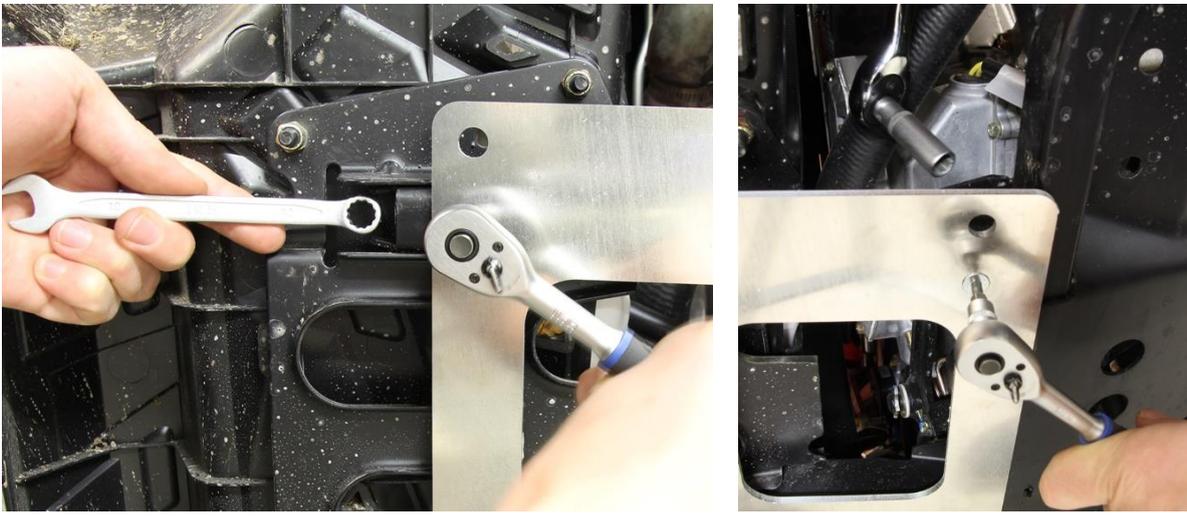

**Step 3** Install front arm protections 02.1412 and 02.1413.

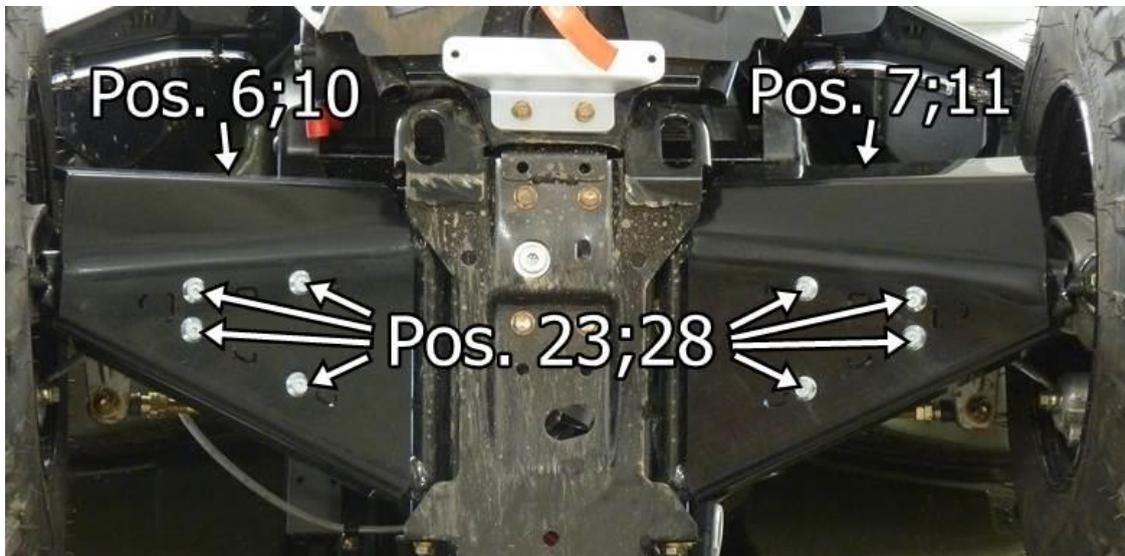


**Step 4** Install rear arm protections 02.1414 and 02.1415.

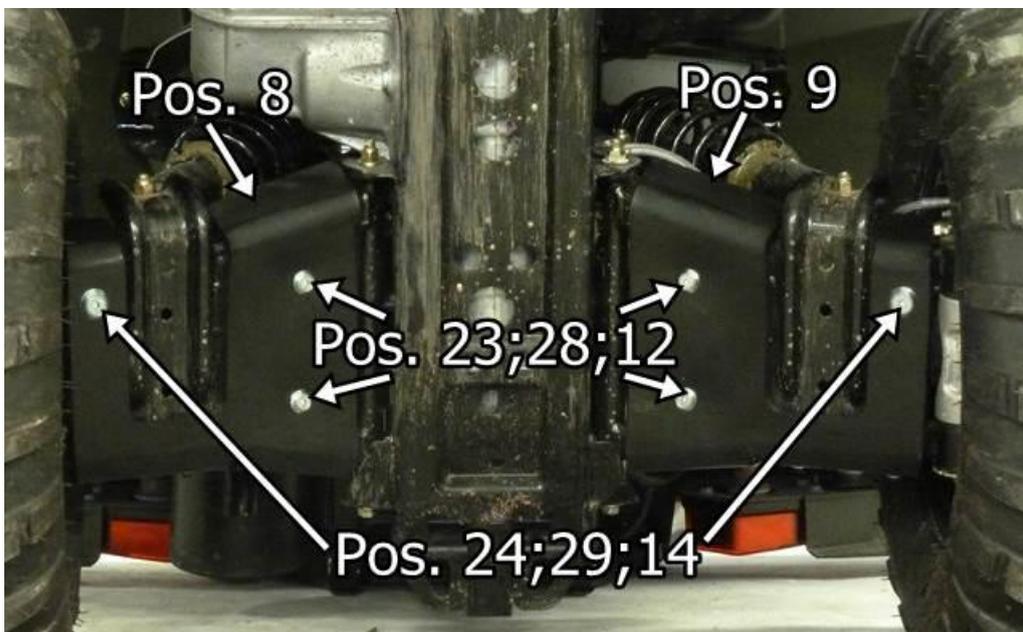




**NB!**

On some models, bracket holding the brake line, may be in the way of installing Pos.12 bracket. In that case install Pos.12 bracket to the second hole, as show on the picture below.

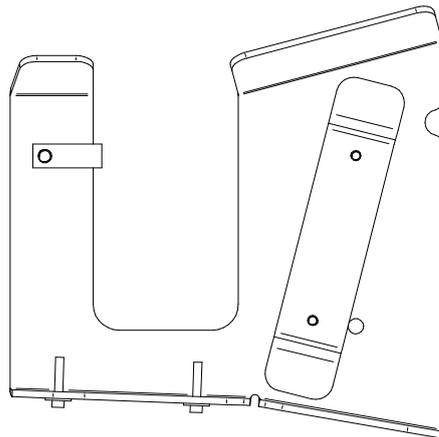


Installation with brake line in the way

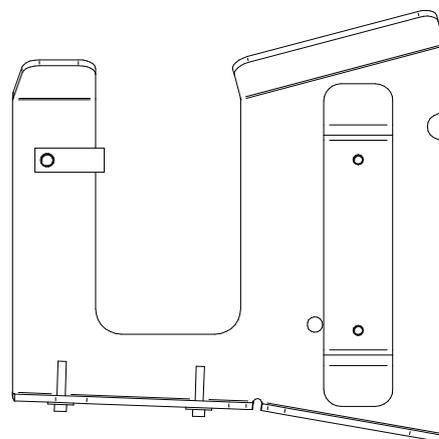


Original installation

**Step 5** Install middle protection 02.12601.

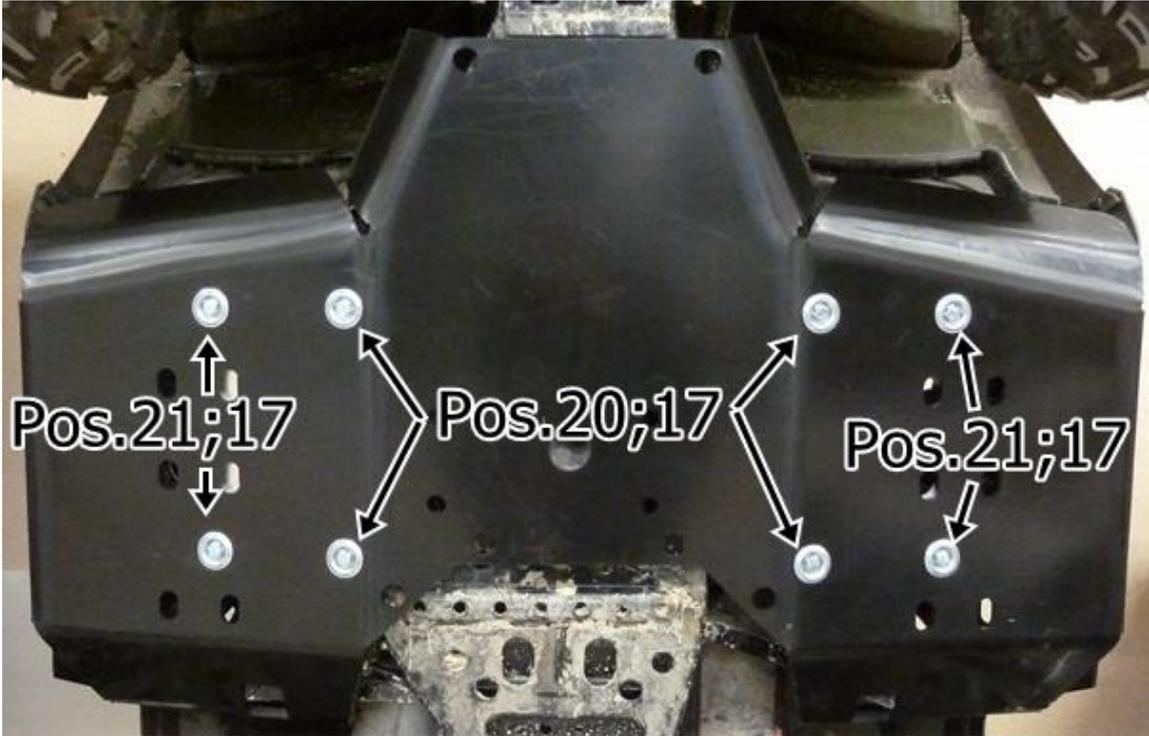

**Step 6** Install plates 02.5006 to middle part.

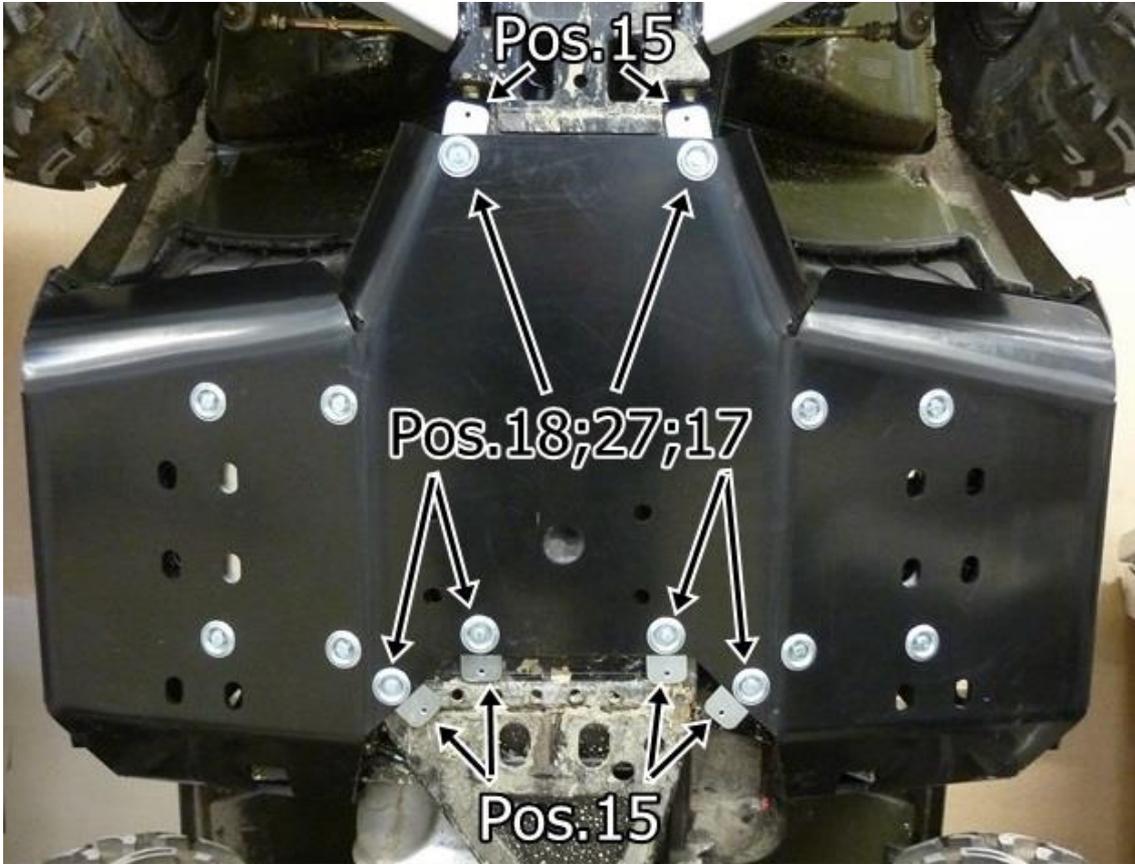

**Step 7** Install front protection 02.12602.



**Step 8** Install rear protection 02.12603.









# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

