

# IRON BALTIC

DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/nPqQHap8](https://code.ironbaltic.com/u/nPqQHap8)


## PLASTIC SKID PLATE

# LINHAI

## 600 EFI V-Twin

Code 02.12800

Version 28082023


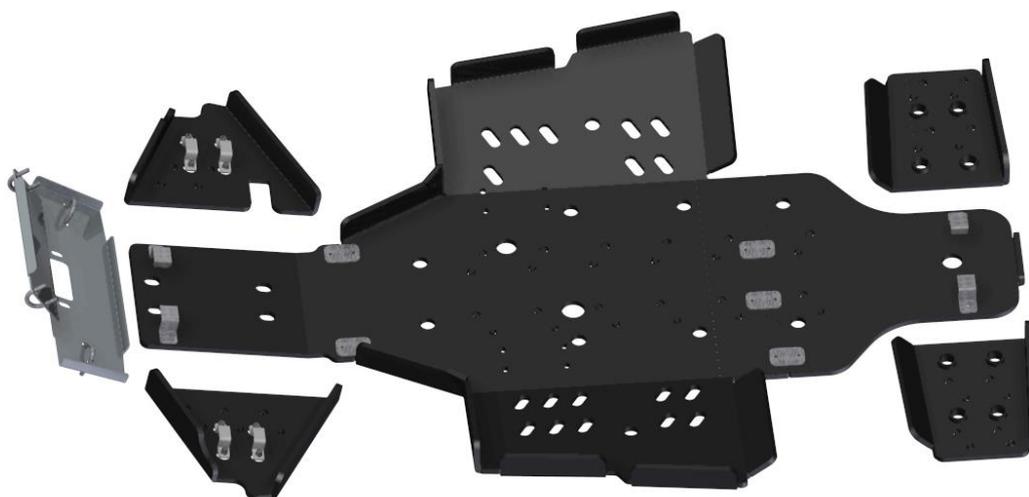


**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Middle part	02.12801	1
2	Front part	02.12102	1
3	Rear part	02.12803	1
4	Front protection	02.12702	1
5	Front left arm protection	02.12804V	1
6	Front right arm protection	02.12804P	1
7	Rear left arm protection	02.12105VK	1
8	Rear right arm protection	02.12105PK	1
9	Intallation plate	02.5709	4
10	Plate	02.5006	5
11	Clamp 32mm	OT.05.01.020	4
12	Clamp	02.12708K	4
13	Bolt M6x20 DIN 933	OT.02.02.060	12
14	Bolt M6x25 DIN 7991	OT.02.04.040	10
15	Bolt M6x40 DIN 933	OT.02.02.100	8
16	Bolt M6x90 DIN 933	OT.02.02.162	2
17	Bolt M8x25 DIN 933	OT.02.02.190	8
18	Washer Ø6	14.502	10
19	Dished washer	14.503	30
20	Washer Ø6/15 SFS 3738	OT.04.03.020	32
21	Washer Ø8/20 SFS 3738	OT.04.03.030	8
22	Nyloc nut M6 DIN 985	OT.03.02.030	10
23	Nyloc nut M8 DIN 985	OT.03.02.040	8

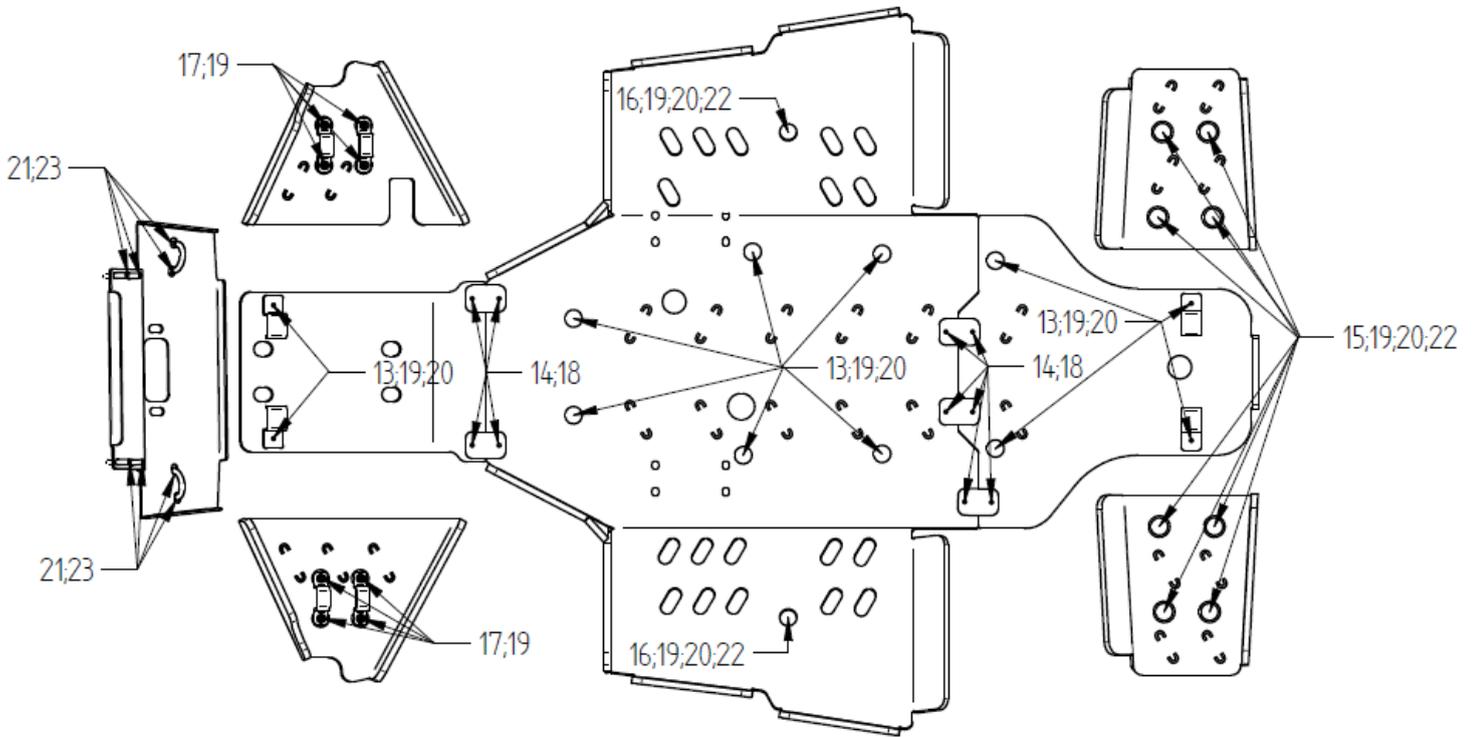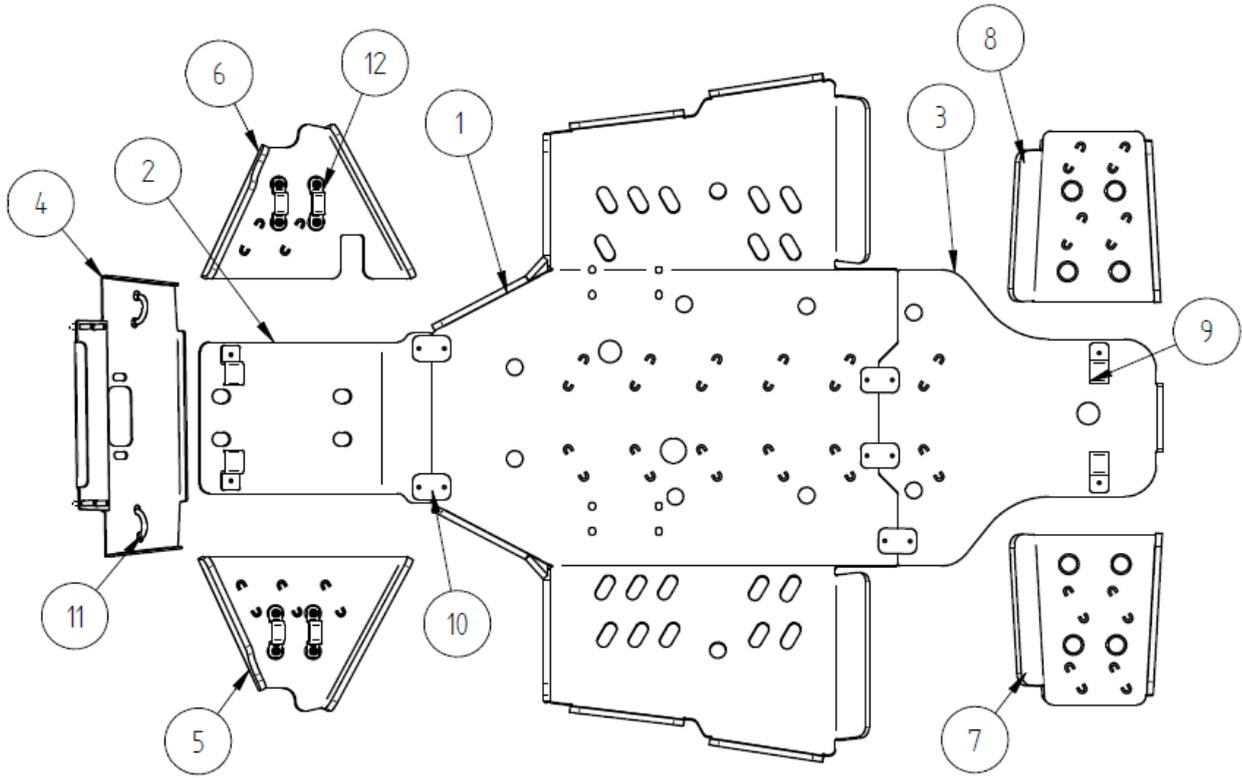


# FITTING INSTRUCTIONS

**Step 1** Remove all standard covers (also plastic front protection), plate and 2 bolts.




**Step 2** Install middle part 02.12801.

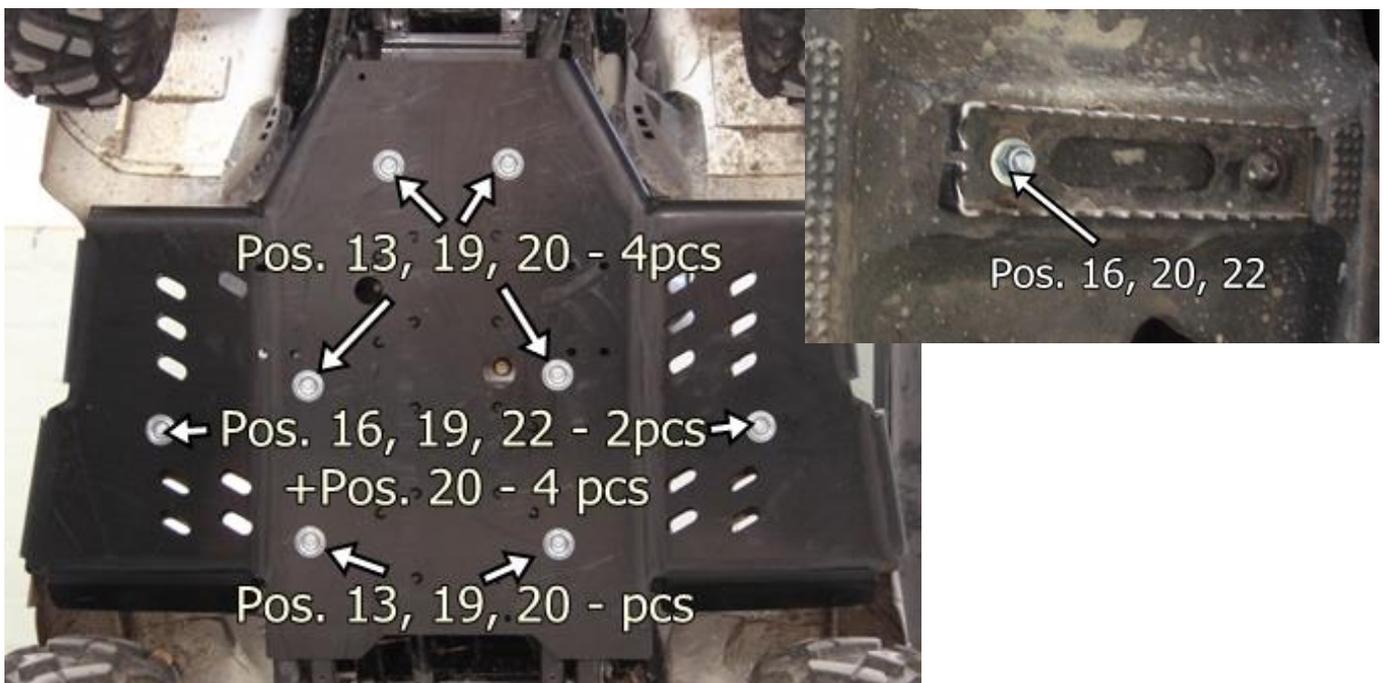


### Step 3

Install plates 02.5006 to the middle part.

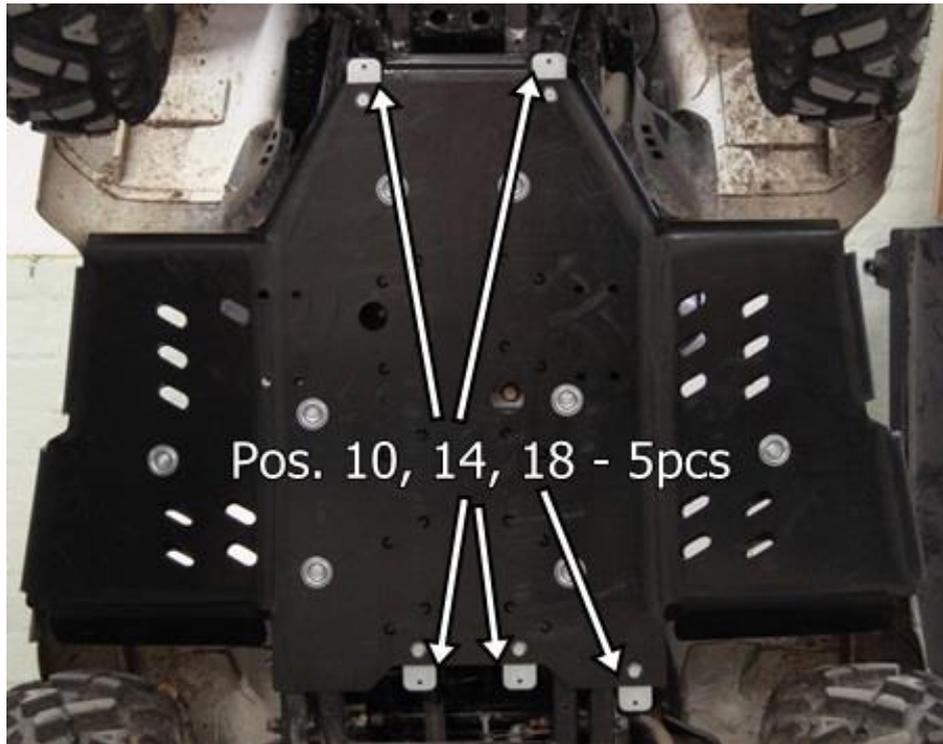


### Step 4


Install rear part 02.12803.

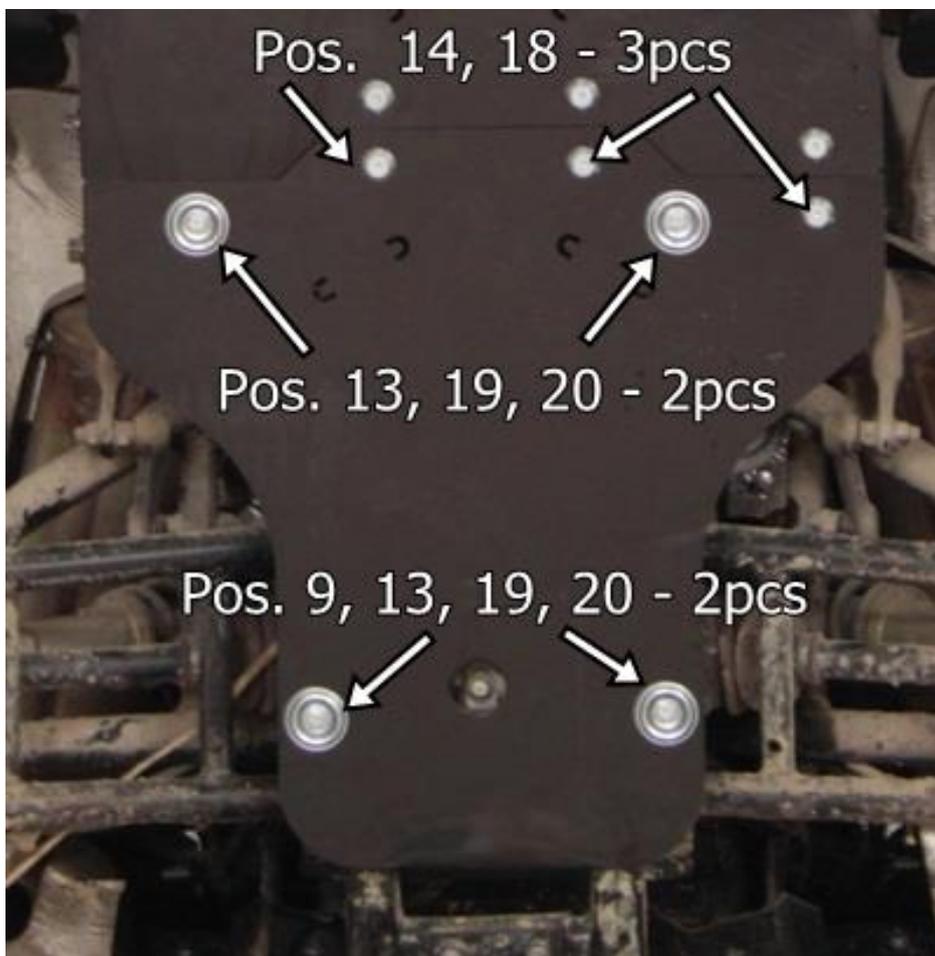


**Step 5** Install front part 02.12102.

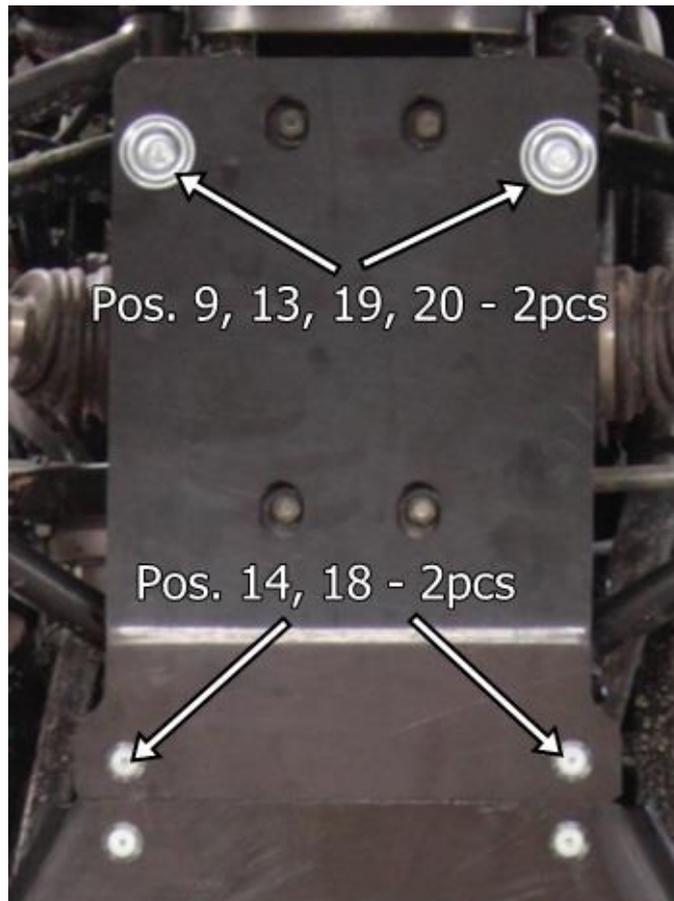


**Step 6** Install rear arms protections 02.12105PK and 02.12105VK.

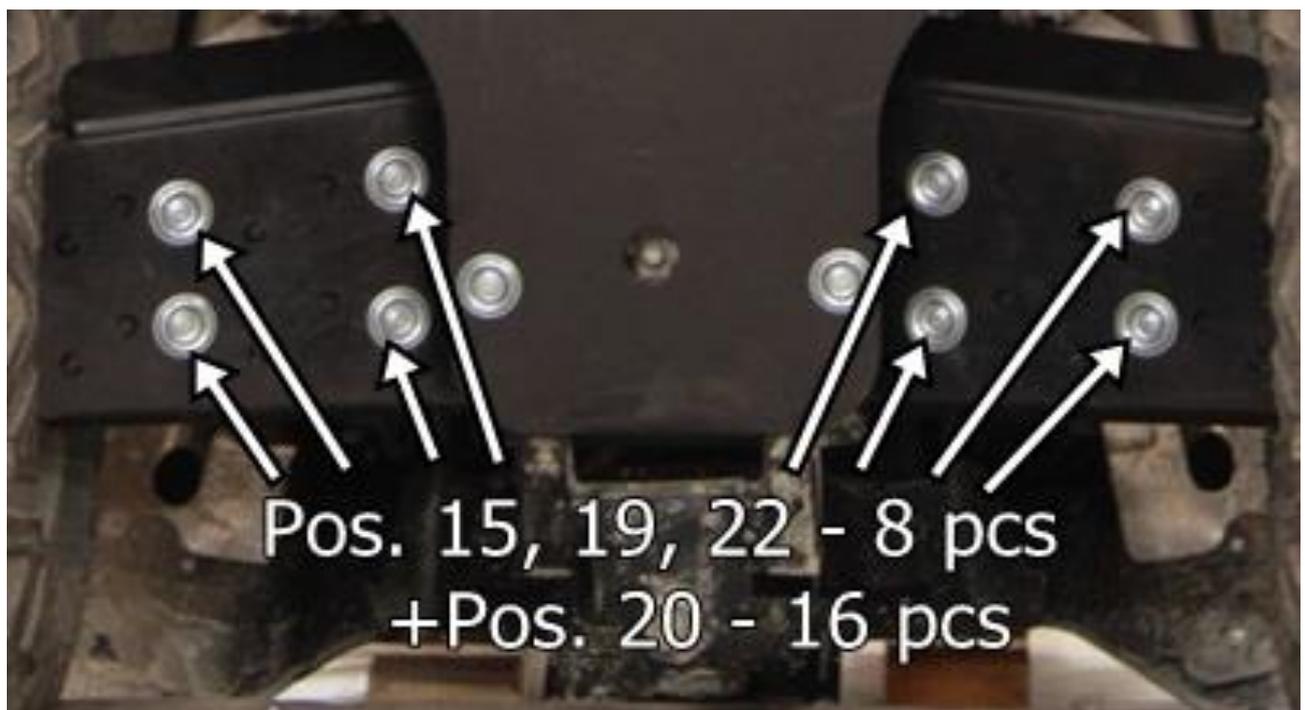



**Step 7** Install front arms protections 02.12804P and 02.12804V.

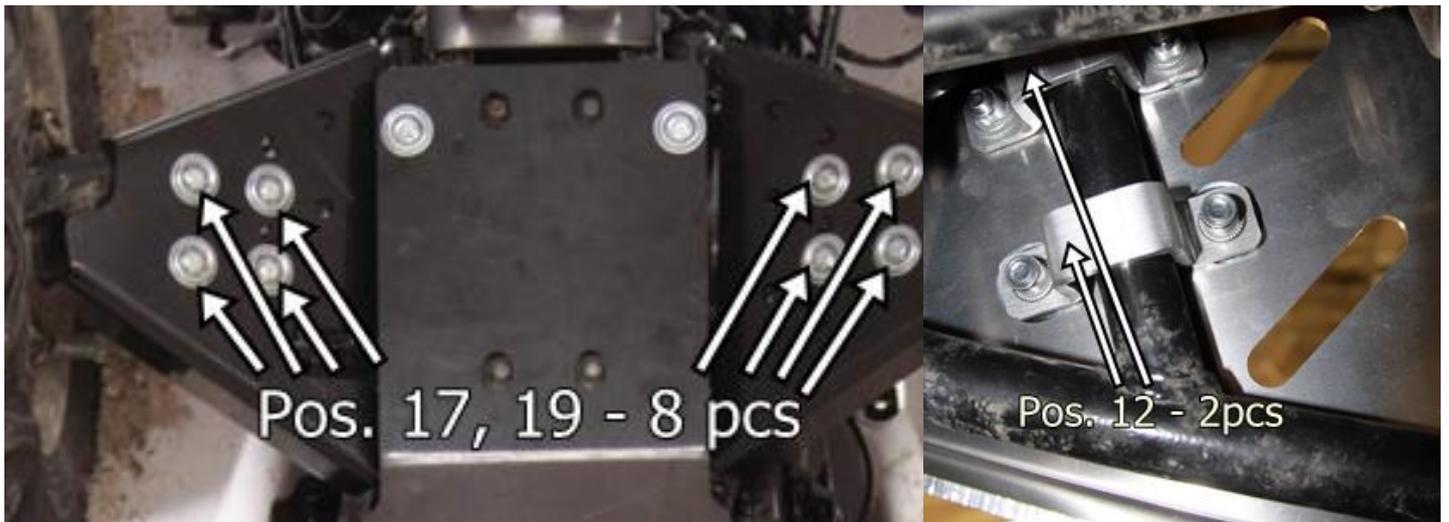

**Step 8 (optional)** If You want to install winch, install original plate back, but in reversed position, as it is shown on the picture. You should also remove radiator plastic cover.

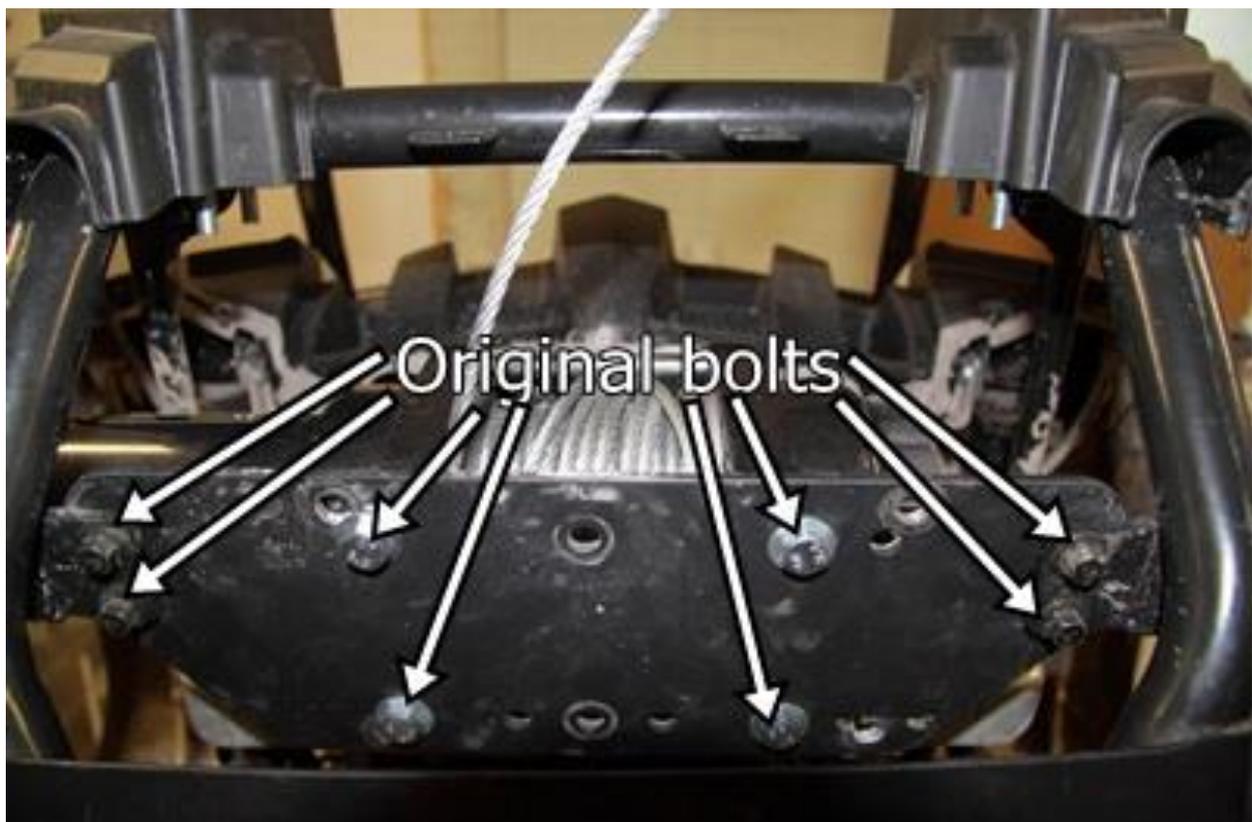

**Step 9** Install front protection 02.12702. If You have also winch installed, install also a roller.

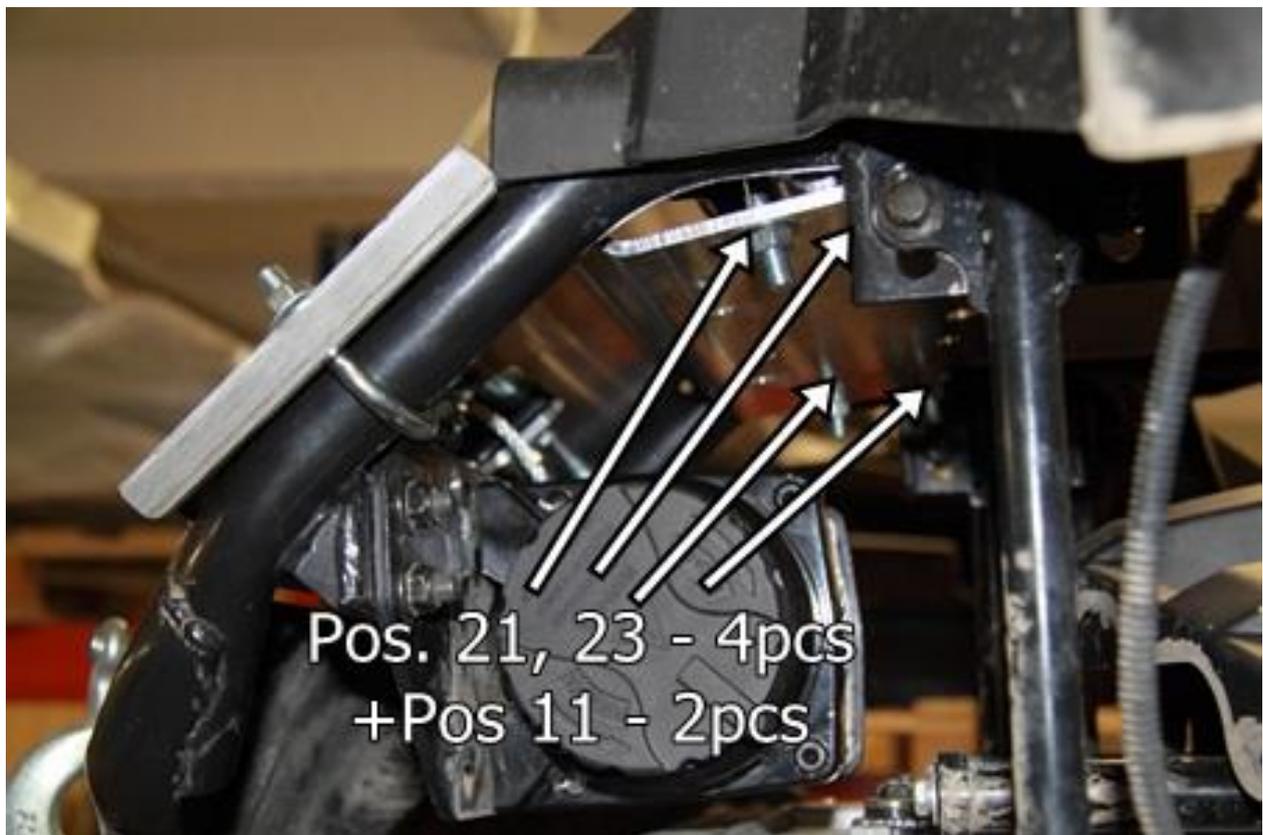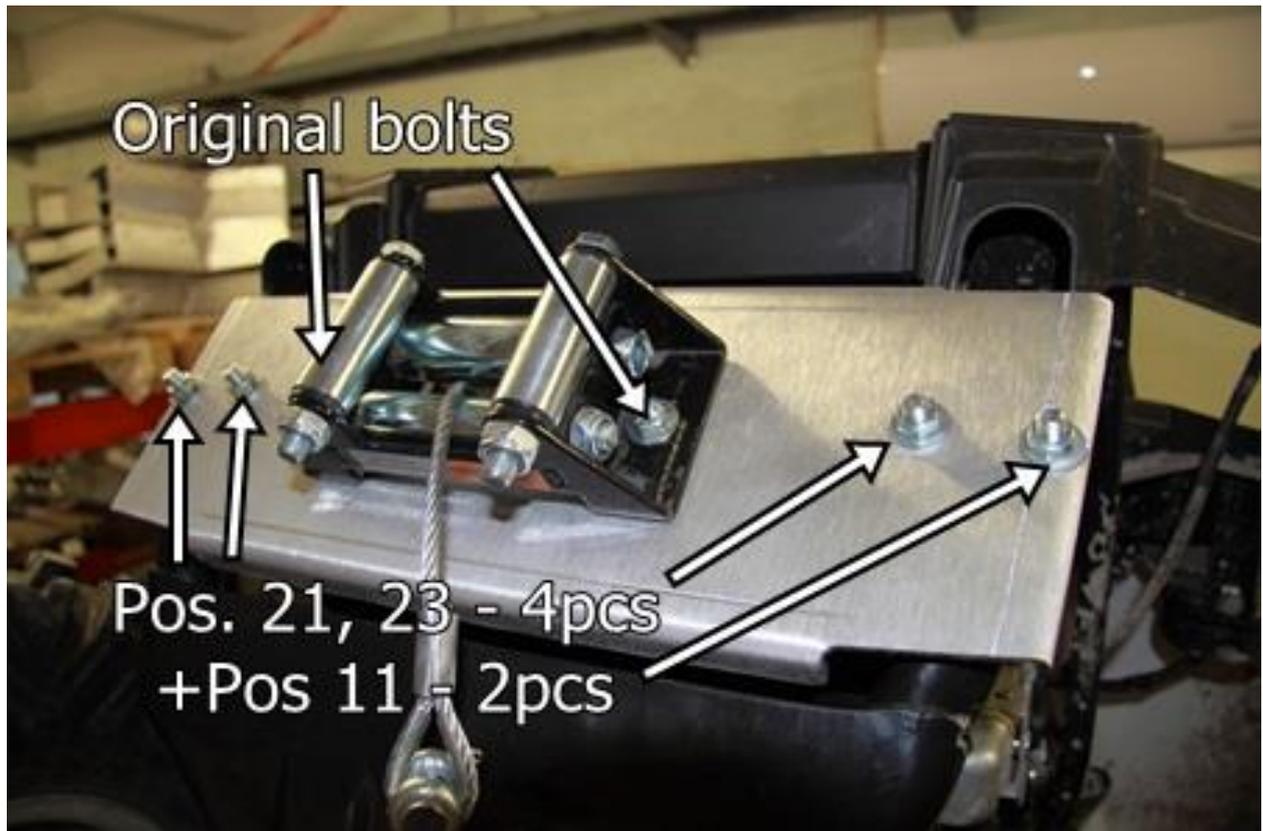







# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

