

IRON BALTIC

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/3eSduW2g


PLASTIC SKID PLATE

YAMAHA

Grizzly 700 (2014)

Code 02.13200

Version 29082023


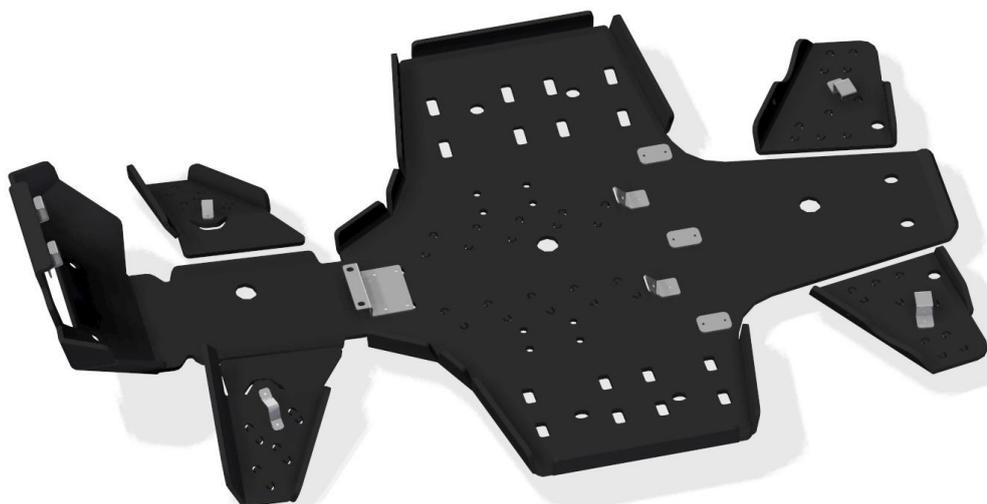


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Middle protection	02.13201	1
2	Front protection	02.13202	1
3	Rear protection	02.13203	1
4	Front right arm protection	02.13204	1
5	Front left arm protection	02.13205	1
6	Rear right arm protection	02.13206	1
7	Rear left arm protection	02.13207	1
8	Plate	02.718	2
9	Plate	02.5006	3
10	Bracket	02.1173	1
11	Bracket	02.4606	2
12	Clamp	02.5709	4
13	Bolt M6x20 DIN 7991	OT.02.04.030	6
14	Bolt M6x25 DIN 7991	OT.02.04.040	4
15	Bolt M6x16 DIN 933	OT.02.02.050	4
16	Bolt M6x20 DIN 933	OT.02.02.060	4
17	Bolt M6x25 DIN 933	OT.02.02.070	4
18	Bolt M6x30 DIN 933	OT.02.02.080	4
19	Bolt M6x45 DIN 933	OT.02.02.110	4
20	Bolt M6x60 DIN 933	OT.02.02.140	2
21	Bolt M8x20 DIN 933	OT.02.02.180	4
22	Washer Ø6/15 SFS 3738	OT.04.03.020	24
23	Washer Ø6/18 DIN 9021	OT.04.02.020	6
24	Conical washer Ø6	14.502	10
25	Dished washer	14.503	22
26	Nylock nut M6 DIN 985	OT.03.02.030	8

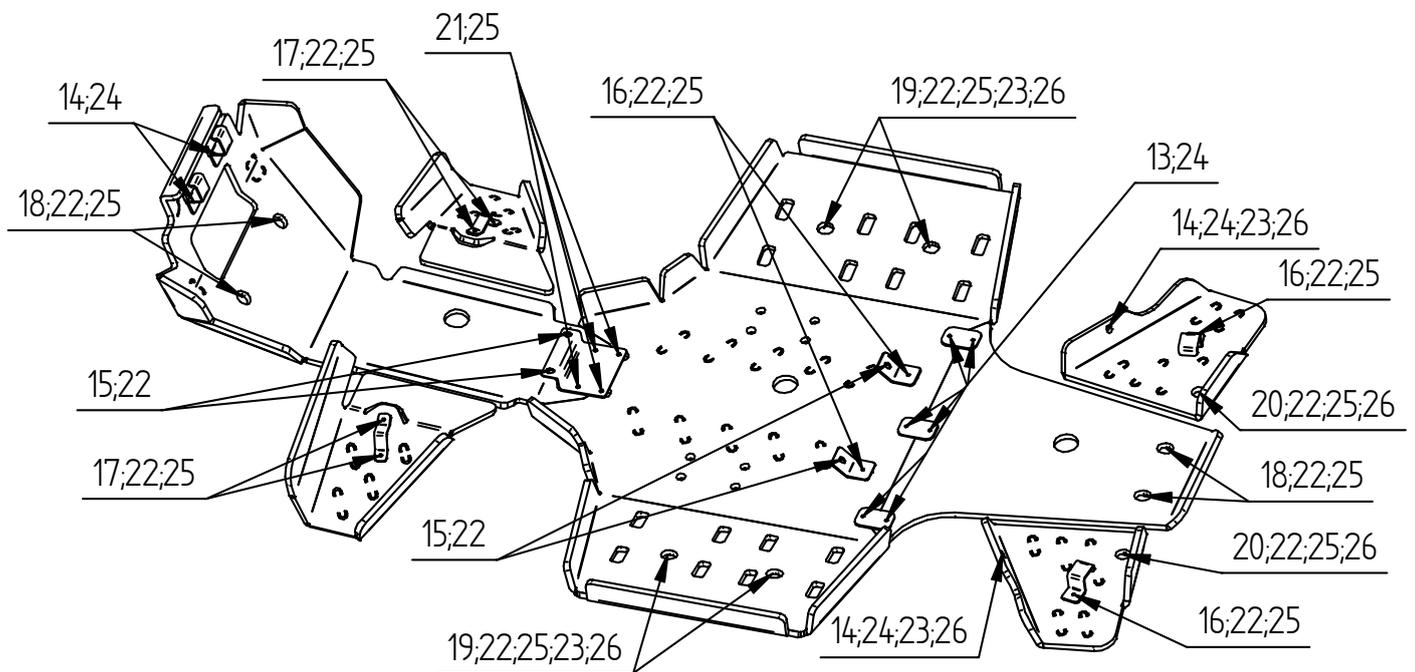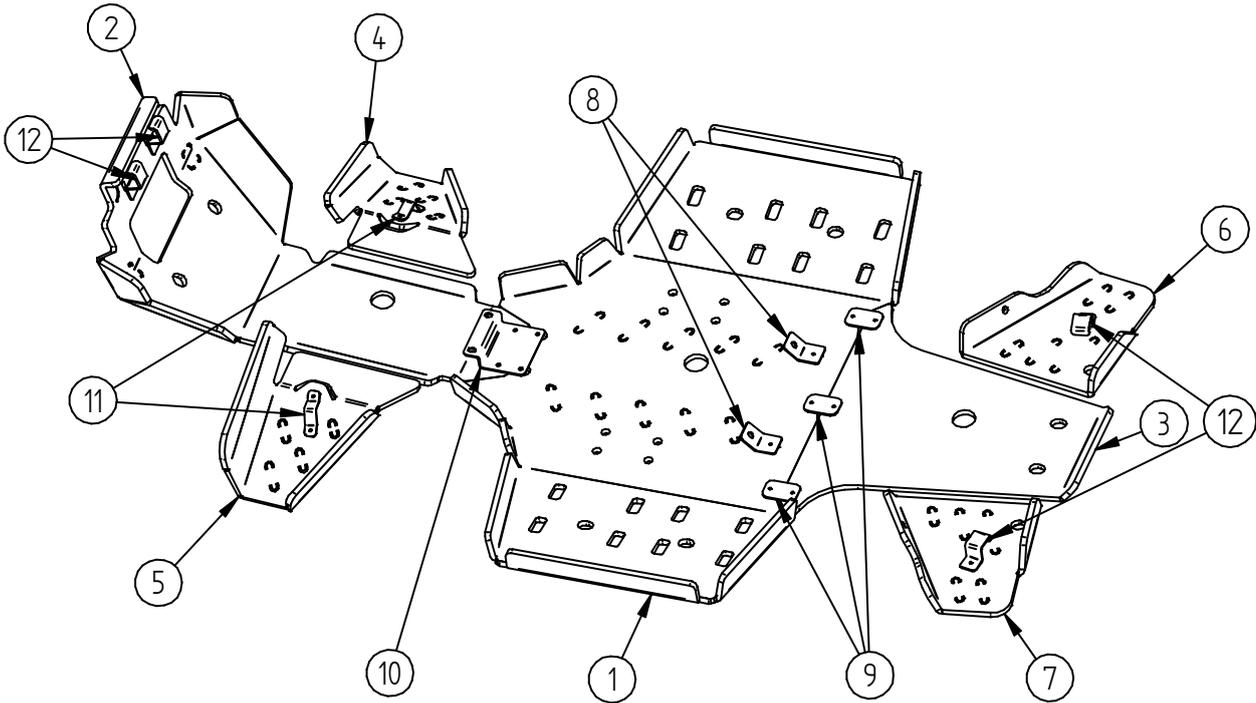


FITTING INSTRUCTIONS

Step 1 Remove all standard plastic protections.




Step 2 Install bracket 02.1173, use bolts M6x16 and washers $\varnothing 6/15$.

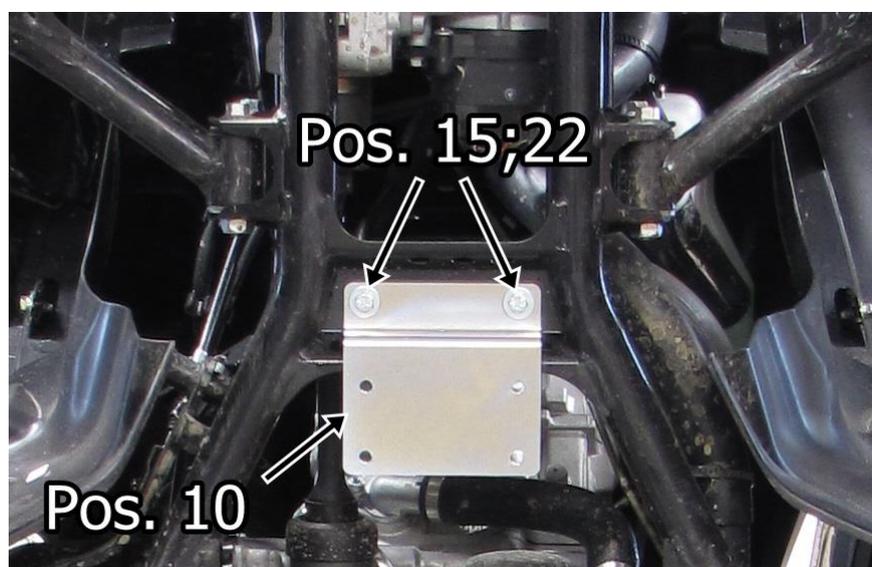



Step 3

Install plates 02.718, use bolts M6x16 and washers $\varnothing 6/15$.

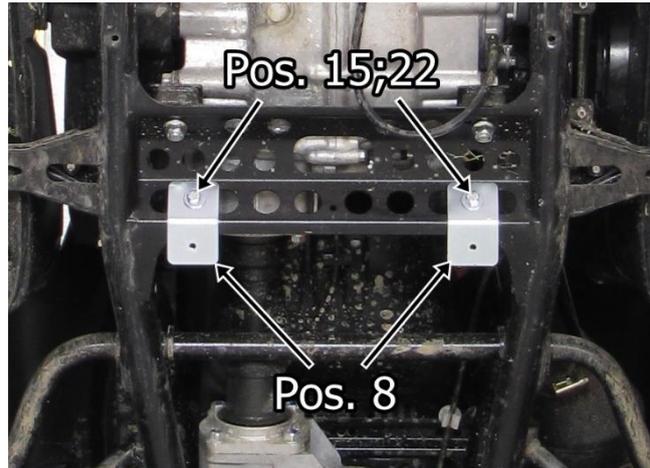


Step 4


Install middle protection 02.13201, use bolts M8x20, M6x20, M6x45; washers $\varnothing 6/15$, $\varnothing 6/18$ and nuts M6.

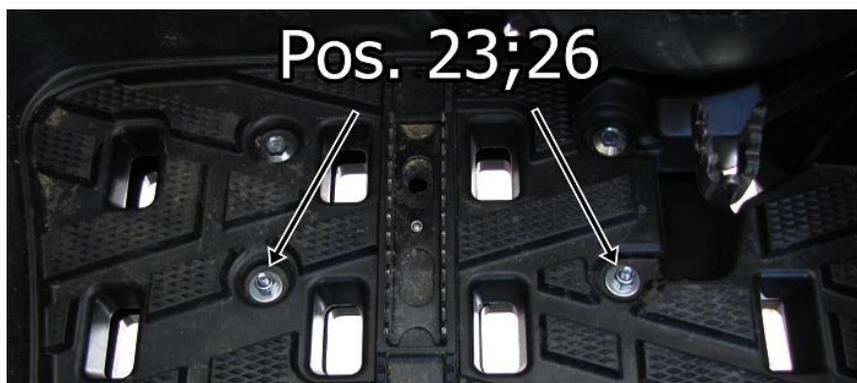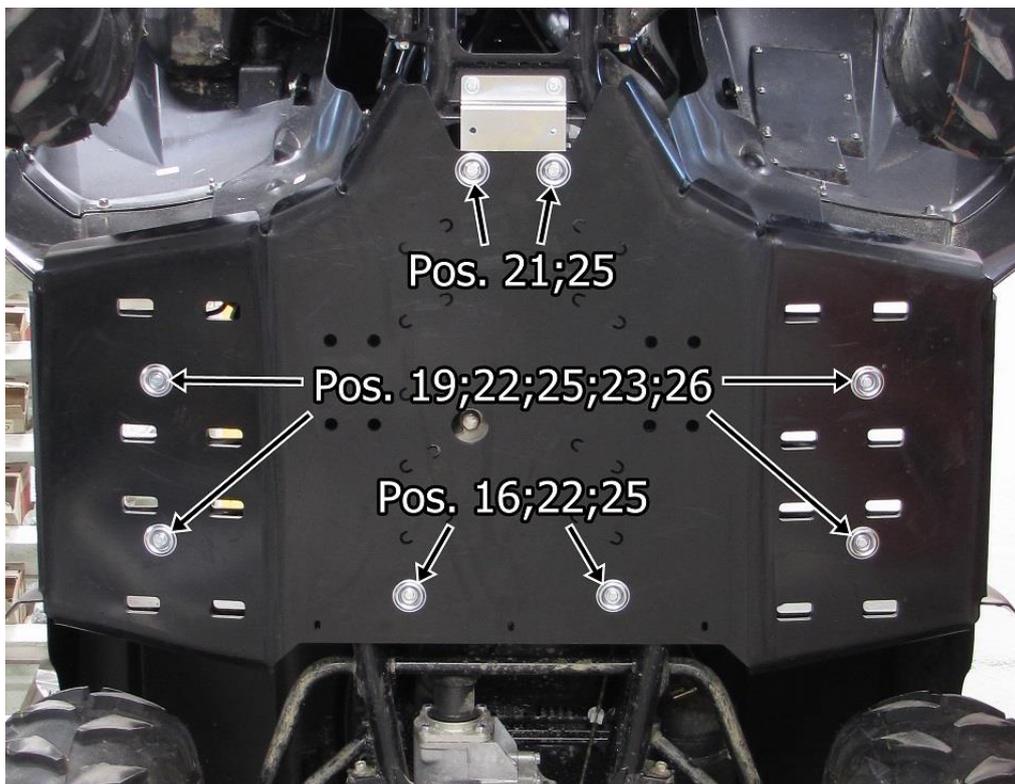

Step 5 Install plates 02.5006, use bolts M6x20.

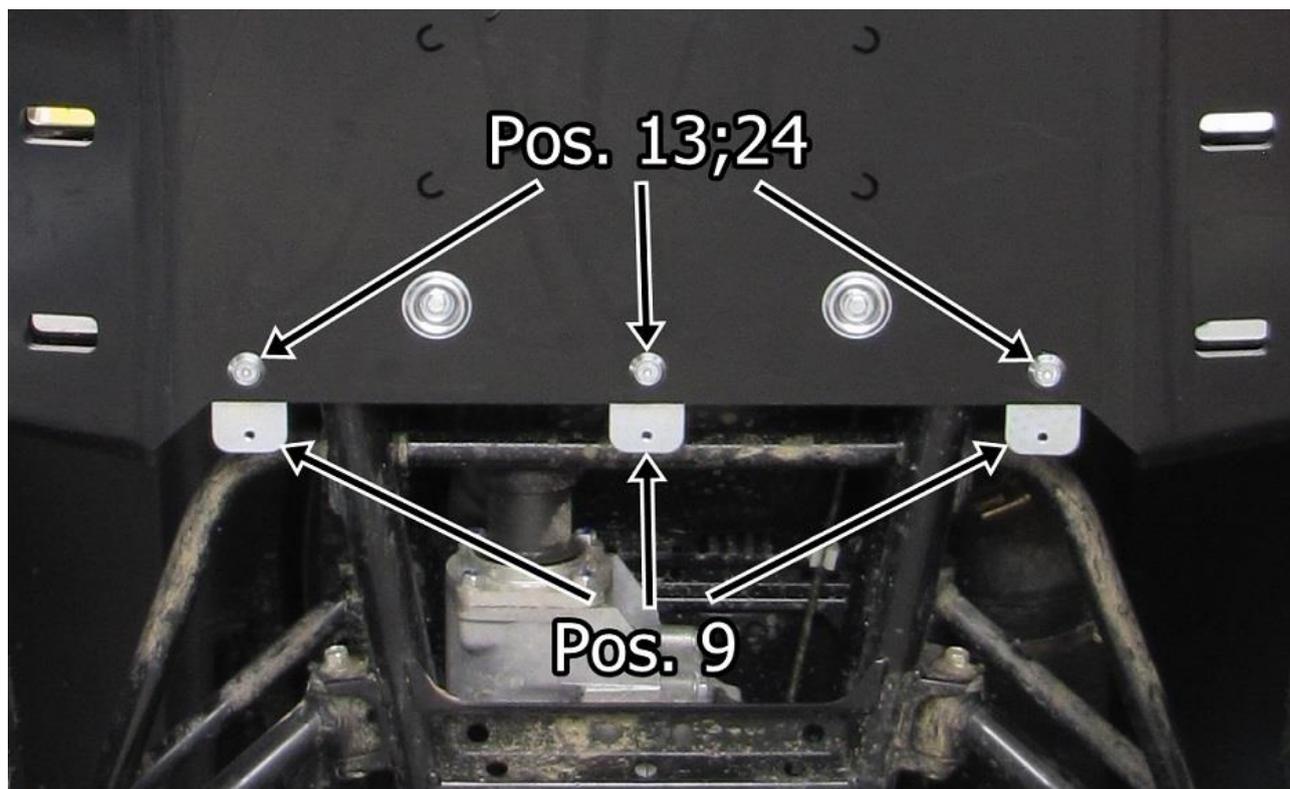


Step 6 Install front protection 02.13202, use bolts M6x25, M6x30 and M8x20.

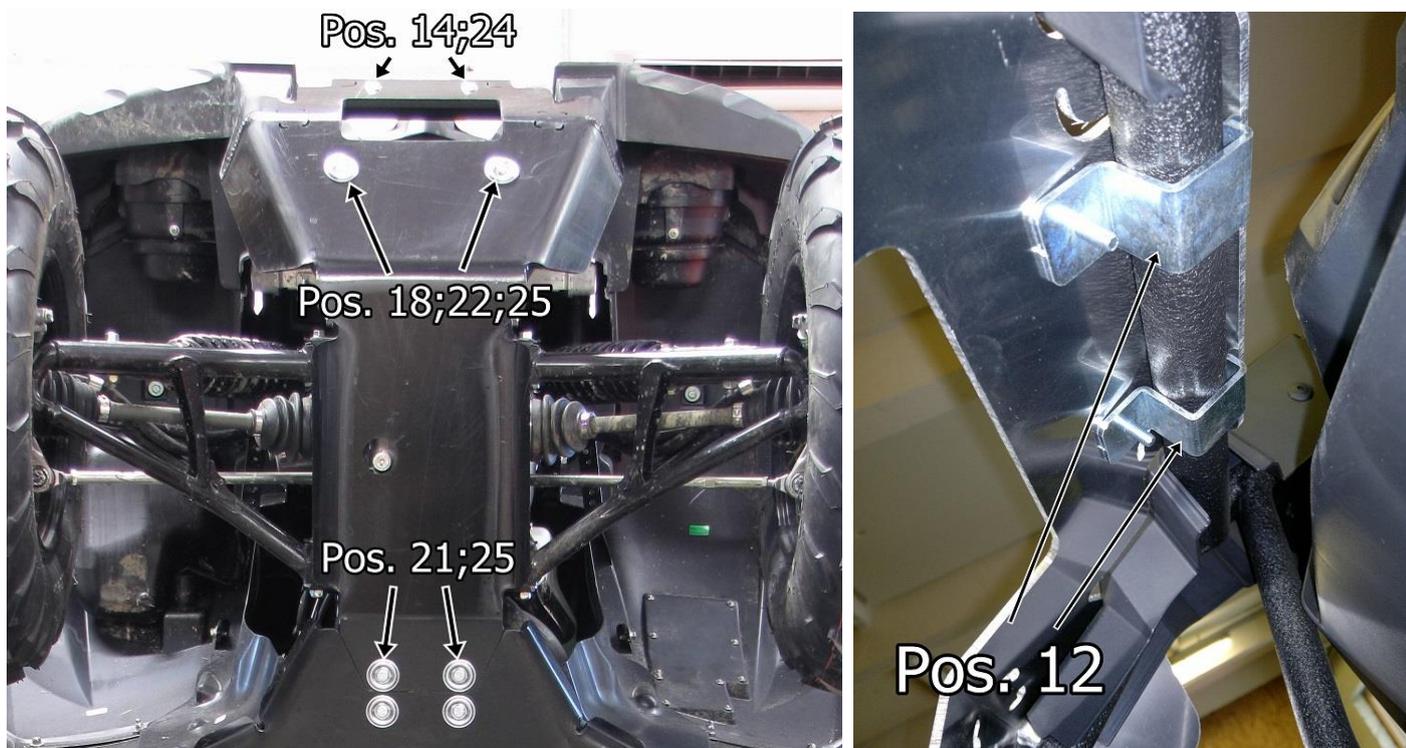


Step 7

Install rear protection 02.13203, use bolts M6x20 and M6x30.

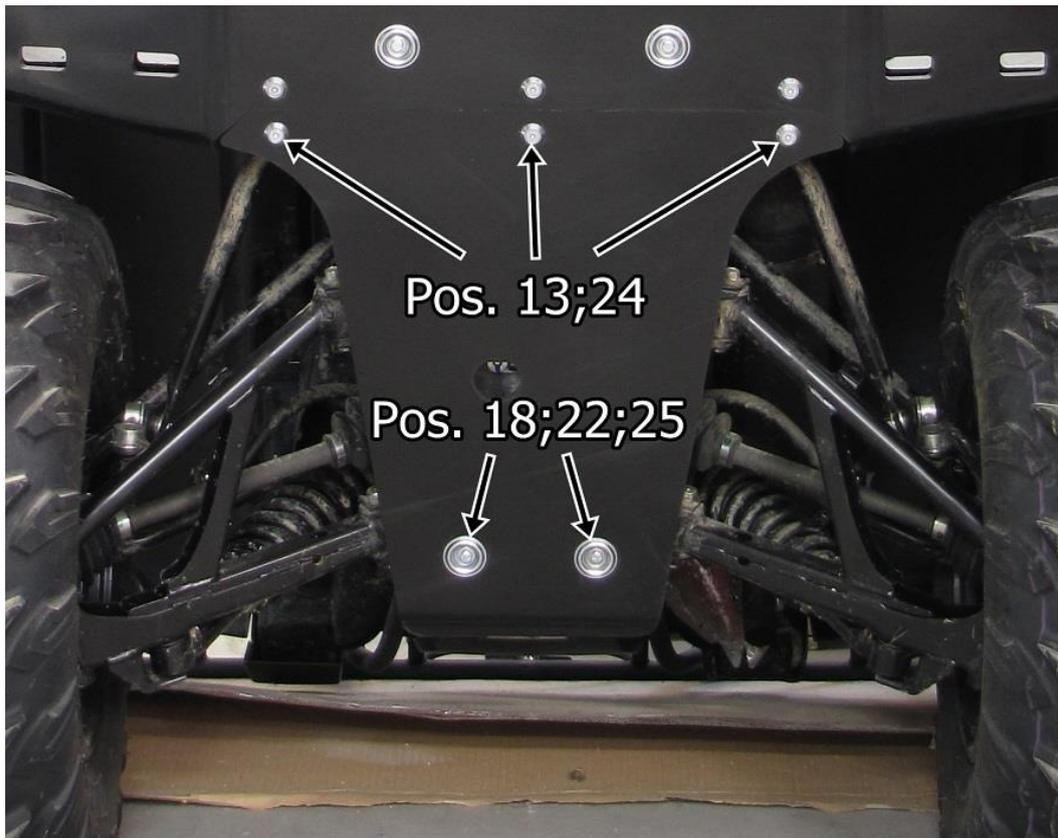


Step 8

Install front A-arms protections 02.13204 and 02.13205, use brackets 02.4606 and bolts M6x25.

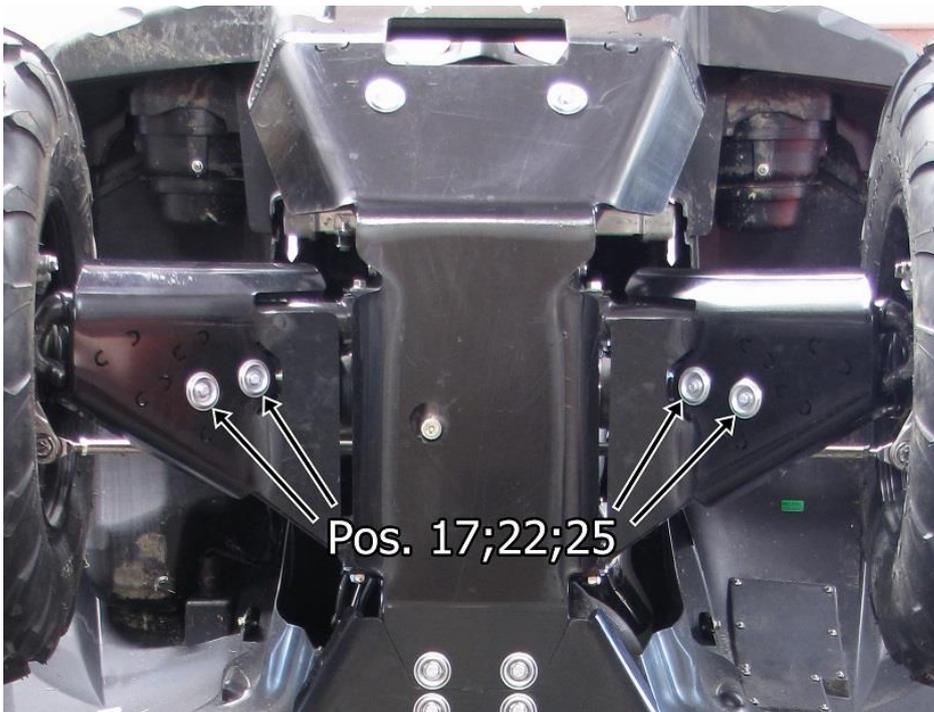

Step 9

Install rear A-arms protections 02.13206 and 02.13207, use brackets 02.5709, bolts M6x20, M6x25, M6x60, washers $\varnothing 6/15$ and nuts M6.

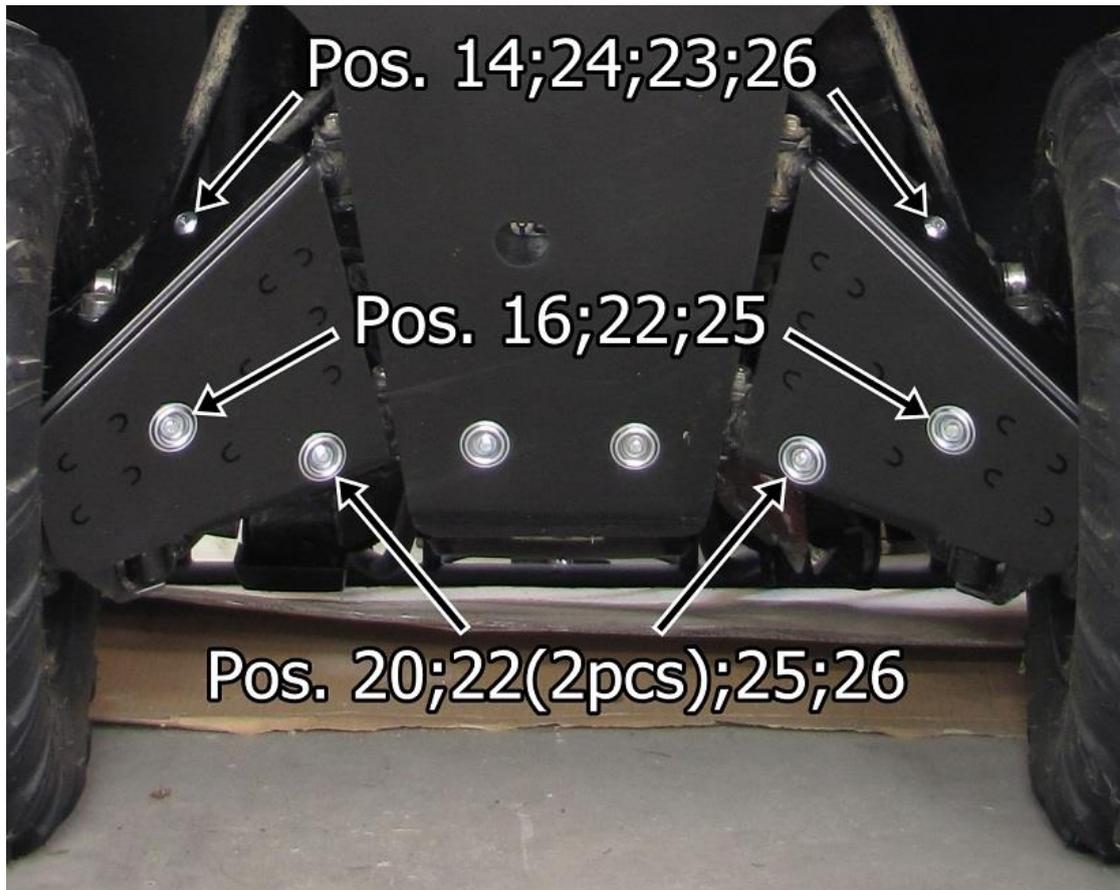



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

