

IRON BALTIC

PLASTIC SKID PLATE

HONDA

TRX 420

Code 02.13300

Version 29082023

DOWNLOAD MULTILINGUAL
USER MANUAL





code.ironbaltic.com/u/yHGghGpo

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Nimetus	Kood	Kogus
1	Skid plate front protection	02.13301	1
2	Middle protection	02.13302	1
3	Rear protection	02.13003K	1
4	Front left arm protection	02.13304	1
5	Front right arm protection	02.13305	1
6-1	Front part plate	02.13506	1
6	Bracket	02.907	2
7	Bracket	02.812	2
8	Bracket	02.1419	2
9	Bracket	02.2305	2
10	Installation plate	02.5006	1
11	Pipe clamp bracket 60mm	OT.05.04.070	2
12	Dished washer	14.503	18
13	Bolt M6x16 DIN 933	OT.02.02.050	2
14	Bolt M6x20 DIN 933	OT.02.02.060	2
15	Bolt M6x30 DIN 933	OT.02.02.080	4
16	Bolt M6x40 DIN 933	OT.02.02.100	3
17	Bolt M6x70 DIN 933	OT.02.02.150	1
18	Bolt M8x20 DIN 933	OT.02.02.180	2
19	Bolt M8x25 DIN 933	OT.02.02.190	4
20	Bolt M8x30 DIN 933	OT.02.02.200	2
21	Bolt M8x100 DIN 933	OT.02.02.290	4
22	Bolt M6x35 DIN 7991	OT.02.04.060	6
23	Bolt M8x25 DIN 7991	OT.02.04.160	2
24	Washer Ø6/15 SFS 3738	OT.04.03.020	17
25	Washer Ø8/20 SFS 3738	OT.04.03.030	12
26	Washer Ø6	14.502	6
27	Washer Ø8	14.501	2
28	Nylock nut M6 DIN 985	OT.03.02.030	5
29	Nylock nut M8 DIN 985	OT.03.02.040	6

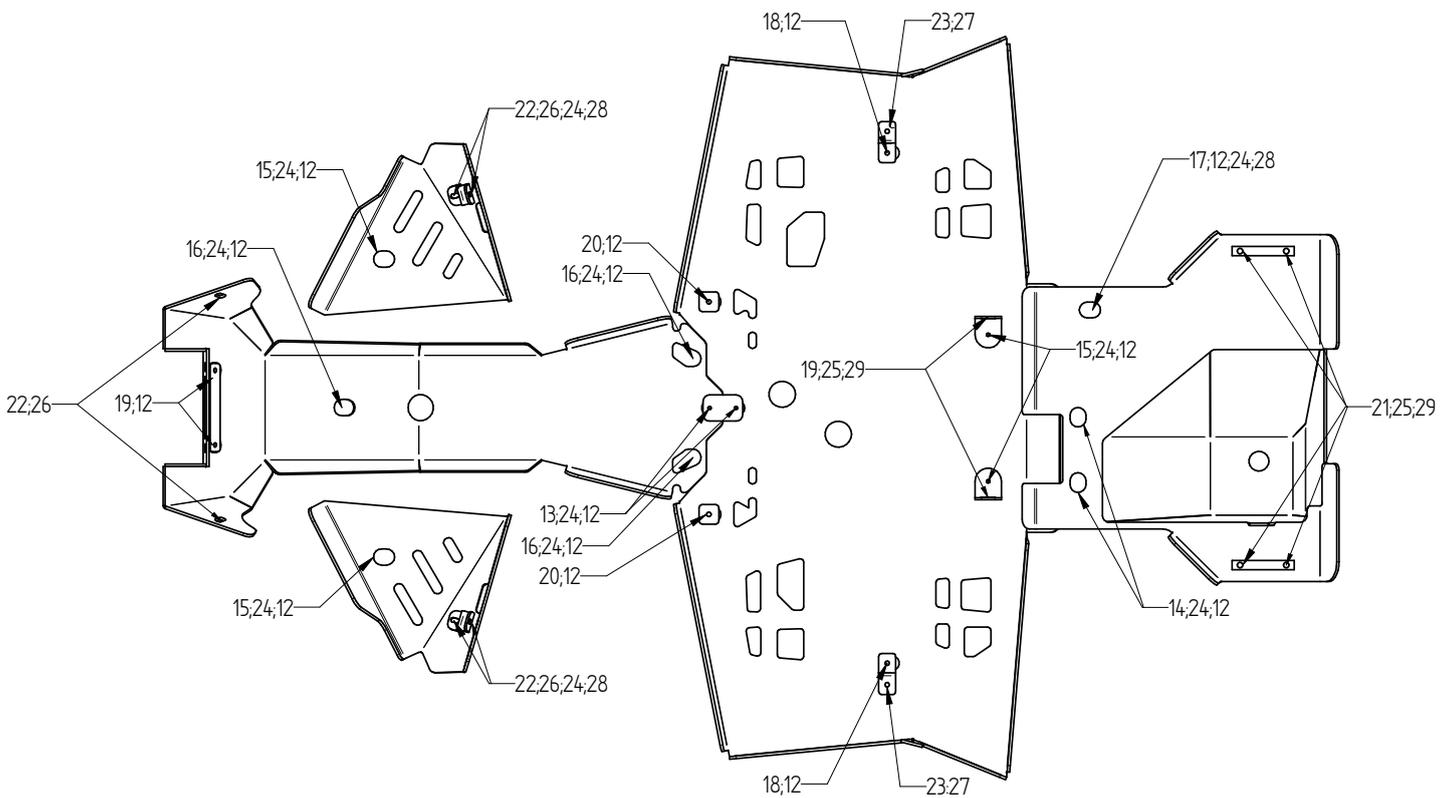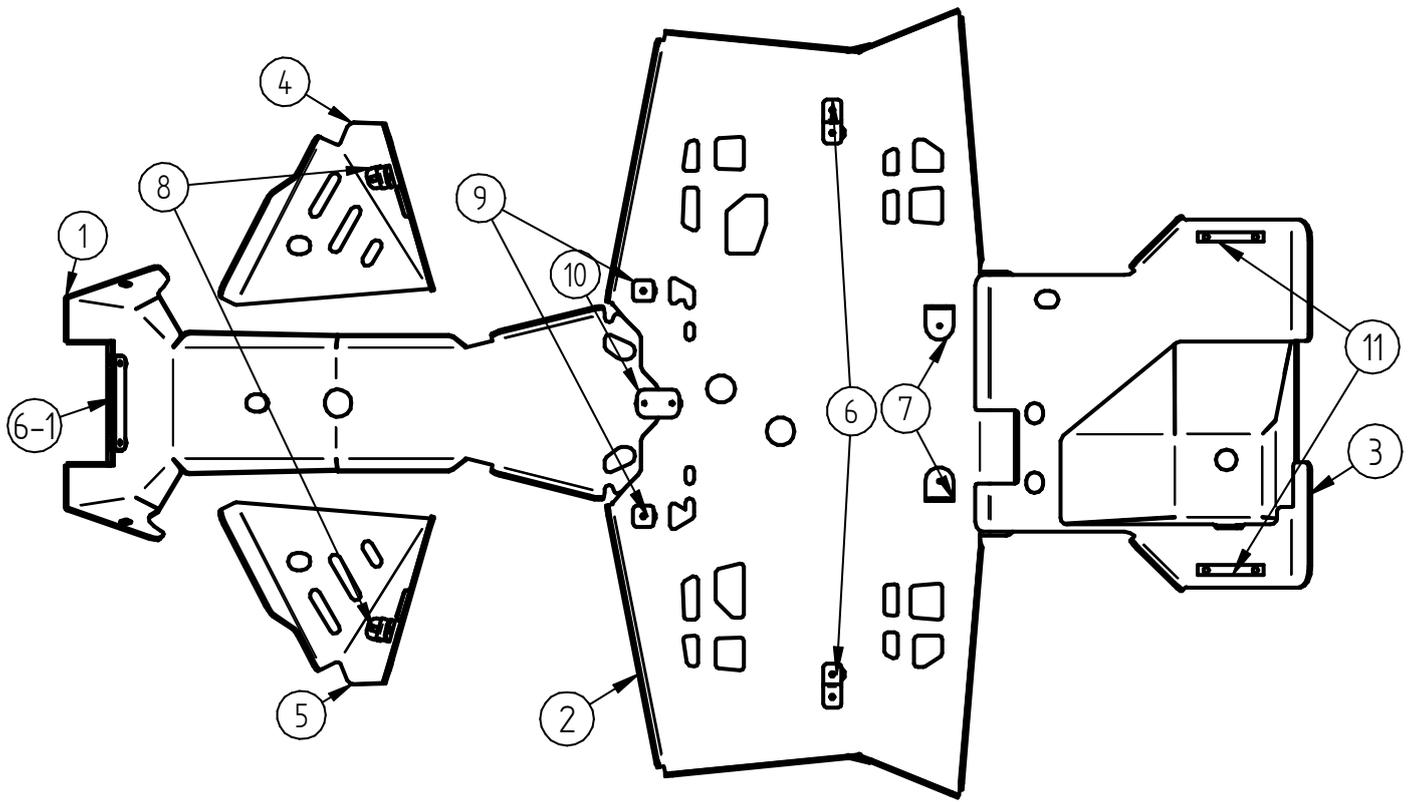


FITTING INSTRUCTIONS


Step 1 Remove all standard plastic covers.




Step 2 Install rear part 02.13003K.

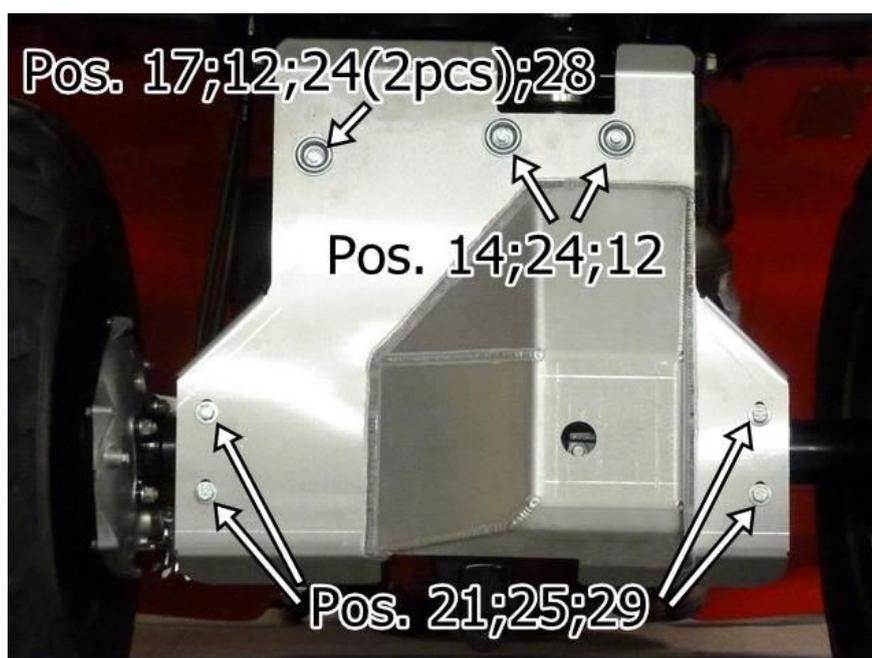


Step 3 Install front A-arms protections 02.13304 and 02.13305.

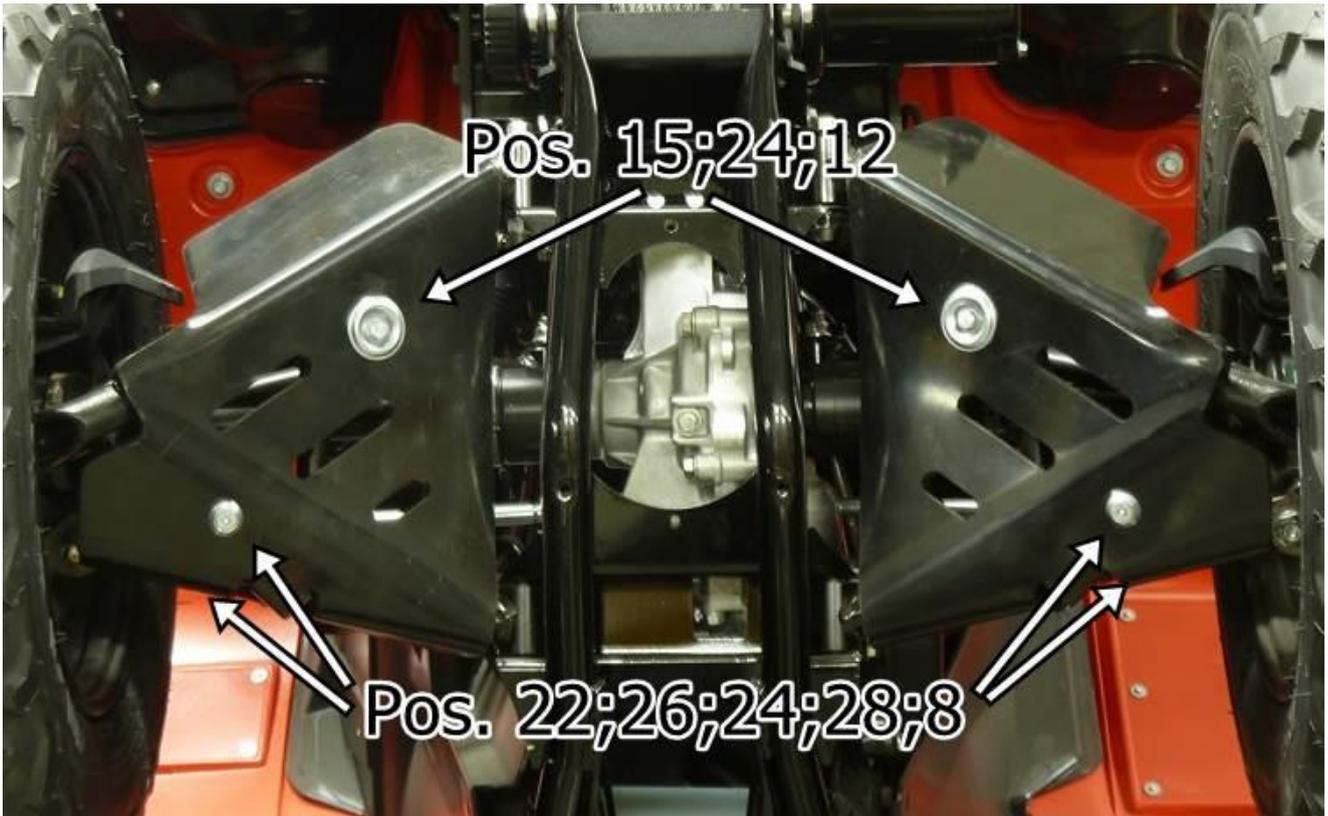


Step 4 Install brackets 02.812 and 02.907.

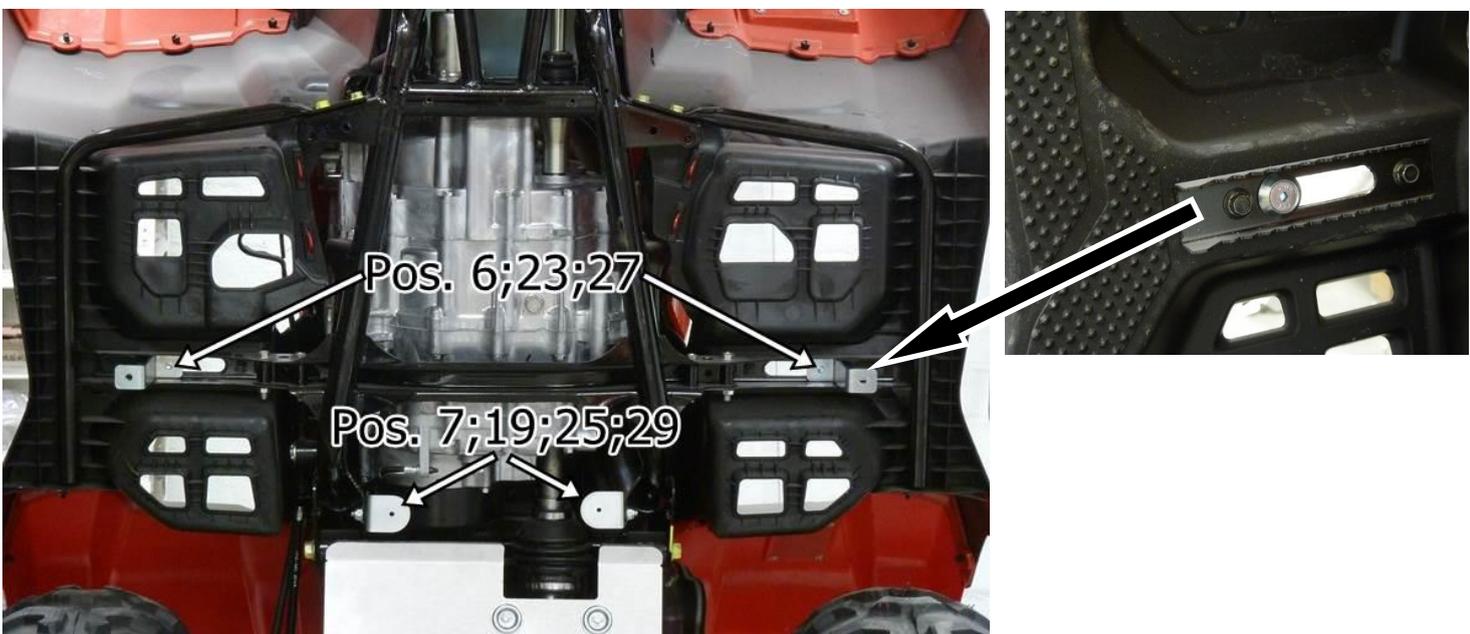

Step 5 Install middle part 02.13302.

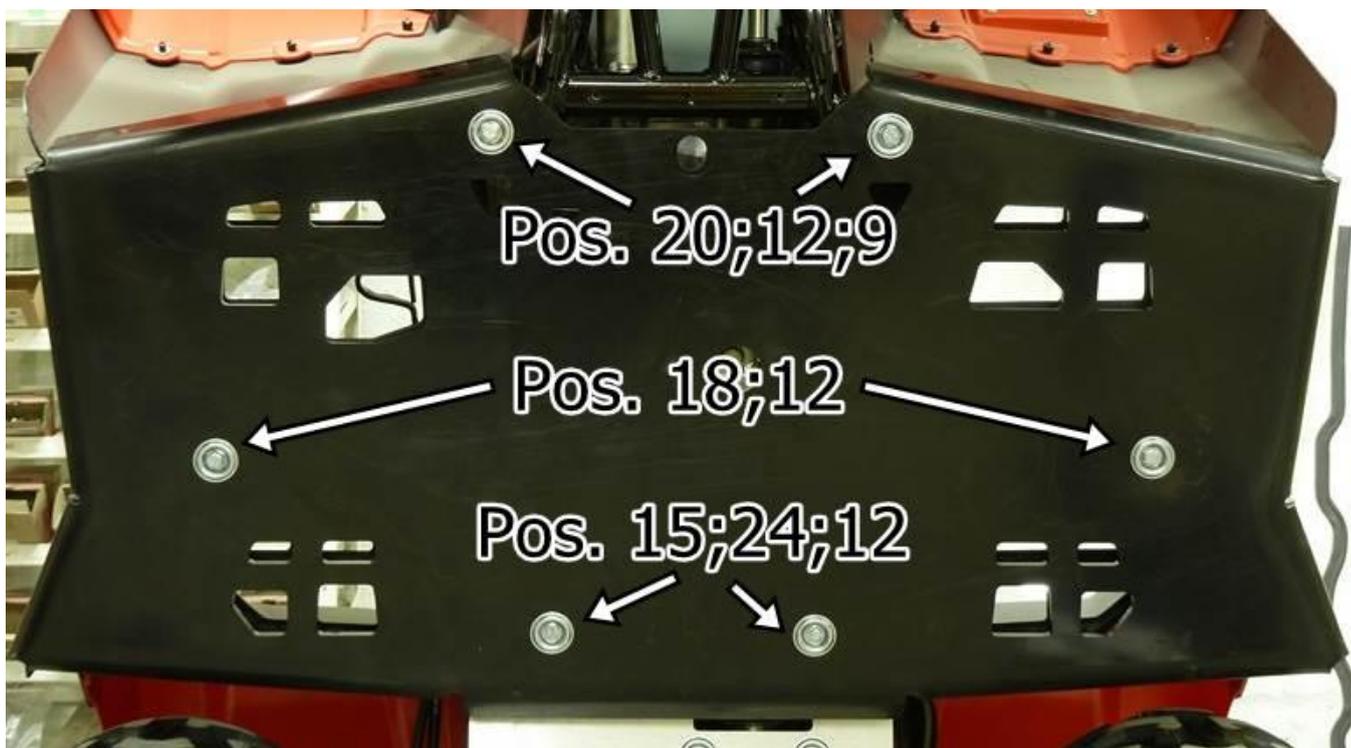

Step 6 Install plate 02.5006 to middle part.

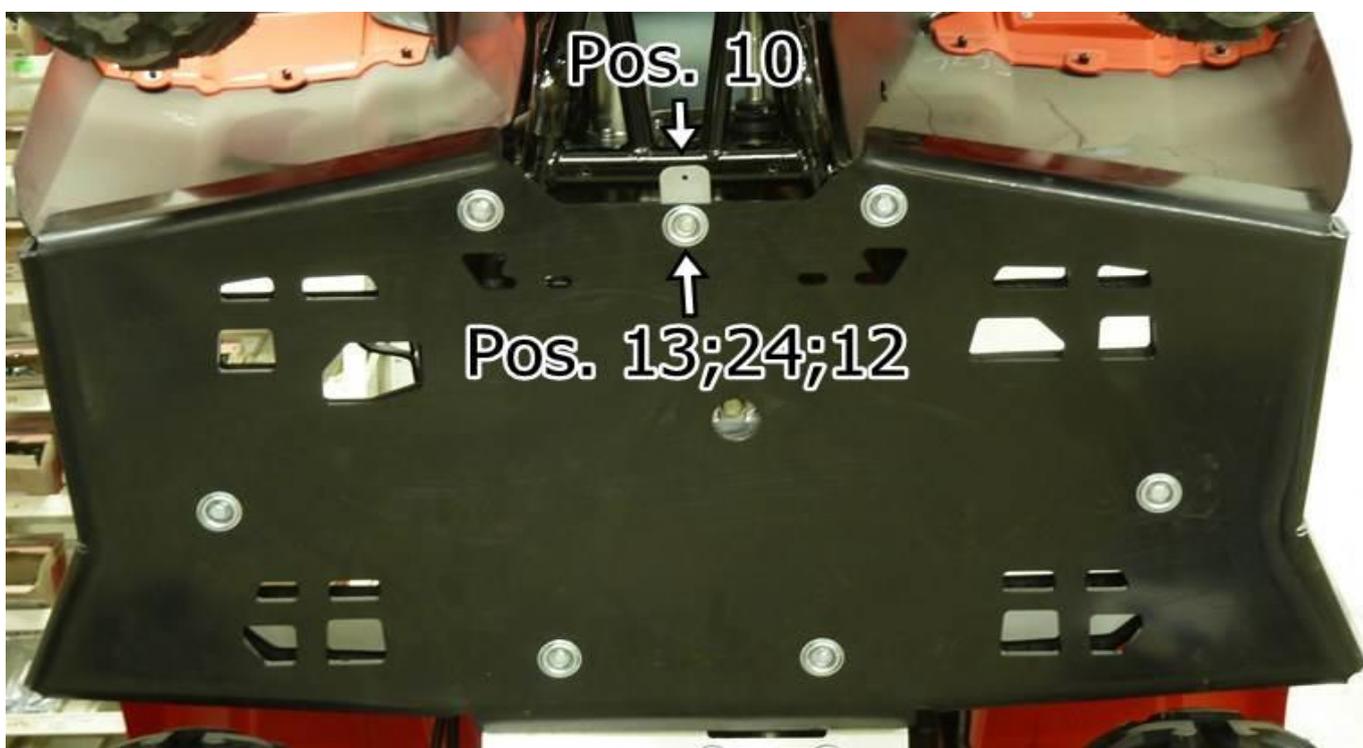

Step 7 Install front protection 02.13301.



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

