

code.ironbaltic.com/u/4G9Au6Nb


PLASTIC SKID PLATE

CAN AM

Outlander 650 / 800 (G1)

Code 02.13800

Version 29082023


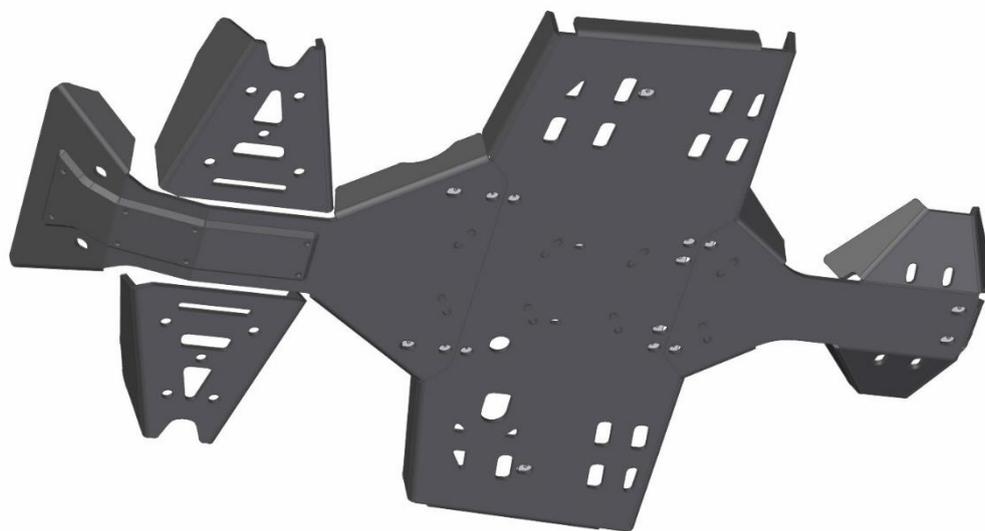


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Middle protection	02.13801	1
2	Front protection	02.13702K	1
3	Rear protection	02.13802	1
4	Front right arm protection	02.1532P	1
5	Front left arm protection	02.1532V	1
6	Bracket	03.1502	8
7	Plate	02.5006	4
8	Dished washer	14.503	26
9	Bolt M6x20 DIN 933	OT.02.02.060	8
10	Bolt M6x25 DIN 933	OT.02.02.070	8
11	Bolt M6x40 DIN 933	OT.02.02.100	2
12	Bolt M8x20 DIN 933	OT.02.02.180	10
13	Washer Ø6/15 SFS 3738	OT.04.03.020	28
14	Washer Ø8/20 SFS 3738	OT.04.03.030	4
15	Nyloc nut M6 DIN 985	OT.03.02.030	10
16	Nyloc nut M8 DIN 985	OT.03.02.040	2

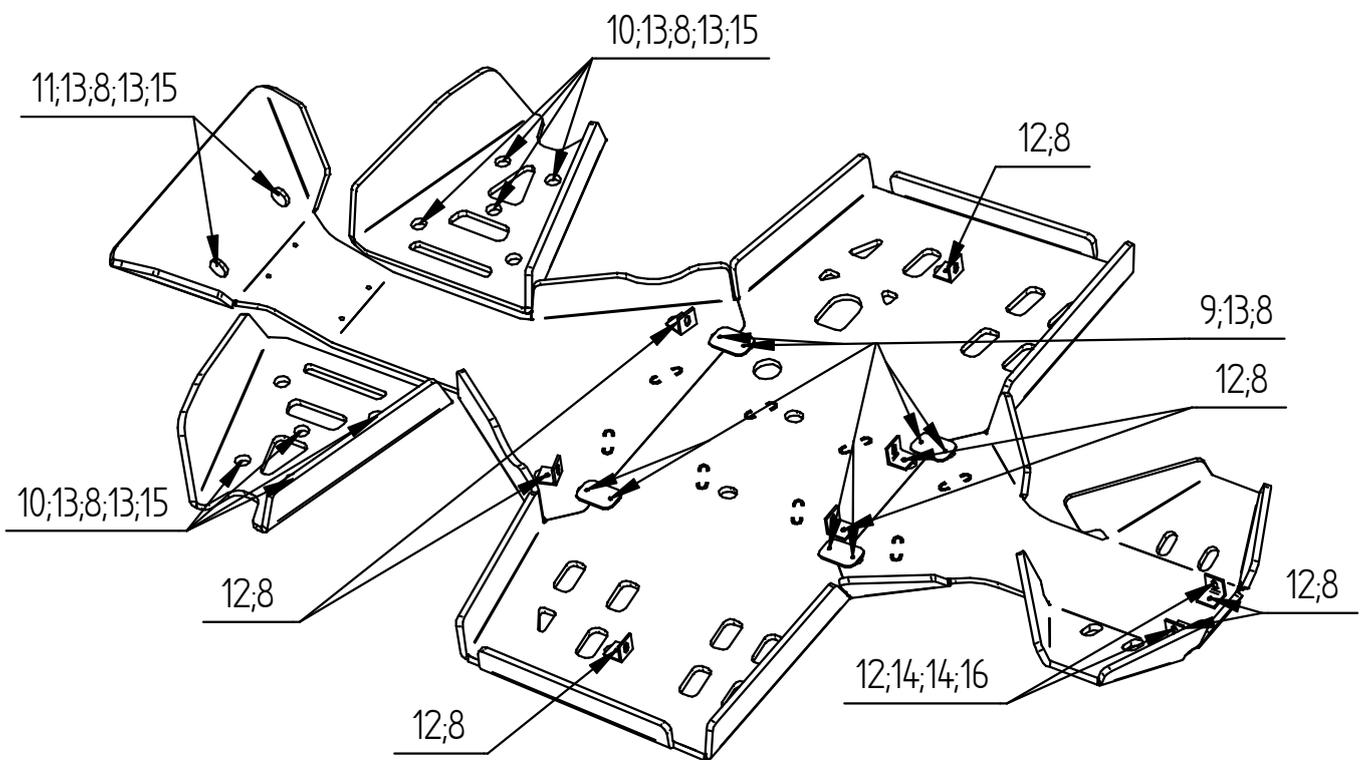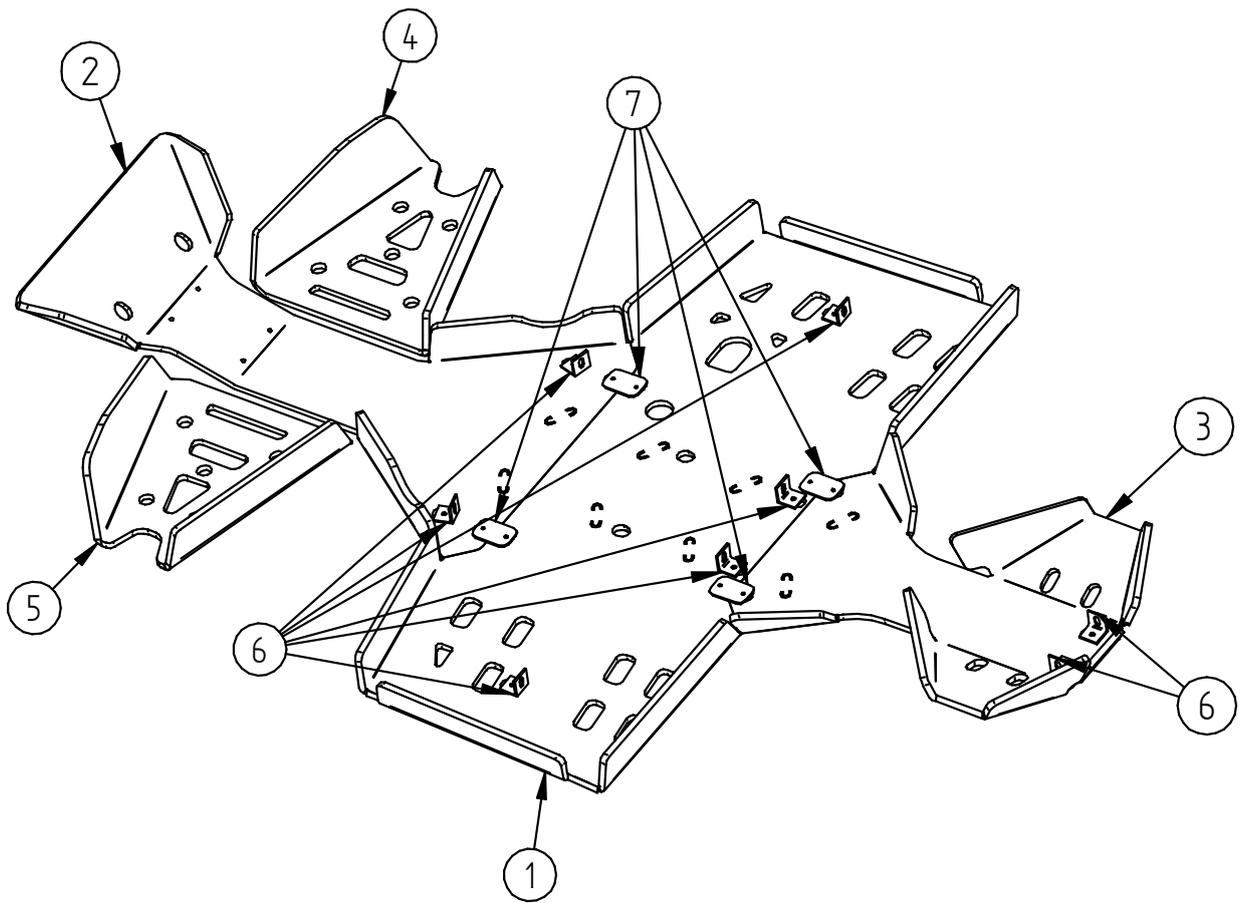


FITTING INSTRUCTIONS

Step 1 Remove all standard protections.




Step 2 Install brackets 03.1502, use original frame bolts and M8x20 bolts.

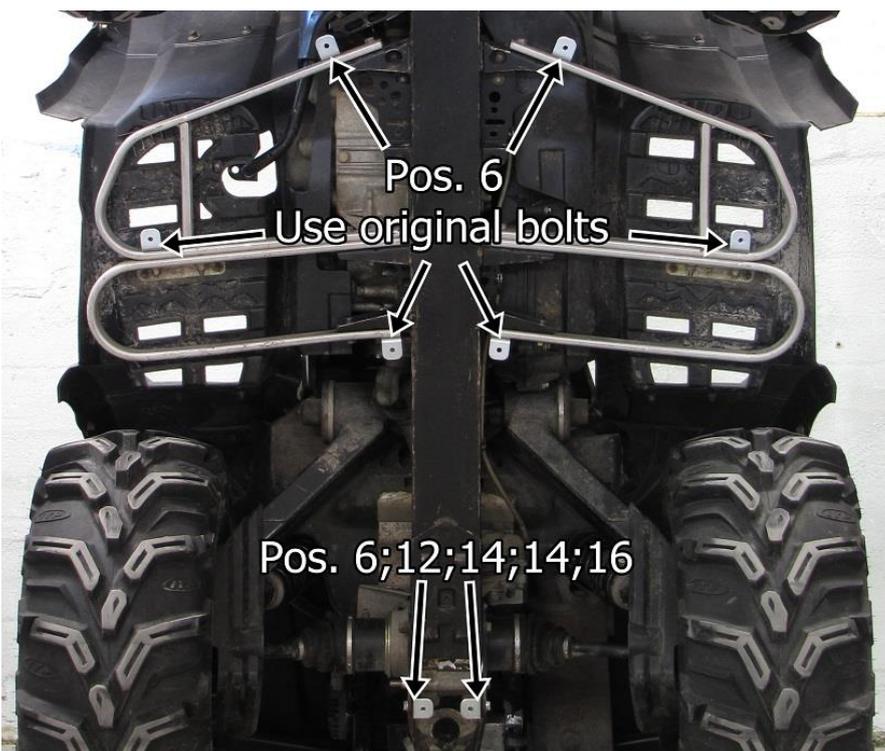


Step 3

Install middle protection 02.13801, use M8x20 bolts.

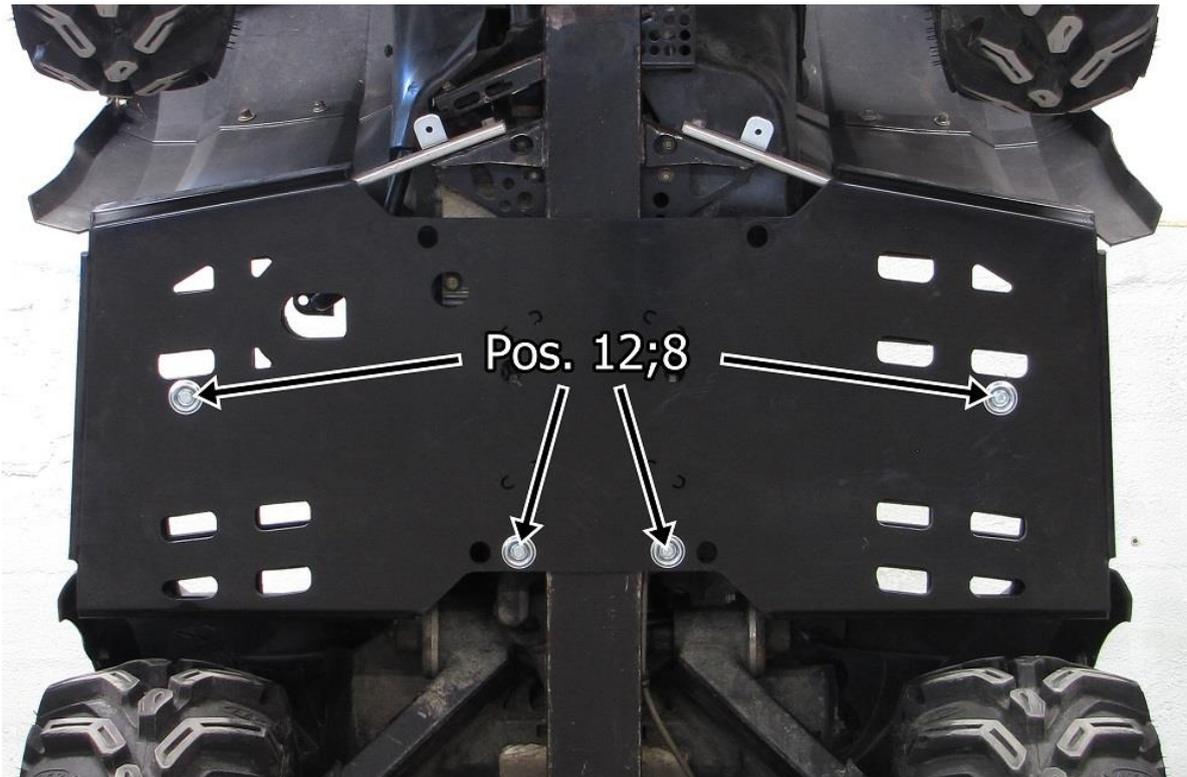

Step 4


Install plates 02.5006, use bolts M6x20.

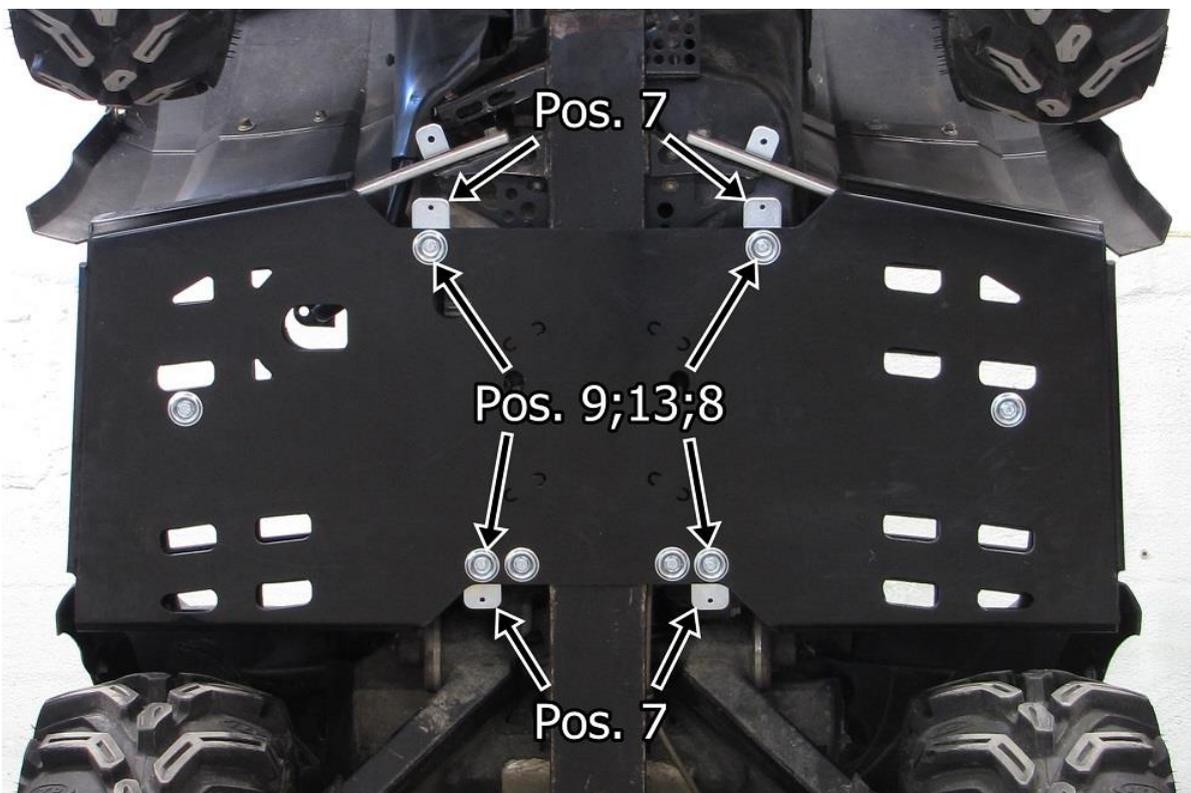

Step 5 Install front protection 02.13702K, use bolts M6x20, M6x40, M8x20.



Step 6 Install rear protection 02.13802, use bolts M6x20, M8x20.

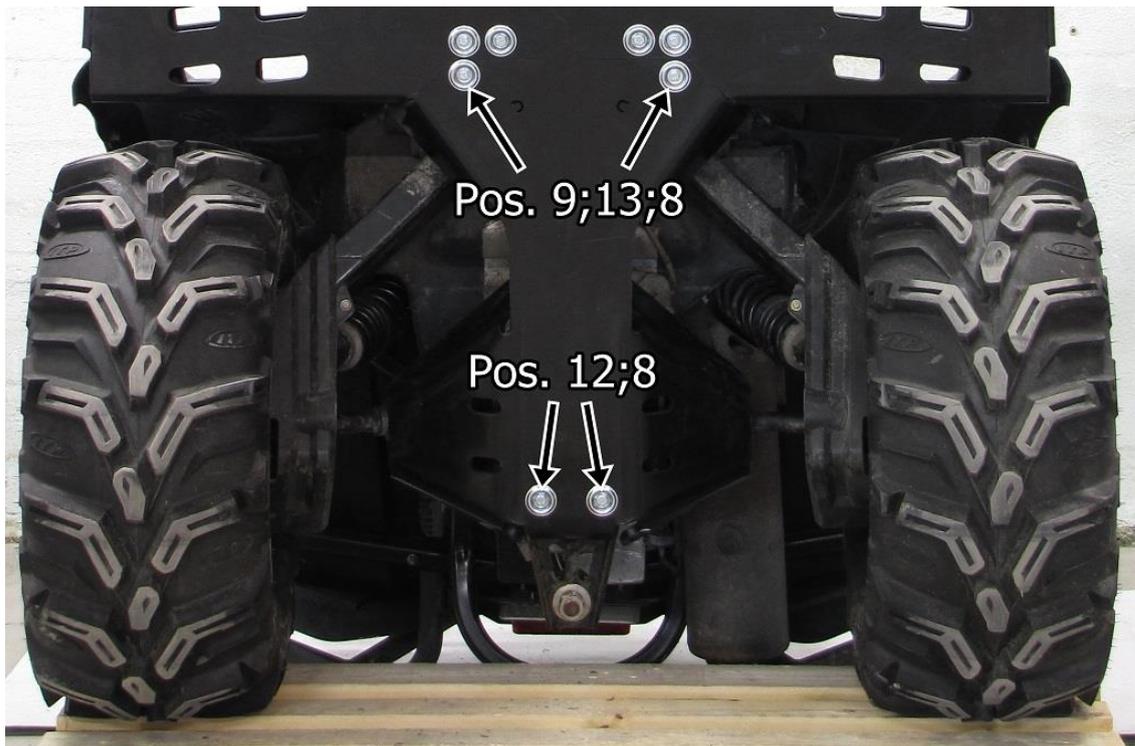

Step 7

Install front A-arms protections 02.1532P, 02.1532V, use bolts M6x25.



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

