

## REAR A-ARM GUARDS (ALUMINIUM)

DOWNLOAD MULTILINGUAL  
USER MANUAL




[code.ironbaltic.com/u/1KkgTjYQ](https://code.ironbaltic.com/u/1KkgTjYQ)

## POLARIS

400 / 500 / 570 / 800 Sportsman

Code 02.1404VP

Version 29082023

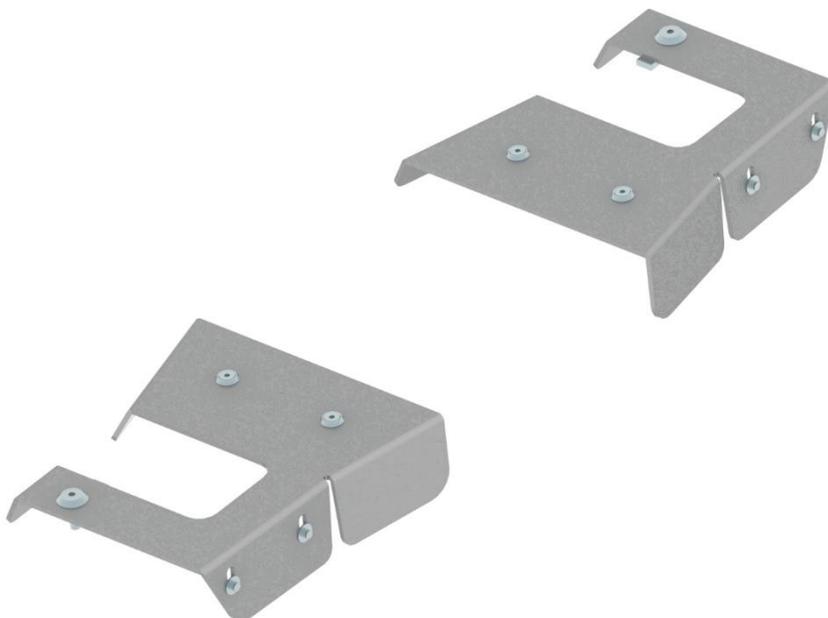

**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

# SPECIFICATION



Pos.	Description	Code	Amount
1	Rear right arm protection	02.1404	1
2	Rear left arm protection	02.1405	1
3	Rear arm bracket	02.1418	2
4	Installation strip	02.4011	2
5	Bolt 3/16 UNCx1"x16	DIN912	4
6	Bolt M6x30 DIN 7991	OT.02.04.050	4
7	Bolt M8x30 DIN 7991	OT.02.04.170	2
8	Washer 5/15 DIN 9021	OT.04.02.010	4
9	Conical washer Ø6	14.502	4
10	Conical washer Ø8	14.501	2

# FITTING INSTRUCTIONS



**NB!**

**We recommend using thread lock fluid on the bolts!  
Bolts tend to loosen with vibration from ATV.**

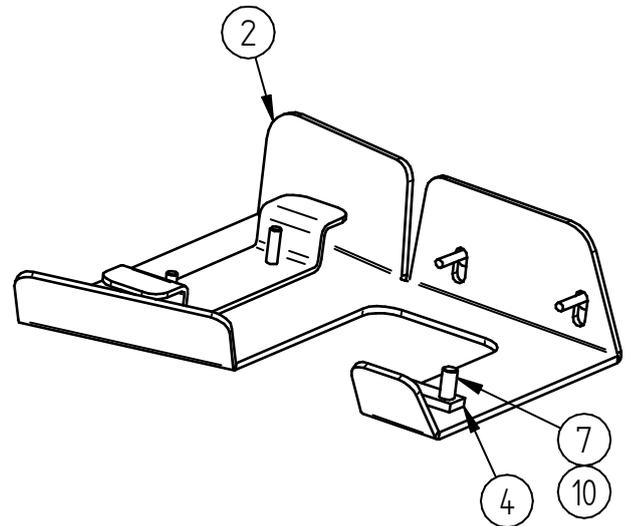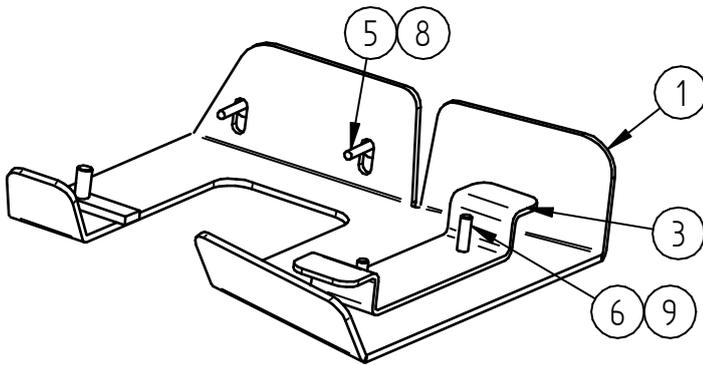

# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)