




REAR A-ARM GUARDS (PLASTIC)

POLARIS

400 / 500 / 570 / 800 Sportsman

Code 02.1414VP

Version 30082023

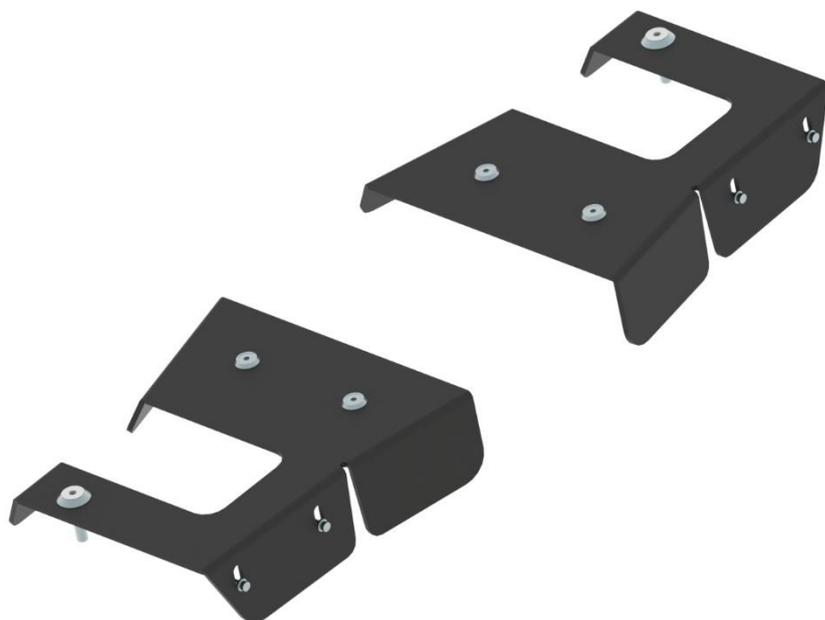


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Rear right arm protection	02.1414	1
2	Rear left arm protection	02.1415	1
3	Bracket	02.1418	2
4	Installation plate	02.4011	2
5	Bolt M6x30 DIN 7991	OT.02.04.050	4
6	Bolt M8x30 DIN 7991	OT.02.04.170	2
7	Bolt UNC Nr.10x1" DIN912	OT.02.07.021	4
8	Conical washer Ø6	14.502	4
9	Conical washer Ø8	14.501	2
10	Washer Ø5/15 DIN 9021	OT.04.02.010	4

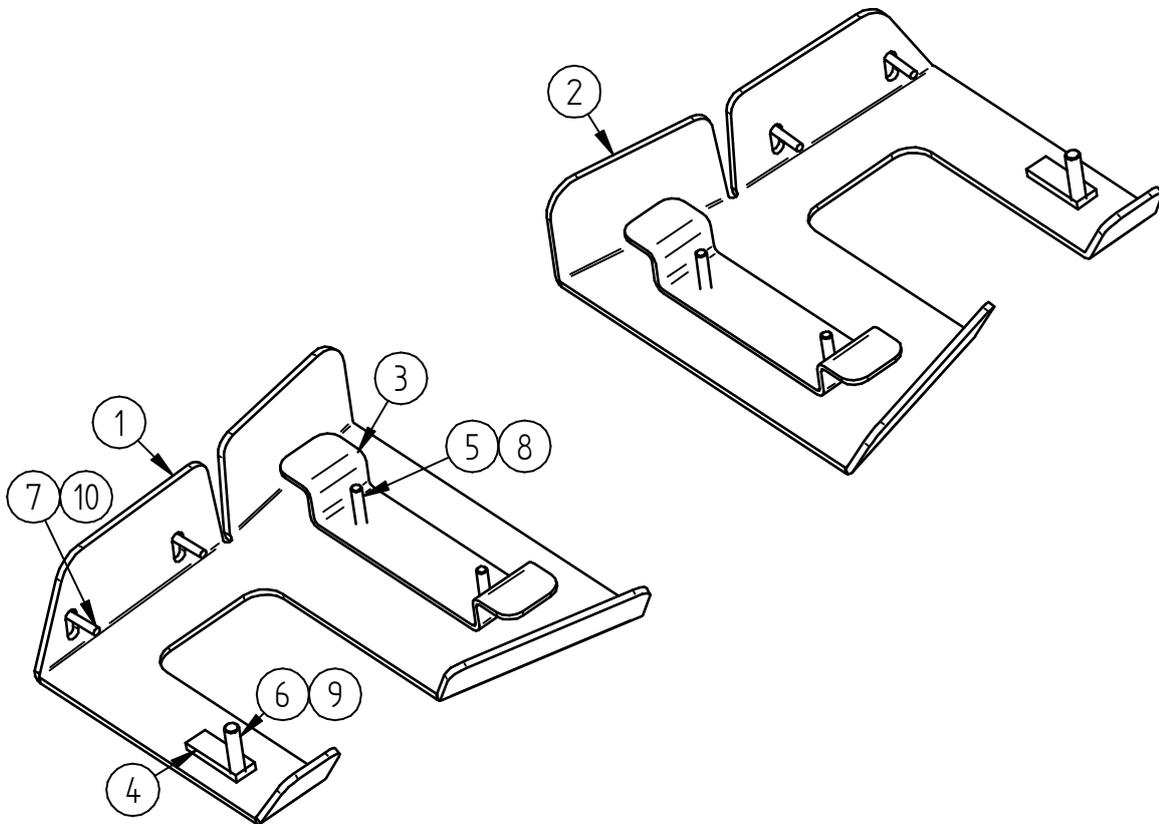


FITTING INSTRUCTIONS




NB!

**We recommend using thread lock fluid on the bolts!
Bolts tend to loosen with vibration from ATV.**

**NB! On some models, bracket holding the brake line, may be in the way of installing Pos.3 bracket.
In that case install Pos.3 bracket to the second hole, as show on the picture below.**

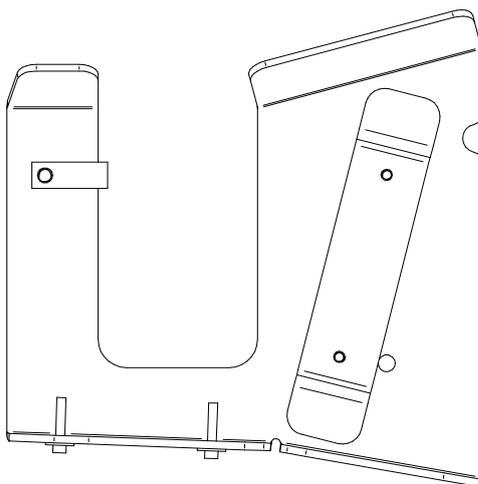

Installation with brake line in the way

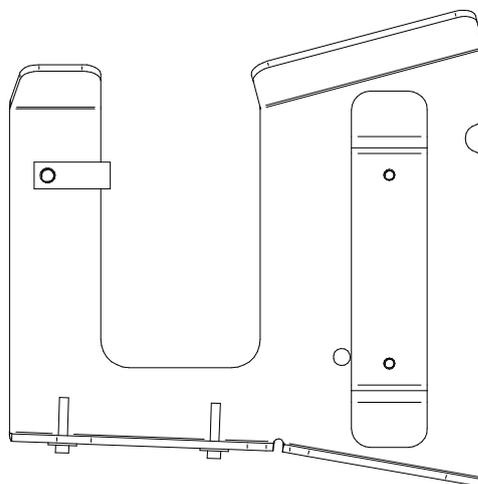

Original installation

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

