



code.ironbaltic.com/u/3RdnVwuV


SKID PLATE

POLARIS

RZR XP 1000

Code 02.14200

Version 30082023


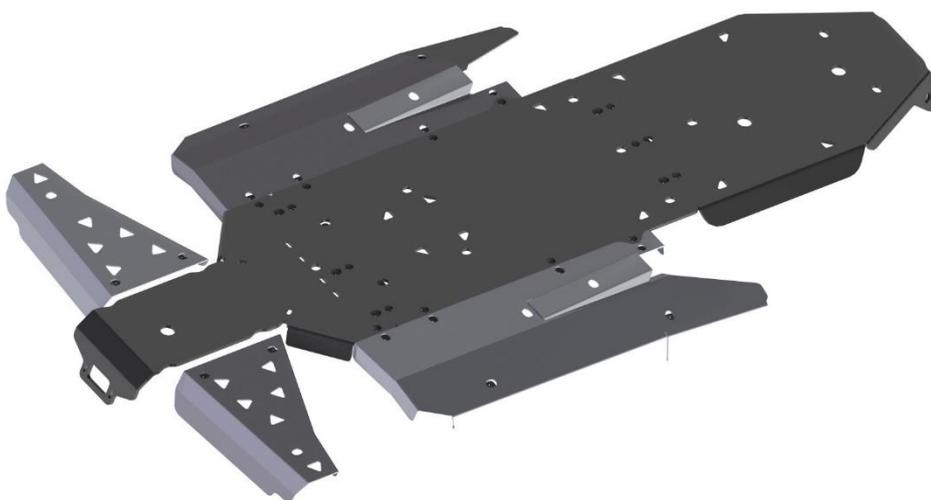


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Front part	02.14201	1
2	Middle part	02.14202	1
3	Rear part	02.14203	1
4	Right sideprotection	02.14204K	1
5	Left sideprotection	02.14205K	1
6	Front left arm protection	02.14206	1
7	Front right arm protection	02.14207	1
8	Installation bracket 1	02.14209	2
9	Installation bracket 2	02.14210	4
10	Installation plate	02.5006	14
11	Installation plate	02.2305	2
12	Installation bracket	02.8210	4
13	Dished washer	14.503	55
14	Bolt M6x16 DIN 933	OT.02.02.050	31
15	Bolt M6x20 DIN 933	OT.02.02.060	16
16	Bolt M6x30 DIN 933	OT.02.02.080	2
17	Bolt M8x30 DIN 933	OT.02.02.200	8
18	Washer Ø6/15 SFS 3738	OT.04.03.020	49
19	Washer Ø8/20 SFS 3738	OT.04.03.030	6
20	Nyloc nut M8 DIN 985	OT.03.02.040	4


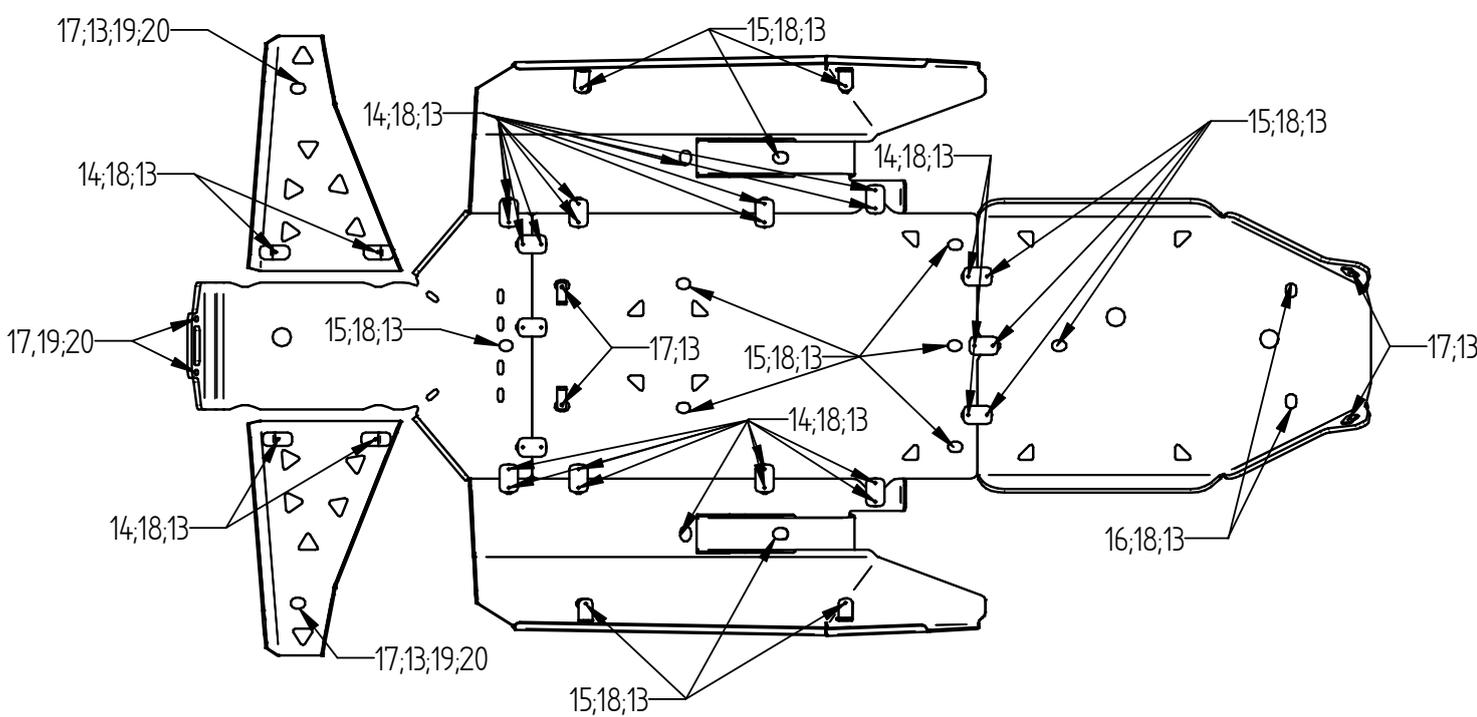
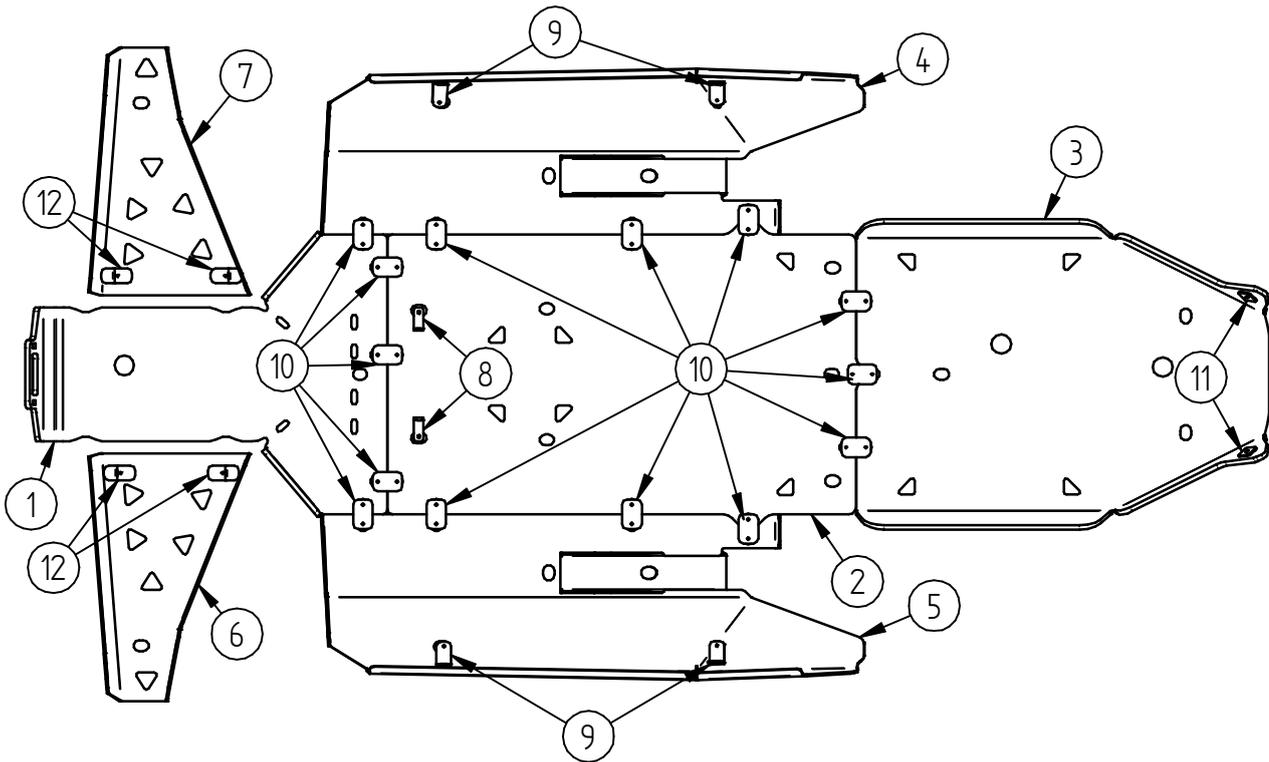


FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers.




Step 2 Install brackets 02.14209 and 02.14210 on both sides of the ATV. Use original bolts/nuts.

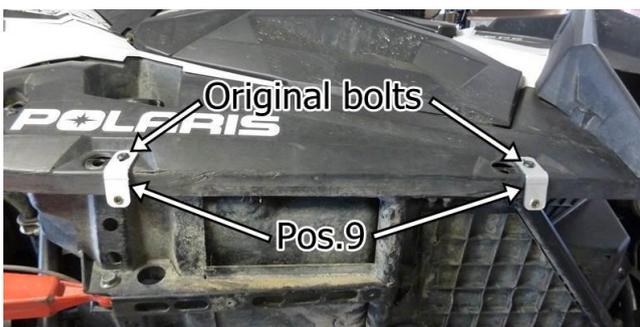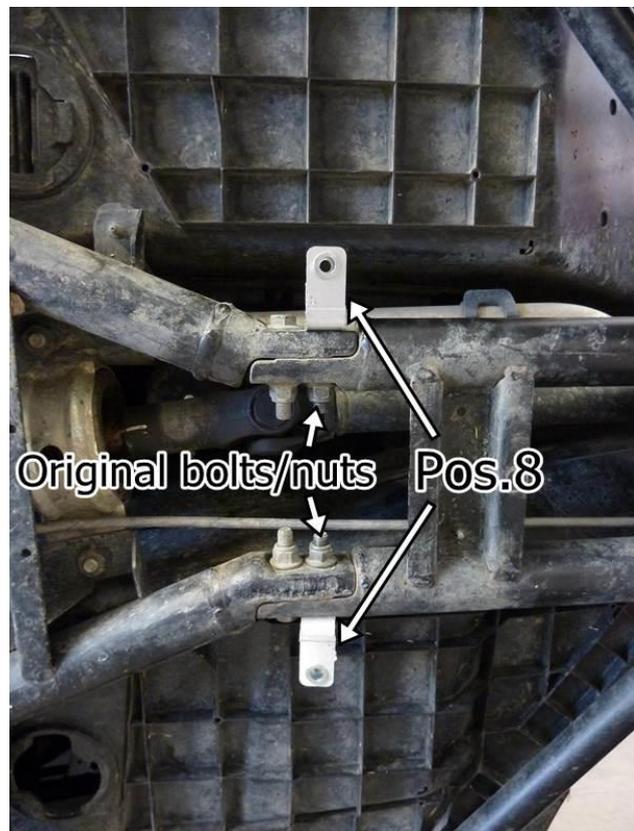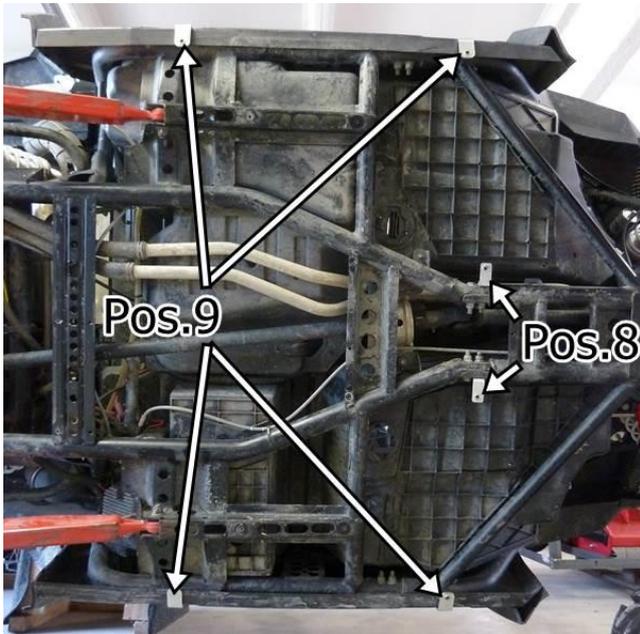


Step 3

Install front arm protections 02.14206 and 02.14207.

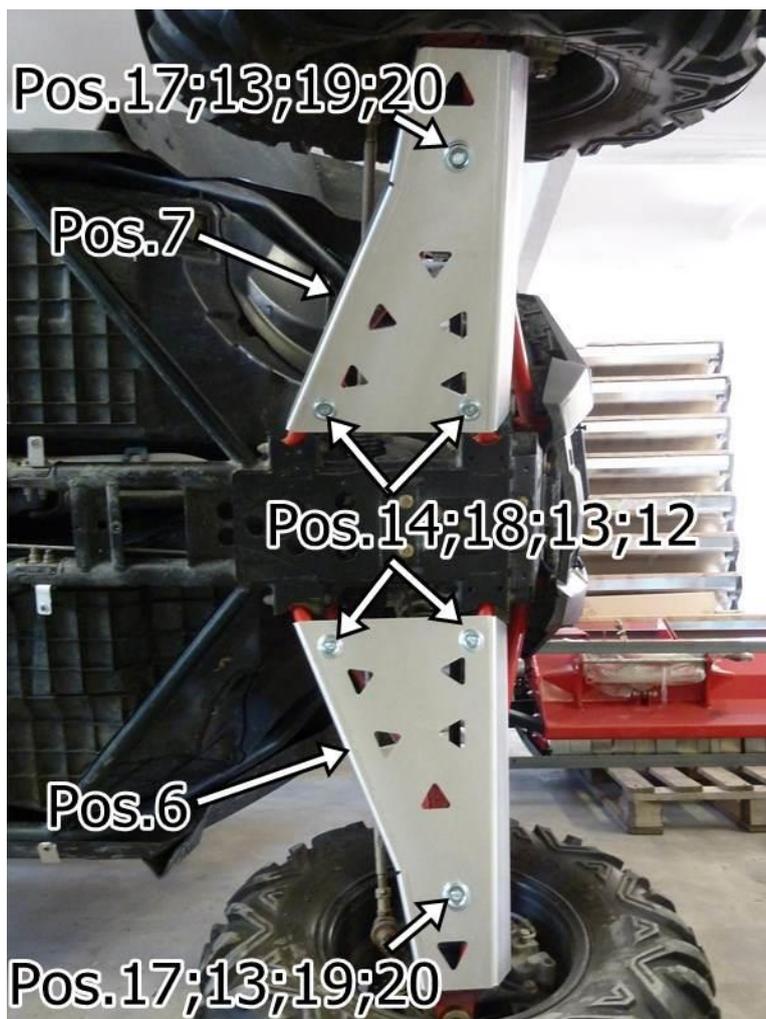


Step 4


Install front protection 02.14201.

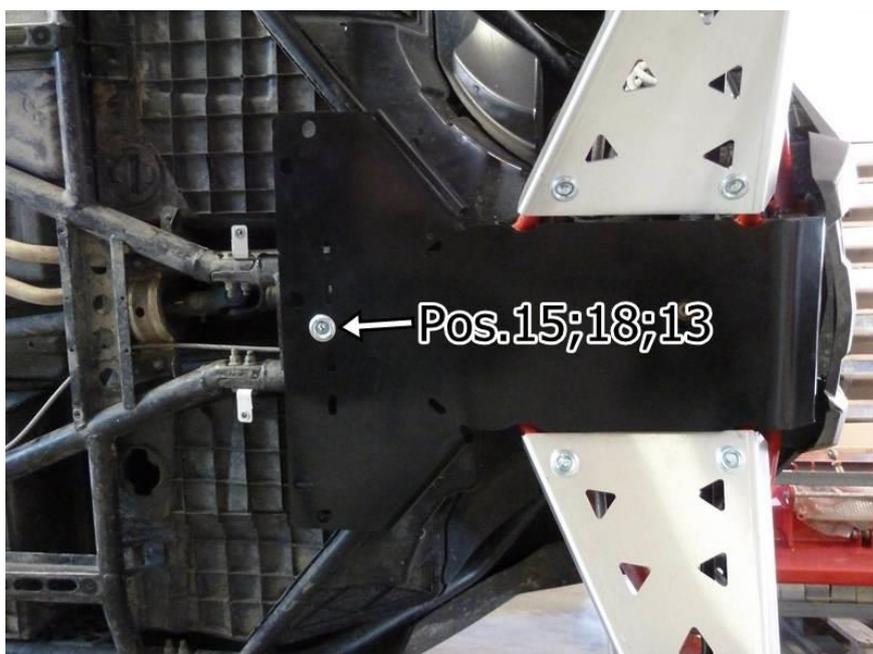

Step 5 Install plates 02.5006 to the front protection.

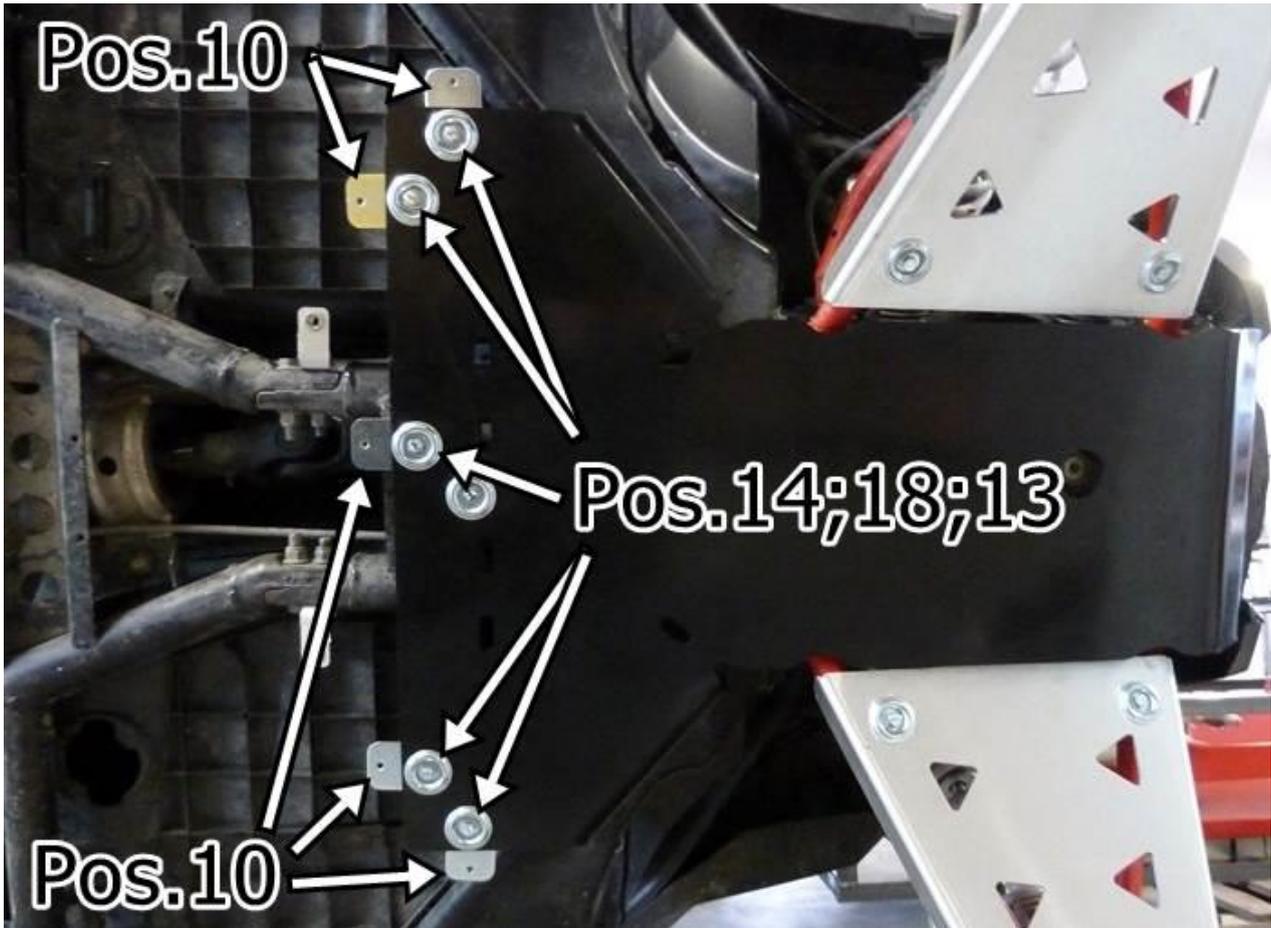


Step 6 Install middle protection 02.14202.

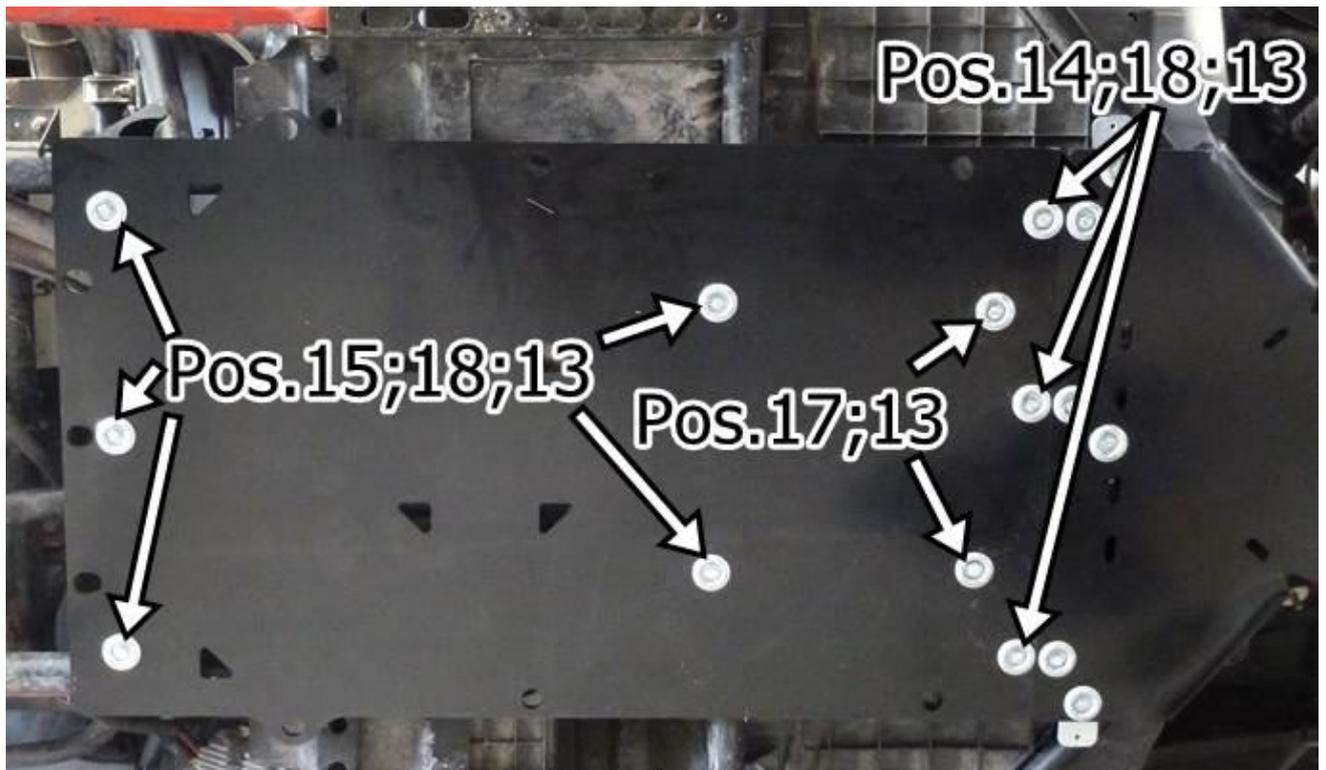


Step 7

Install plates 02.5006 to the middle protection.

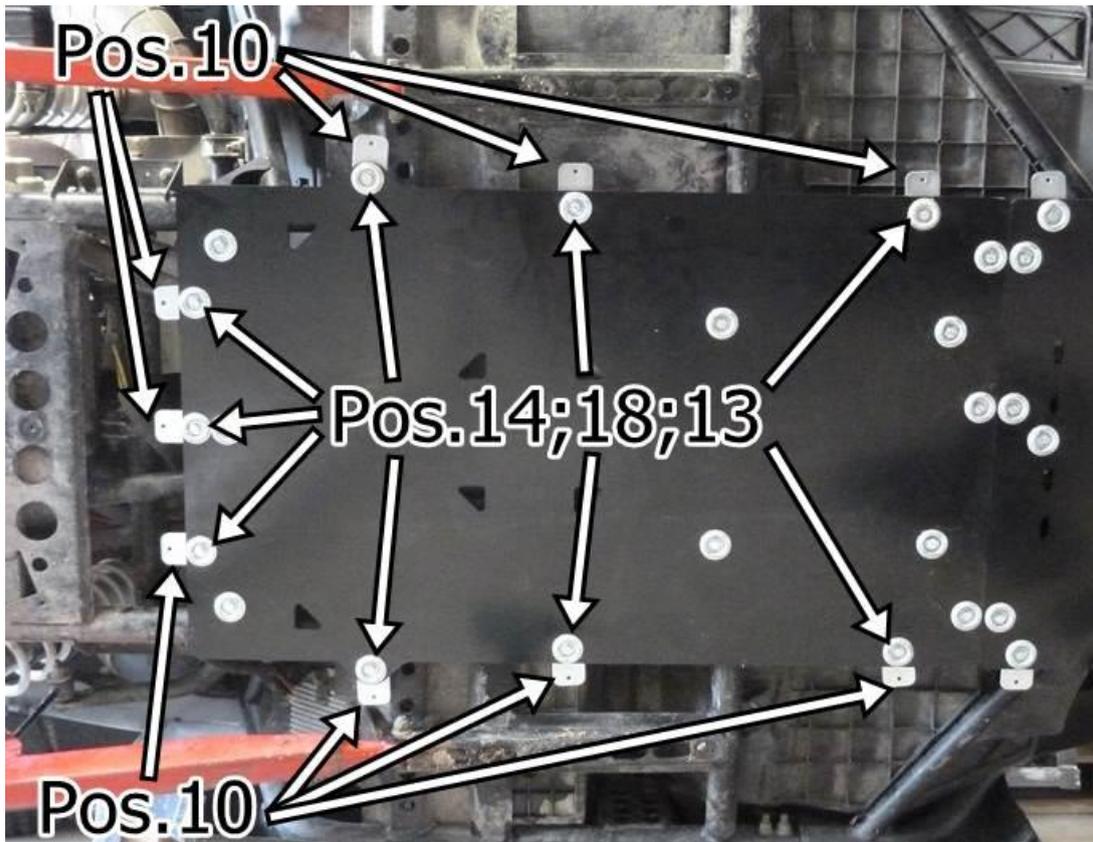


Step 8

Install rear protection 02.14203.

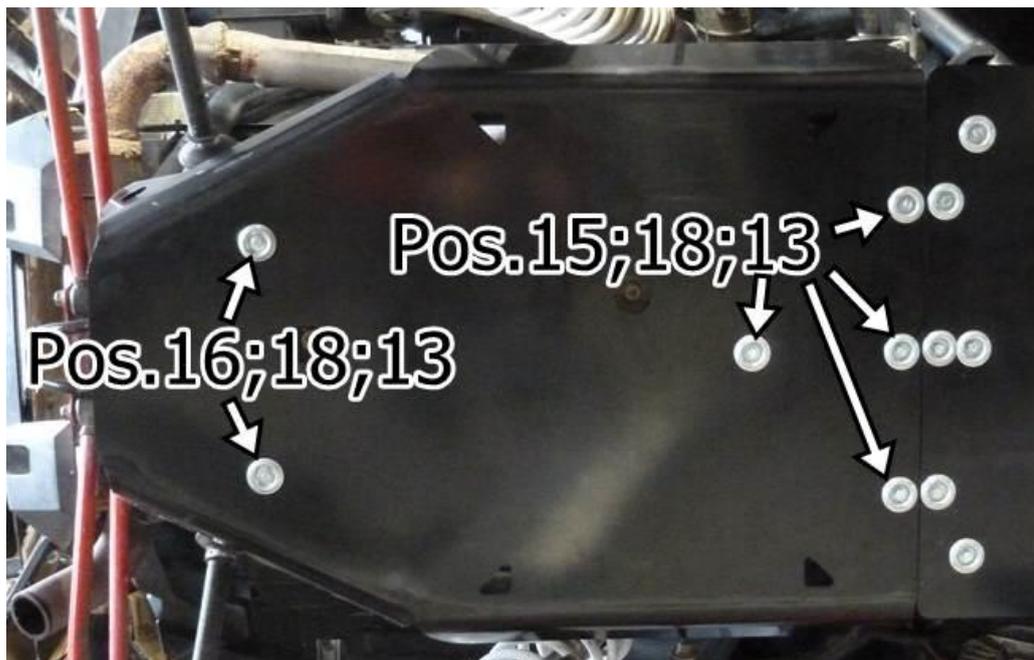



Step 9 Install side protections 02.14204K and 02.14205K.

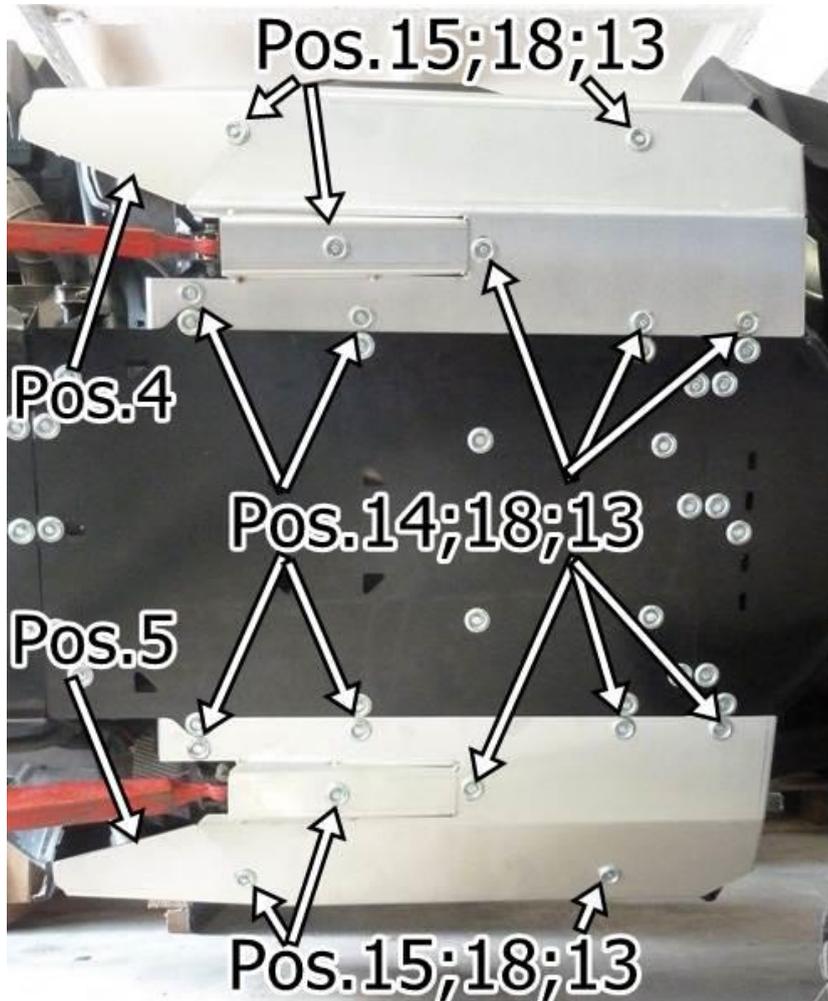

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

