

IRON BALTIC


PLASTIC SKID PLATE

POLARIS

ACE 325 / 570 / 900

Code 02.14600

Version 30082023

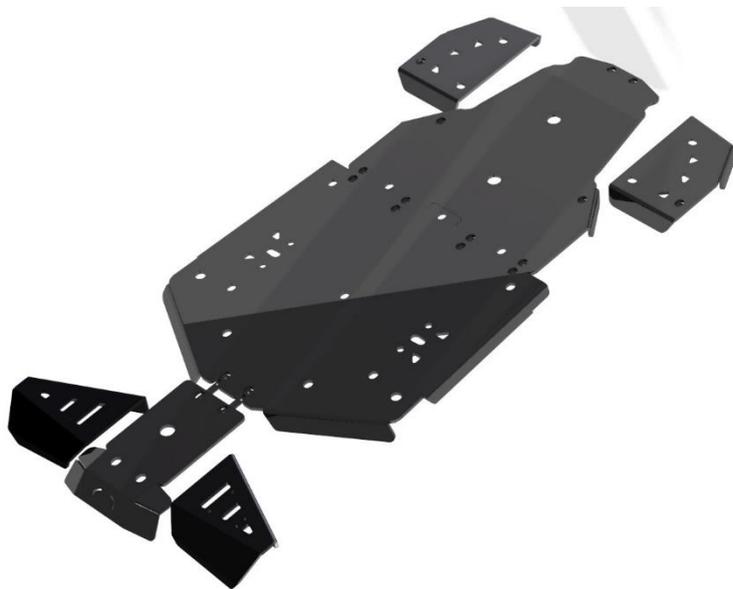

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com



DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/uV0tYqjk

SPECIFICATION

Pos.	Description	Code	Amount
1	Front protection	02.14601	1
2	Middle protection	02.14602	1
3	Rear part	02.14603	1
4	Front right arm protection	02.14604	1
5	Front left arm protection	02.14605	1
6	Rear right arm protection	02.14606	1
7	Rear left arm protection	02.14607	1
8	Installation bracket	02.14508	1
9	Clamp for front arm protection	02.14509	1
10	Clamp for front arm protection	02.14510	1
11	Installation plate	02.2305	6
12	Installation plate	02.5006	4
13	Dished washer	14.503	36
14	Bolt M6x16 DIN 933	OT.02.02.050	10
15	Bolt M6x25 DIN 933	OT.02.02.070	12
16	Bolt M8x20 DIN 933	OT.02.02.180	6
17	Bolt M8x25 DIN 933	OT.02.02.190	6
18	Bolt M8x60 DIN 933	OT.02.02.250	4
19	Bolt M6x25 DIN 7991	OT.02.04.040	8
20	Conical washer Ø6	14.502	8
21	Washer Ø6/15 SFS 3738	OT.04.03.020	22
22	Washer Ø8/20 SFS 3738	OT.04.03.030	6
23	Nyloc nut M8 DIN 985	OT.03.02.040	6

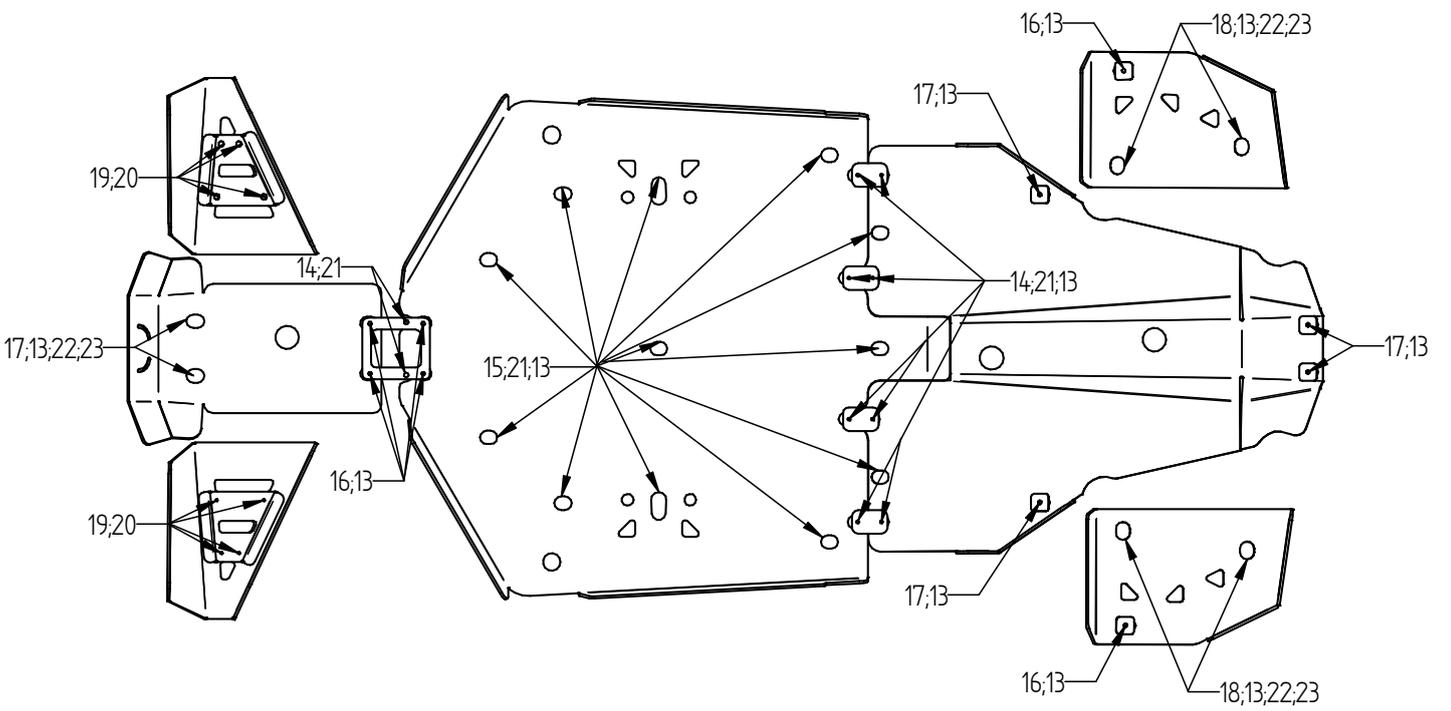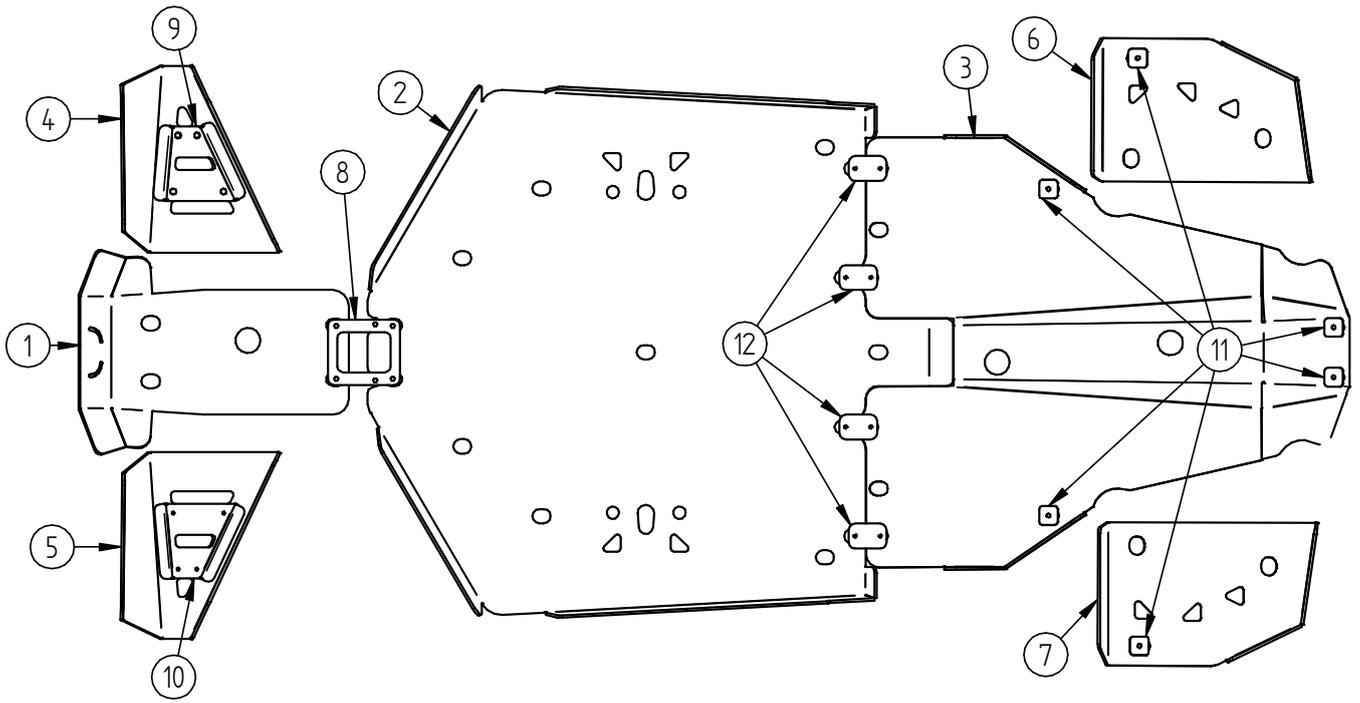


FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers.




Step 2 Install front arm protections 02.14604 and 02.14605.

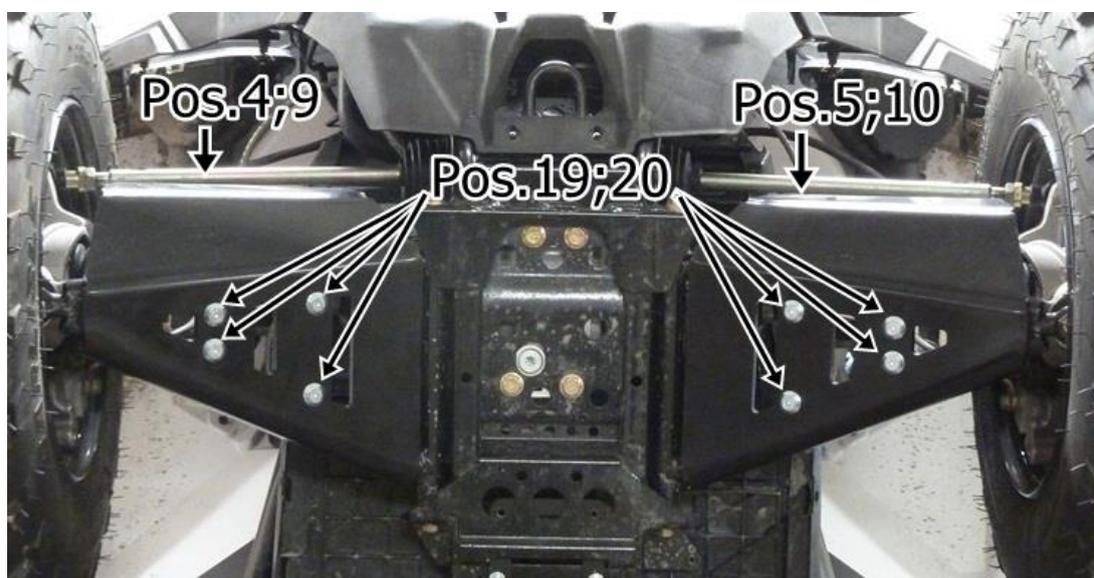


Step 3

Install rear arm protections 02.14606 and 02.14607.

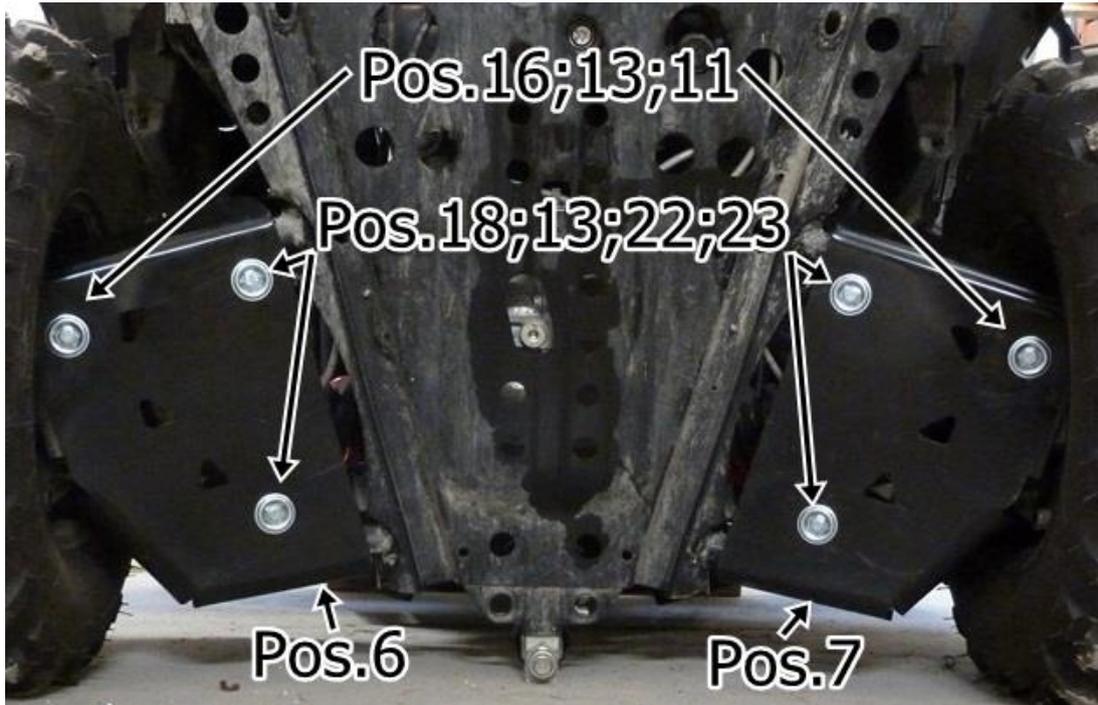


Step 4


Install bracket 02.14508.

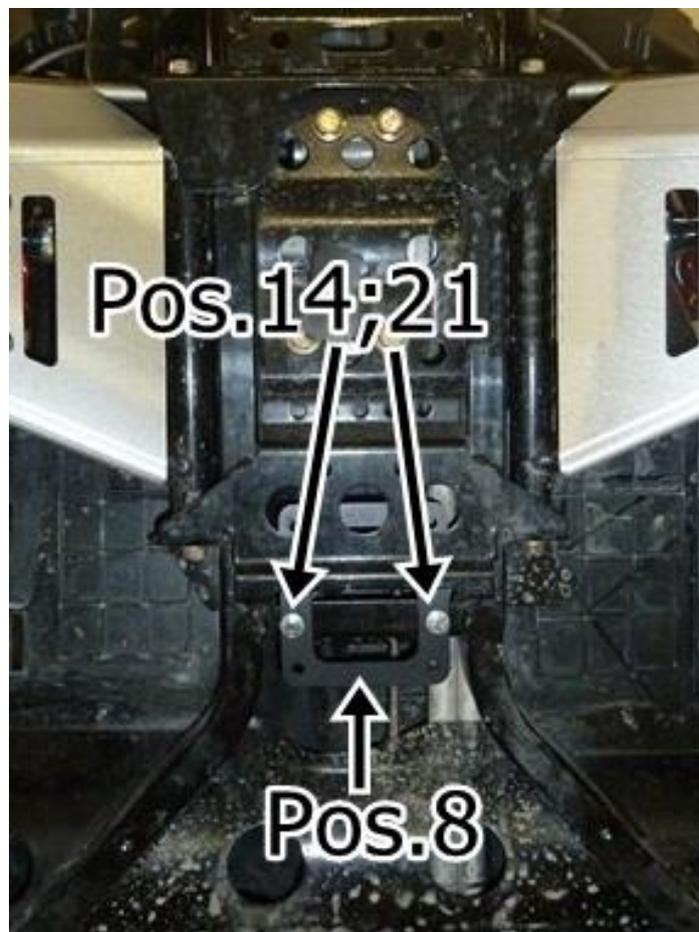

Step 5 Install front protection 02.14601.

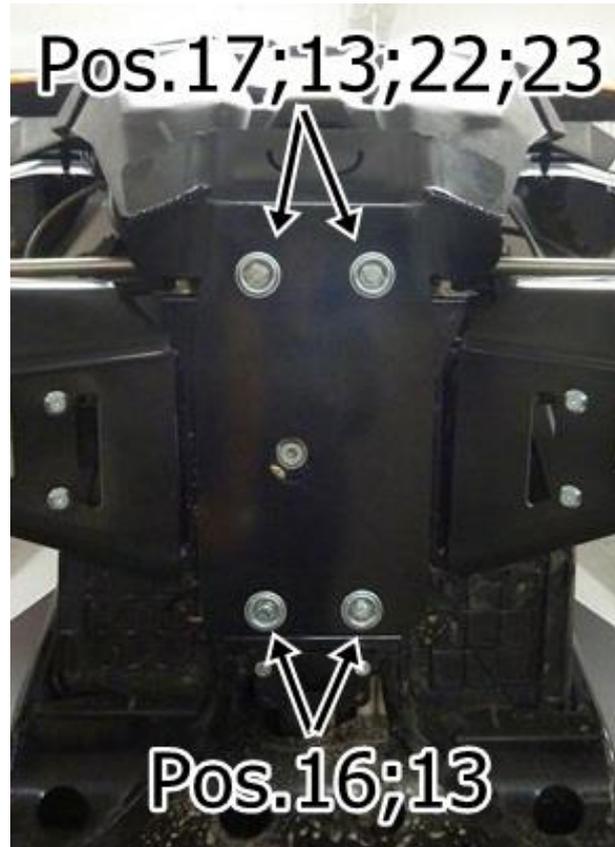


Step 6 Install middle protection 02.14602.

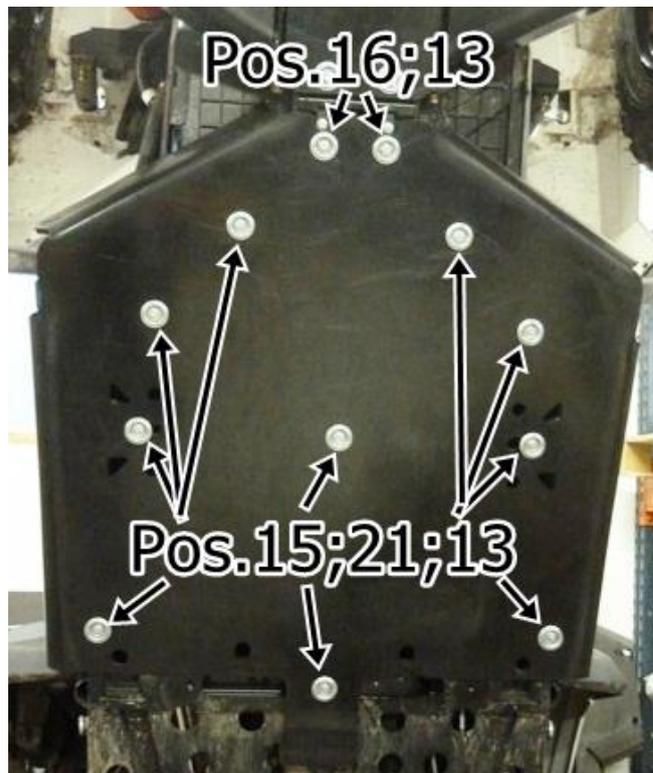

Step 7 Install plates 02.5006 to the middle protection.



Step 8 Install rear protection 02.14603.

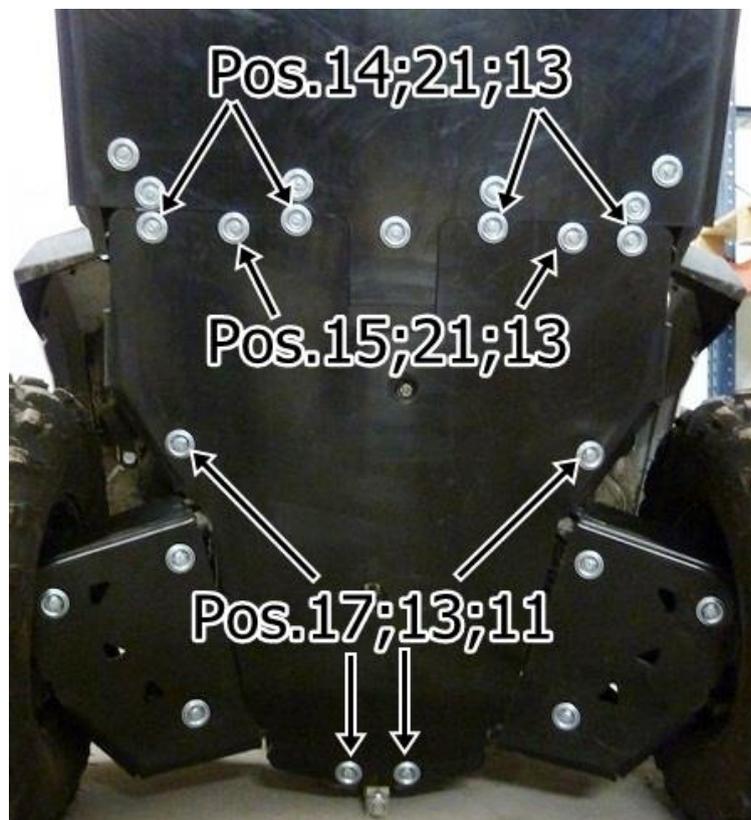

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

