

# IRON BALTIC

## SIDE PROTECTIONS

# POLARIS

## ACE 325

Code 02.14700

Version 31082023

DOWNLOAD MULTILINGUAL  
USER MANUAL




[code.ironbaltic.com/u/1UiIWCYV](https://code.ironbaltic.com/u/1UiIWCYV)

**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)


# SPECIFICATION

Pos.	Description	Code	Amount
1	Right side protection	02.14701K	1
2	Right side protection upper part	02.14704	1
3	Right strip	02.14705	1
4	Left side protection	02.14707K	1
5	Left side protection upper part	02.14708	1
6	Left strip	02.14709	1
7	Side protection bush	02.14706	2
8	Bolt M6x25 DIN 7991	OT.02.04.040	8
9	Bolt M6x30 DIN 7991	OT.02.04.050	4
10	Bolt M8x20 DIN 933	OT.02.02.180	6
11	Conical washer 6	14.502	12
12	Washer Ø8/24 DIN 9021	OT.04.02.040	6

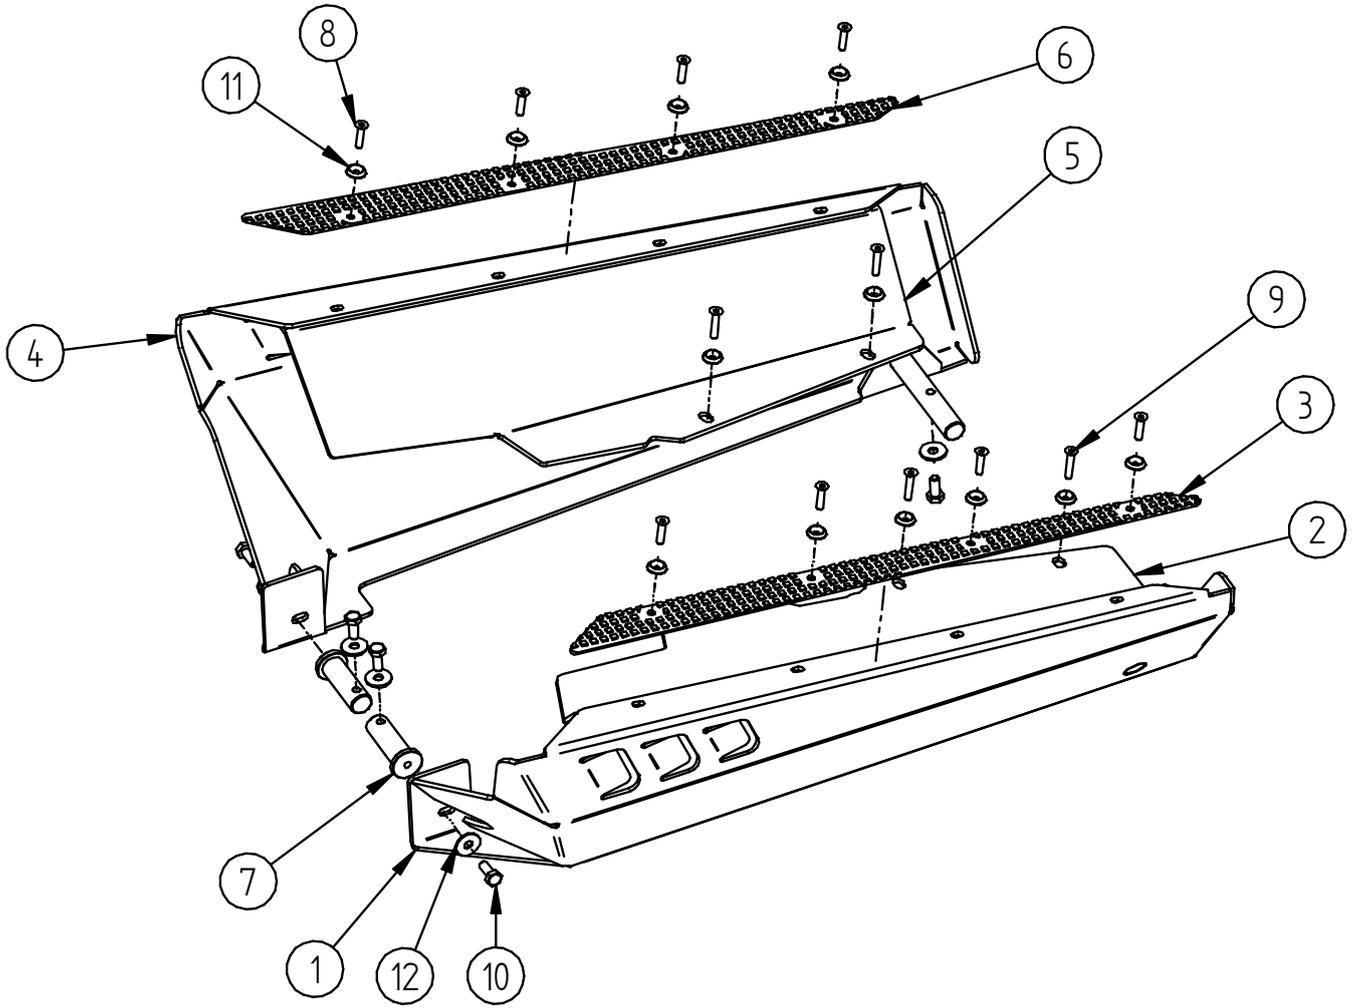



# FITTING INSTRUCTIONS

**Step 1** Assemble side protections.

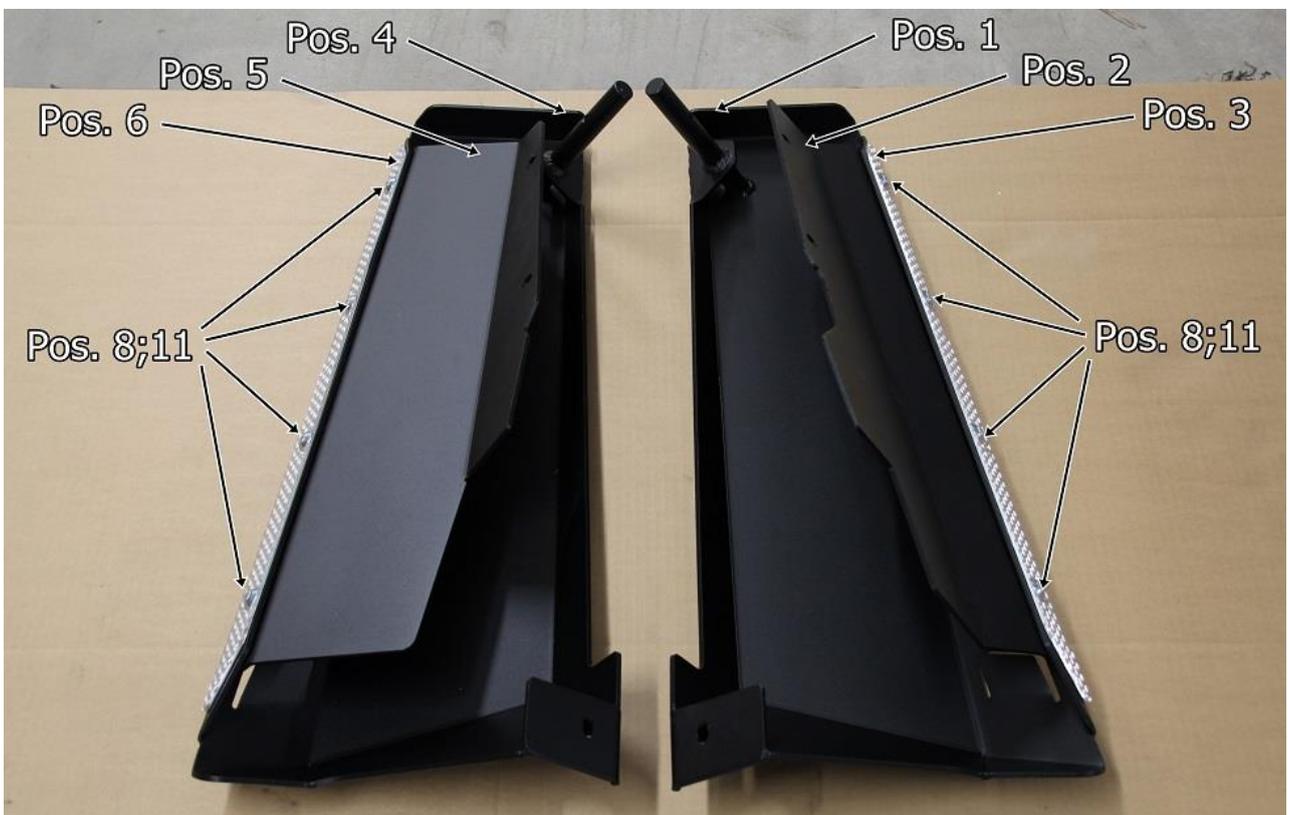


## Step 2

Install sideprotection bushes into frame tube.

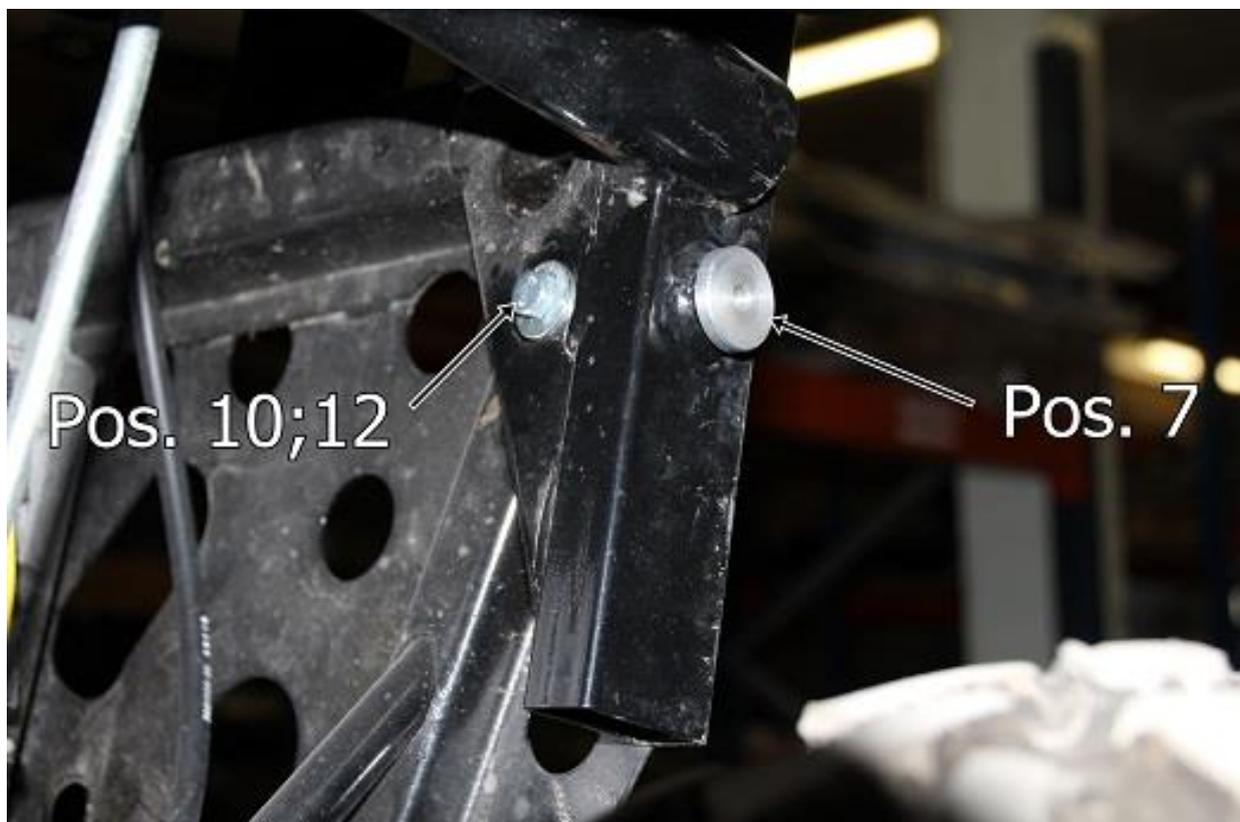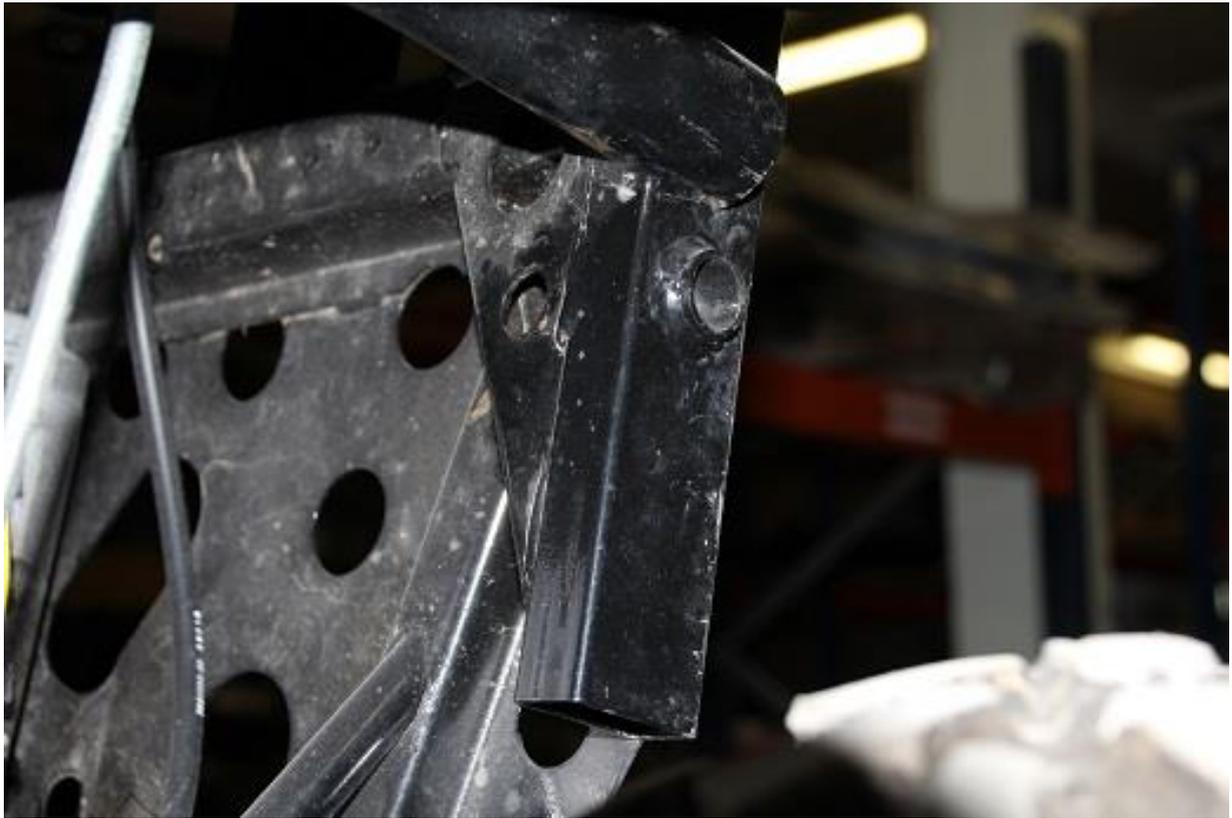

**Step 3**

Install previously assembled side protections.

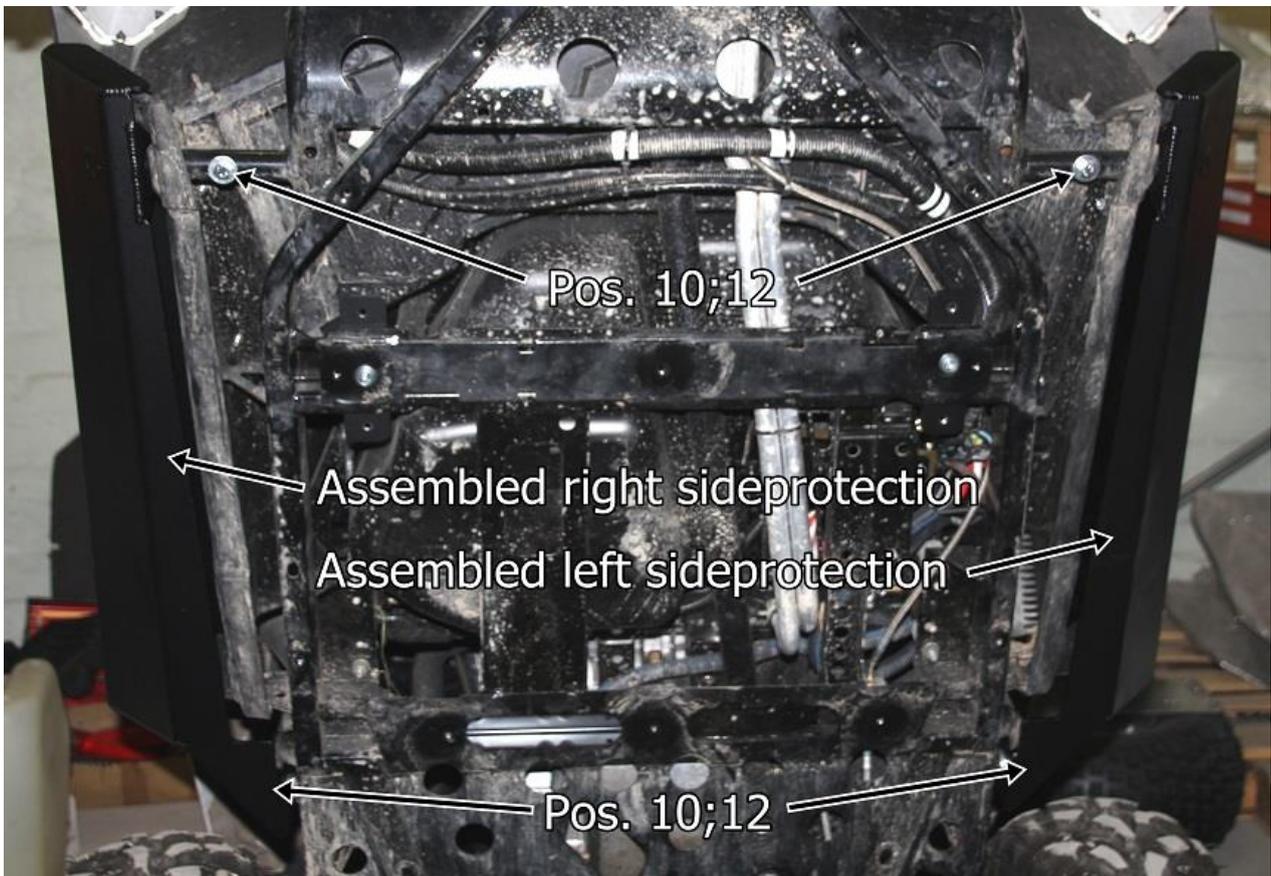



# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

