



code.ironbaltic.com/u/Z78aXgme


ALUMINIUM SKID PLATE

TGB

550 Blade

Code 02.14800

Version 31082023


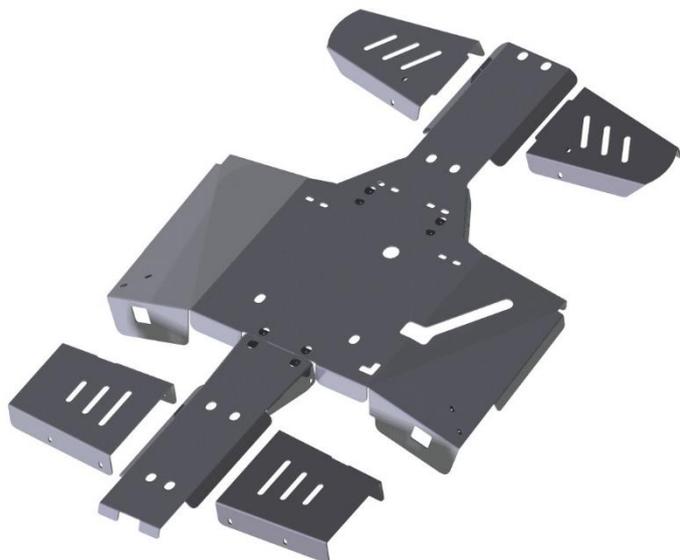


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Front protection	02.14801K	1
2	Middle protection	02.14802	1
3	Rear part	02.14803	1
4	Front left arm protection	02.14804	1
5	Front right arm protection	02.14805	1
6	Rear left arm protection	02.14806	1
7	Rear right arm protection	02.14807	1
8	Bracket	02.1419	2
9	Installation bracket	02.4606	2
10	Installation plate	02.5006	4
11	Dished washer	14.503	18
12	Bolt M6x16 DIN 933	OT.02.02.050	8
13	Bolt M6x25 DIN 933	OT.02.02.070	10
14	Bolt M6x20 DIN 7991	OT.02.04.030	18
15	Bolt M6x40 DIN 7991	OT.02.04.070	8
16	Washer Ø6	14.502	26
17	Washer Ø6/15 SFS 3738	OT.04.03.020	22
18	Nyloc nut M6 DIN 985	OT.03.02.030	4

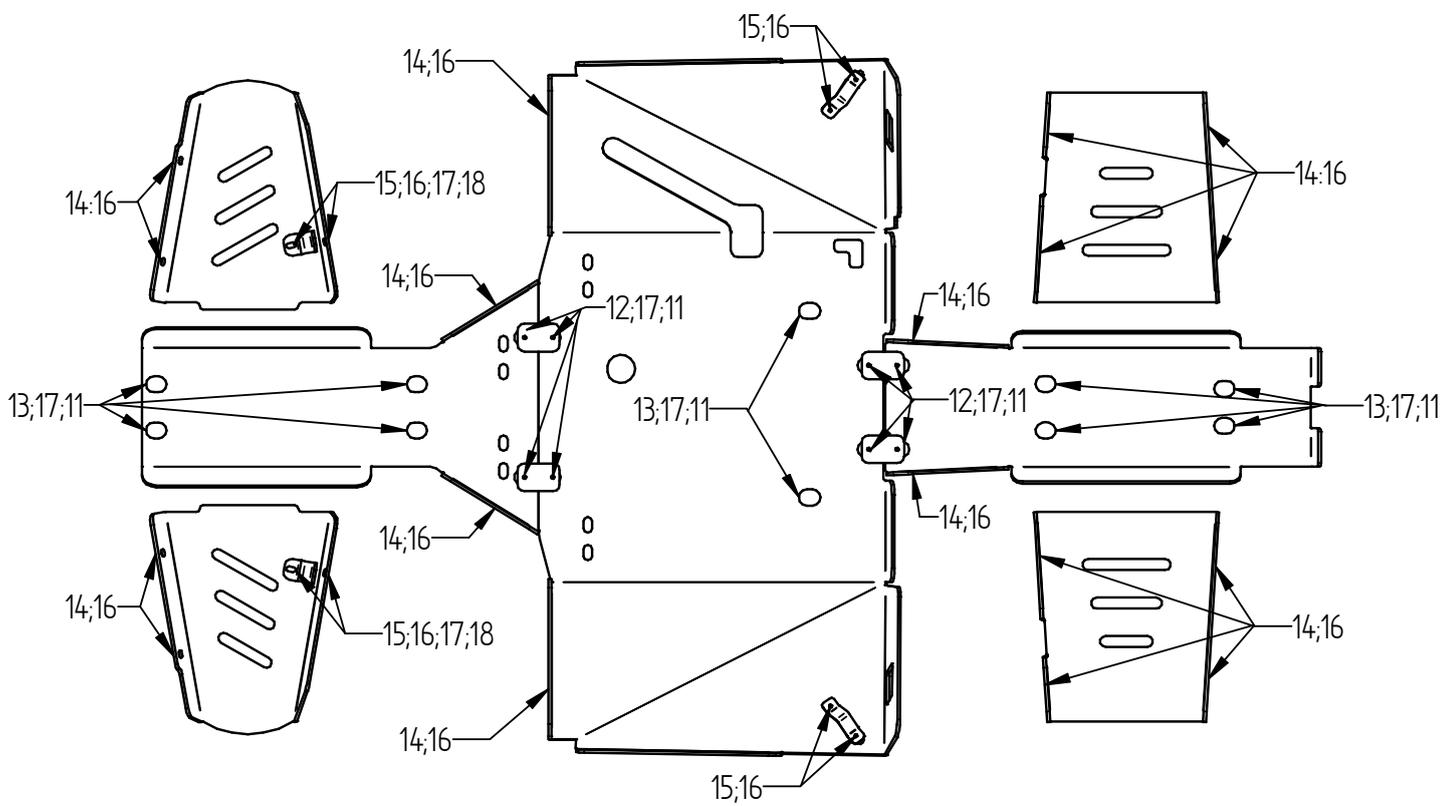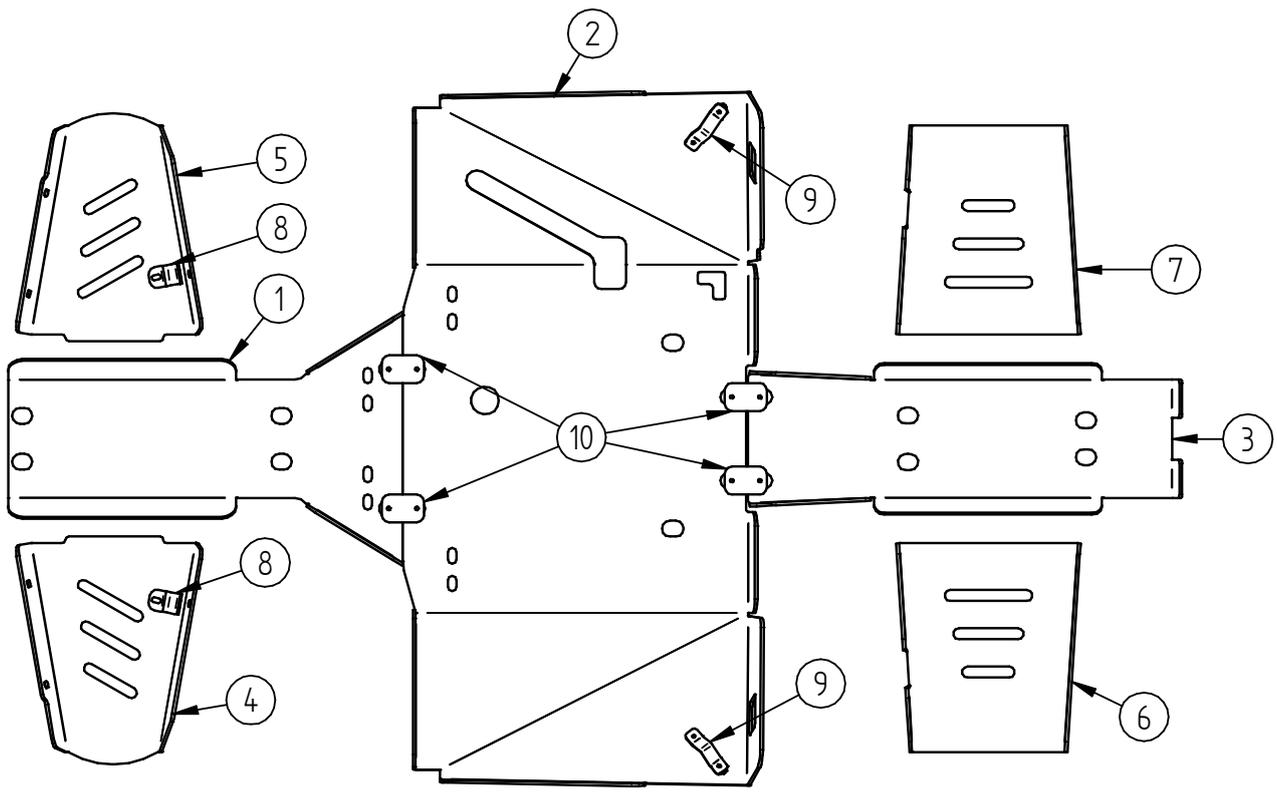


FITTING INSTRUCTIONS


Step 1 Remove all standard plastic covers. Remove also bolts indicated on the picture.




Step 2 Install front arm protections 02.14804 and 02.14805.

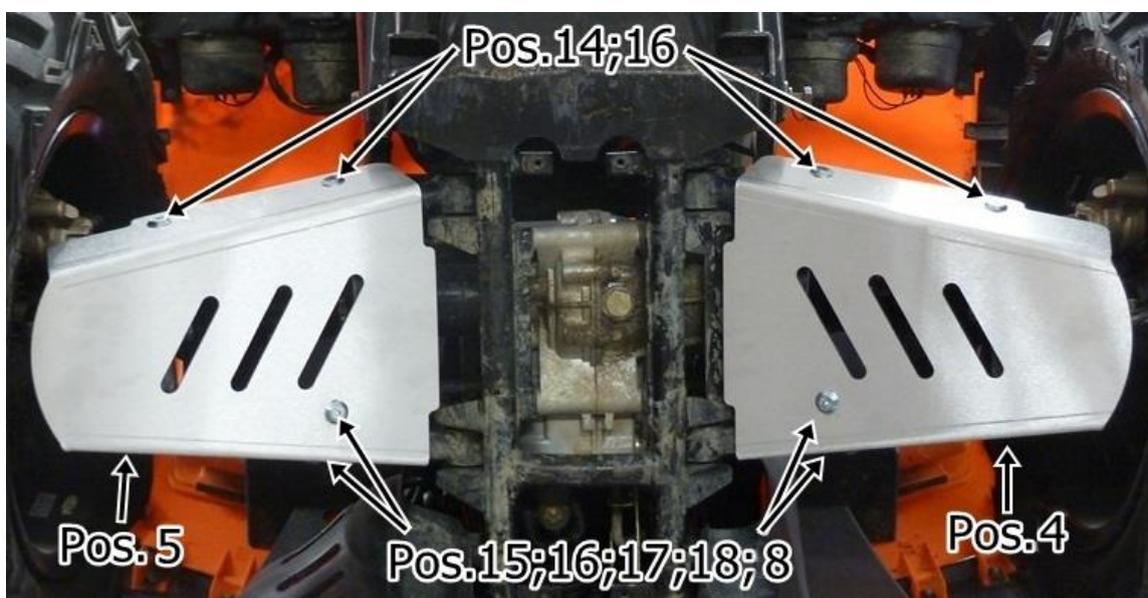

Step 3 Install rear arm protections 02.14806 and 02.14807.

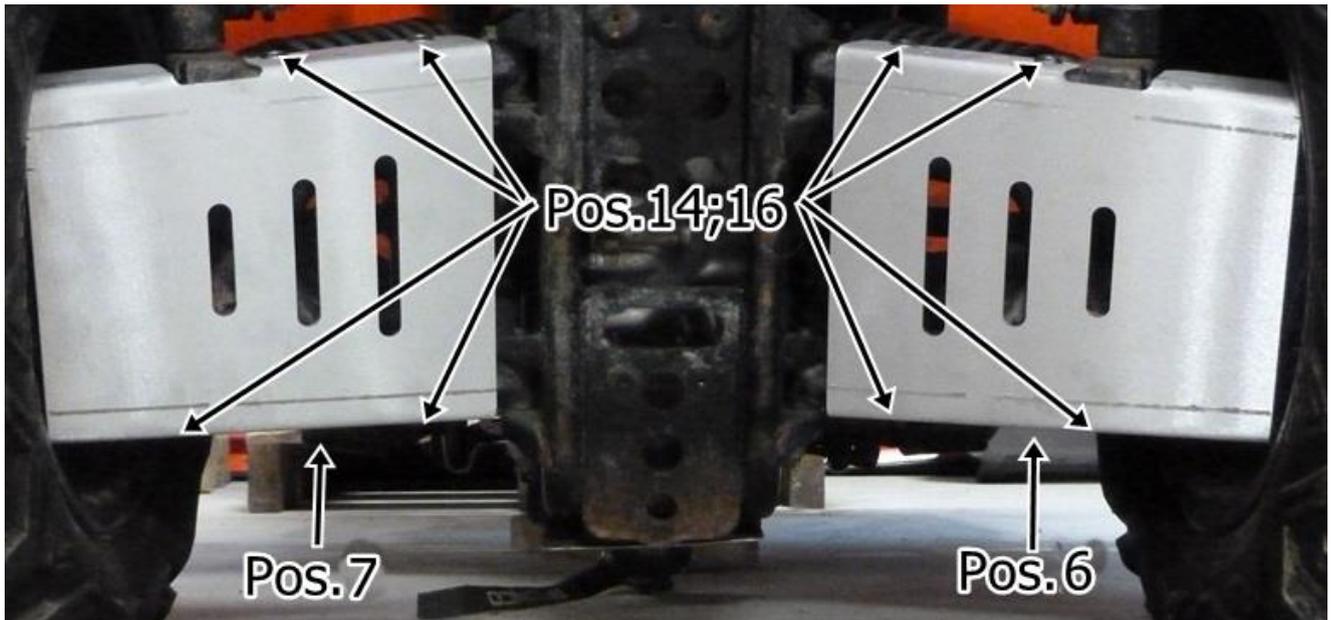


Step 4 Install rear protection 02.14803.

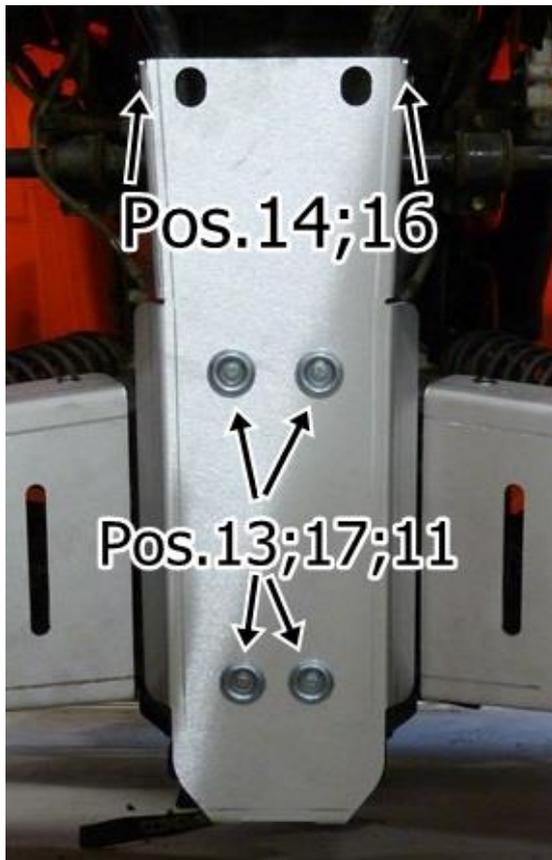

Step 5 Install plates 02.5006 to the rear protection.




Step 6 Install middle protection 02.14802.


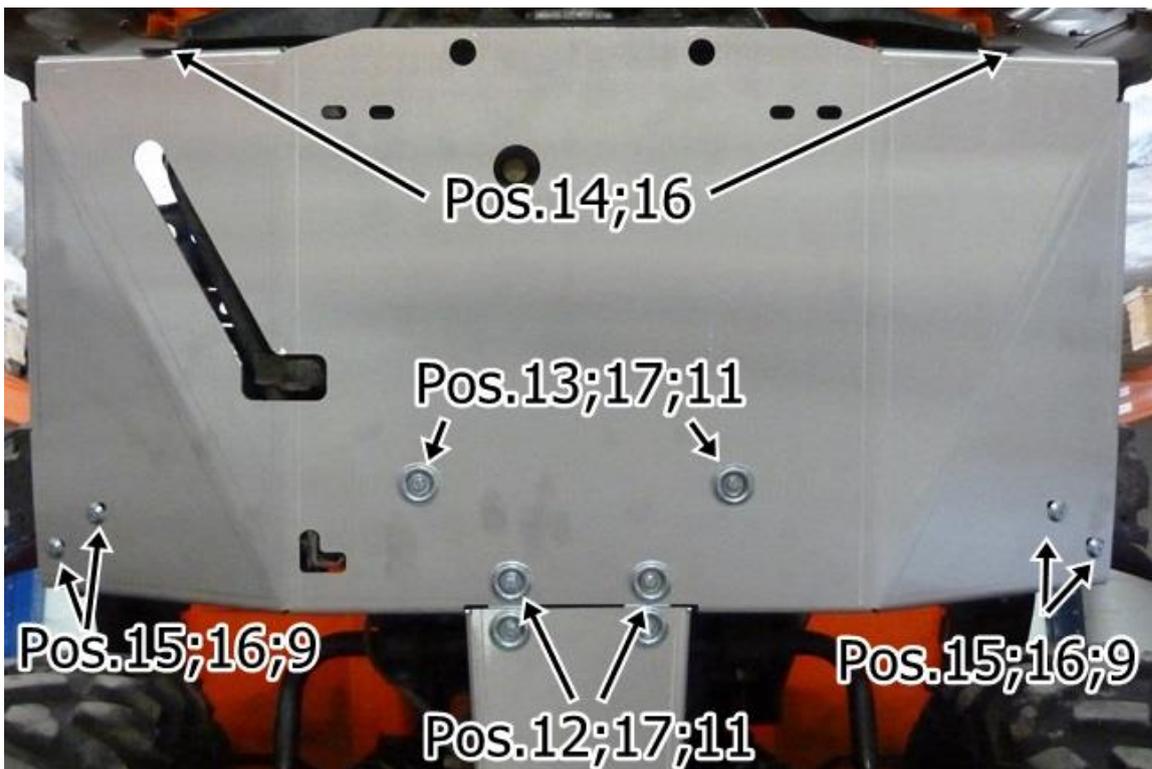





Step 7 Install plates 02.5006 to the middle protection.

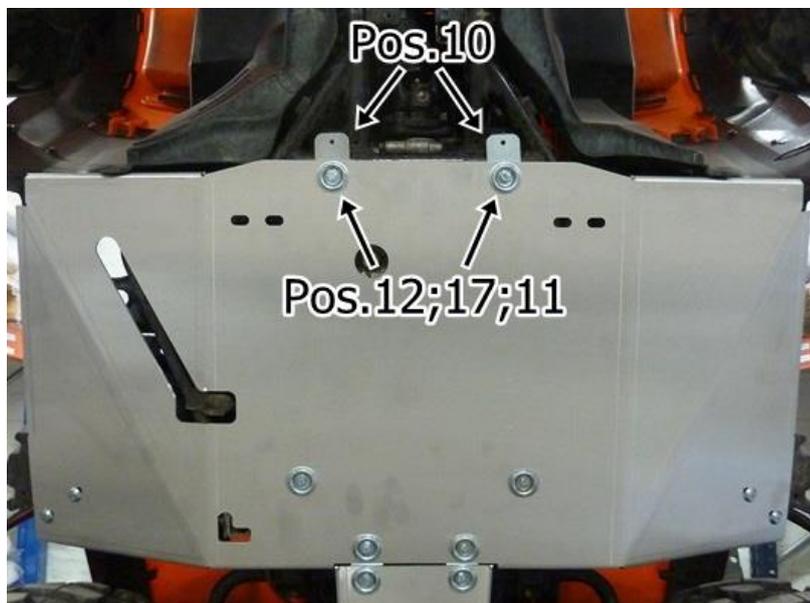

Step 8 Install front protection 02.14801.

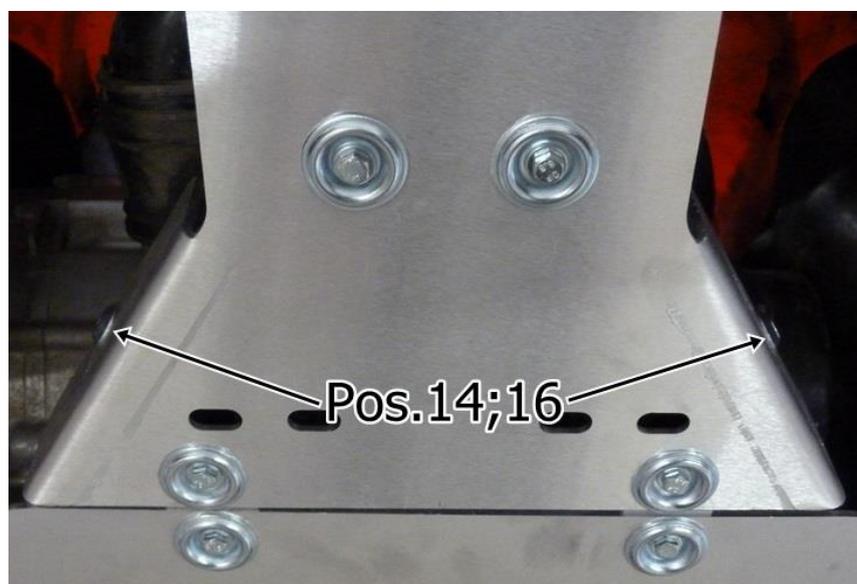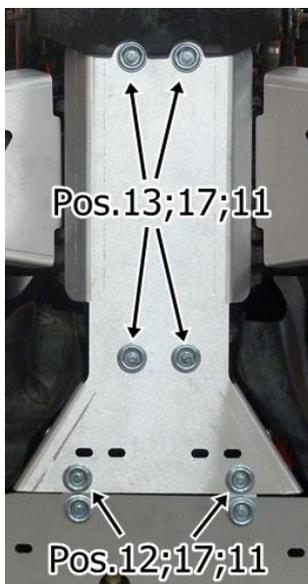

Step 9 Check the tension of the bolts ,indicated on the picture, after the first ride or day after the installation of the skid plate.

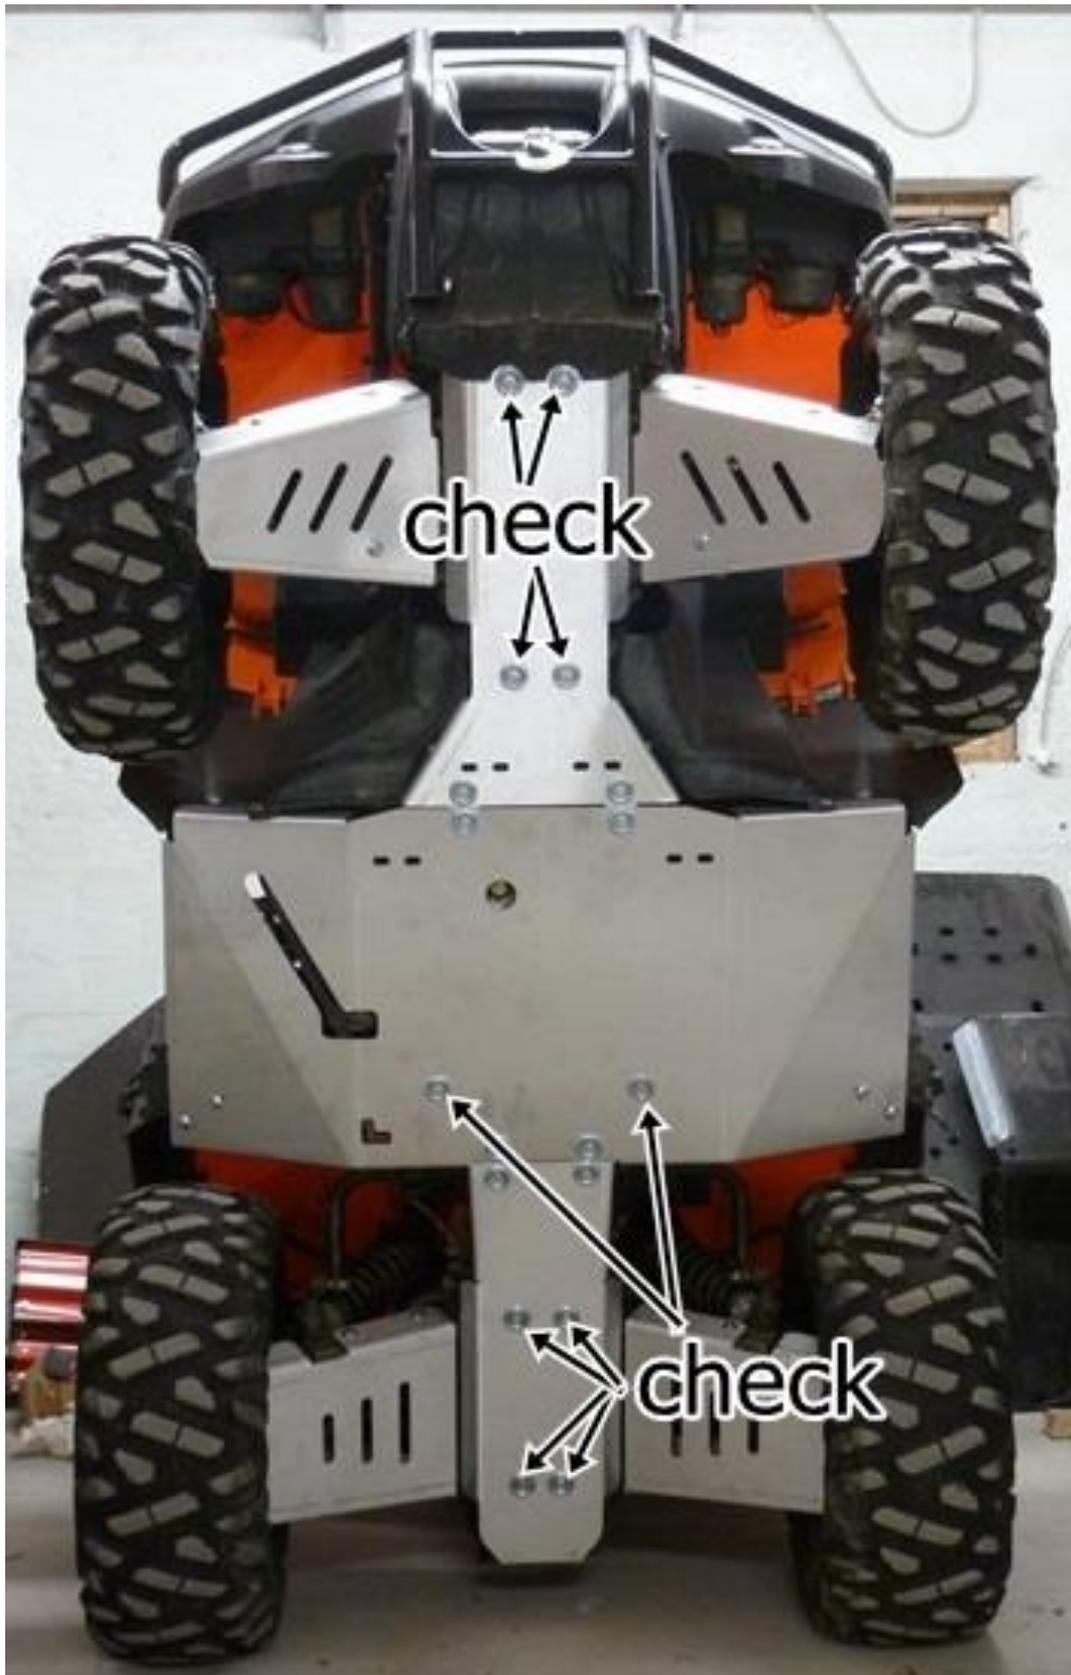

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

