

# IRON BALTIC

## ALUMINIUM SKID PLATE

# CFMOTO

## CForce 550 / 600

Code 02.15000

Version 31082023

DOWNLOAD MULTILINGUAL  
USER MANUAL





[code.ironbaltic.com/u/z8IU6IWW](https://code.ironbaltic.com/u/z8IU6IWW)

**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Front protection	02.15001	1
2	Middle protection	02.15002K	1
3	Rear part	02.15003K	1
4	Right sideprotection	02.15004	1
5	Left sideprotection	02.15005	1
6	Oil change hole cover	02.15006K	1
7	Front right arm protection	02.1075P+	1
8	Front left arm protection	02.1075V+	1
9	Rear right arm protection	02.1076P+	1
10	Rear left arm protection	02.1076V+	1
11	Installation plate	02.718	3
12	Bracket	03.1502	2
13	Installation plate	02.5006	10
14	Dished washer	14.503	42
15	Bolt M6x14 DIN 933	OT.02.02.040	24
16	Bolt M6x16 DIN 933	OT.02.02.050	3
17	Bolt M6x20 DIN 933	OT.02.02.060	11
18	Bolt M6x35 DIN 933	OT.02.02.090	5
19	Bolt M6x50 DIN 933	OT.02.02.120	4
20	Bolt M6x20 DIN 7991	OT.02.04.030	2
21	Bolt M8x20 DIN 7991	OT.02.04.150	2
22	Conical washer Ø6	14.502	2
23	Conical washer Ø8	14.501	2
24	Washer Ø6/15 SFS 3738	OT.04.03.020	53
25	Nyloc nut M6 DIN 985	OT.03.02.030	8

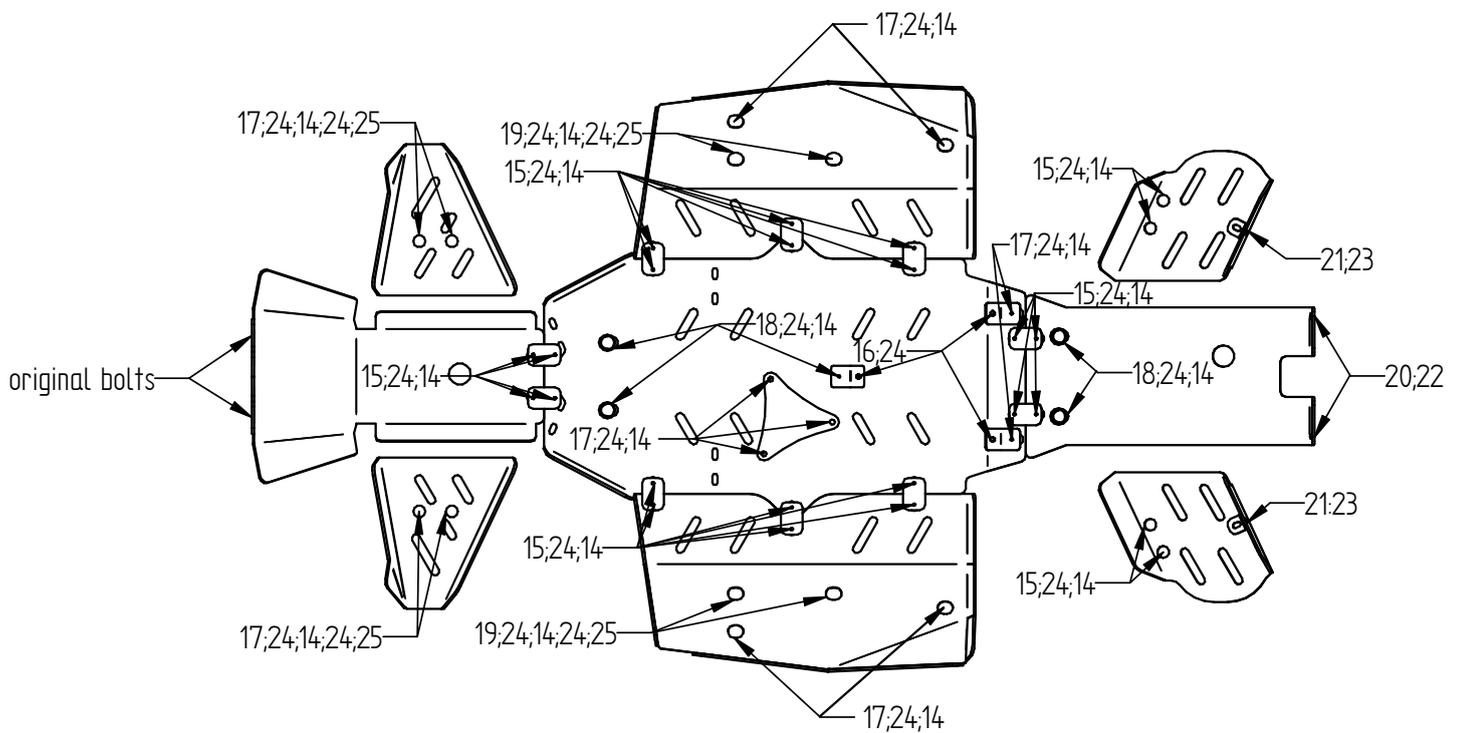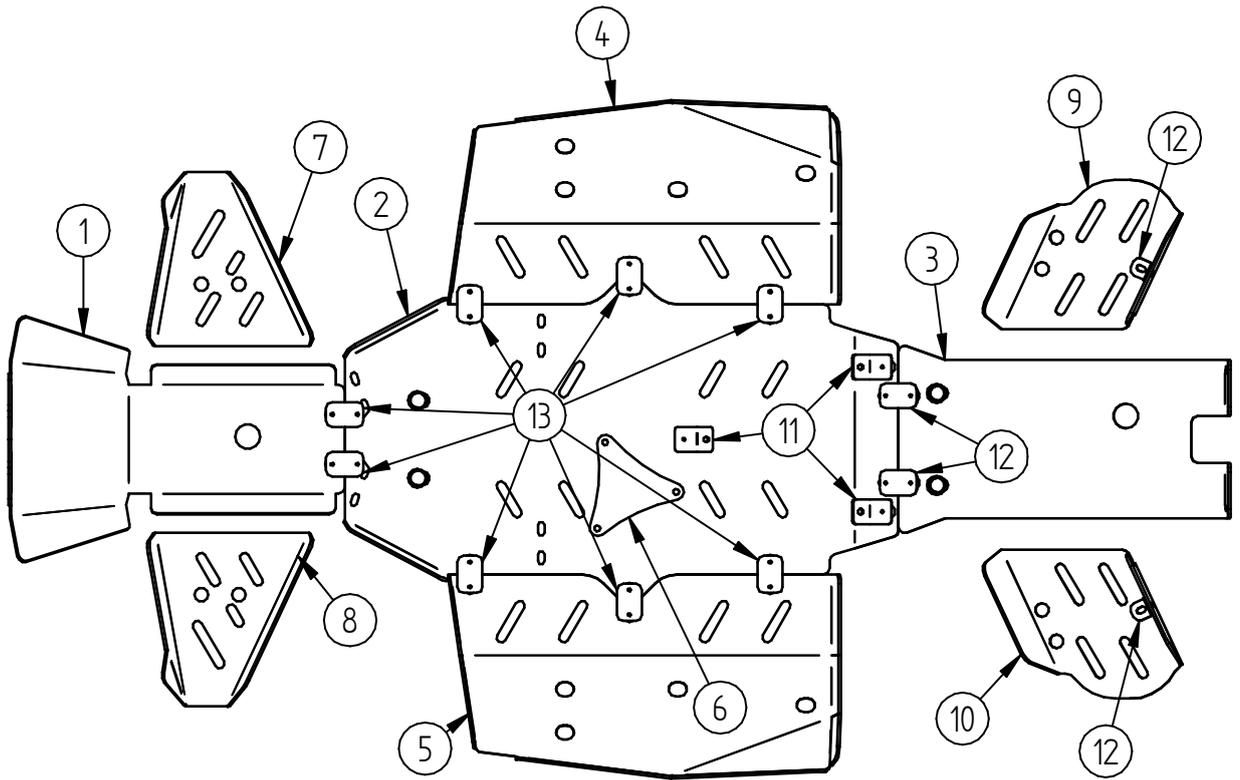

# FITTING INSTRUCTIONS


## Step 1

Remove all standard plastic covers. Remove also bolts from the footwell (both sides) indicated on the picture. If your ATV is from 2016 or newer, then you don't have to remove footwell bolts.






## Step 2

Install front arm protections 02.1075P+ and 02.1075V+.

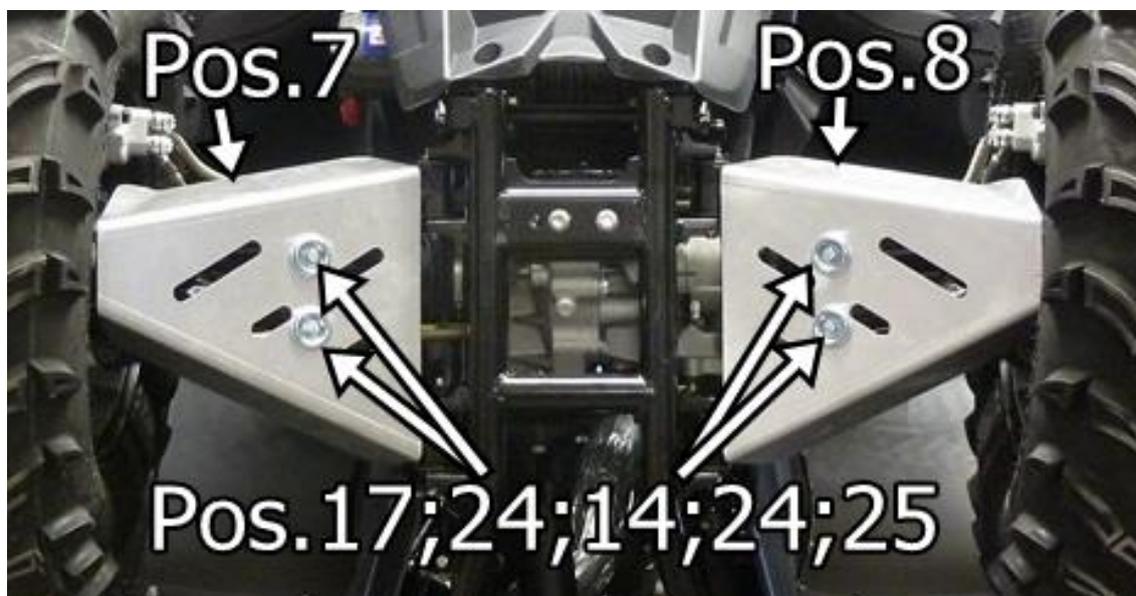


### Step 3

Install rear arm protections 02.1076P+ and 02.1076V+. First install the bracket 03.1502 (Pos.12) to the arm protection (do not tighten the bolt). Then place the protection on to the ATV's A-arm. Press the guard against the A-arm tube and tighten the bracket bolt so that the side of the bracket is against the A-arm tube. Finally, attach the other side of the A-arm protection.

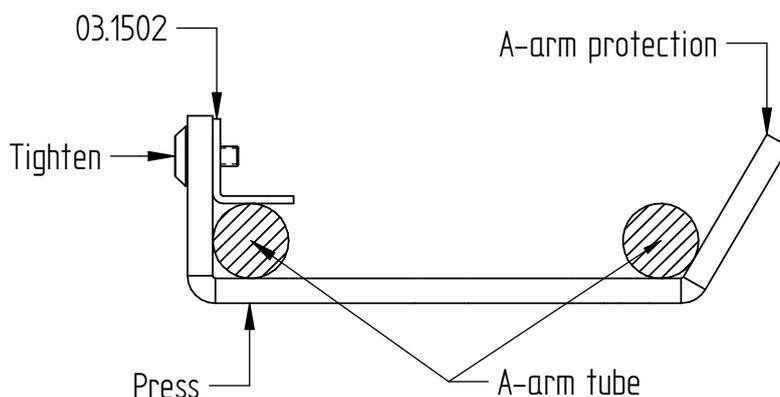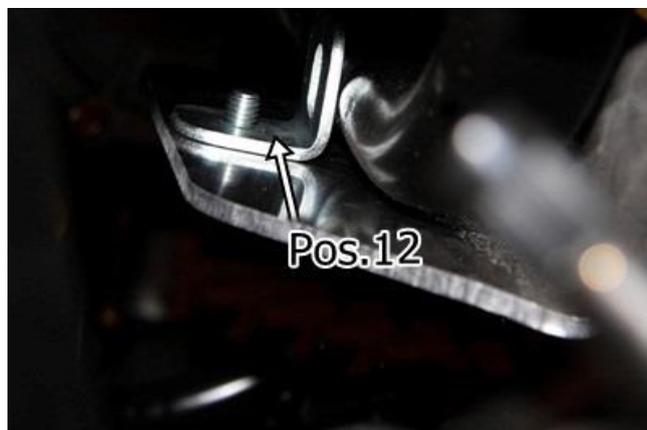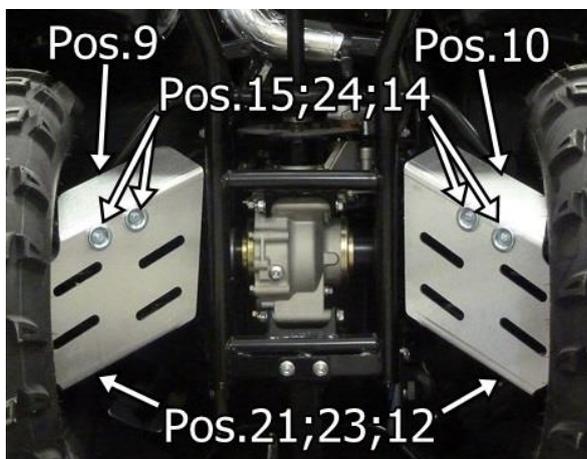


### Step 4


Install brackets 02.718 to the ATV frame.

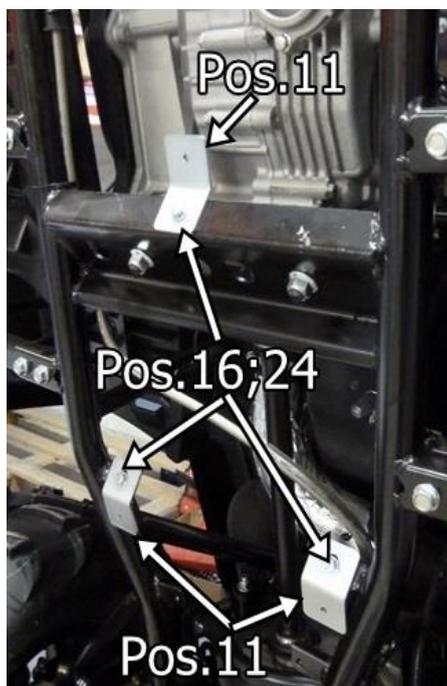

**Step 5** Install front protection 02.15001 and plates 02.5006.

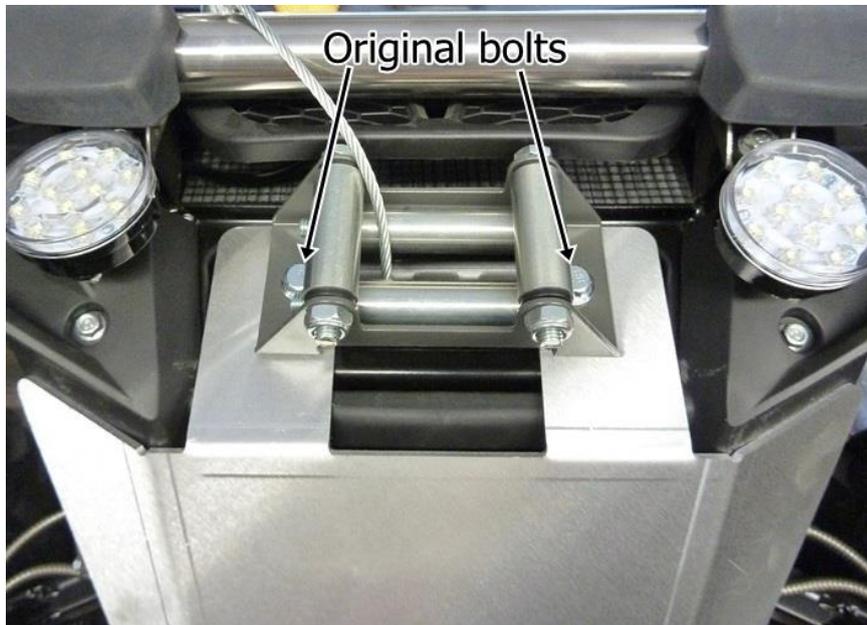


**Step 6** Install oil change cover plate to the middle part 02.15006.

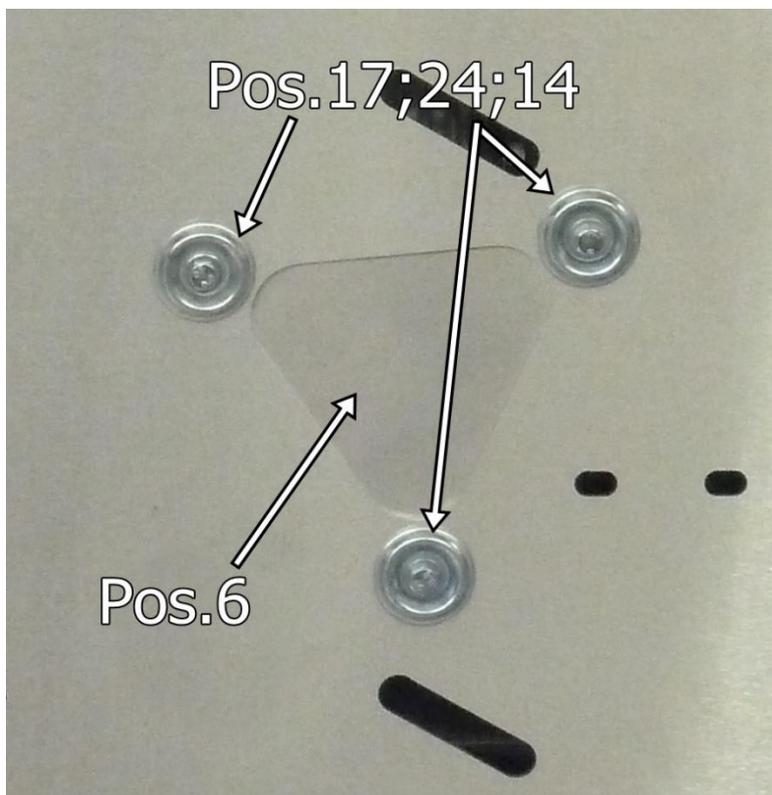

**Step 7** Install middle protection 02.15002K.




**Step 8** Install plates 02.5006 to the middle protection.

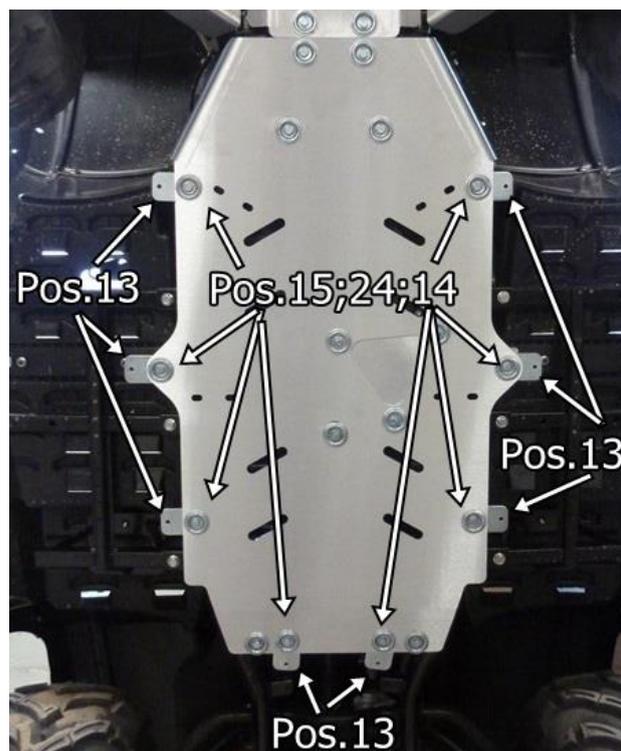


**Step 9** Install rear protection 02.15003K.



**Step 10** Install side protections 02.15004 and 02.15005.

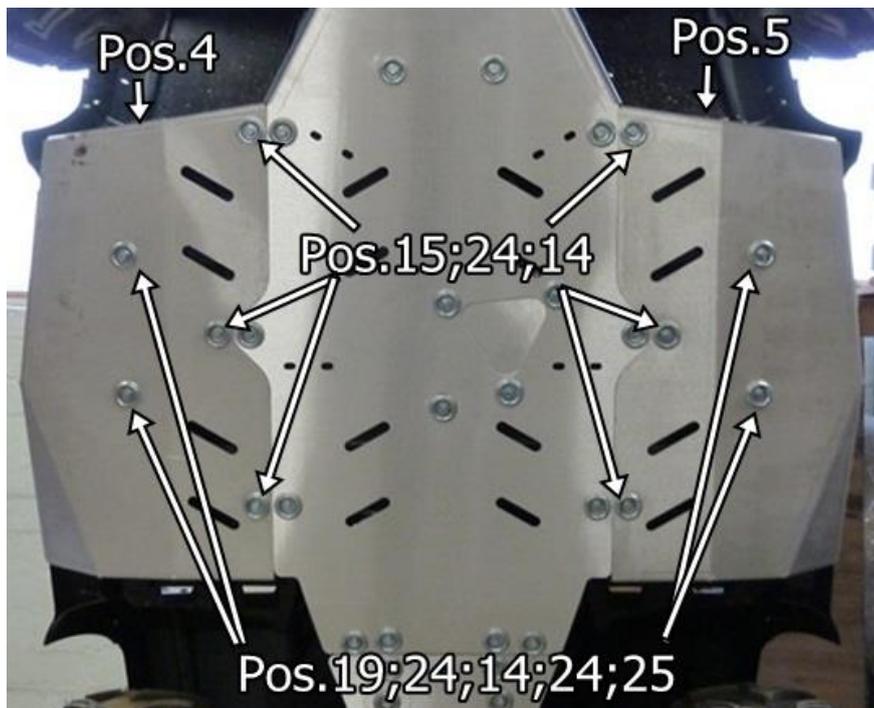


*Up to year 2016*

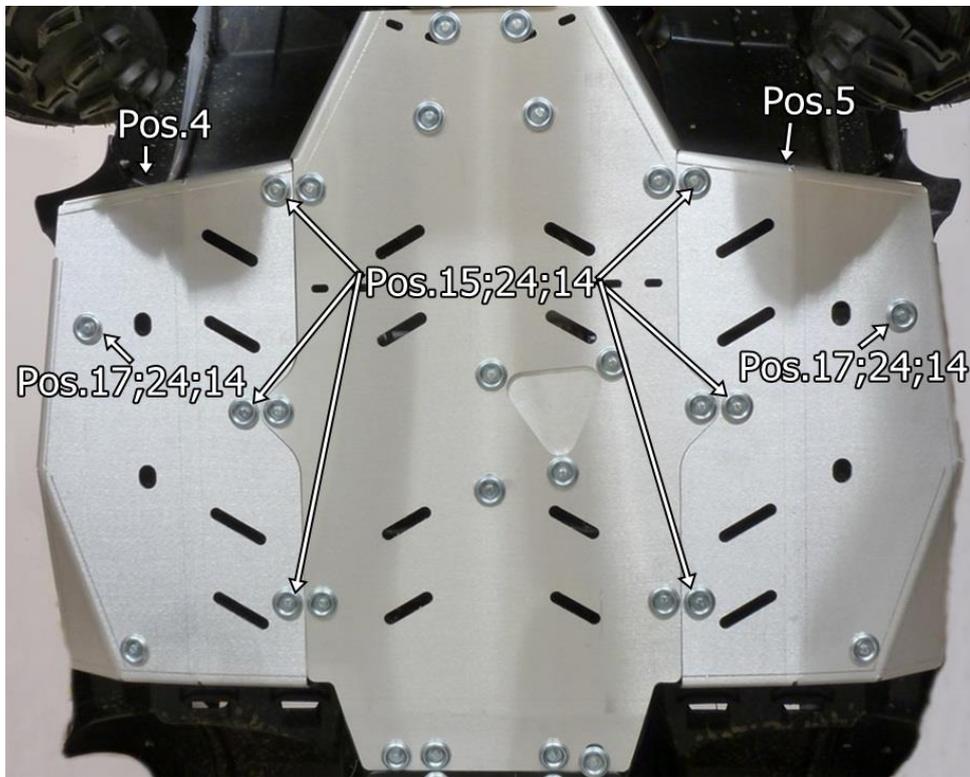

*From year 2016*

### Step 11

To remove the oil cover plate, remove two bolts indicated with arrows and loosen the third bolt. Slide the plate away.

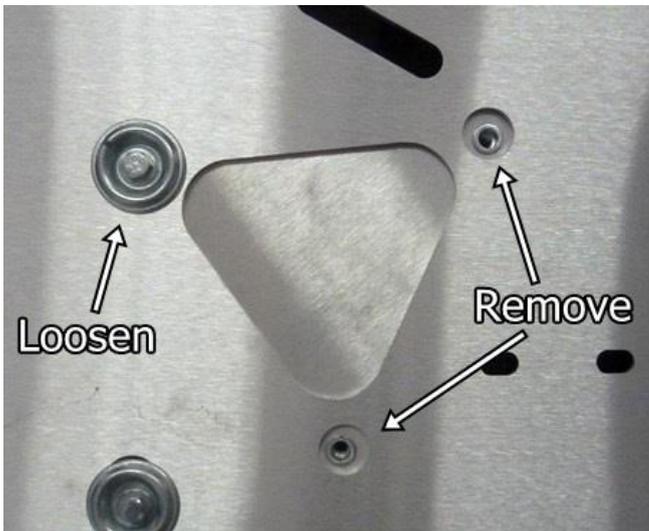





# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

