

IRON BALTIC

ALUMINIUM SKID PLATE

POLARIS

550 / 850 XP

Code 02.1520

Version 31082023

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/vMHbvW9t



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com



SPECIFICATION

Pos.	Description	Code	Amount
1	Middle protection	02.1521	1
2	Right side protection	02.15211K	1
3	Left side protection	02.15222K	1
4	Front protection	02.1522	1
5	Front right arm protection	02.1523	1
6	Front left arm protection	02.1524	1
7	Rear right arm protection	02.1525	1
8	Rear left arm protection	02.1526	1
9	Front upper protection	02.1527	1
10	Clamp for front arm protection	02.1528	2
11	Clamp for rear arm protection	02.1529	2
12	Bracket	02.1549	1
13	Installation plate	02.2305	1
14	Middle protection plate	02.1551K	1
15	Front upper protection bracket	02.1550	1
16	Installation plate	02.5006	6
17	Ancle	03.1502	2
18	Bolt M6x16 DIN 933	OT.02.02.050	24
19	Bolt M6x40 DIN 933	OT.02.02.100	4
20	Bolt M6x60 DIN 933	OT.02.02.140	8
21	Bolt M8x20 DIN 993	OT.02.02.180	1
22	Bolt M6x16 DIN 7991	OT.02.04.020	12
23	Bolt M6x20 DIN 7991	OT.02.04.030	2
24	Bolt M8x25 DIN 7991	OT.02.04.160	2
25	Washer Ø6/15 SFS 3738	OT.04.03.020	44
26	Washer Ø6	14.502	14
27	Washer Ø8	14.501	2
28	Washer	14.503	33
29	Nyloc nut M6 DIN 985	OT.03.02.030	14

Polaris 550 / 850 XP model... - 2009

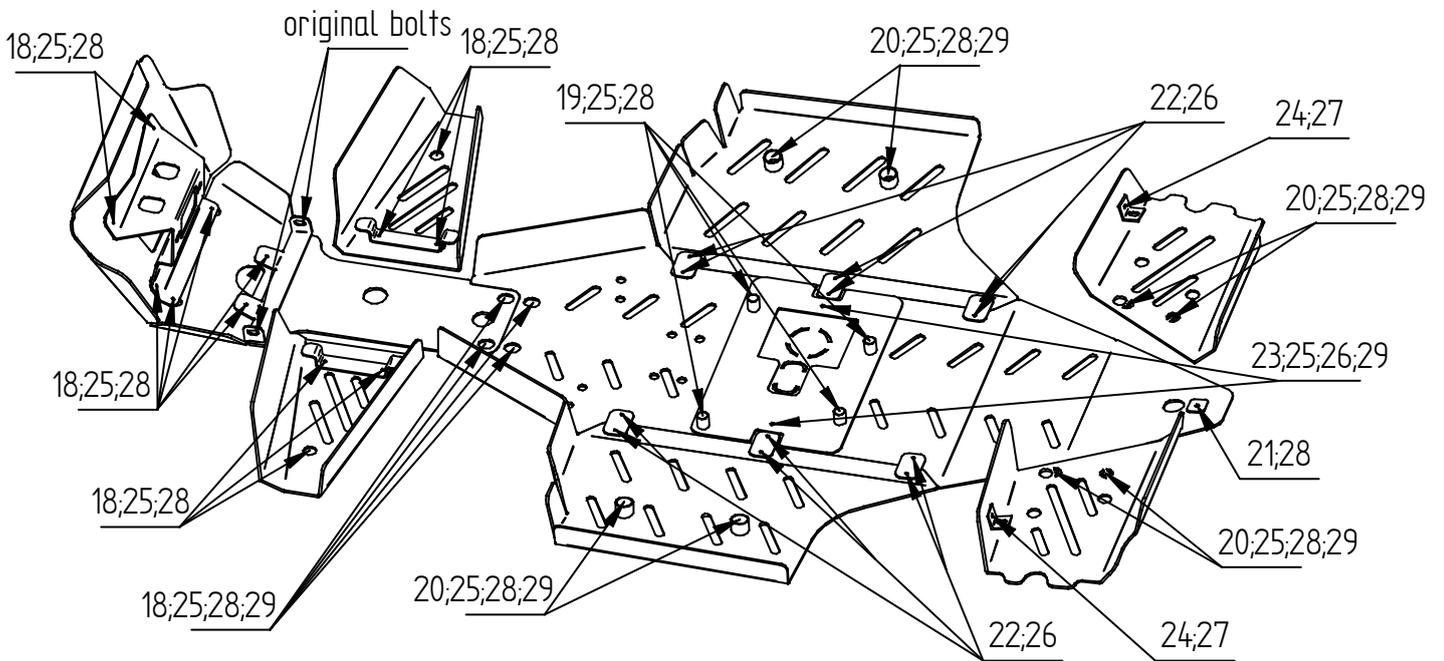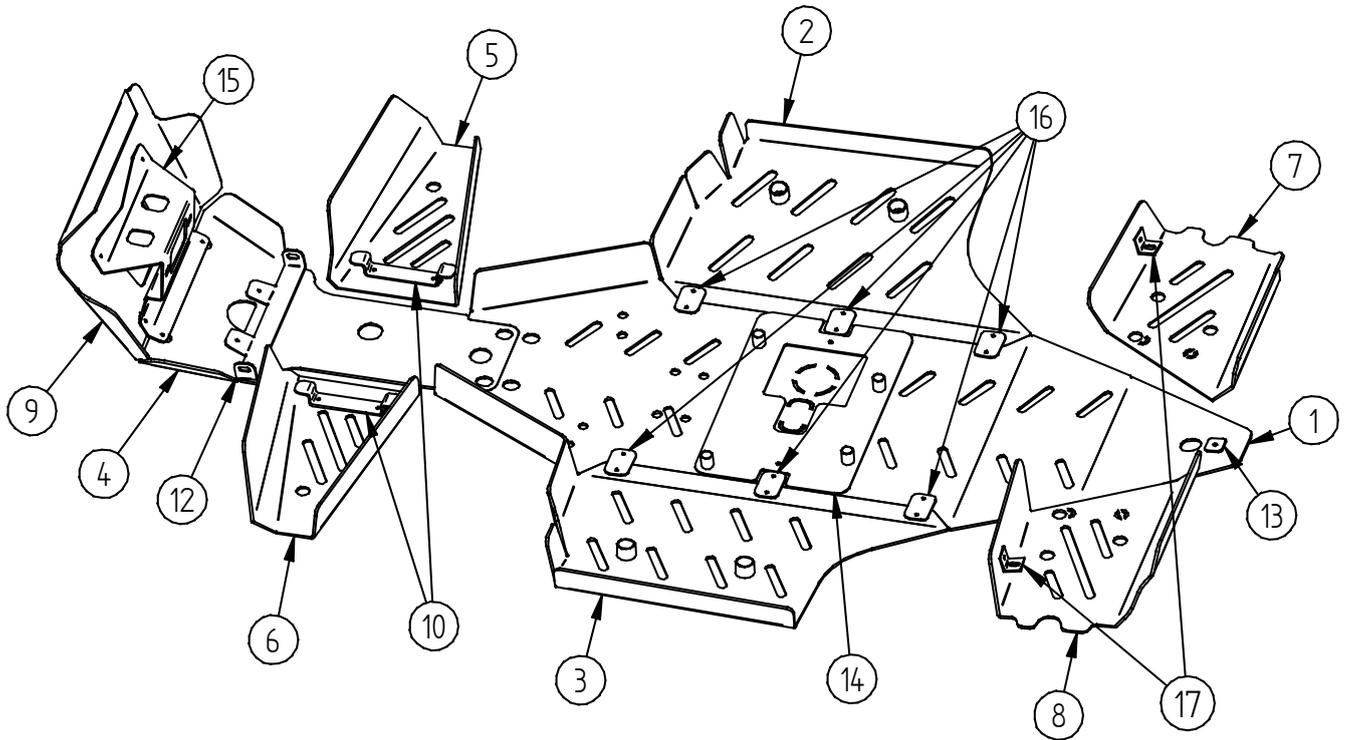

Polaris 550 / 850 XP model 2009 - ...

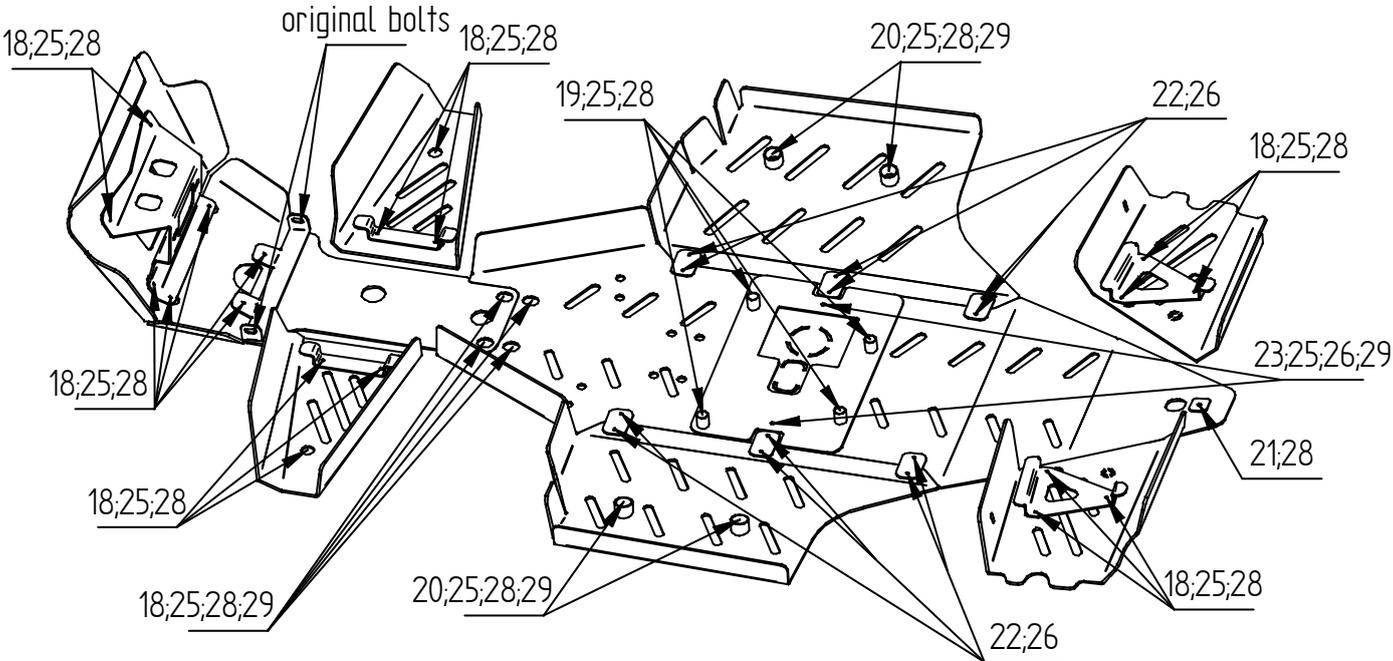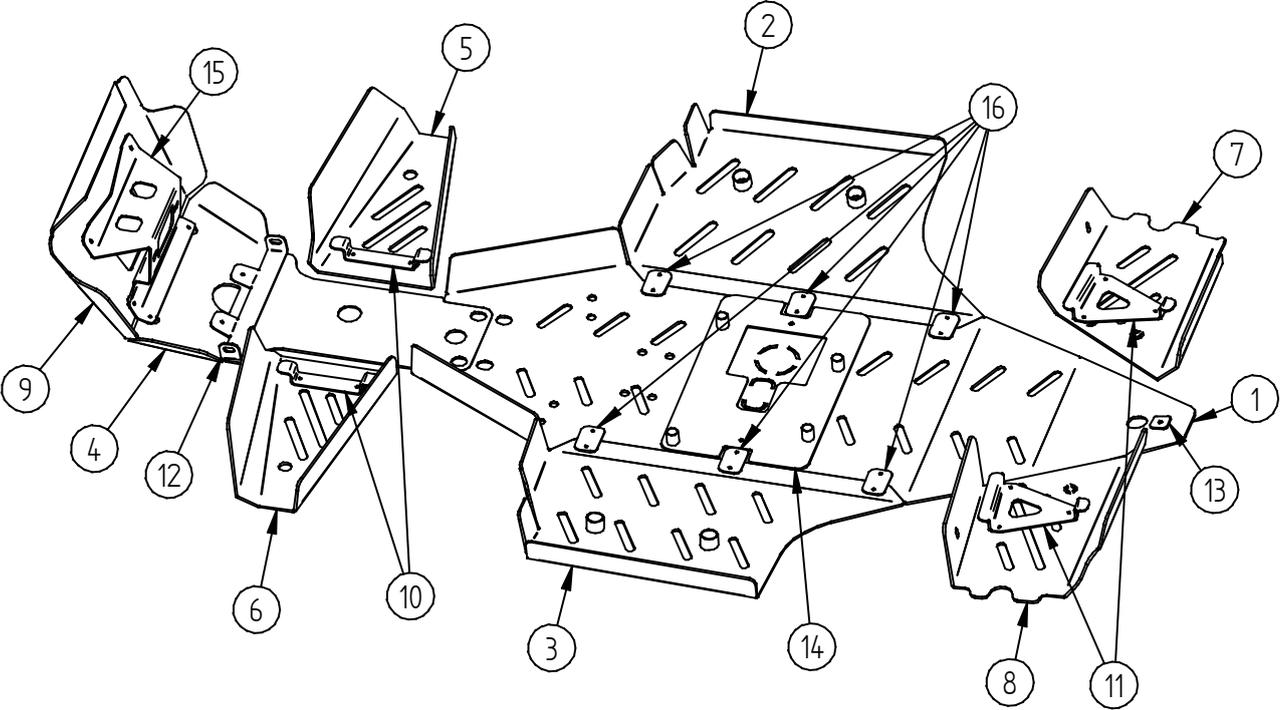


FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers.




Step 2 Install bracket 02.1549, use original bolts.

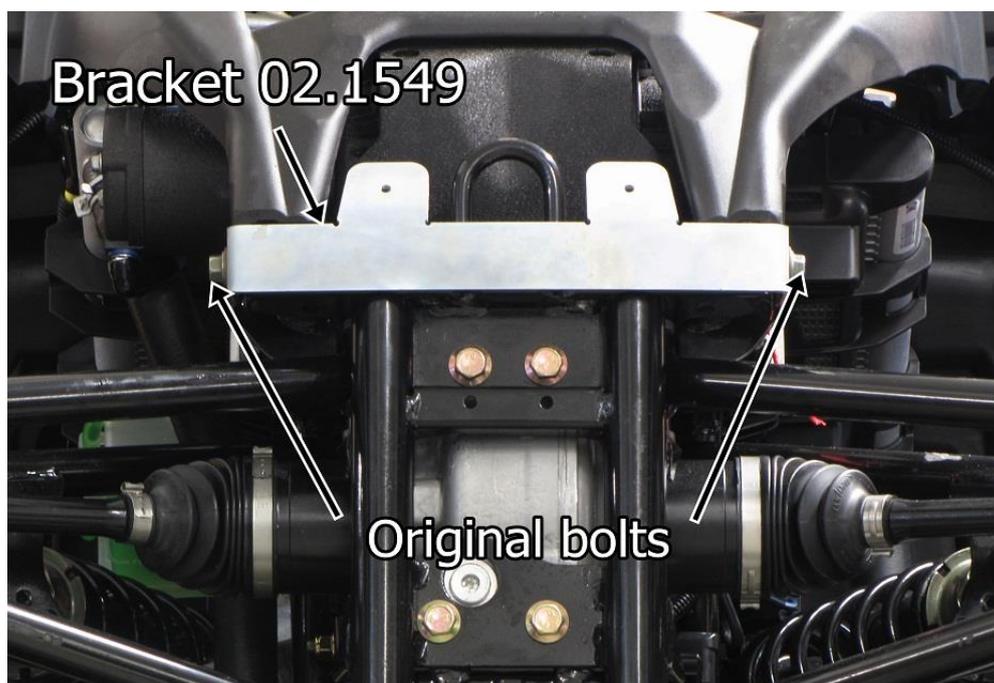


Step 3

Install bracket 02.1550, use original bolts and nuts.

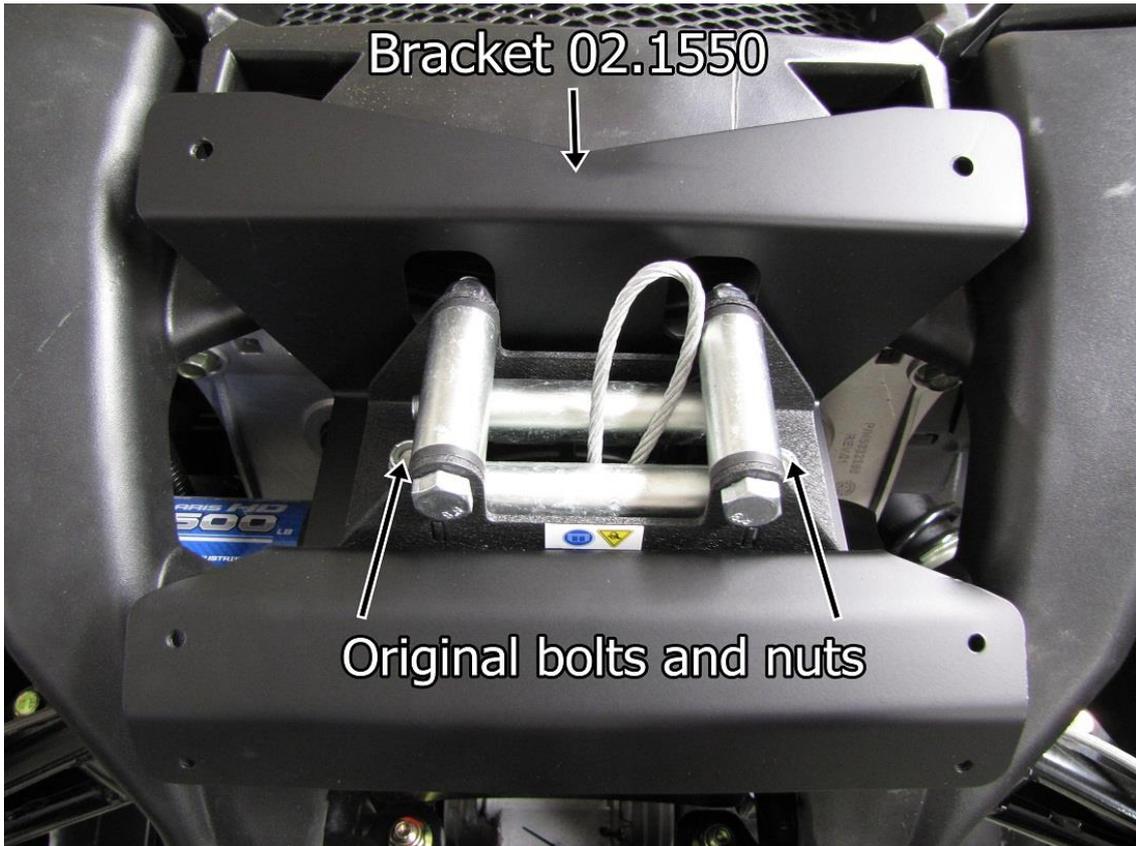


Step 4


Install plate 02.1551K to middle protection.

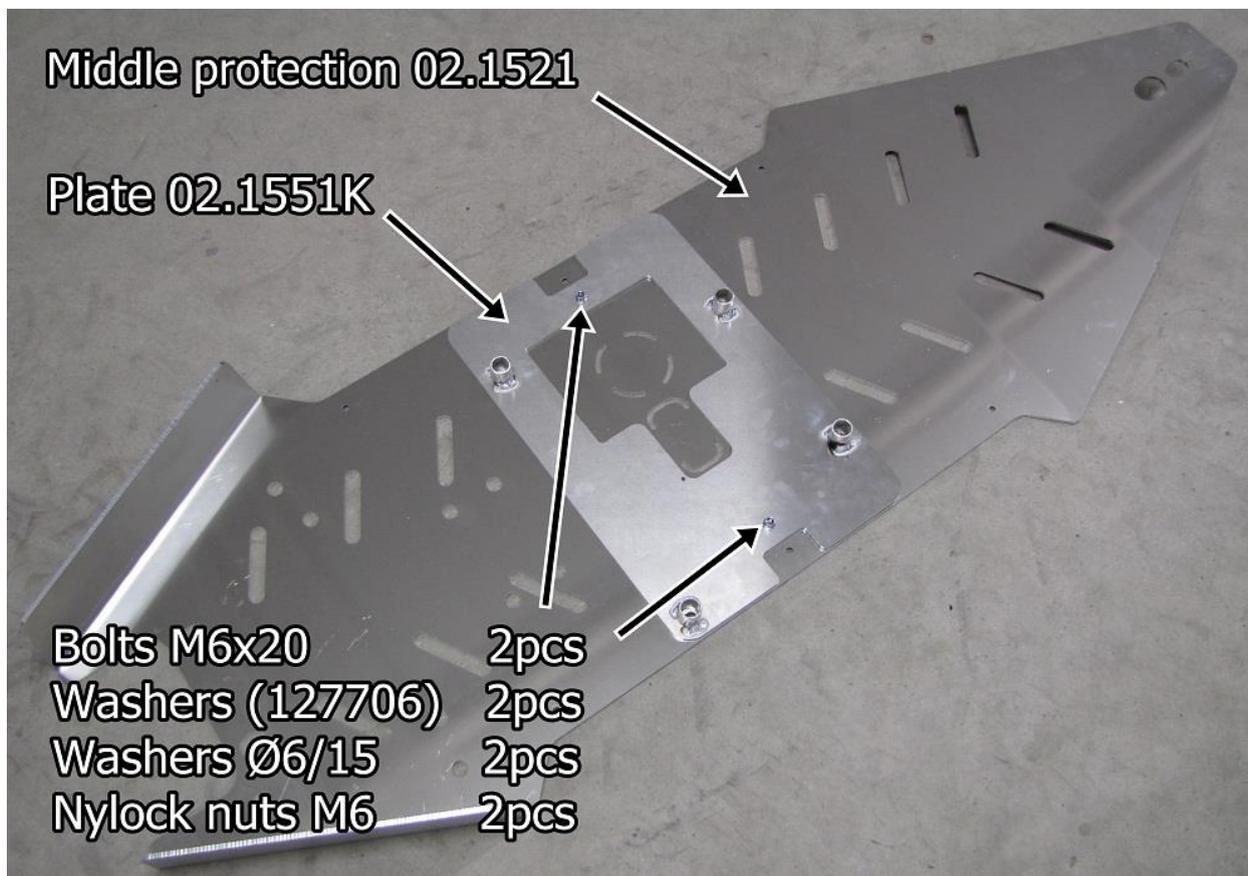


Step 5 Install middle protection 02.1521.

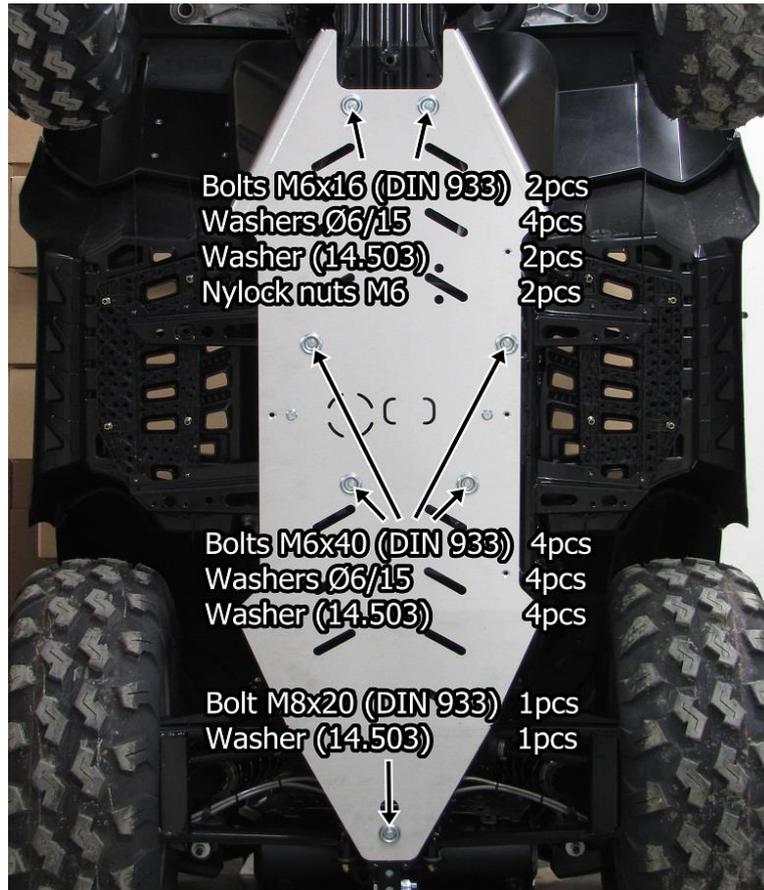


Step 6 Install plates 02.5006 to middle protection.

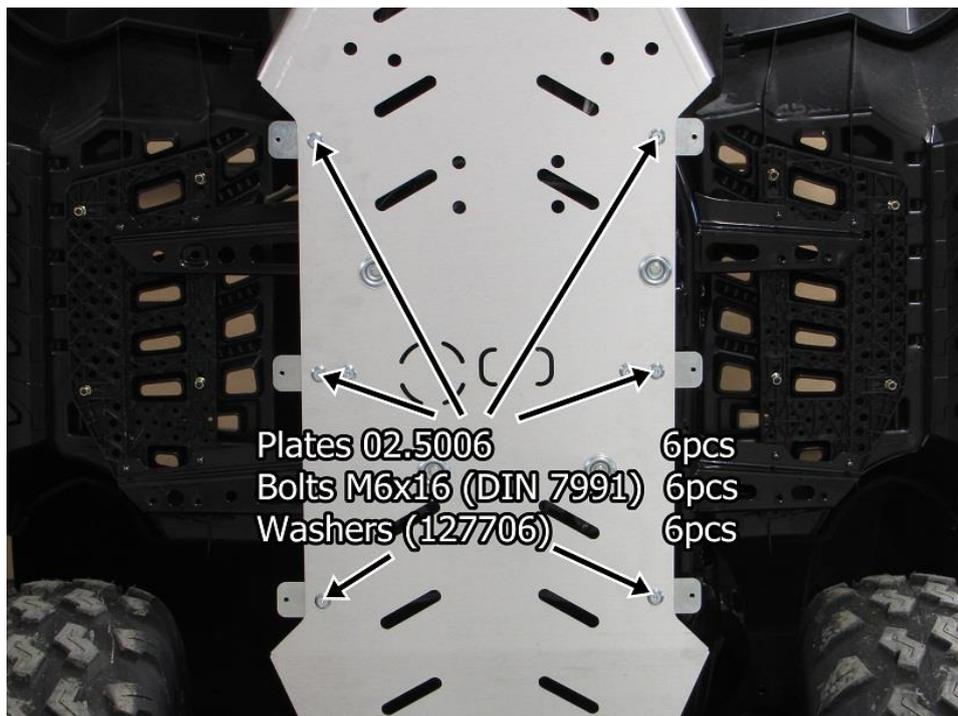


Step 7 Install side protections 02.15211K and 02.15222K.

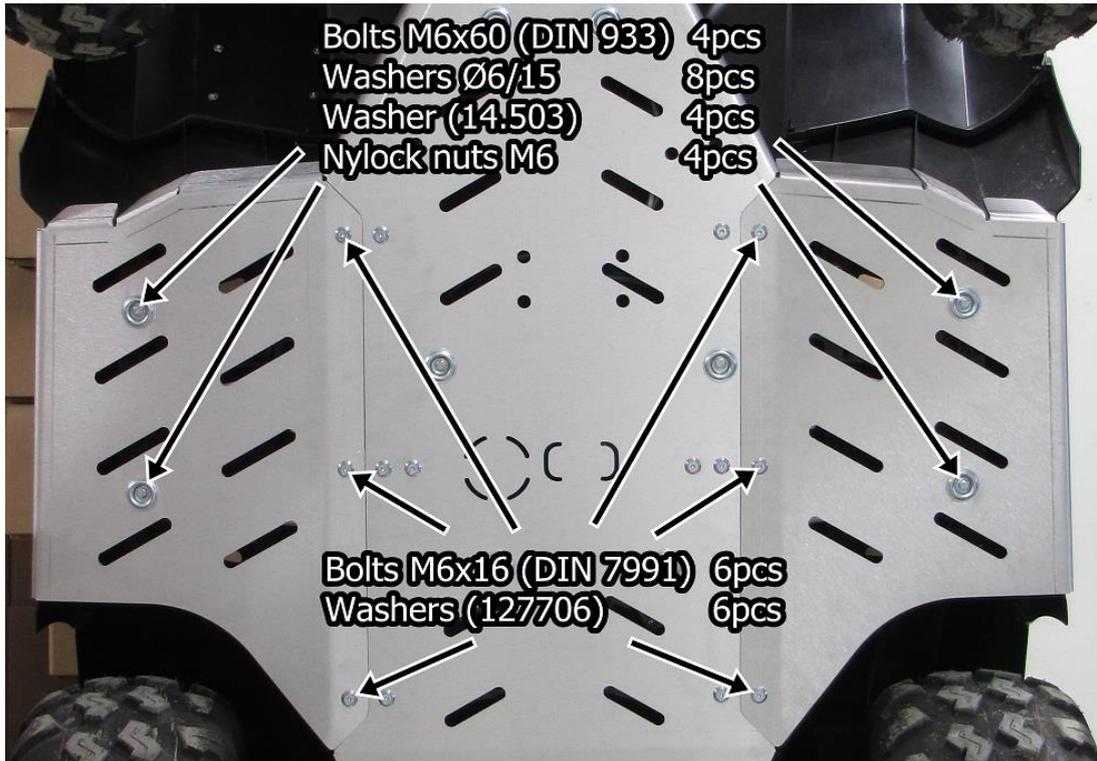


Step 8 Install front protection 02.1522.

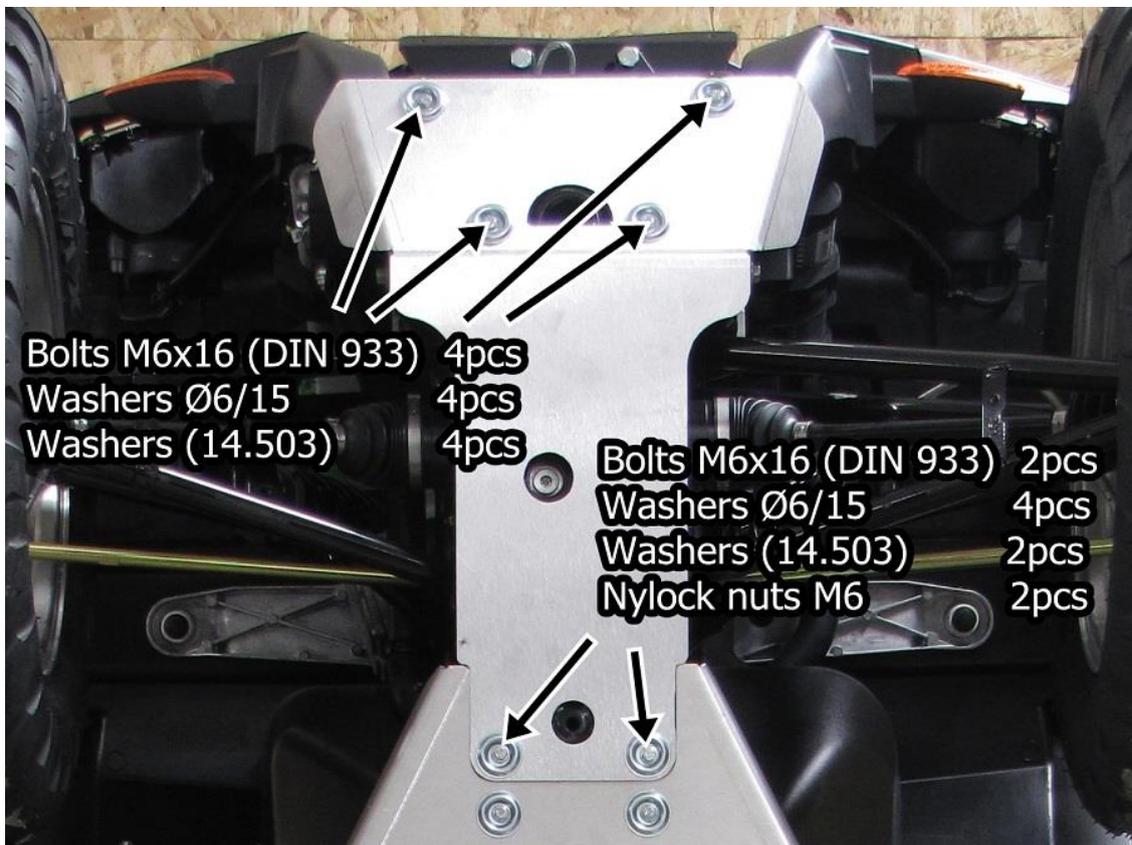

Step 9 Install front upper protection 02.1527.


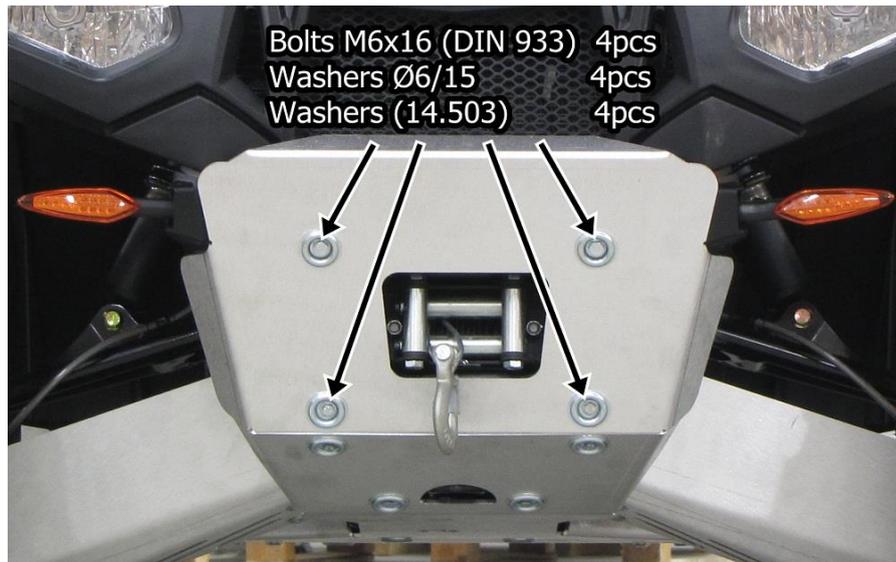


Step 10 Install front arm protections 02.1523, 02.1524, use clamp 02.1528.

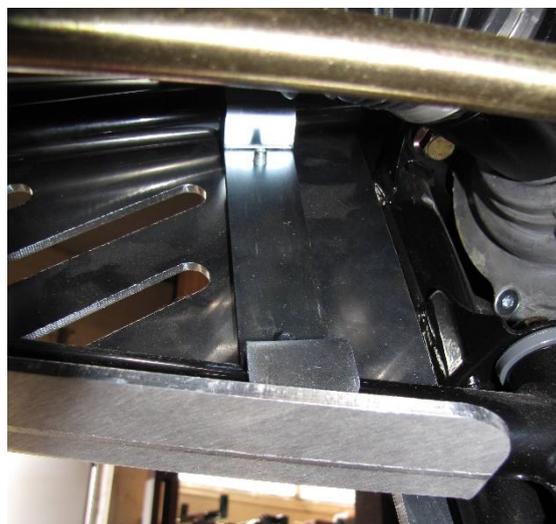

Step 11

Install rear arm protections 02.1525, 02.1526, use clamp 02.1529.

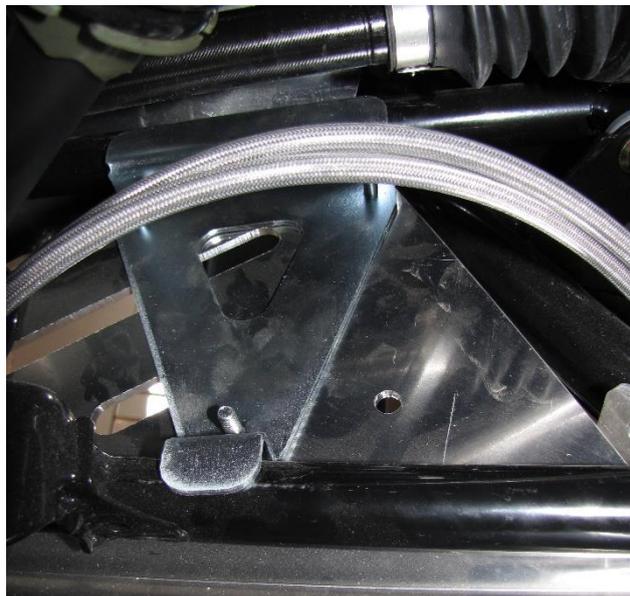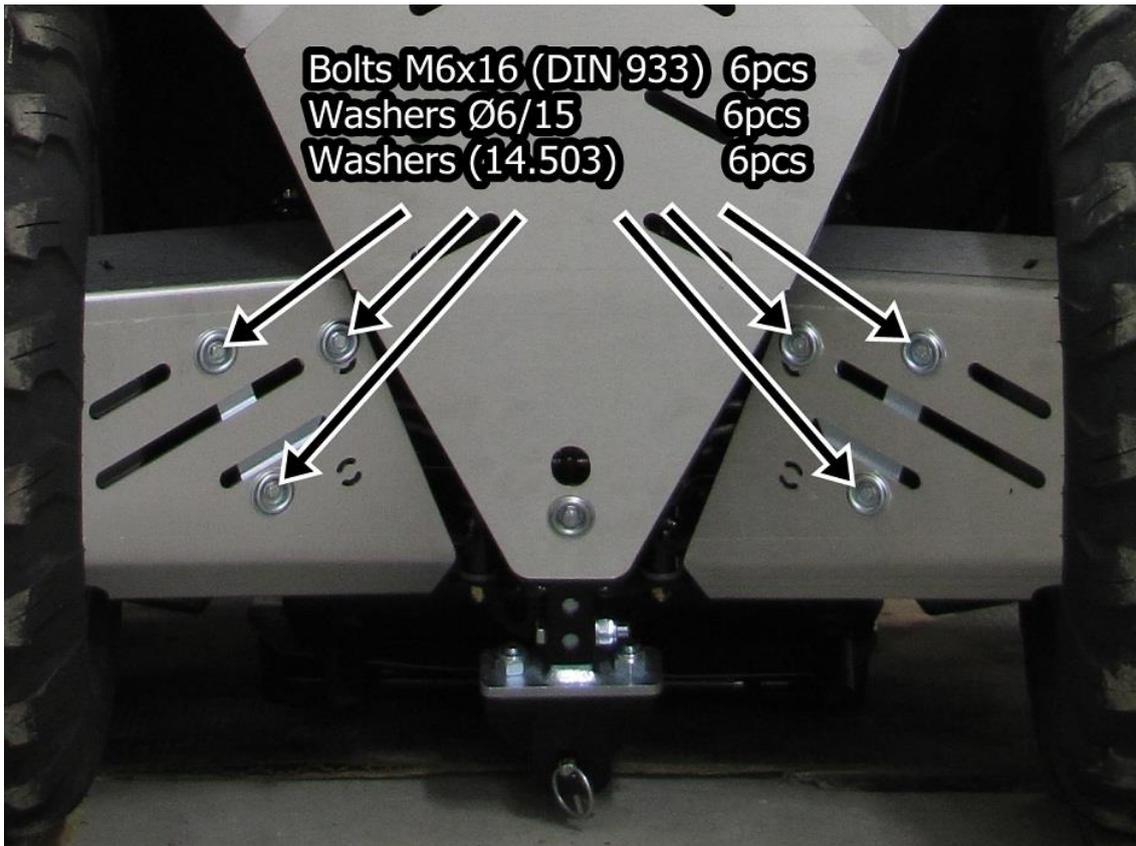

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

