

IRON BALTIC

ALUMINIUM SKID PLATE

DOWNLOAD MULTILINGUAL
USER MANUAL




code.ironbaltic.com/u/7fDoAGvQ

SMC

J-Max 700 L

Code 02.15400

Version 01092023

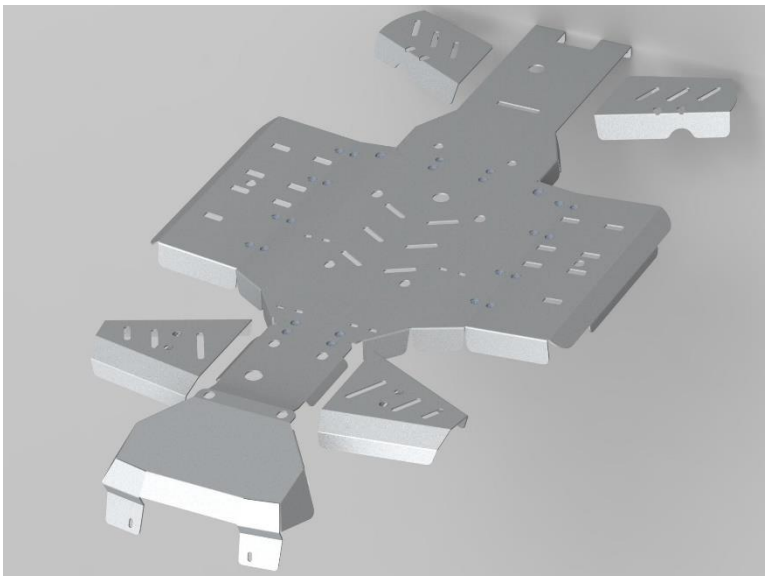



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Front protection	02.15201	1
2	Middle protection	02.15402	1
3	Rear part	02.15403	1
4	Right sideprotection	02.15404	1
5	Left sideprotection	02.15405	1
6	Front left arm protection	02.15206	1
7	Front right arm protection	02.15207	1
8	Rear left arm protection	02.15208	1
9	Rear right arm protection	02.15209	1
10	Front arm protection bracket	02.15210	2
11	Installation plate	02.5006	4
12	Installation plate	02.8312	8
13	Bracket	03.1502	2
14	Installation bracket	02.5709	2
15	Dished washer	14.503	46
16	Bolt M6x12 DIN 933	OT.02.02.030	20
17	Bolt M6x14 DIN 933	OT.02.02.040	8
18	Bolt M6x20 DIN 933	OT.02.02.060	4
19	Bolt M6x25 DIN 933	OT.02.02.070	8
20	Bolt M6x30 DIN 933	OT.02.02.080	2
21	Bolt M6x55 DIN 933	OT.02.02.130	2
22	Bolt M8x16 DIN 933	OT.02.02.170	2
23	Bolt M6x20 DIN 7991	OT.02.04.030	2
24	Bolt M6x25 DIN 7991	OT.02.04.040	2
25	Bolt M8x20 DIN 7991	OT.02.04.150	2
26	Conical washer Ø6	14.502	4
27	Conical washer Ø8	14.501	2
28	Washer Ø6/15 SFS 3738	OT.04.03.020	48
29	Big washer Ø6/18 DIN 9021	OT.04.02.020	2
30	Nyloc nut M6 DIN 985	OT.03.02.030	6

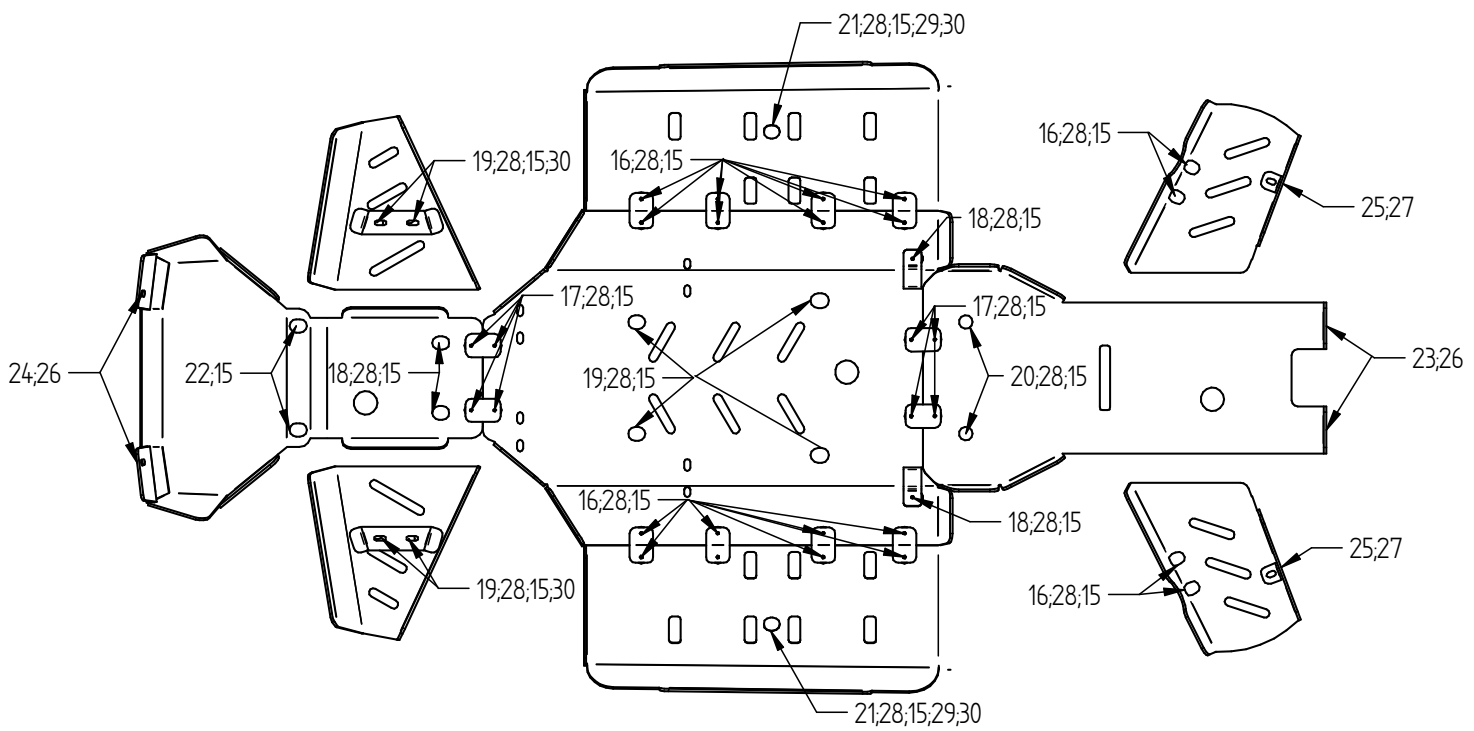
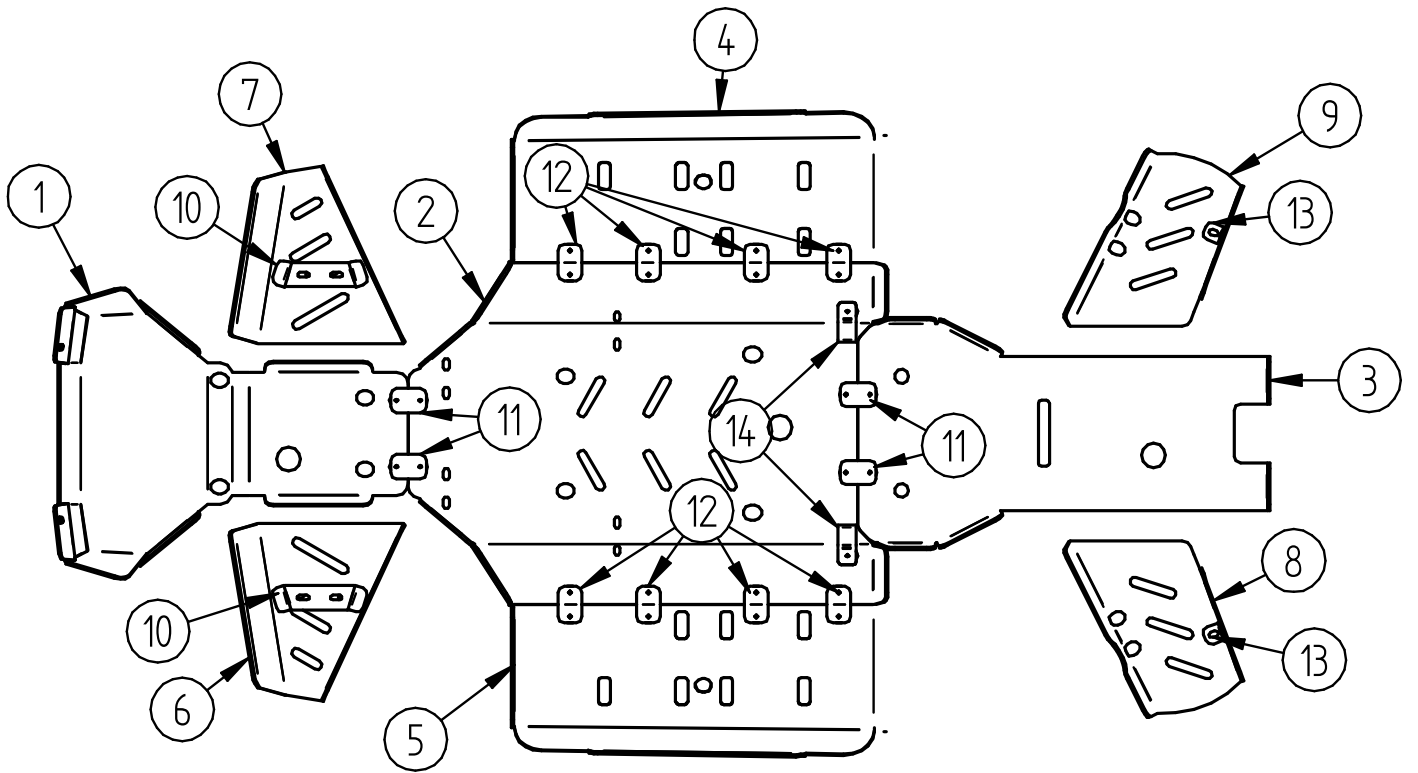


FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers.




Step 2 Remove all standard plastic covers.

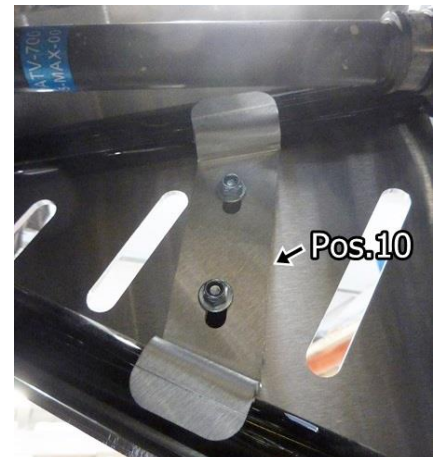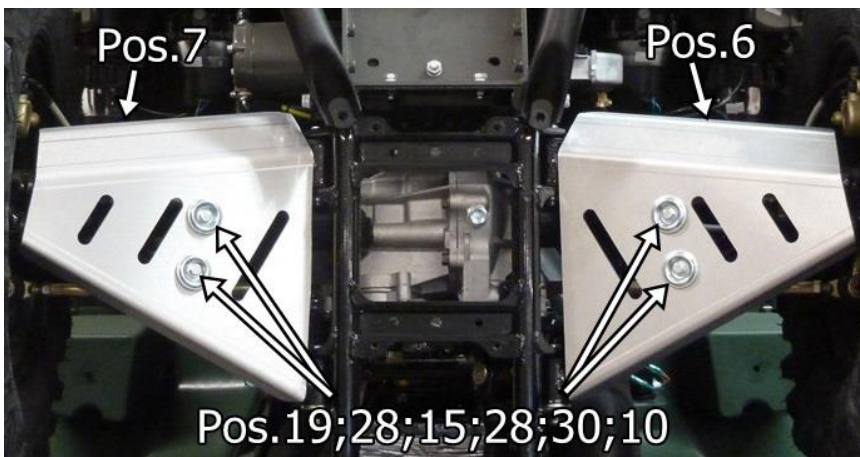



Step 3

Install rear arm protections 02.15208 and 02.15209.

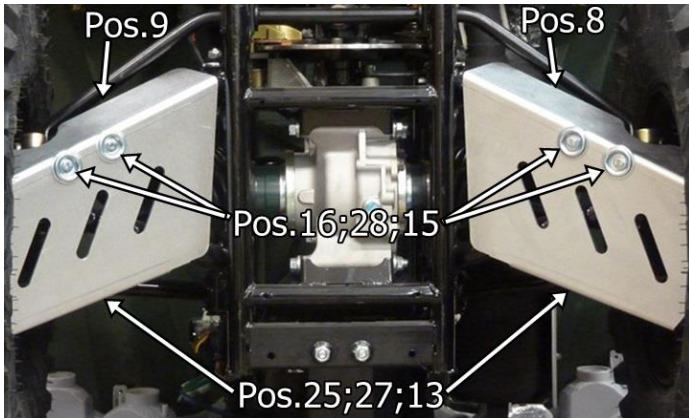


Step 4


Install front protection 02.15201 and plates 02.5006. If ATV is fitted with bumper, then use M8x16 bolt without the dished washer.

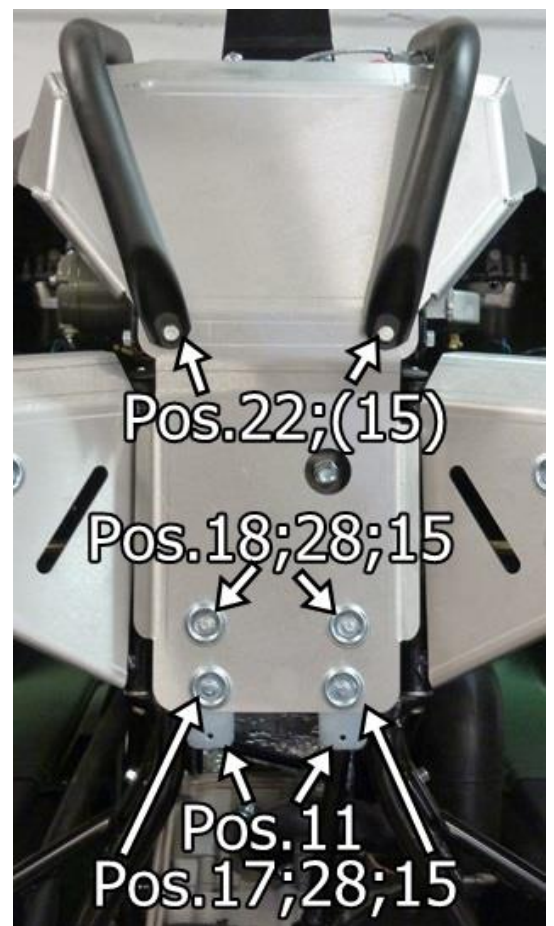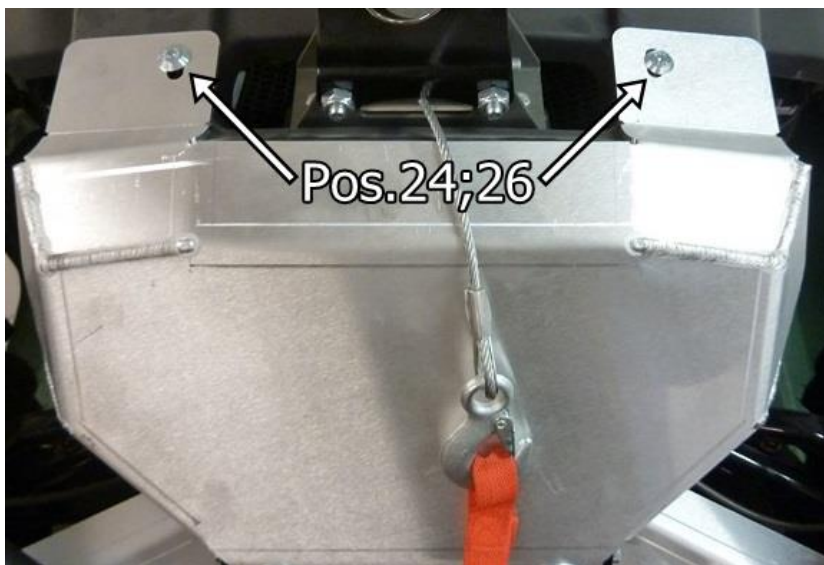

Step 5 Install middle protection 02.15402.

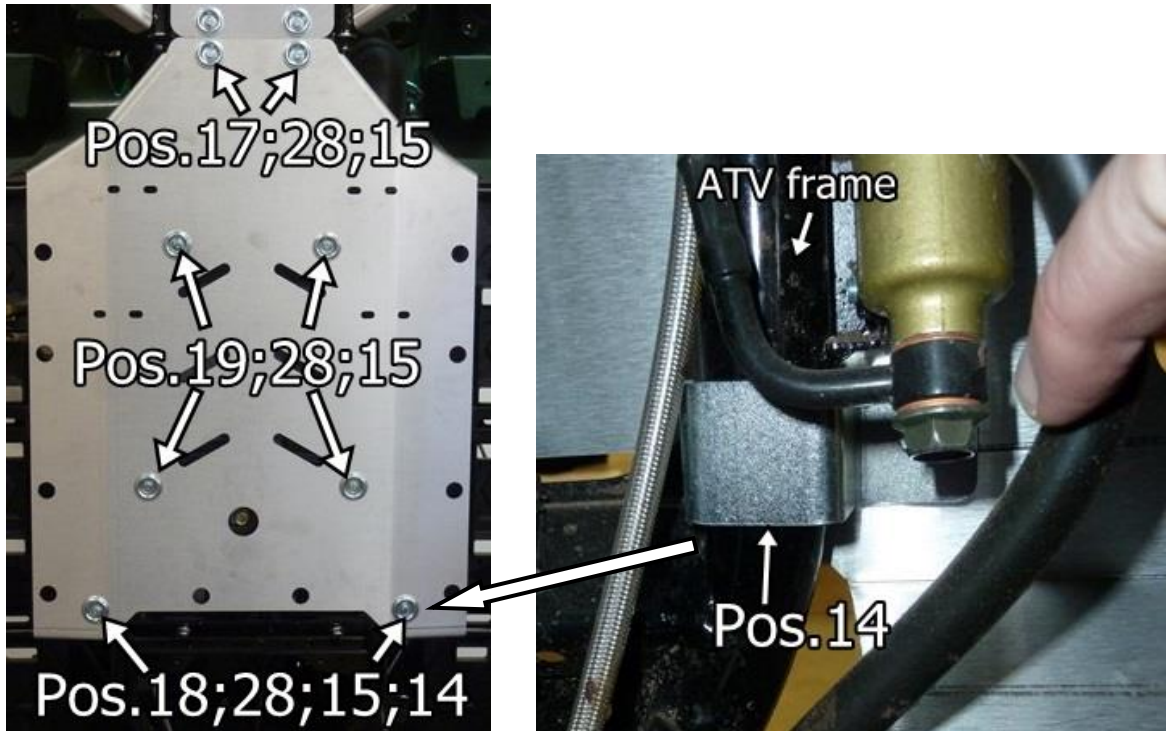

Step 6 Install plates 02.5006 and 02.8312 to the middle protection.

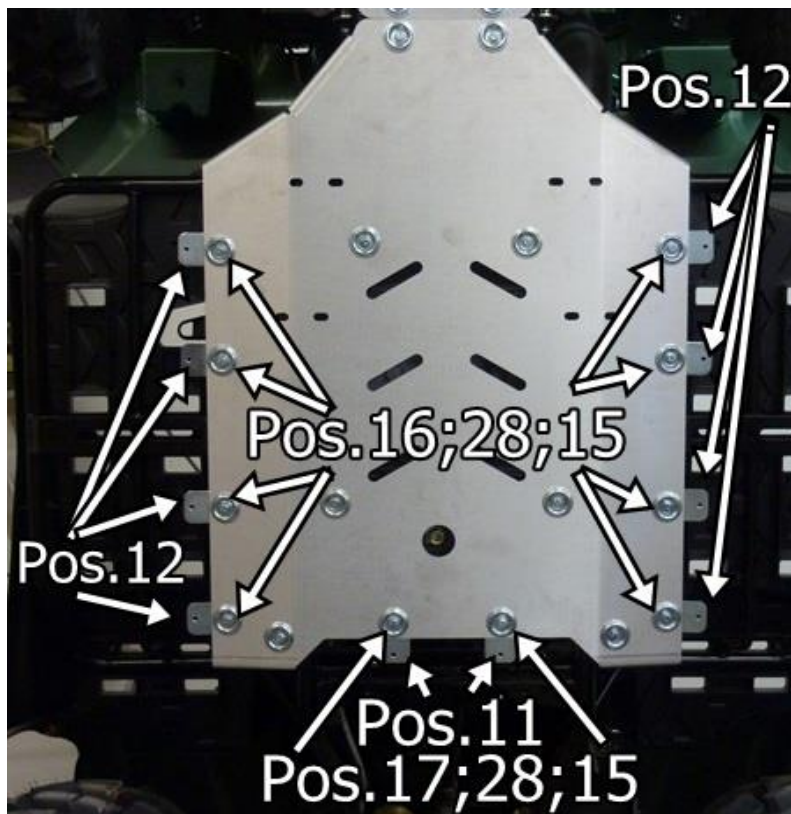


Step 7

Install rear protection 02.15403.



Step 8

Install side protections 02.15404 and 02.15405.

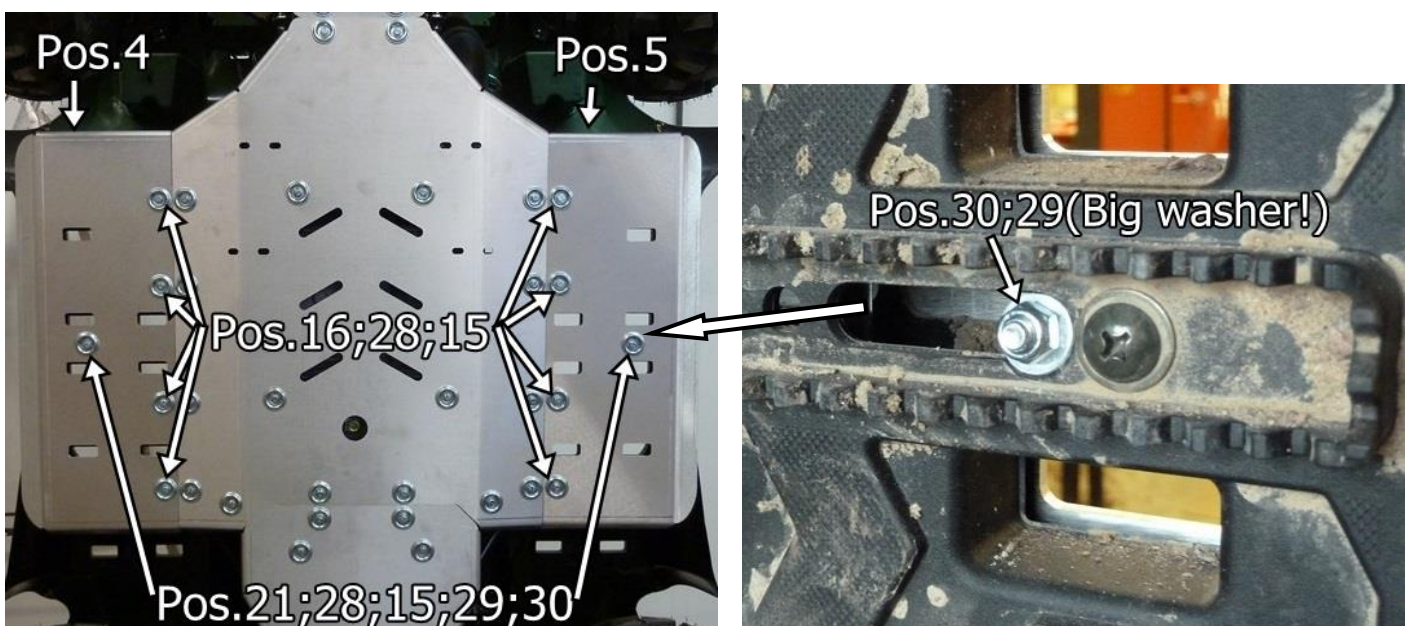

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

