

IRON BALTIC

ALUMINIUM SKID PLATE

DOWNLOAD MULTILINGUAL
USER MANUAL




code.ironbaltic.com/u/s4NhYHLY

CAN AM

G2 Outlander 450 / 570

Code 02.15800

Version 01092023


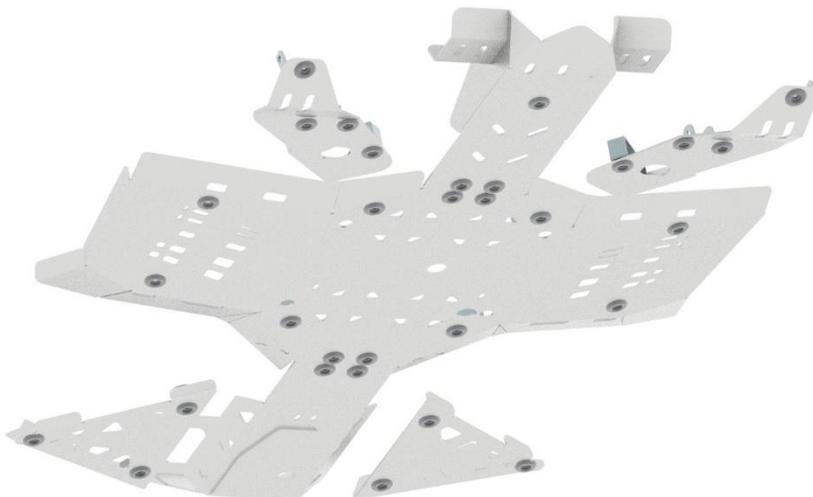


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com


SPECIFICATION

Pos.	Description	Code	Amount
1	Front part	02.15801K	1
2	Rear part	02.8203K	1
3	Middle part	02.8401K	1
4	Front right arm protection	02.8204	1
5	Front left arm protection	02.8205	1
6	Rear right arm protection	02.18801	1
7	Rear left arm protection	02.18802	1
8	Plate	02.2305	1
9	Plate	02.5006	4
10	Clamp for front arm protection	02.8210	4
11	Rear arm bracket	02.18803	2
12	Angle	02.18804	2
13	Angle (80)	02.18805	2
14	Angle (100)	02.18806	2
15	Bracket	03.3502	4
16	Dished washer	14.503	31
17	Bolt M6x12 DIN 933	OT.02.02.030	10
18	Bolt M6x16 DIN 933	OT.02.02.050	4
19	Bolt M6x20 DIN 933	OT.02.02.060	2
20	Bolt M6x35 DIN 933	OT.02.02.090	2
21	Bolt M6x50 DIN 933	OT.02.02.120	4
22	Bolt M8x16 DIN 933	OT.02.02.170	10
23	Bolt M8x30 DIN 933	OT.02.02.200	1
24	Bolt M10x30 DIN 933	OT.02.02.320	2
25	Bolt M8x25 DIN 7991	OT.02.04.160	4
26	Carriage bolt M8x25 DIN 603	OT.02.05.060	8
27	Washer Ø6/15 SFS 3738	OT.04.03.020	28
28	Washer Ø8/20 SFS 3738	OT.04.03.030	12
29	Washer Ø10 DIN 125	OT.04.01.040	4
30	Conical washer Ø8	14.501	4
31	Nyloc nut M6 DIN 985	OT.03.02.030	6
32	Nyloc nut M8 DIN 985	OT.03.02.040	12

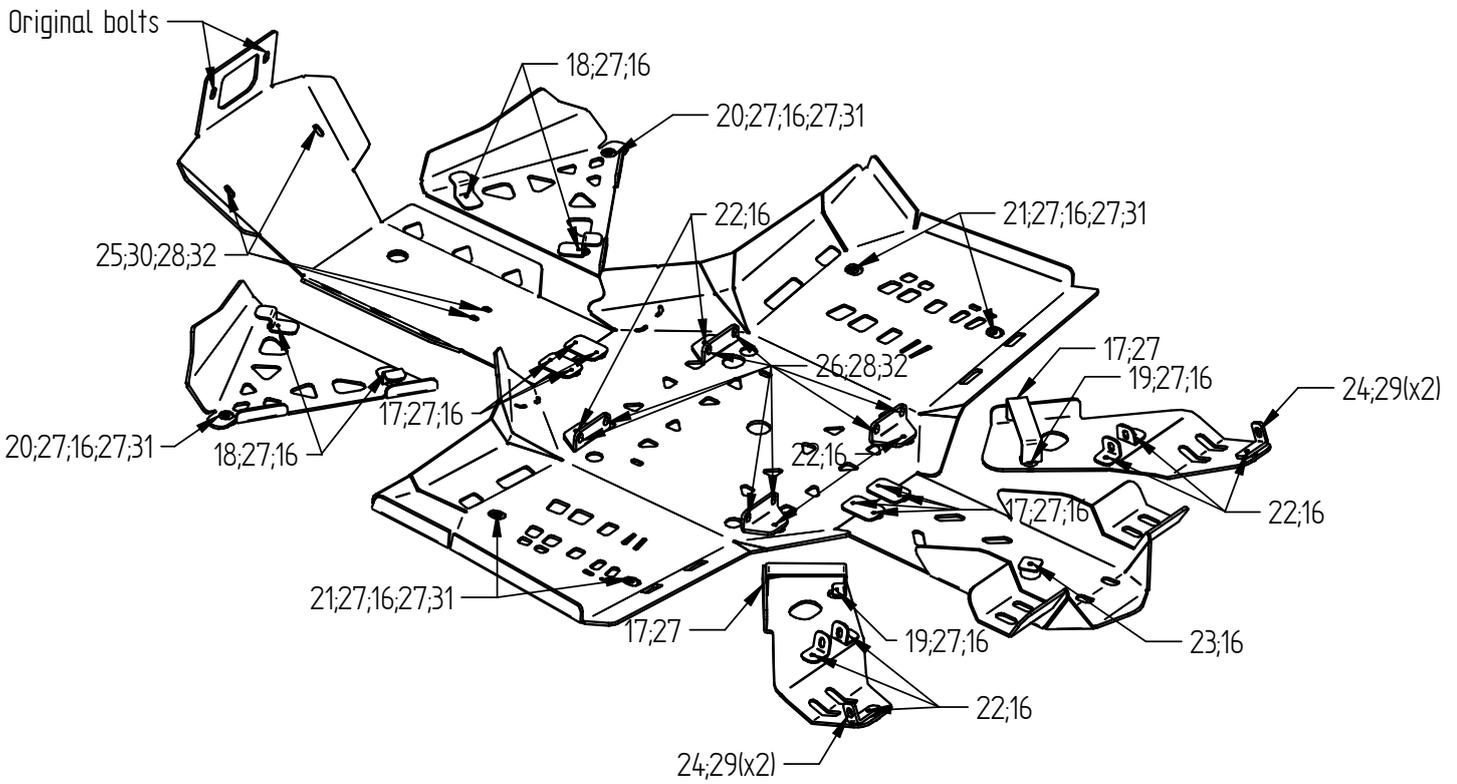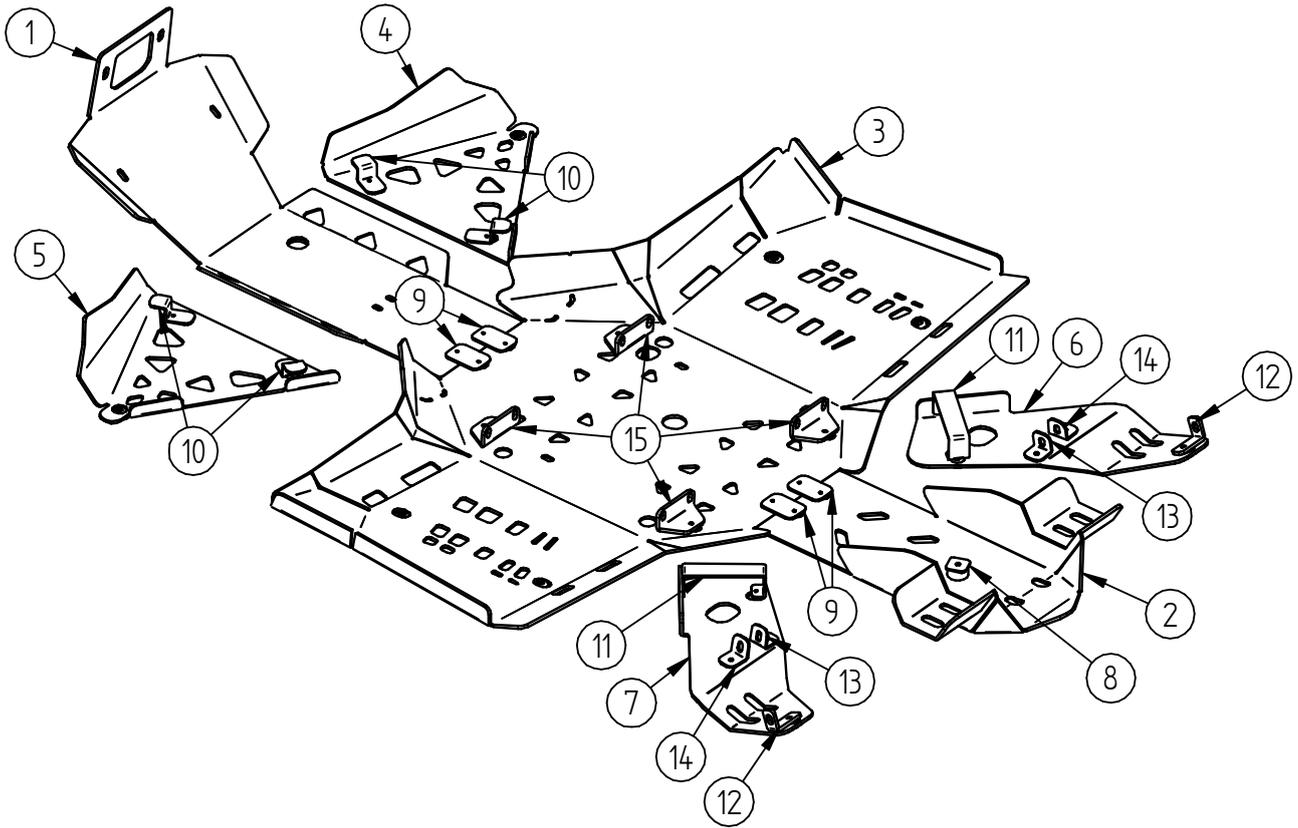



FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers.

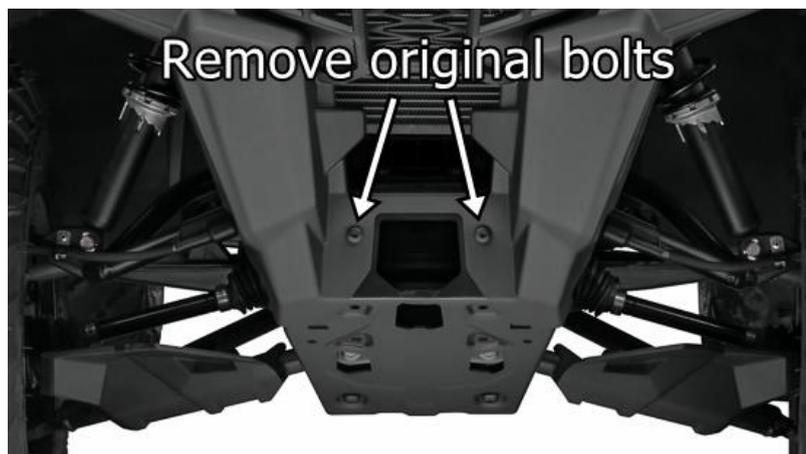


Step 2

Install brackets 03.3502. Adjust brackets level with the frame. If you have two bolts on ATV at the same place where bracket should go then secure the bracket only with one bolt!

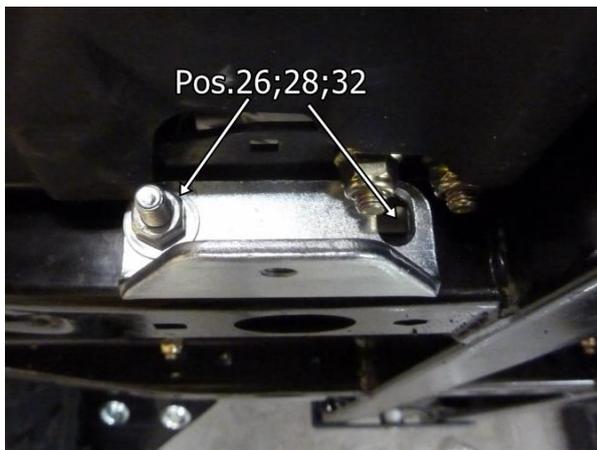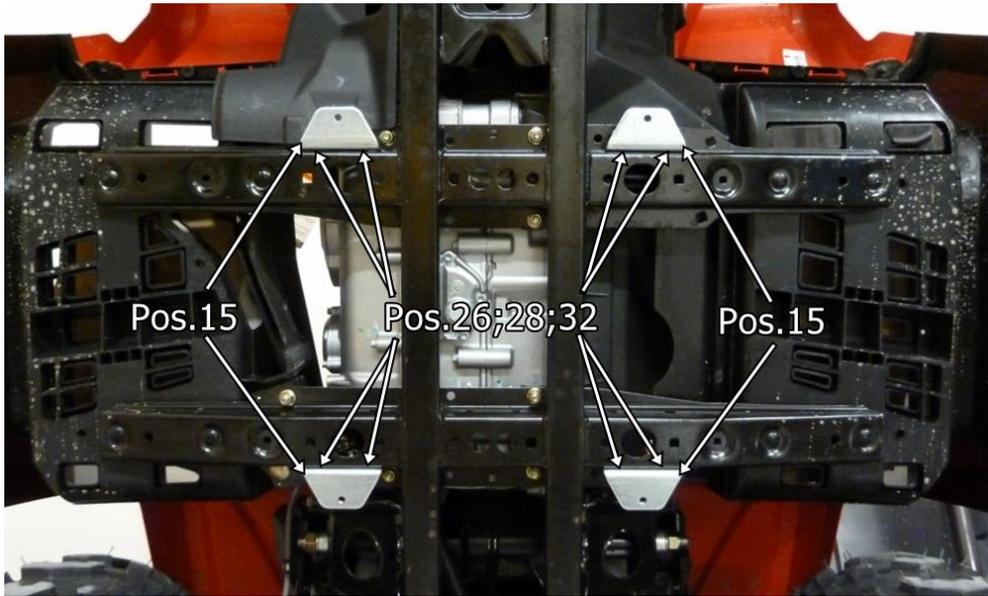



Step 3

Install front arm protectors 02.8204 and 02.8205. If you are using CanAm OE plow mount (P/N 715004338), then do not install front a-arm protectors!

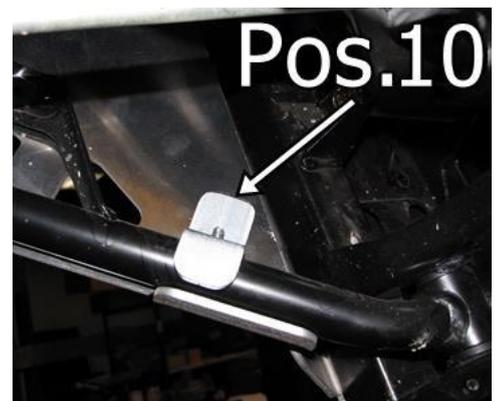


Step 4


Install rear arm protectors 02.18801 and 02.18802. On some models it can be impossible to install Pos.12 bracket. In that case, install the arm protector without Pos.12 bracket!

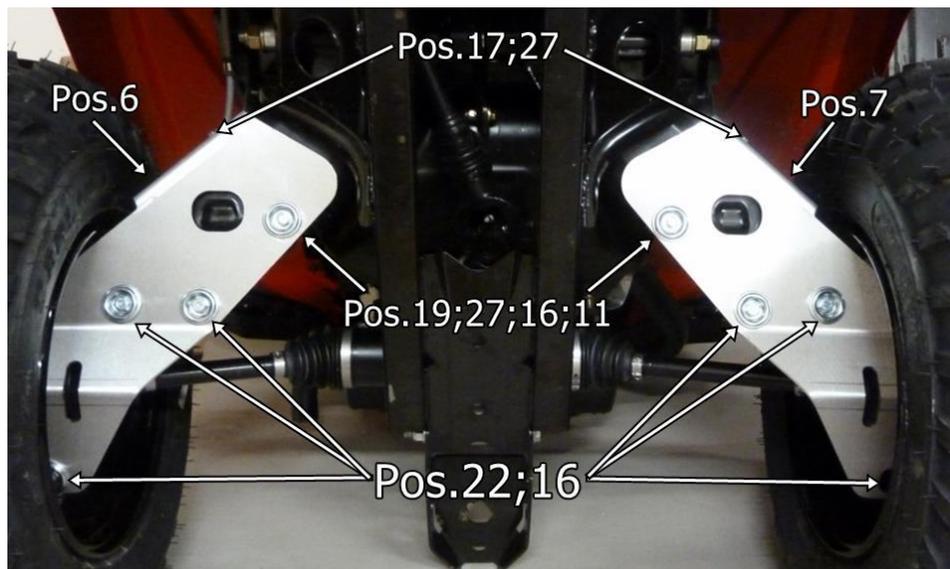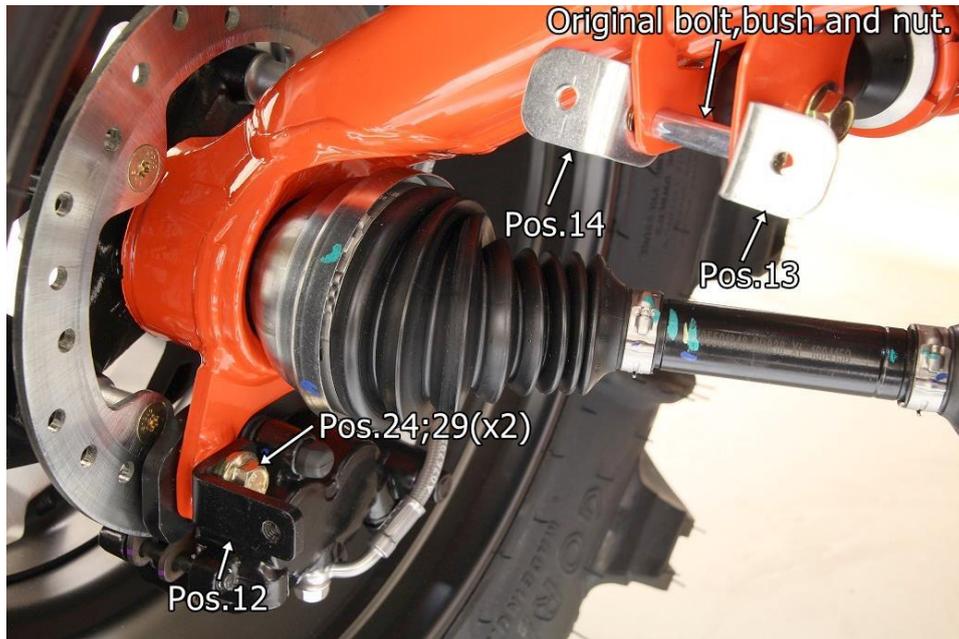

Step 5 Install middle protection 02.8401K.

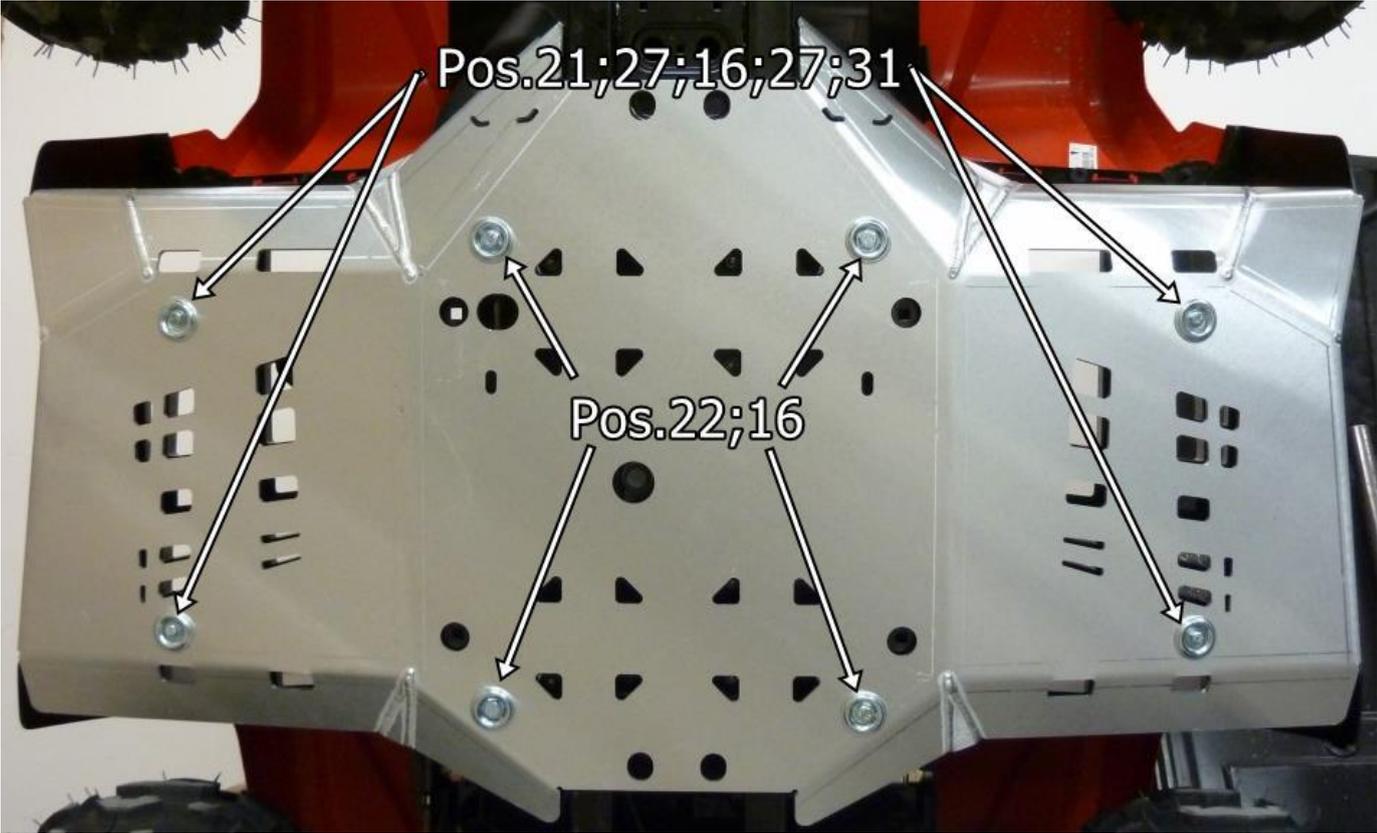


Step 6 Install plates 02.5006 to middle part.


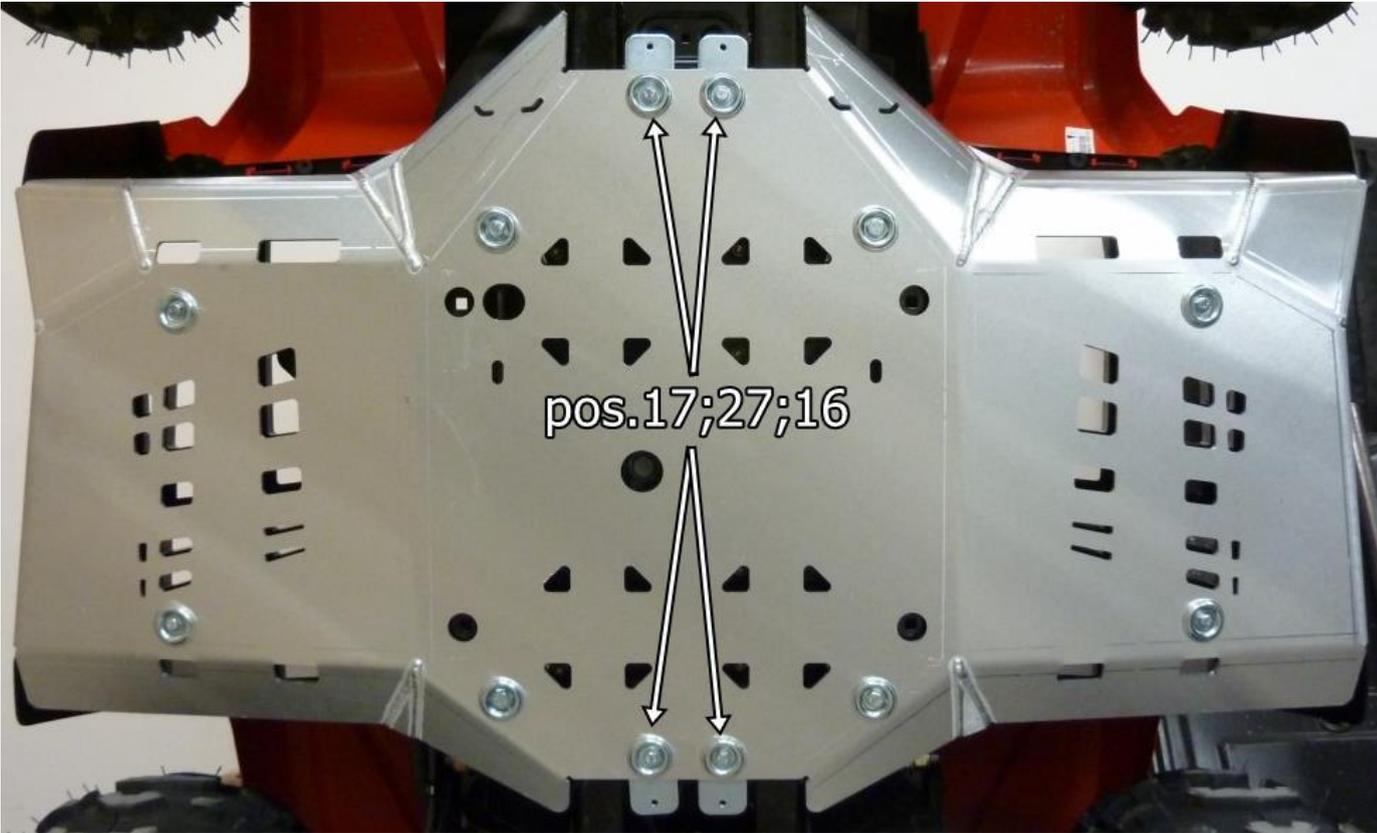


Step 7

Install front part 02.15801K. If you are using CanAm OE mounting plate (P/N 715004338), cut front protection side bends and use plow OE bolts (see Pictures).

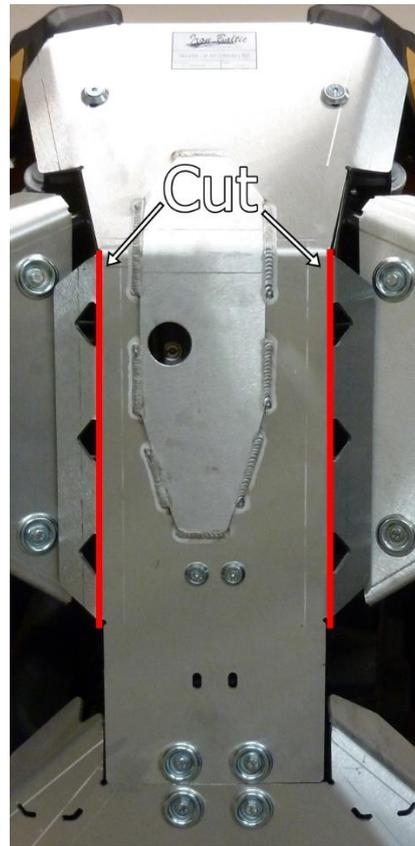

Installation with OE plow mount

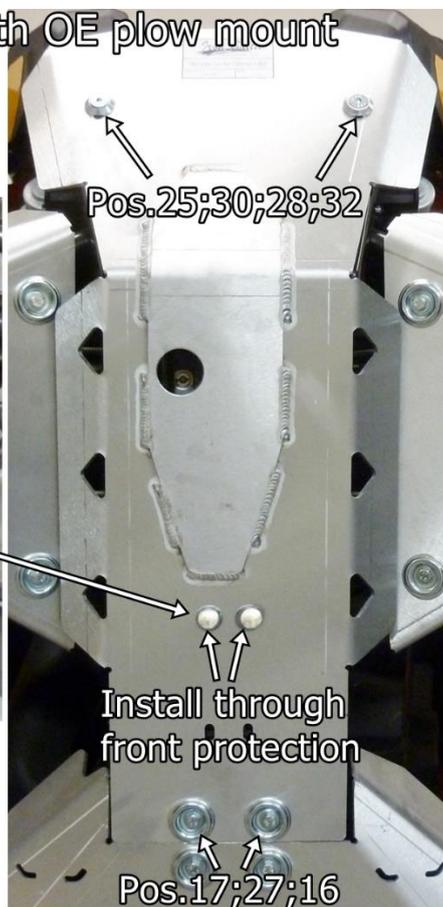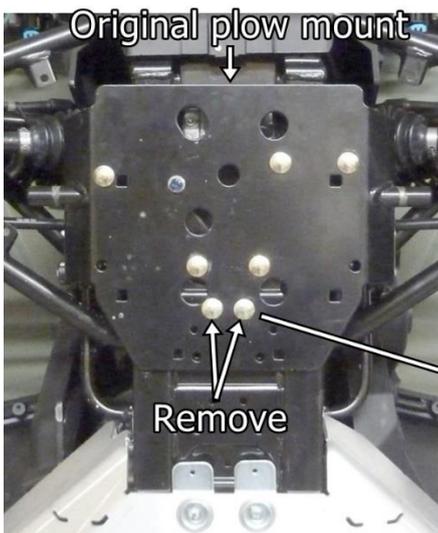

Step 8

Install rear part 02.8203K.



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

