




## PLASTIC SKID PLATE

### CAN AM

### 500 / 650 / 800 Renegade

Code 02.1610

Version 01092023

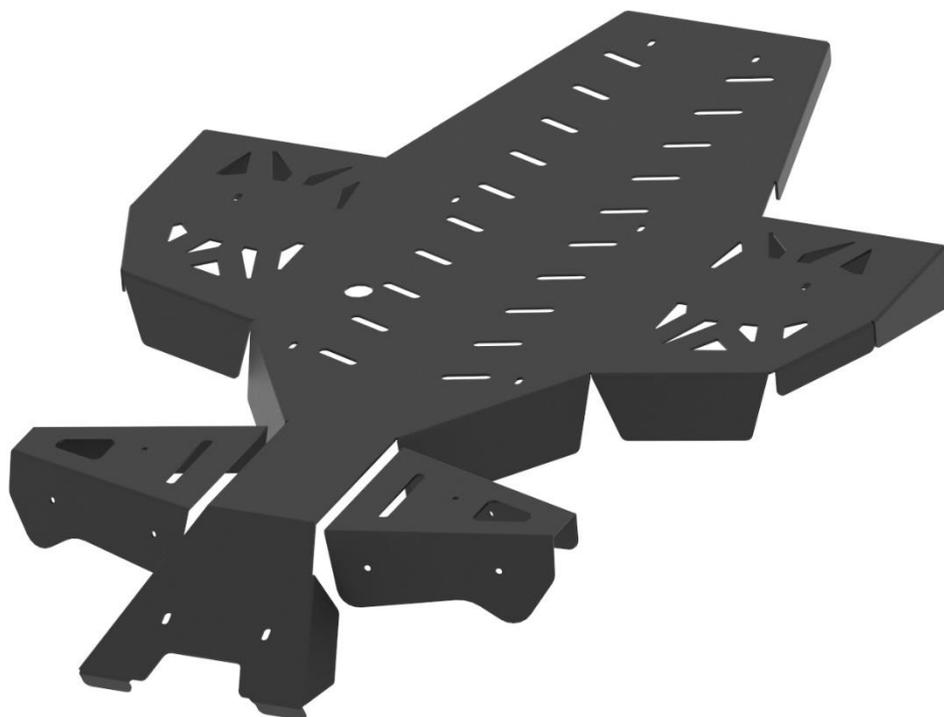


**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Skid plate	02.1611	1
2	Front left arm protection	02.1612V	1
3	Front right arm protection	02.1612P	1
4	Angle	03.1502	14
5	Bolt M5x25 DIN 933	OT.02.02.010	2
6	Bolt M8x25 DIN 7991	OT.02.04.160	14
7	Bolt M6x35 DIN 7991	OT.02.04.060	2
8	Bolt M8x20 DIN 933	OT.02.02.180	2
9	Washer Ø5/15 DIN 9021	OT.04.02.010	4
10	Washer Ø6	14.502	2
11	Washer Ø6/18 DIN 9021	OT.04.02.020	2
12	Washer Ø8	14.501	14
13	Washer Ø8/20 SFS 3738	OT.04.03.030	4
14	Nut M5 DIN 985	OT.03.02.020	2
15	Nut M6 DIN 985	OT.03.02.030	2
16	Nut M8 DIN 985	OT.03.02.040	2

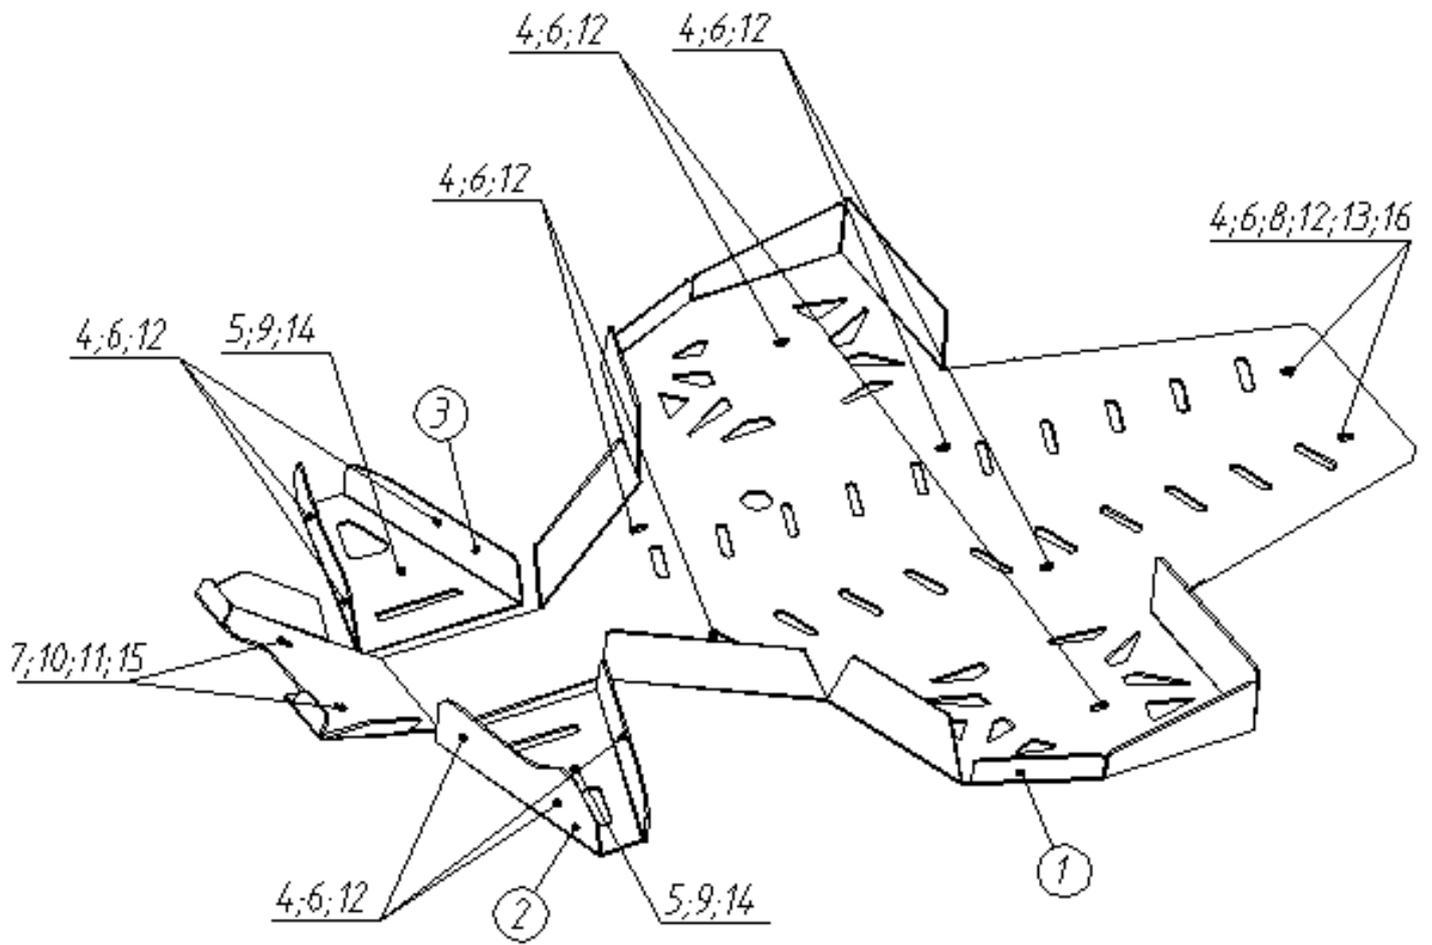

# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

