

IRON BALTIC

PLASTIC SKID PLATE

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/f7UupsQi

HONDA

TRX 680 (2015)

Code 02.16300



Version 04092023

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Rear right arm protection	02.16301	1
2	Rear left arm protection	02.16302	1
3	Skid plate	02.1111K	1
4	Front protection	02.1112	1
5	Front left arm protection	02.1115	1
6	Front right arm protection	02.1116	1
7	Clamp	02.906	1
8	Bracket	02.1018	2
9	Installation bracket	02.8210	2
10	Dished washer	14.503	18
11	Bolt M6x25 DIN 933	OT.02.02.070	4
12	Bolt M6x40 DIN 933	OT.02.02.100	4
13	Bolt M6x50 DIN 933	OT.02.02.120	2
14	Bolt M8x16 DIN 933	OT.02.02.170	2
15	Bolt M8x25 DIN 933	OT.02.02.190	8
16	Bolt M8x40 DIN 933	OT.02.02.220	4
17	Bolt M8x60 DIN 933	OT.02.02.250	2
18	Bolt M8x80 DIN 933	OT.02.02.270	2
19	Bolt M6x30 DIN 7991	OT.02.04.050	4
20	Washer Ø 6/15 SFS 3738	OT.04.03.020	16
21	Washer Ø 8/20 SFS 3738	OT.04.03.030	12
22	Washer Ø 8/24 DIN 9021	OT.04.02.040	2
23	Conical washer Ø6	14.502	4
24	Nyloc nut M6 DIN 985	OT.03.02.030	6
25	Nyloc nut M8 DIN 985	OT.03.02.040	6

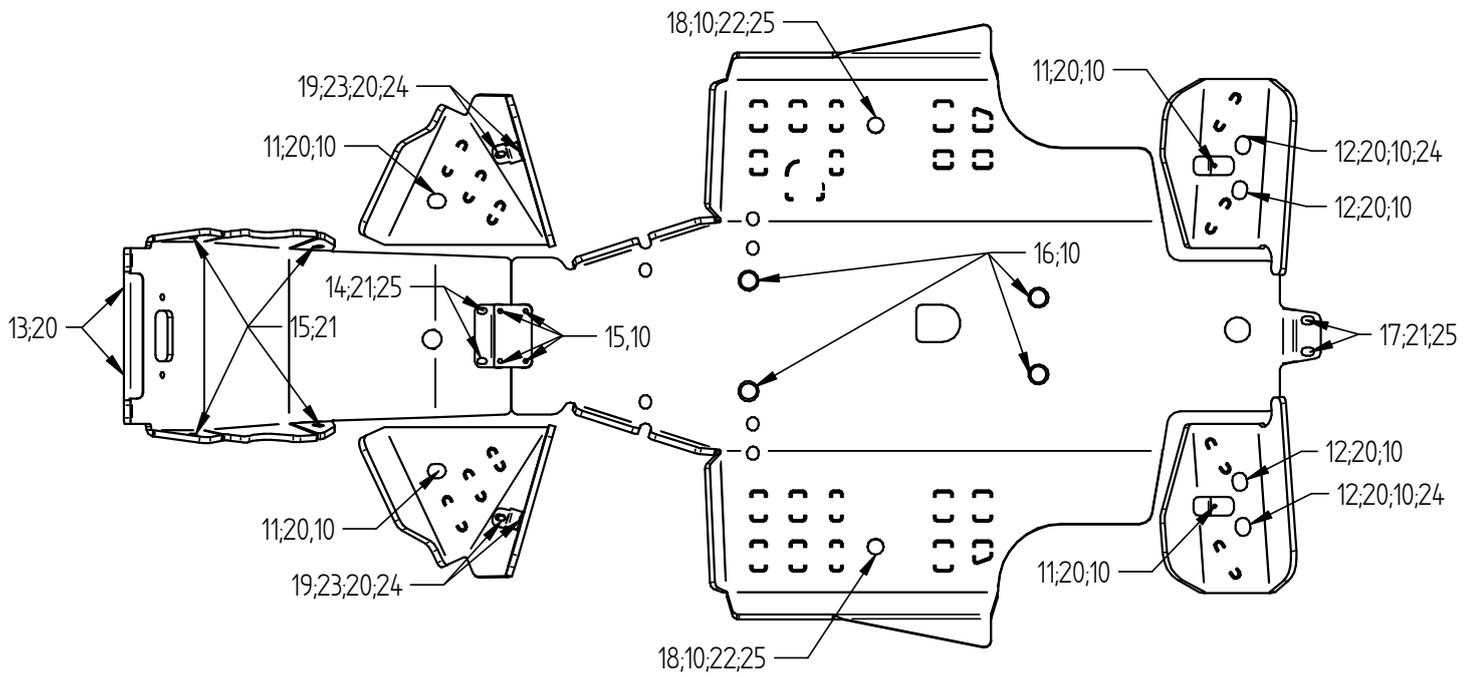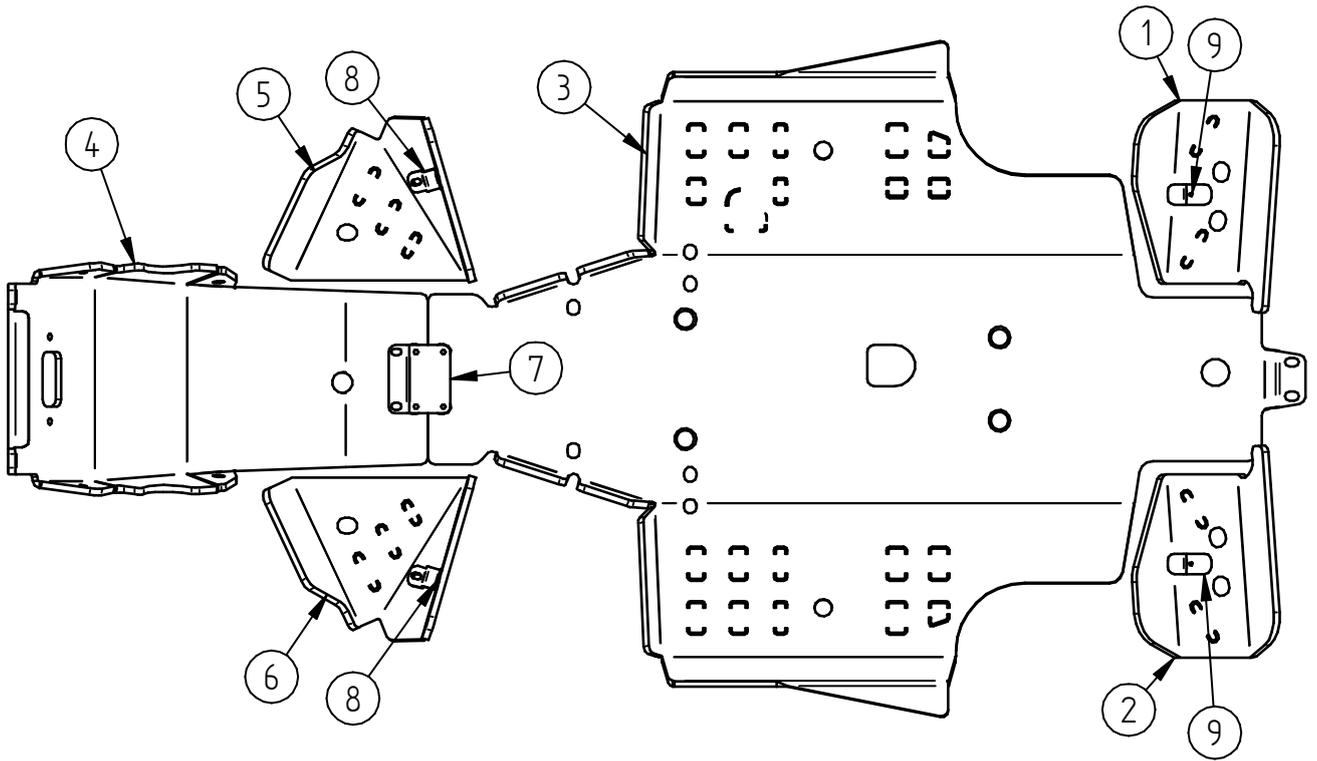


FITTING INSTRUCTIONS

Step 1 Remove all standard covers and hitch ball extender.




Step 2 Install clamp 02.906.

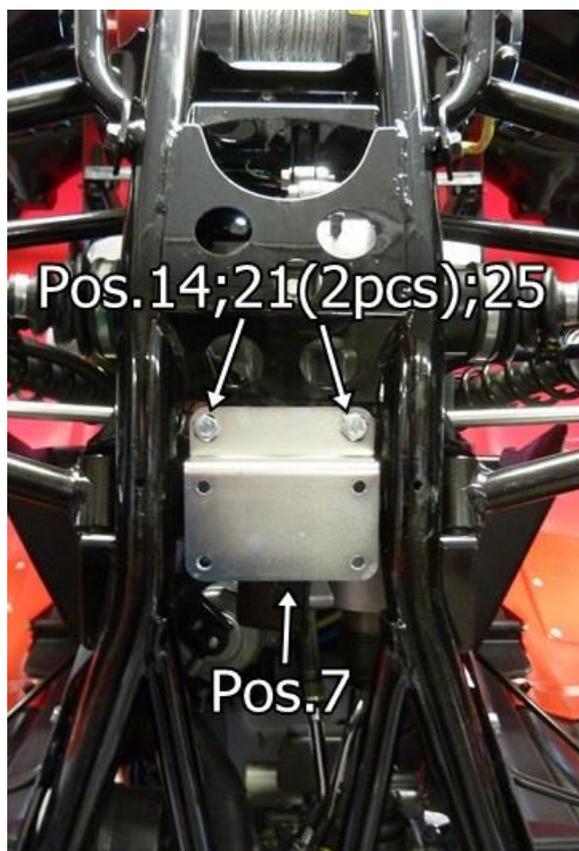


Step 3

Install skid plate, 02.1111K. Reinstall hitch ball extender.

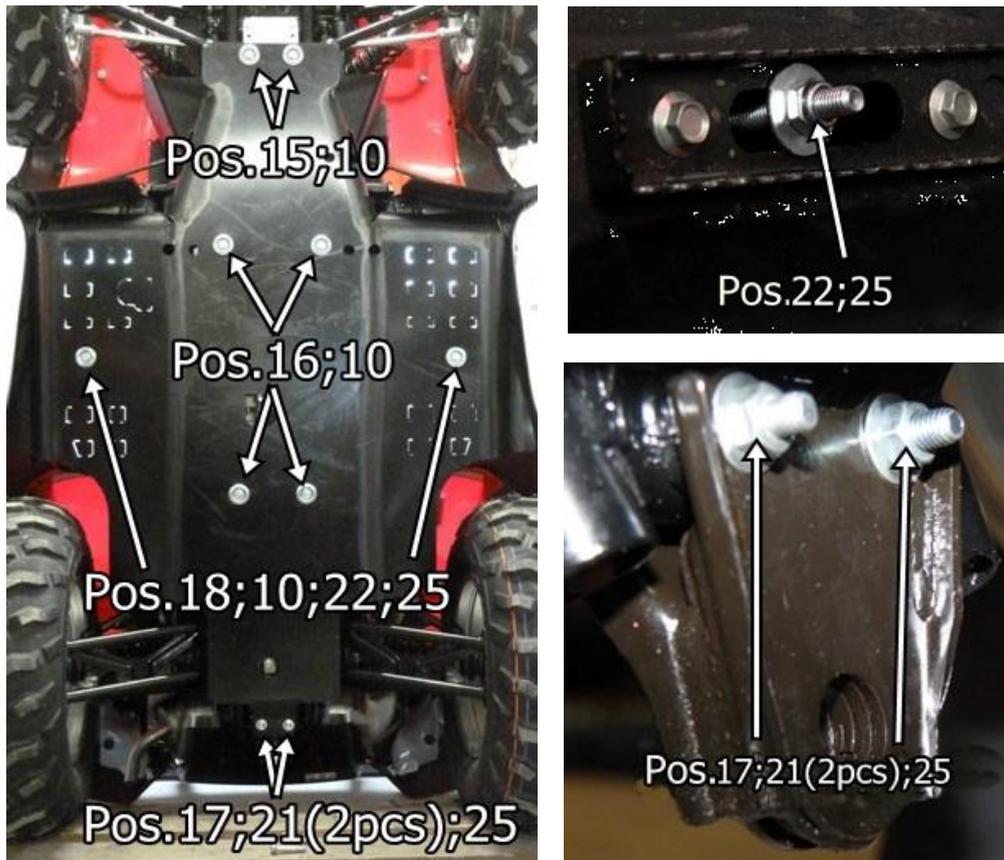


Step 4


Install front part, 02.1112. If you are using plow mount 03.7500 then you do not have to use bottom Pos.15;21 bolts!

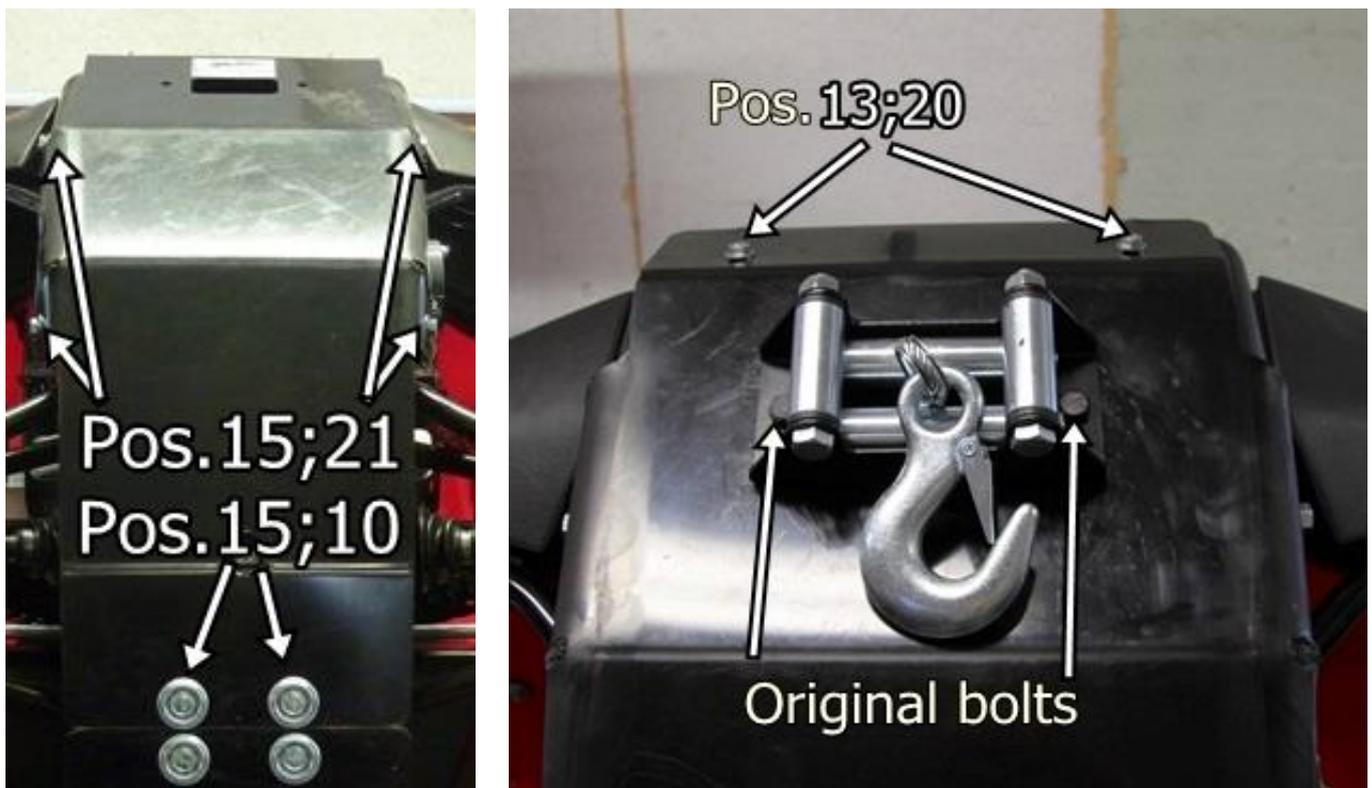

Step 5 Install rear arm protections, 02.16301 and 02.16302.

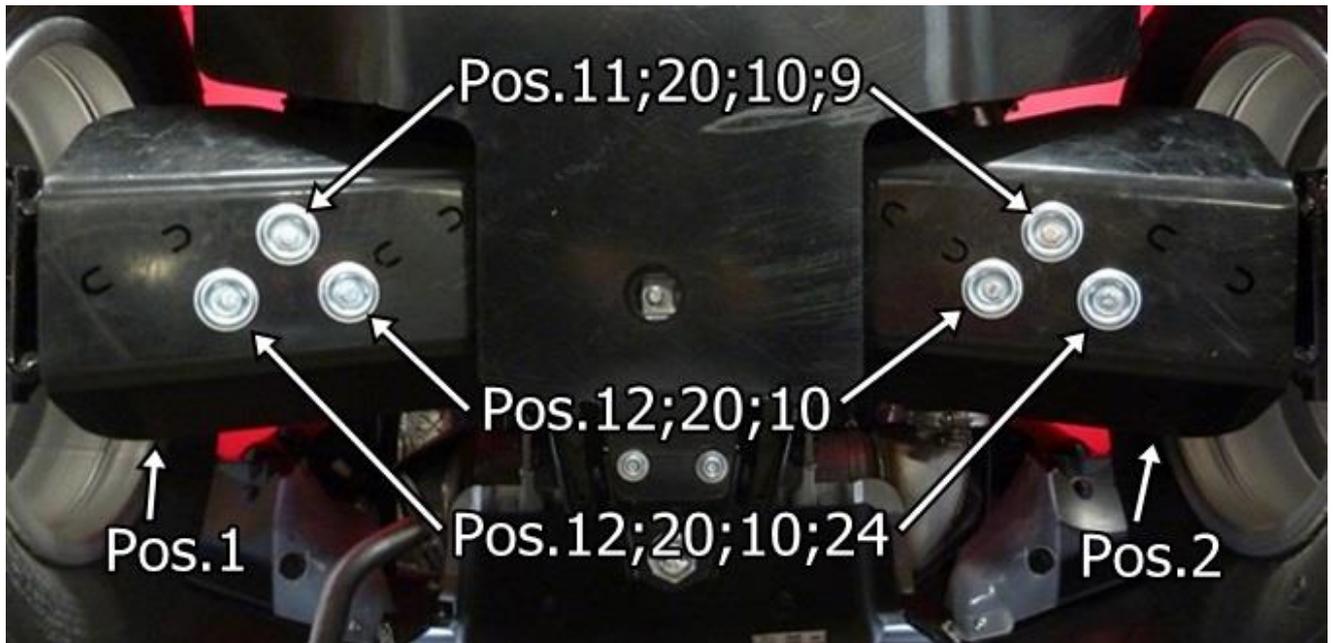

Step 6 Install front arm protections 02.1115 ja 02.1116, use brackets 02.1018.

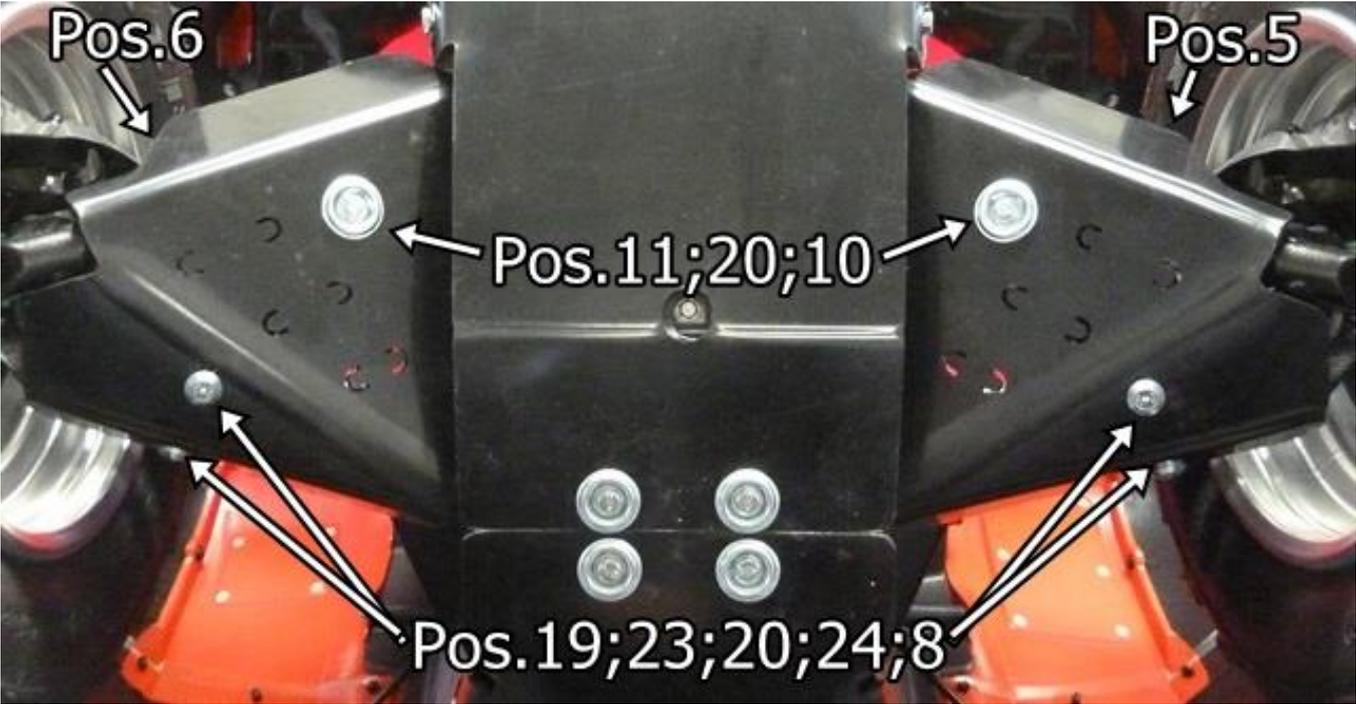

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

