

ALUMINIUM SKID PLATE



code.ironbaltic.com/u/83zUDKSJ


CAN AM

G2 Outlander L MAX 450 / 500 / 570

G2 Outlander MAX 450 / 570 (2017-...)

Code 02.16400

Version 04092023


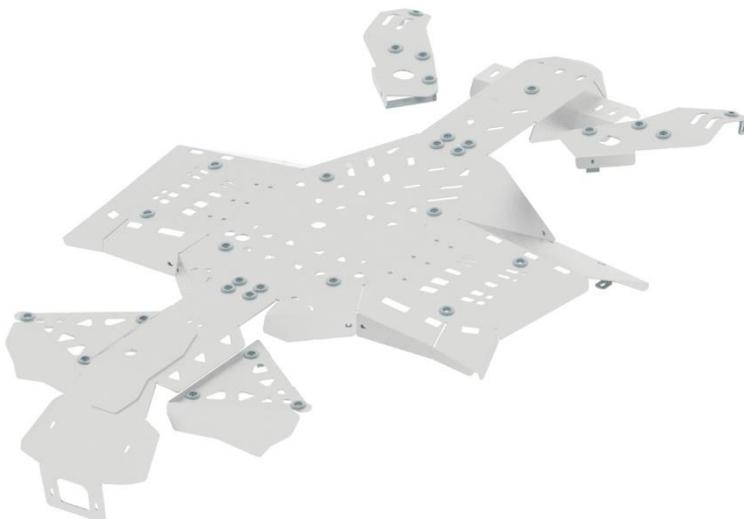


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Rear right trailing arm protection	02.18801	1
2	Rear left trailing arm protection	02.18802	1
3	Front part	02.15801K	1
4	Middle part	02.10001	1
5	Right side part	02.10002	1
6	Left side part	02.10003	1
7	Rear part	02.8203K	1
8	Front right arm protection	02.8204	1
9	Front left arm protection	02.8205	1
10	Rear arm protection clamp	02.18803	2
11	Bracket	02.18804	2
12	Bracket (80)	02.18805	2
13	Bracket (100)	02.18806	2
14	Connecting plate (40)	02.10006	2
15	Connecting plate (30)	02.10007	2
16	Clamp for front arm protection	02.8210	4
17	Plate	02.5006	10
18	Plate	02.2305	1
19	Bracket	03.3502	4
20	Bracket	03.1502	2
21	Dished washer	14.503	31
22	Bolt M6x12 DIN 933	OT.02.02.030	10
23	Bolt M6x16 DIN 933	OT.02.02.050	4
24	Bolt M6x20 DIN 933	OT.02.02.060	2
25	Bolt M6x35 DIN 933	OT.02.02.090	2
26	Bolt M6x50 DIN 933	OT.02.02.120	4
27	Bolt M8x16 DIN 933	OT.02.02.170	12
28	Bolt M8x30 DIN 933	OT.02.02.200	1
29	Bolt M10x30 DIN 933	OT.02.02.320	2
30	Bolt M6x16 DIN 7991	OT.02.04.020	20
31	Bolt M6x25 DIN 7991	OT.02.04.040	2
32	Bolt M8x25 DIN 7991	OT.02.04.160	2
33	Carriage bolt M8x25 DIN 603	OT.02.05.060	8
34	Washer Ø6/15 SFS 3738	OT.04.03.020	30
35	Washer Ø8/20 SFS 3738	OT.04.03.030	12
36	Washer Ø10/20 DIN 125	OT.04.01.040	4
37	Conical washer Ø6	14.502	22
38	Conical washer Ø8	14.501	2
39	Nyloc nut M6 DIN 985	OT.03.02.030	8
40	Nyloc nut M8 DIN 985	OT.03.02.040	10
41	Nyloc nut M10 DIN 985	OT.03.02.050	2

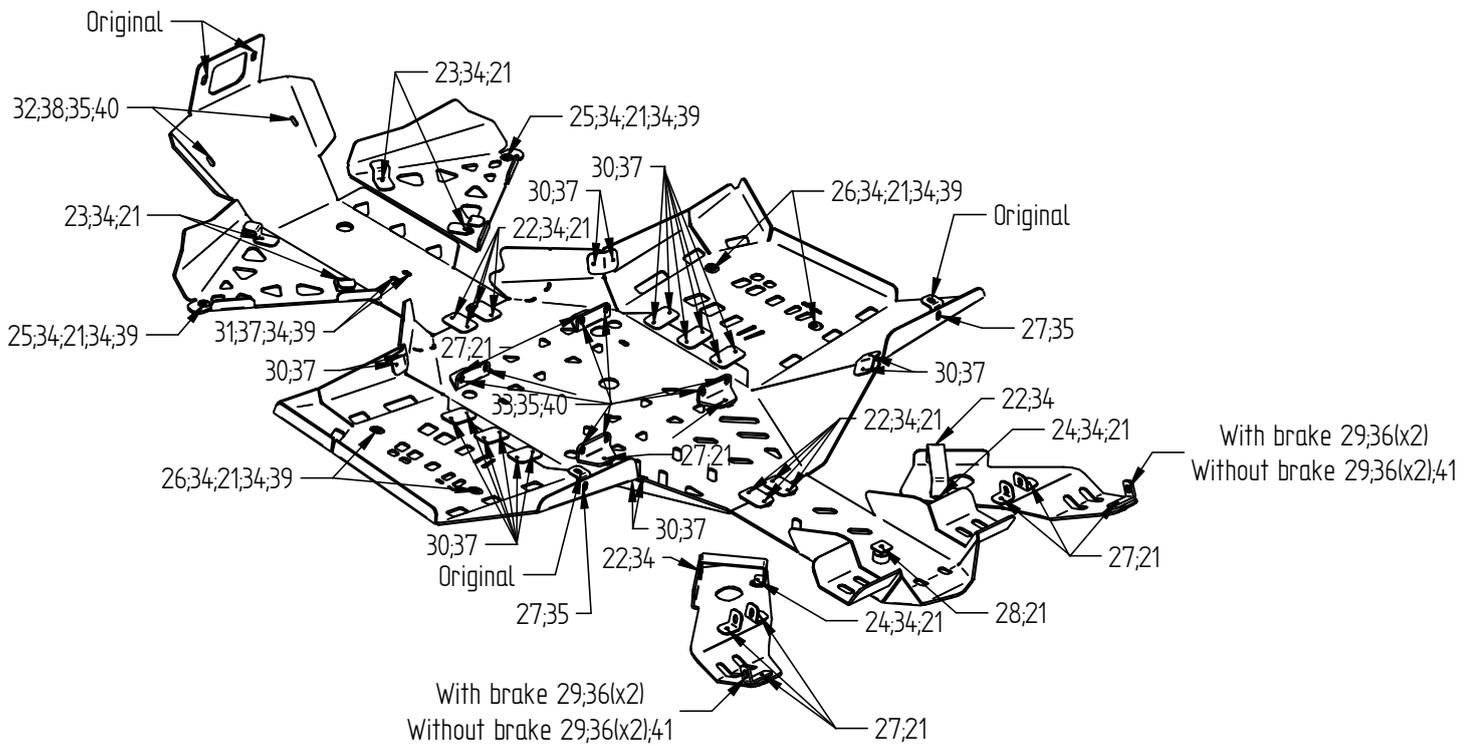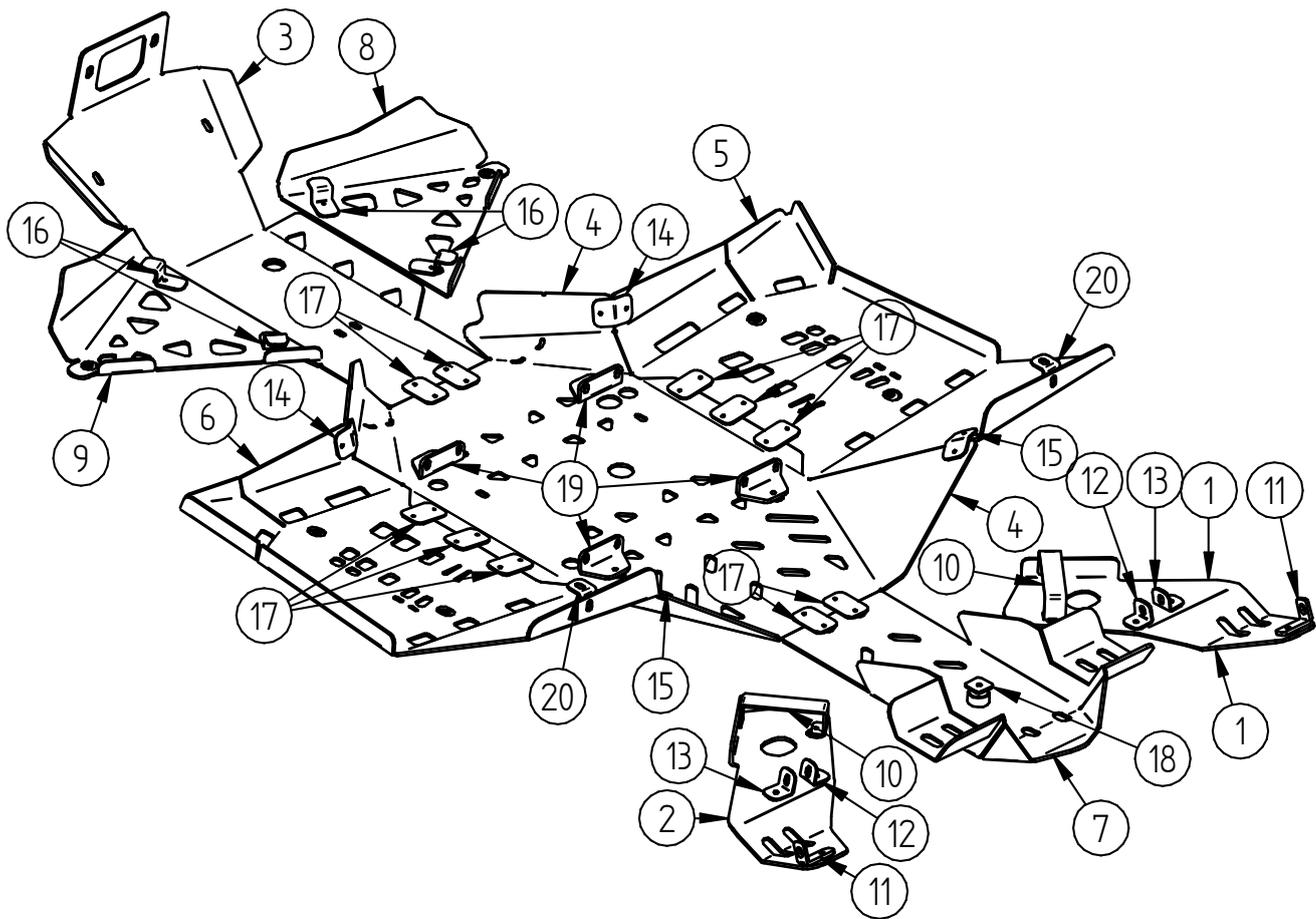


FITTING INSTRUCTIONS

Step 1 Remove original skid plate.




Step 2 Install brackets 03.3502 and 03.1502. Place brackets (03.3502) same plane as frame.

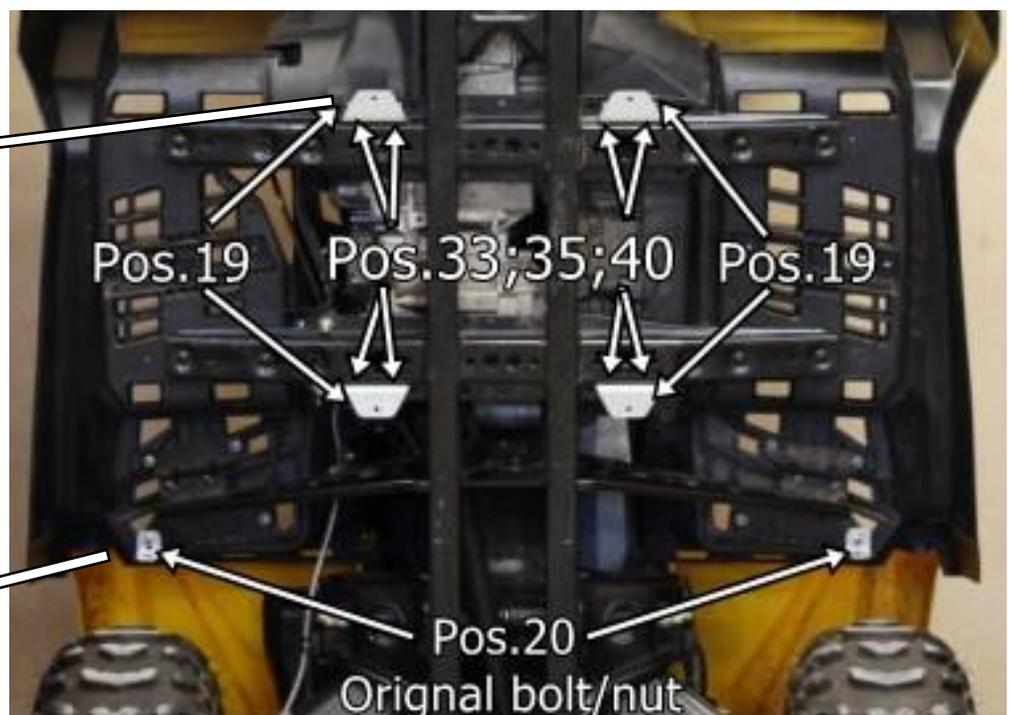


Step 3

First cut a slot, for the bracket 02.10006, to the right side original plastic (see pic.). Then install middle part 02.10001.

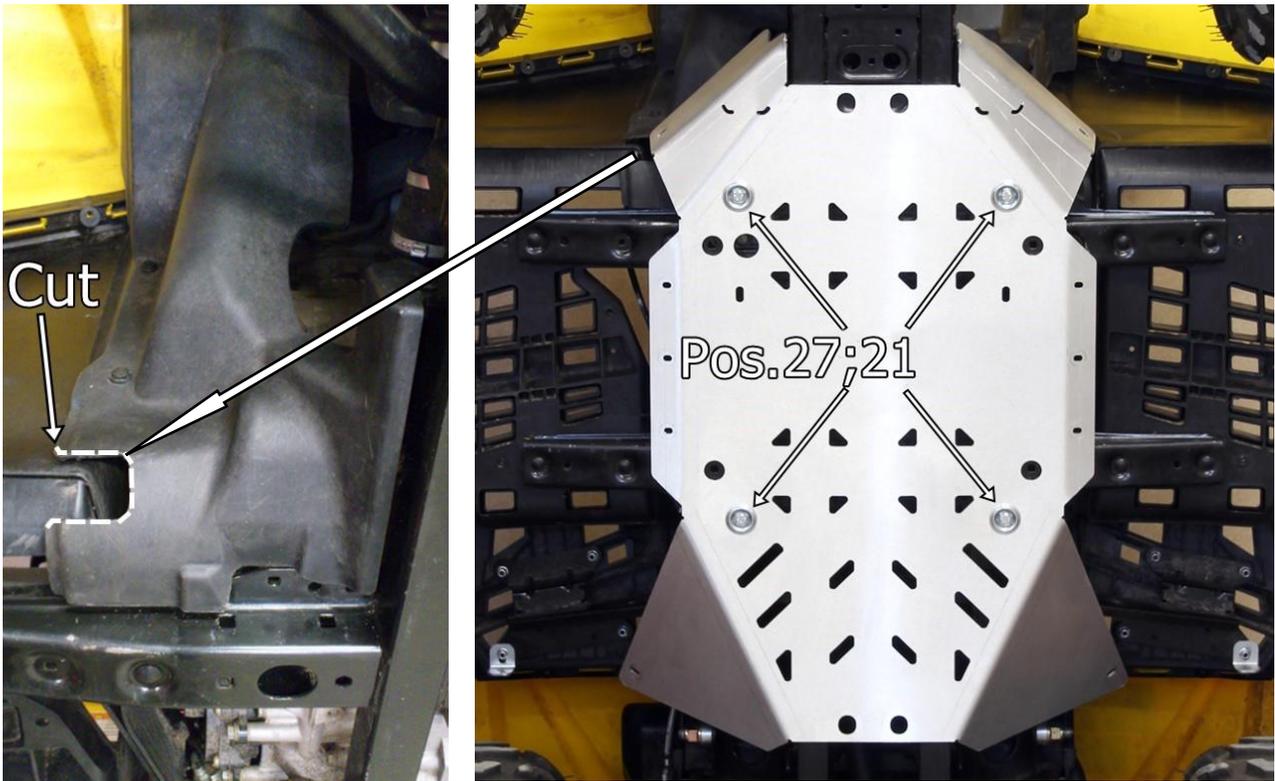


Step 4


Install connecting plates 02.5006, 02.10006, 02.10007.

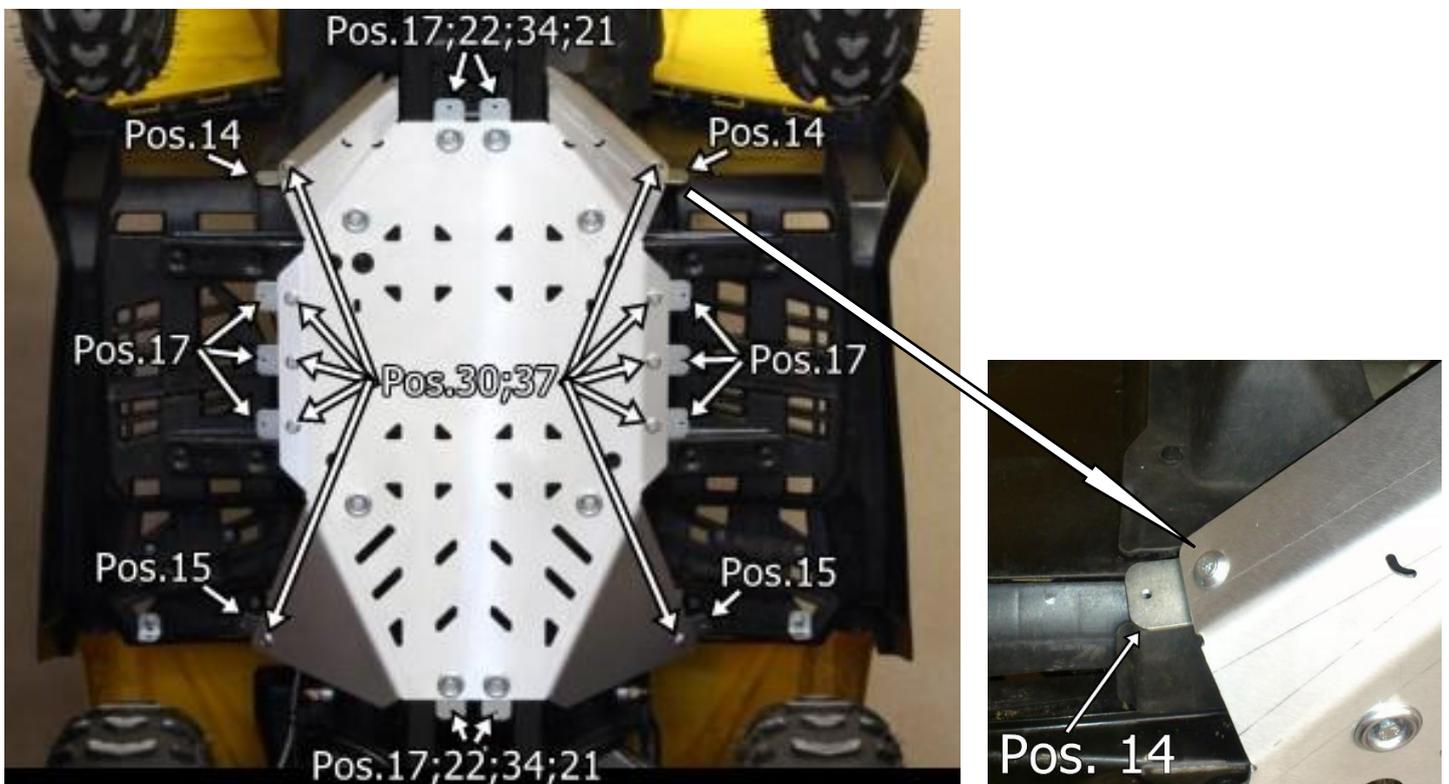


Step 5 Install right side part 02.10002 and left side part 02.10003.

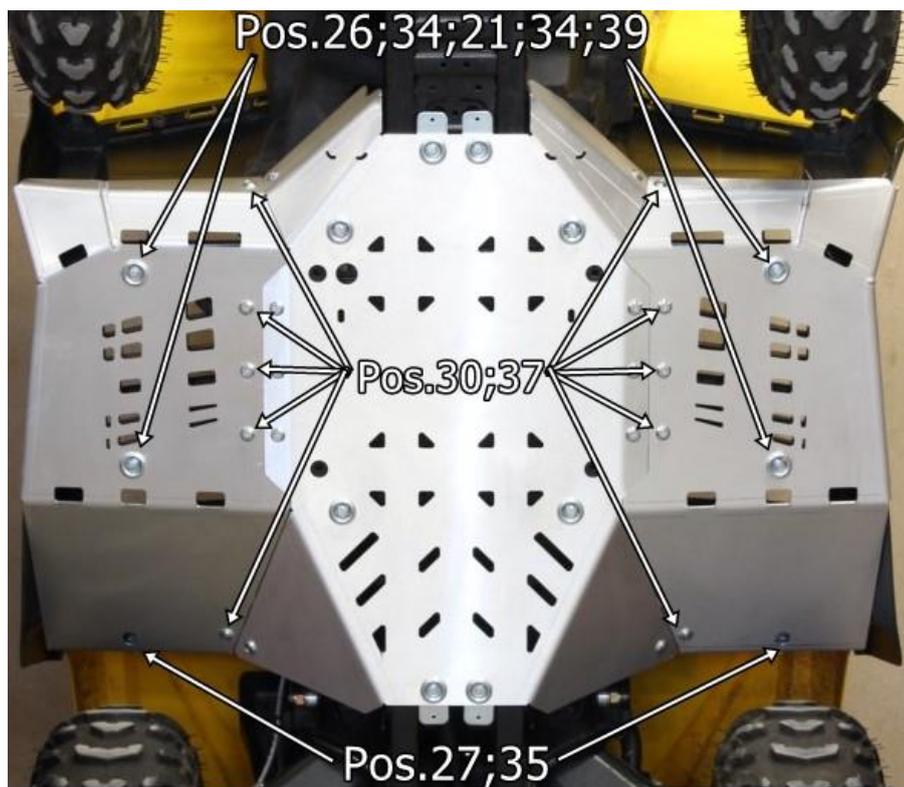


Step 6 Install front part 02.15801K. If you are using CanAm OE mounting plate (P/N 715004338), cut front protection side bends and use plow OE bolts (see Pictures).

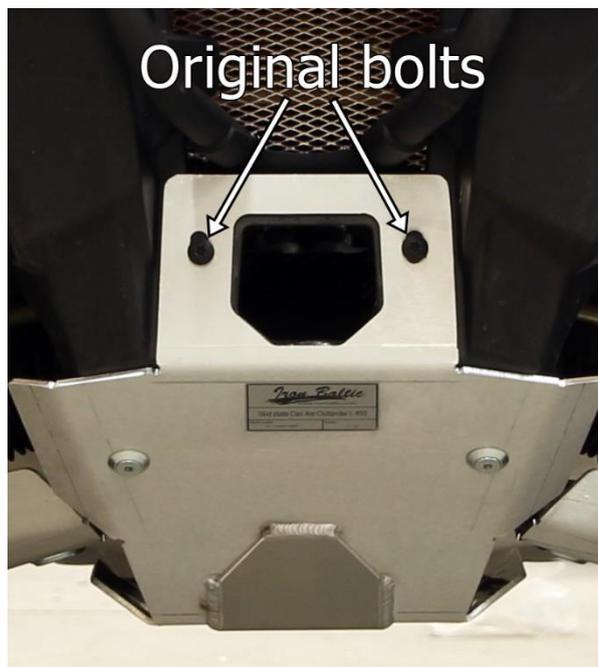

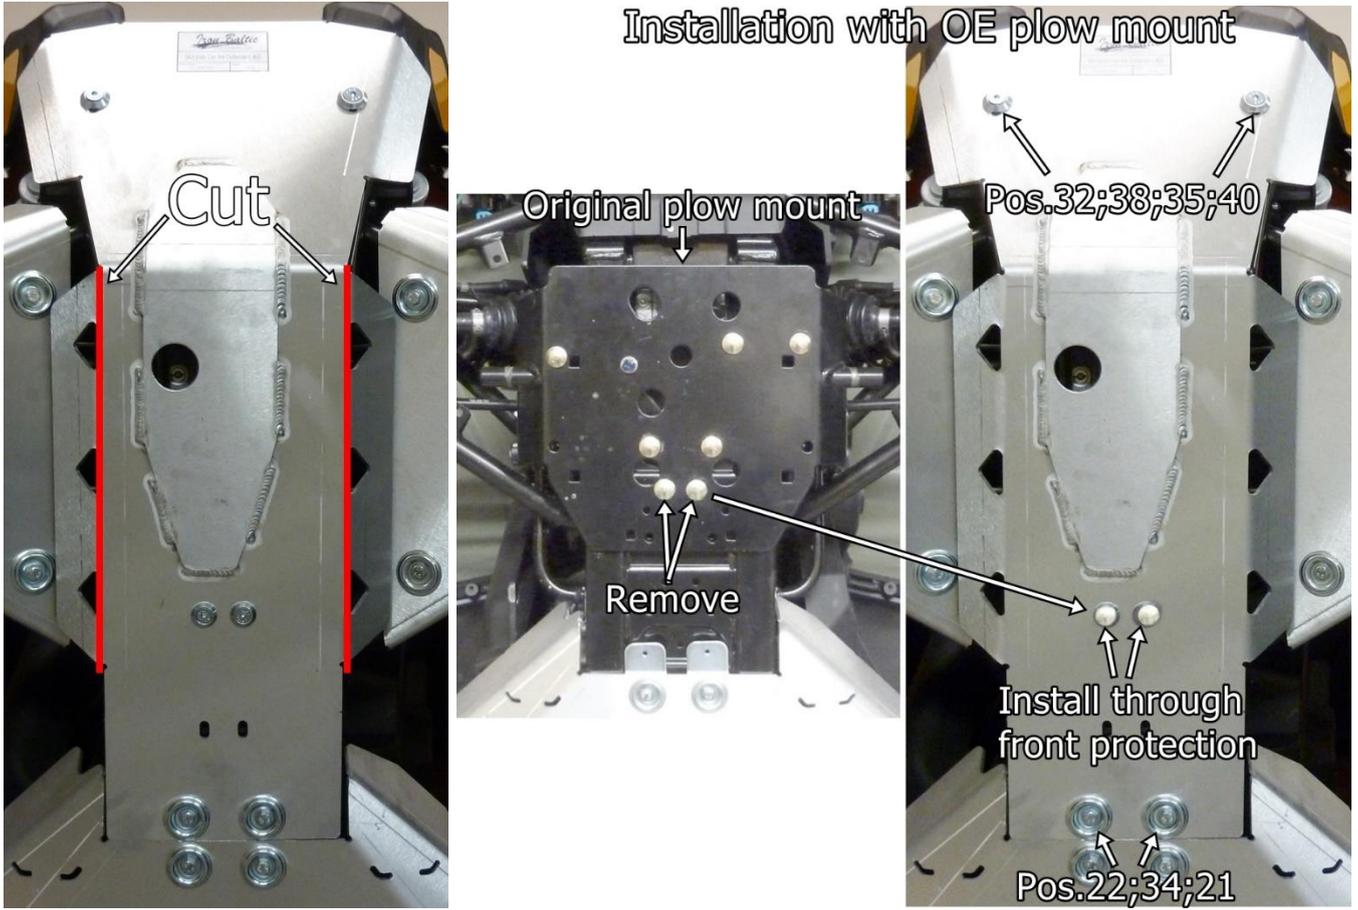


Step 7 Install rear part 02.8203K.

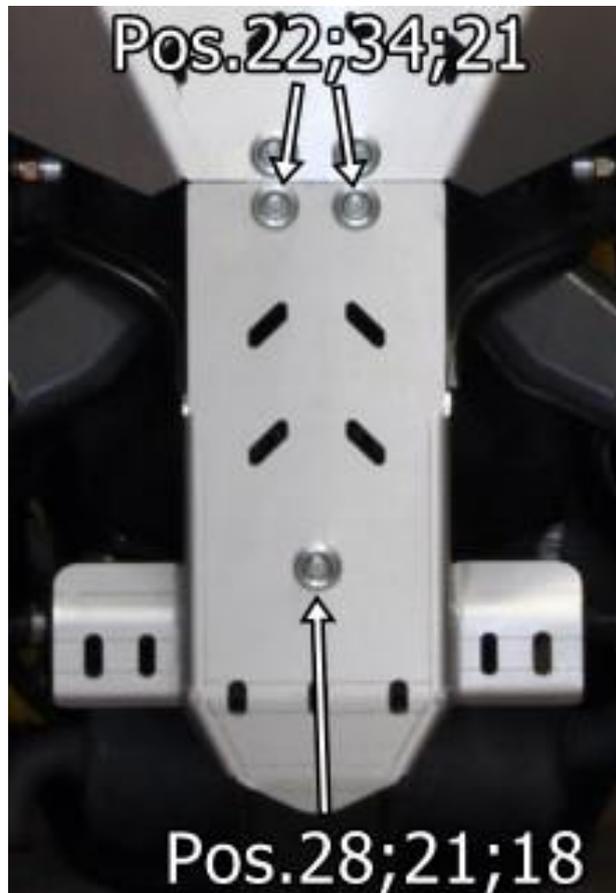

Step 8


Install front arm protectors 02.8204 and 02.8205. If you are using CanAm OE plow mount (P/N 715004338), then do not install front a-arm protectors!

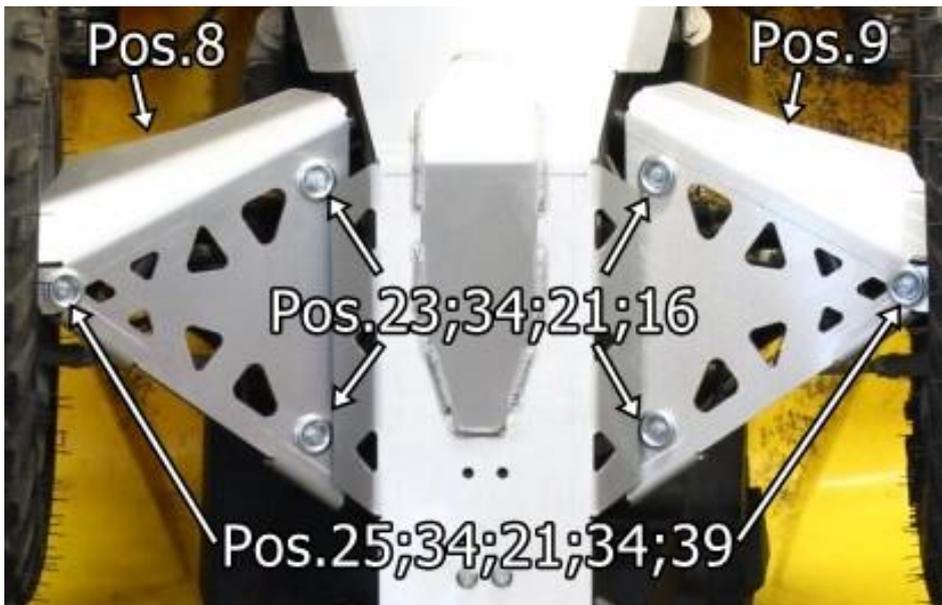


Step 9

Install brackets 02.18804, 02.18805, 02.18806. On some models it can be impossible to install Pos.12 bracket. In that case, install the arm protector without Pos.11 bracket!
NB! Make sure that there is enough clearance (min 2mm) between the bolt Pos.29 and brake disc.


Ilma pidurita.
Without brake.

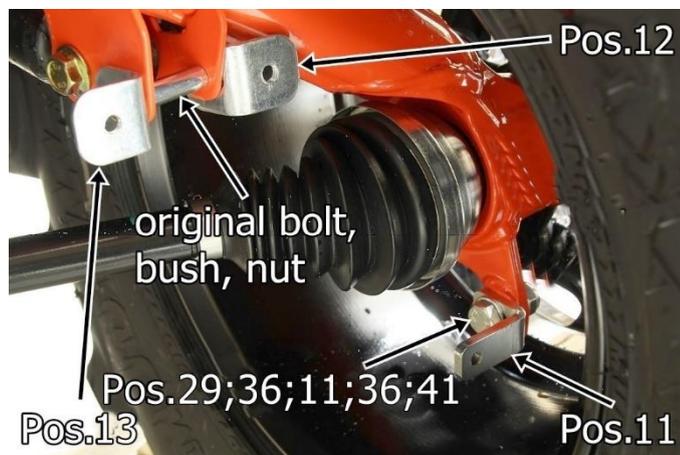

Kui on ainult pidur.
With brake only.

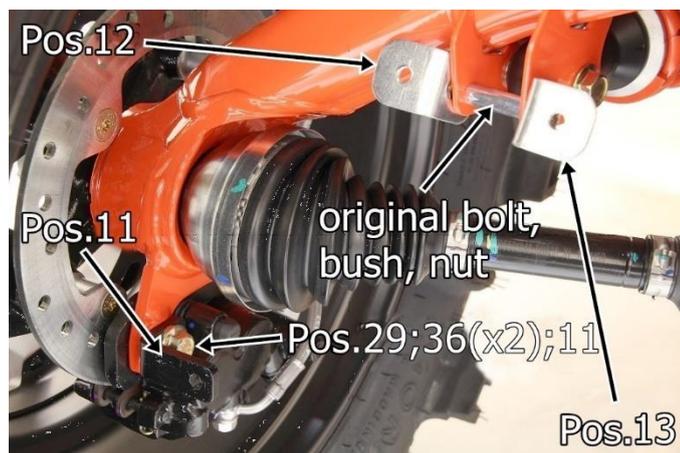

Step 10 Install rear arm protectors 02.18801 and 02.18802.

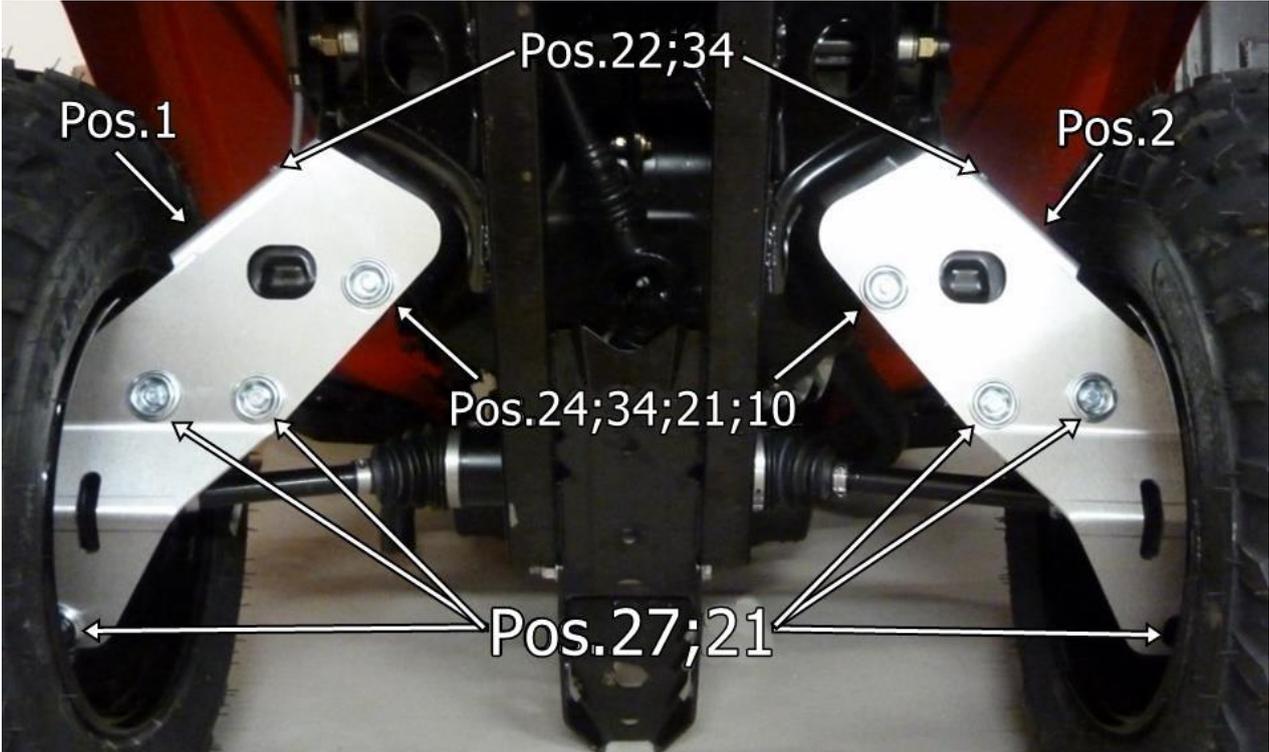

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

