



## PLASTIC SKID PLATE


### CAN AM

G2 Outlander L MAX 450 / 500 / 570

G2 Outlander MAX 450 / 570 (2017-...)

Code 02.16500

Version 04092023


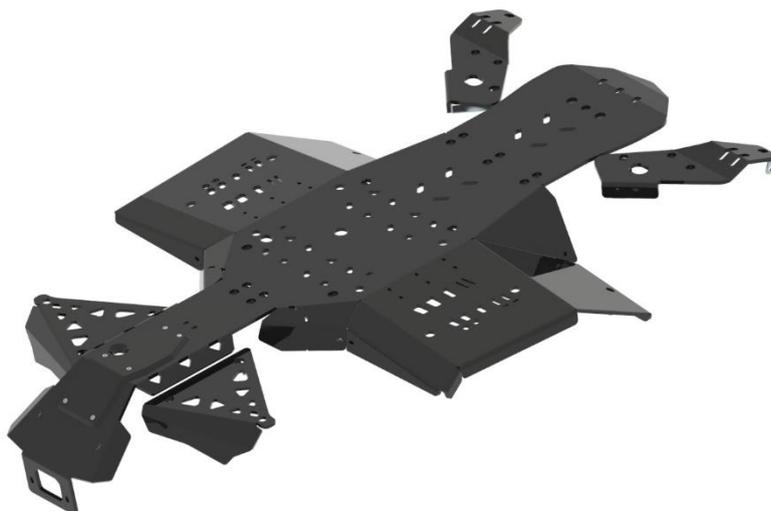


**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)


# SPECIFICATION

Pos.	Description	Code	Amount
1	Rear part	02.20202	1
2	Rear right arm protection	02.18901	1
3	Rear left arm protection	02.18902	1
4	Front part	02.15901K	1
5	Left side protection	02.10103	1
6	Right side protection	02.10102	1
7	Middle part	02.10101	1
8	Front right arm protection	02.8304	1
9	Front left arm protection	02.8305	1
10	Bush D30h14	02.707	1
11	Plate	02.2305	1
12	Plate	02.5006	11
13	Clamp for front arm protection	02.8210	4
14	Plate (40)	02.10006	2
15	Plate (45)	02.10104	2
16	Rear arm bracket	02.18803	2
17	Angle	02.18804	2
18	Angle (80)	02.18805	2
19	Angle (100)	02.18806	2
20	Rear part bracket	02.20201	1
21	Bracket	03.3502	4
22	Angle (90)	03.1502	2
23	Dished washer	14.503	34
24	Bolt M6x16 DIN 933	OT.02.02.050	10
25	Bolt M6x20 DIN 933	OT.02.02.060	8
26	Bolt M6x25 DIN 933	OT.02.02.070	2
27	Bolt M6x40 DIN 933	OT.02.02.100	2
28	Bolt M6x60 DIN 933	OT.02.02.140	4
29	Bolt M8x20 DIN 933	OT.02.02.180	12
30	Bolt M8x35 DIN 933	OT.02.02.210	1
31	Bolt M10x30 DIN 933	OT.02.02.320	2
32	Bolt M6x20 DIN 7991	OT.02.04.030	20
33	Bolt M8x35 DIN 7991	OT.02.04.180	6
34	Carriage bolt M8x25 DIN 603	OT.02.05.060	8
35	Washer Ø6/15 SFS 3738	OT.04.03.020	32
36	Washer Ø8/20 SFS 3738	OT.04.03.030	17
37	Washer Ø10 DIN 125	OT.04.01.040	4
38	Conical washer Ø6	14.502	20
39	Conical washer Ø8	14.501	6
40	Nyloc nut M6 DIN 985	OT.03.02.030	6
41	Nyloc nut M8 DIN 985	OT.03.02.040	14
42	Nyloc nut M10 DIN 985	OT.03.02.050	2


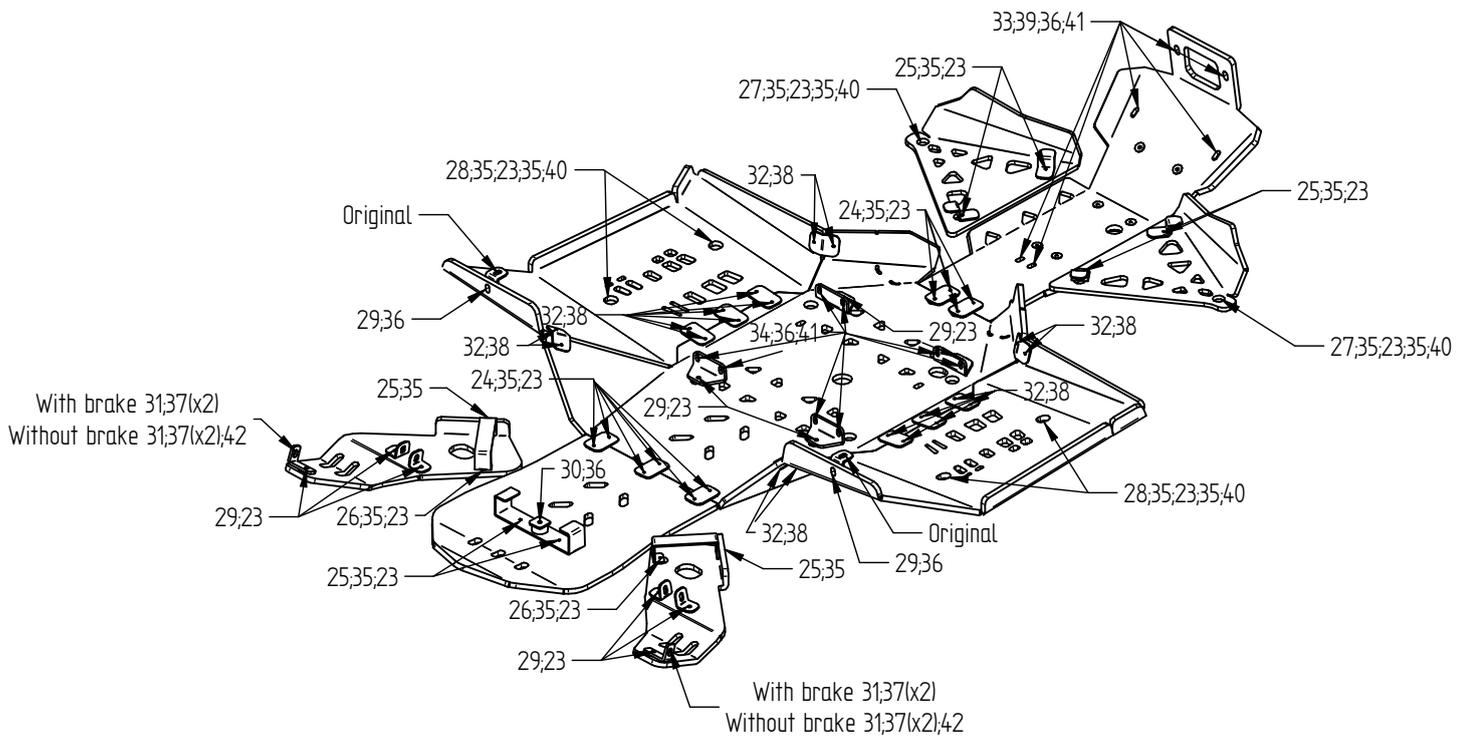
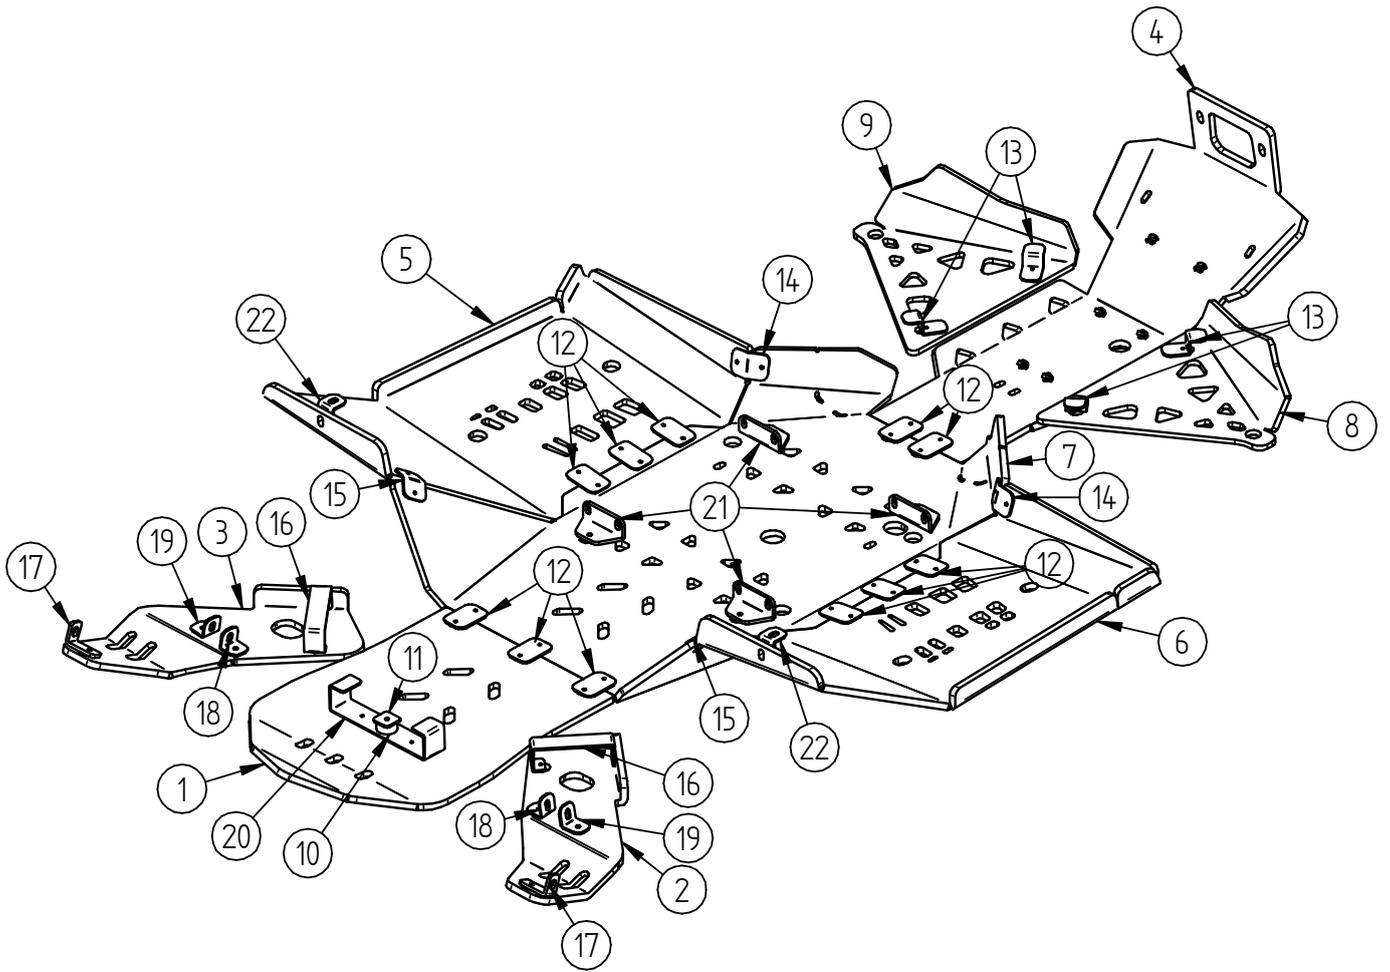


# FITTING INSTRUCTIONS



**Step 1** Remove all standard plastic covers.

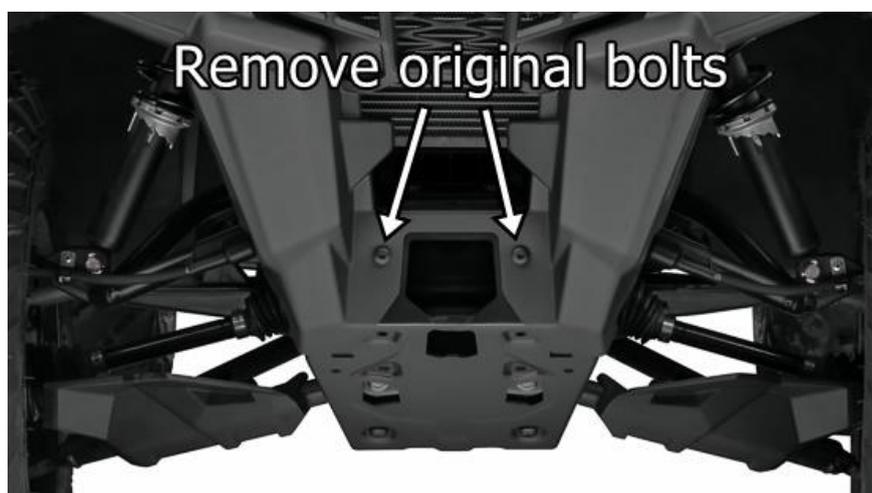

**Step 2** Install brackets 03.3502. Adjust brackets level with the frame. If you have two bolts on ATV at the same place where bracket should go then secure the bracket only with one bolt!

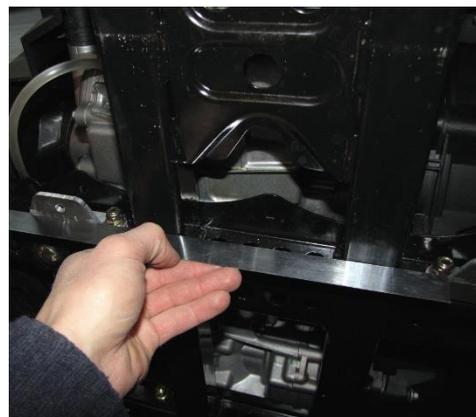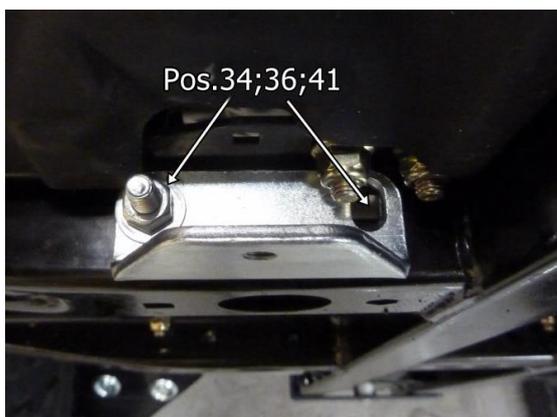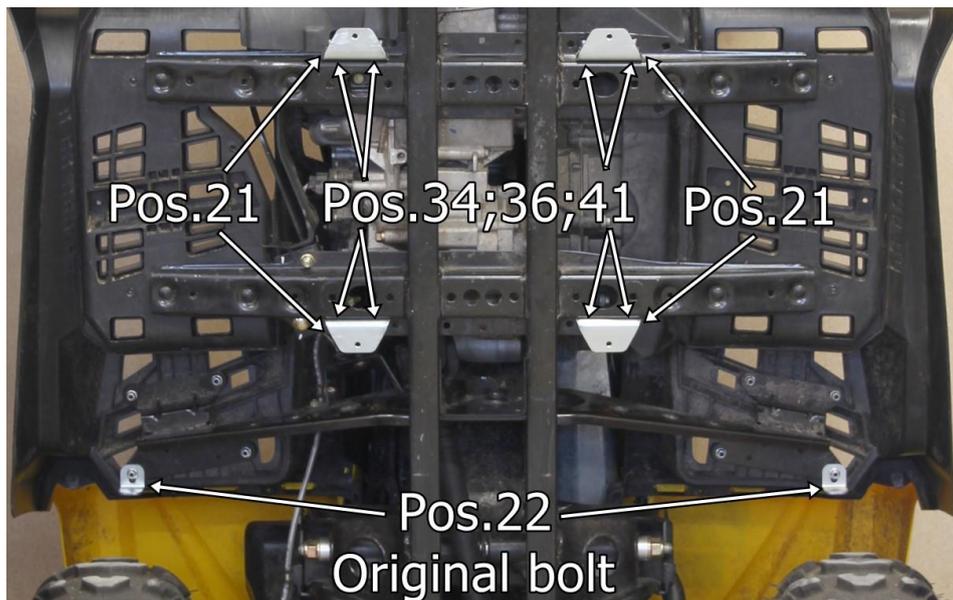

**Step 3** Install front arm protectors 02.8304 and 02.8305. If you are using CanAm OE plow mount (P/N 715004338), then do not install front a-arm protectors!

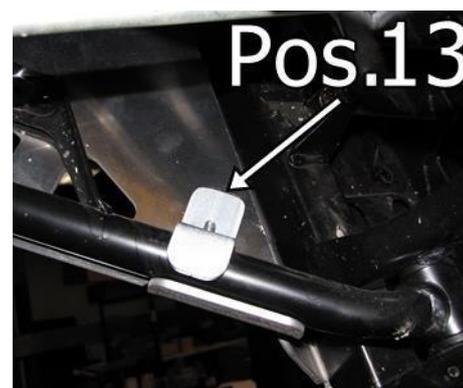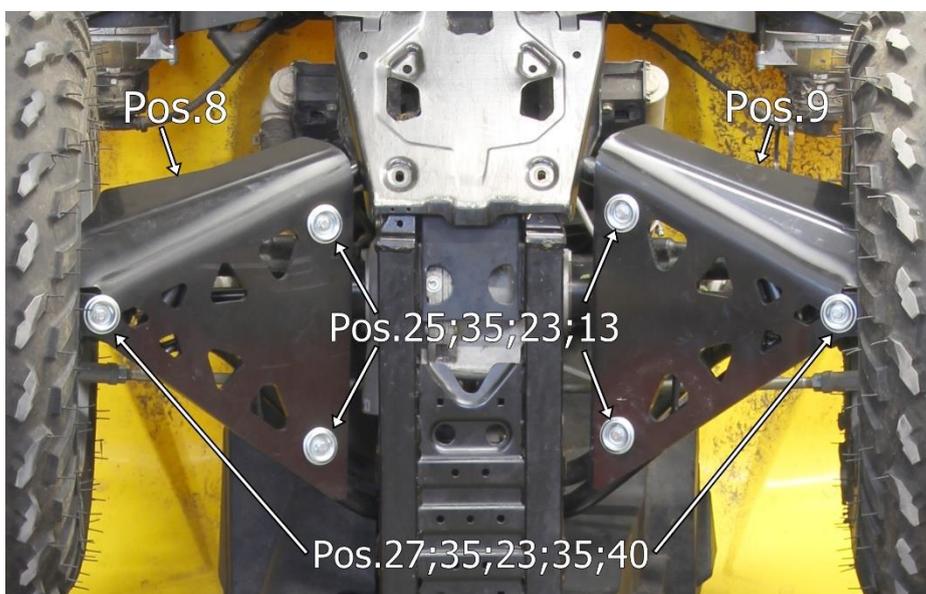


**Step 4** Install brackets 02.18804, 02.18805, 02.18806. On some models it can be impossible to install Pos.17 bracket. In that case, install the arm protector without Pos.17 bracket!  
 NB! Make sure that there is enough clearance (min 2mm) between the bolt Pos.31 and brake disc.


Ilma pidurita.  
 Without brake.




Kui on ainult pidur.  
 With brake only.

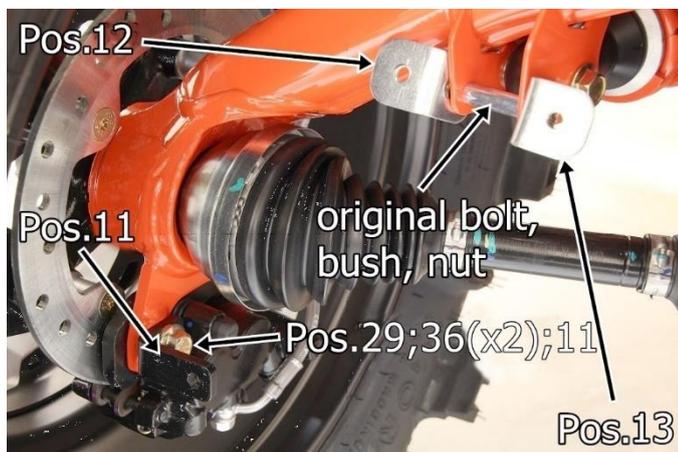


**Step 5** Install rear arm protectors 02.18801 and 02.18802.

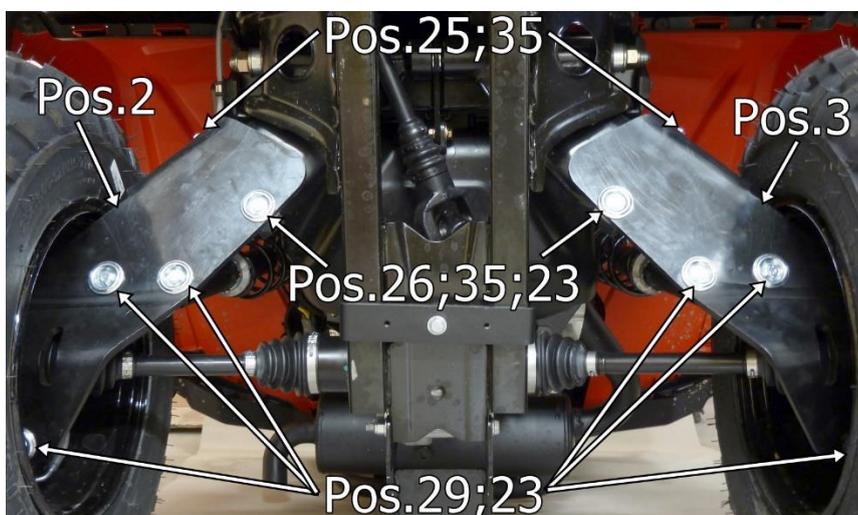

**Step 6** Install middle protection 02.10101.

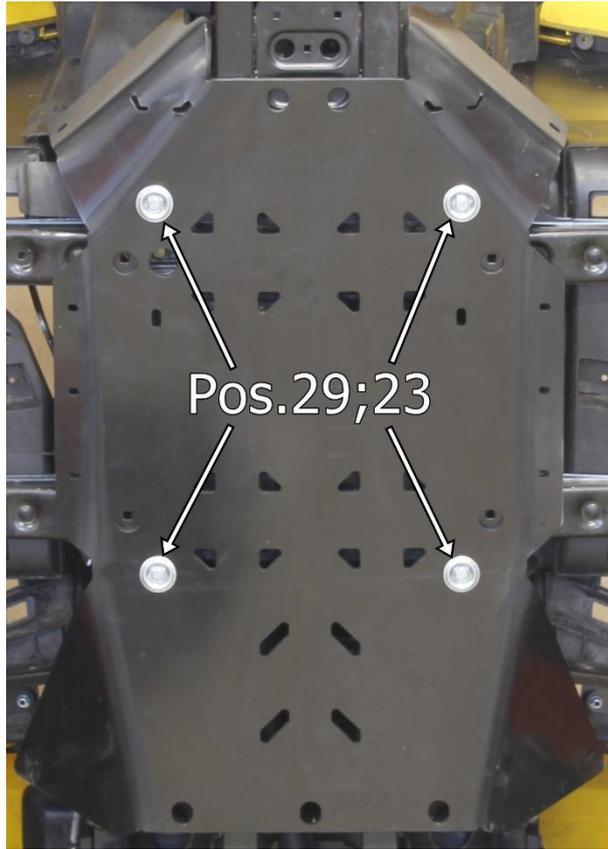


**Step 7** Install plates 02.5006, 02.10104 and 02.10006 to middle part.

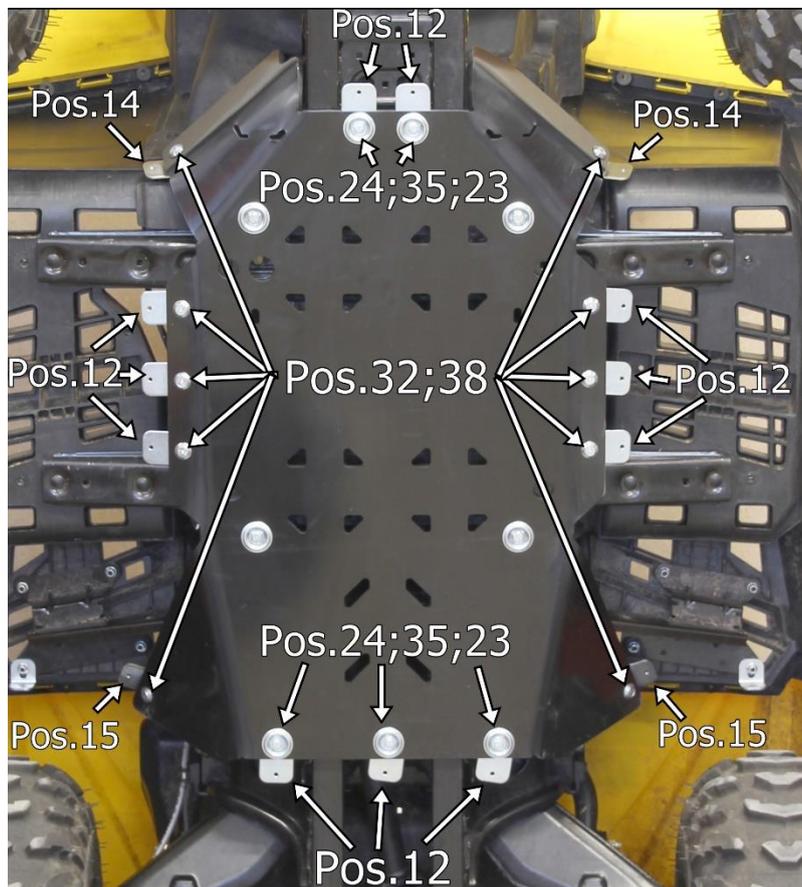


**Step 8**


Install front part 02.15901K. If you are using CanAm OE mounting plate (P/N 715004338), cut front protection side bends (see Picture).

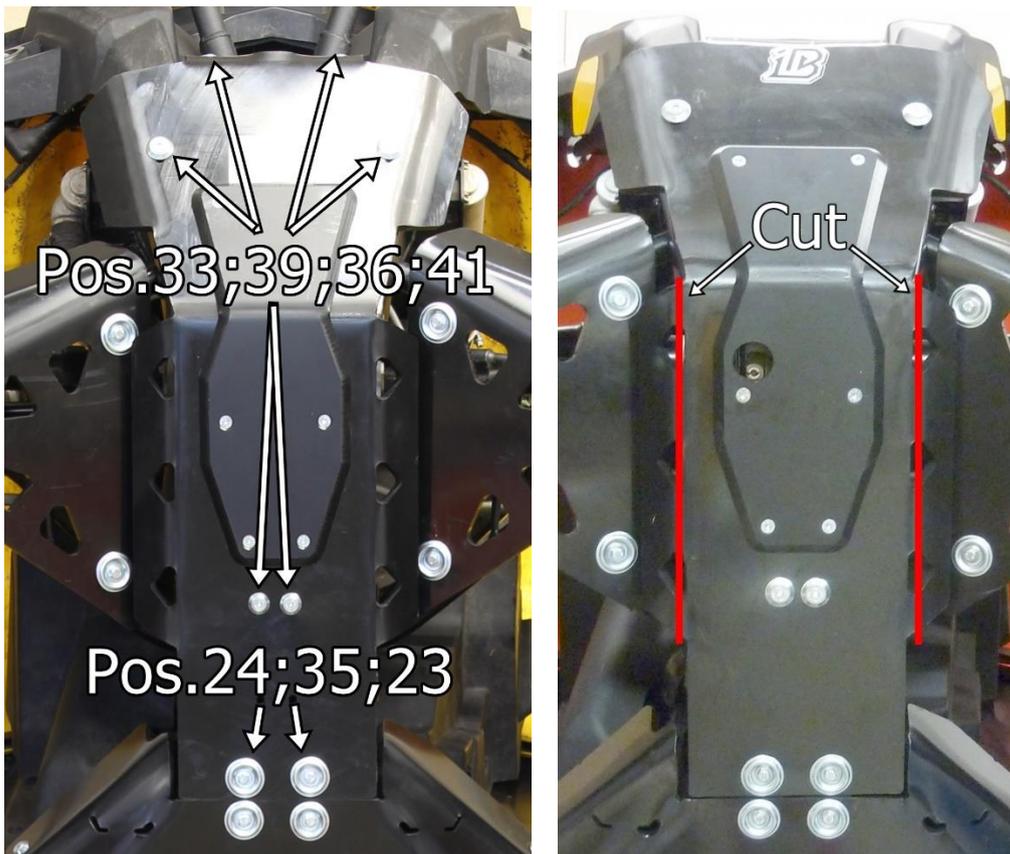


**Step 9**

Install rear part bracket 02.20201 and rear part 02.20202. Bush (Pos.10) goes between ATV frame and Pos.20 bracket.

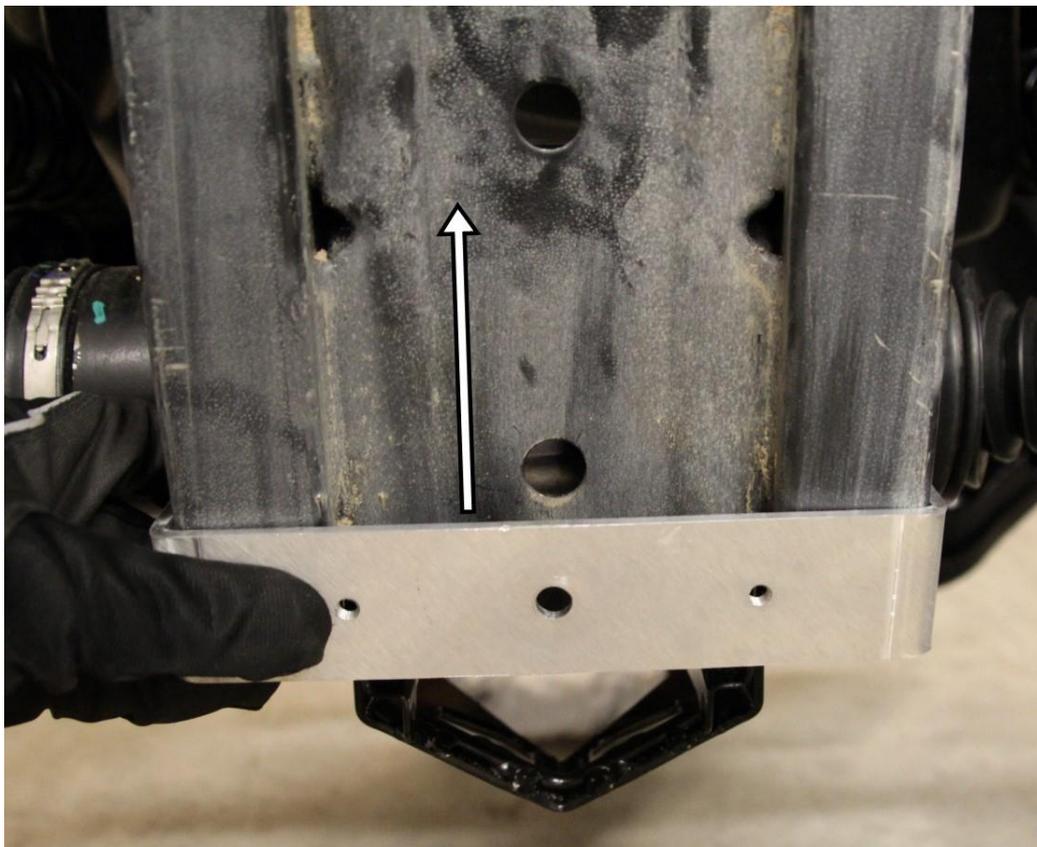

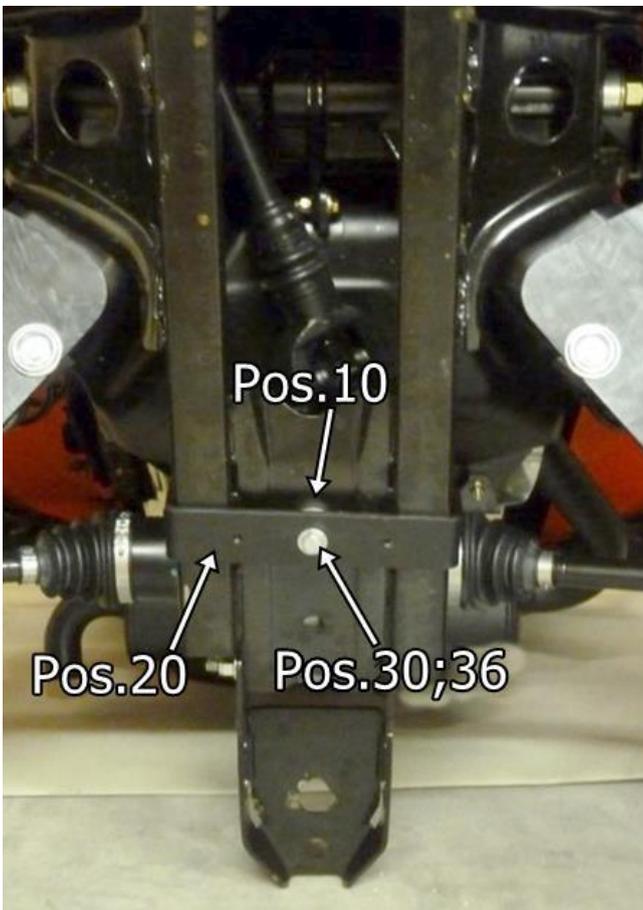

**Step 10** Install side protectors 02.8503 and 02.8504.

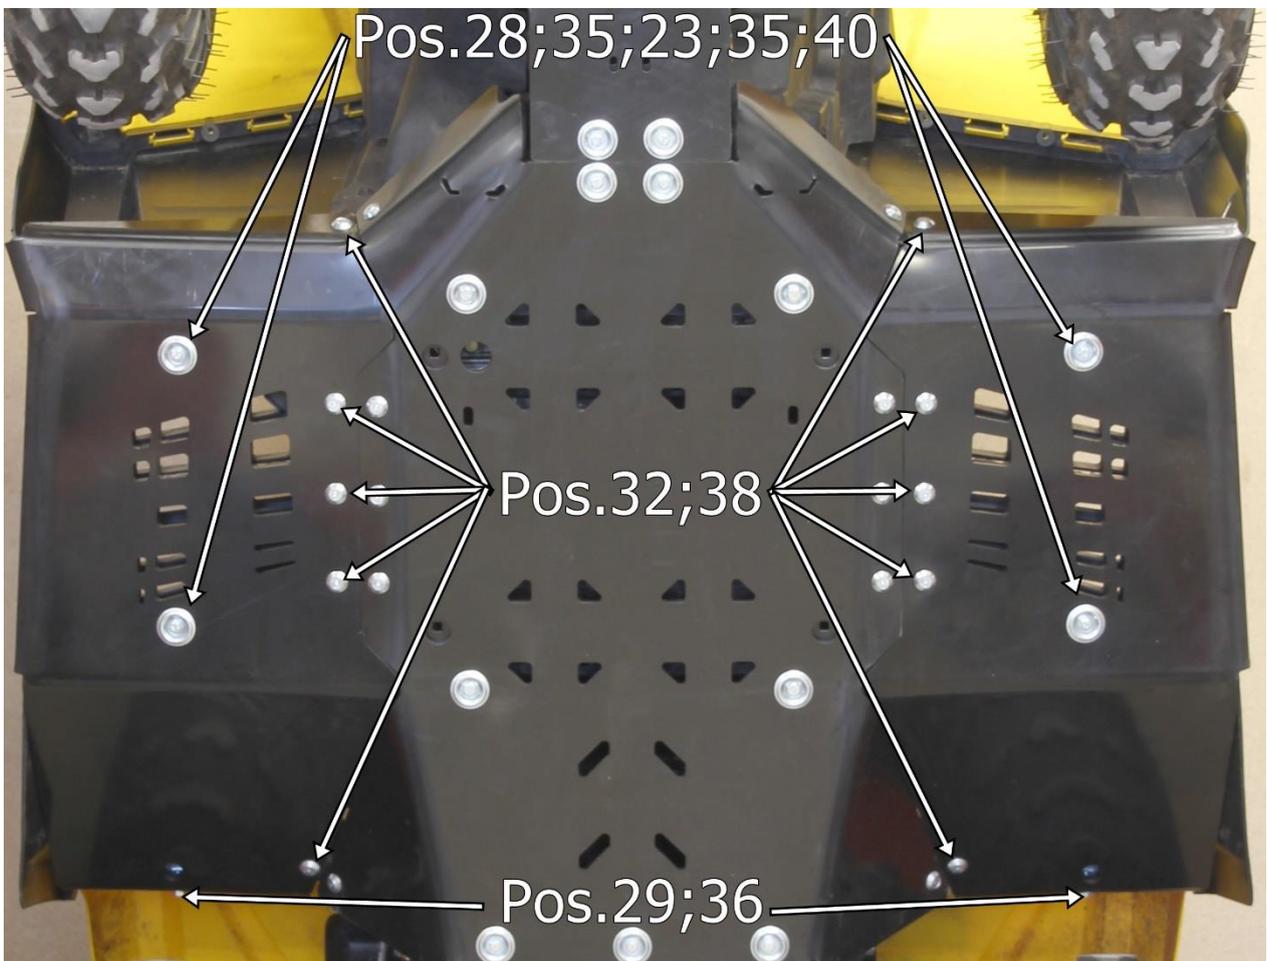





# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

