

# IRON BALTIC

DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/roEOYole](https://code.ironbaltic.com/u/roEOYole)


## PLASTIC SKID PLATE

# POLARIS

850 / 1000 Scrambler (2015 - ...)

Code 02.16900

Version 07092023


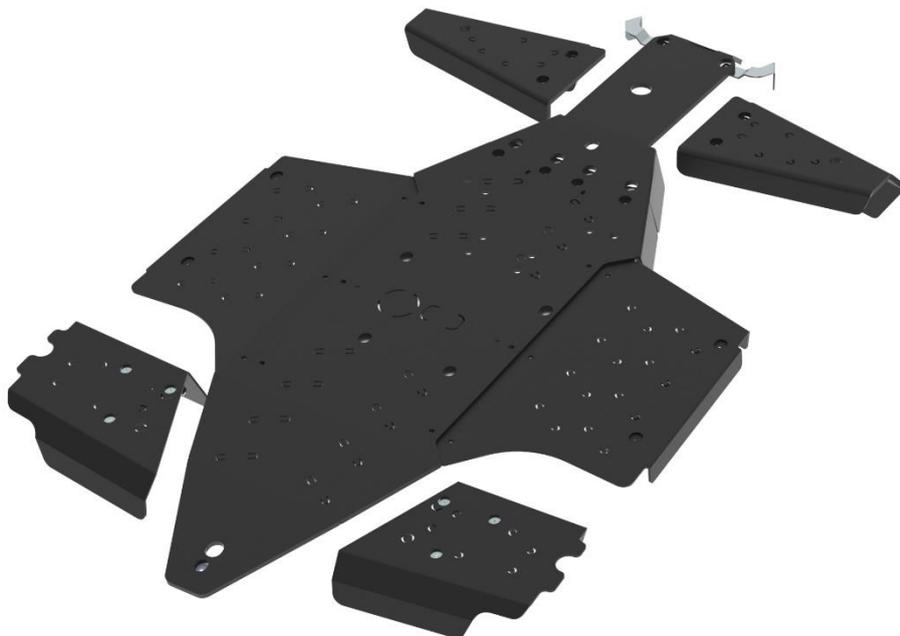


**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Front protection	02.16901	1
2	Middle protection	02.16701	1
3	Right side protection	02.10402	1
4	Left side protection	02.10403	1
5	Front right arm protection	02.1542	1
6	Front left arm protection	02.1543	1
7	Rear right arm protection	02.1544	1
8	Rear left arm protection	02.1545	1
9	Middle protection plate	02.1551K	1
10	Right bracket	02.16802	1
11	Left bracket	02.16803	1
12	Side protection bracket	02.10205	2
13	Clamp for front arm protection	02.1528	2
14	Clamp for rear arm protection	02.1529	2
15	Installation plate	02.2305	1
16	Installation plate	02.5006	10
17	Installation plate	02.8210	2
18	Dished washer	14.503	32
19	Bolt M6x20 DIN 933	OT.02.02.060	27
20	Bolt M6x45 DIN 933	OT.02.02.110	8
21	Bolt M8x20 DIN 933	OT.02.02.180	1
22	Bolt M6x20 DIN 7991	OT.02.04.030	12
23	Bolt M6x25 DIN 7991	OT.02.04.040	4
24	Washer Ø6	14.502	16
25	Washer Ø6/15 SFS 3738	OT.04.03.020	42
26	Nyloc nut M6 DIN 985	OT.03.02.030	7

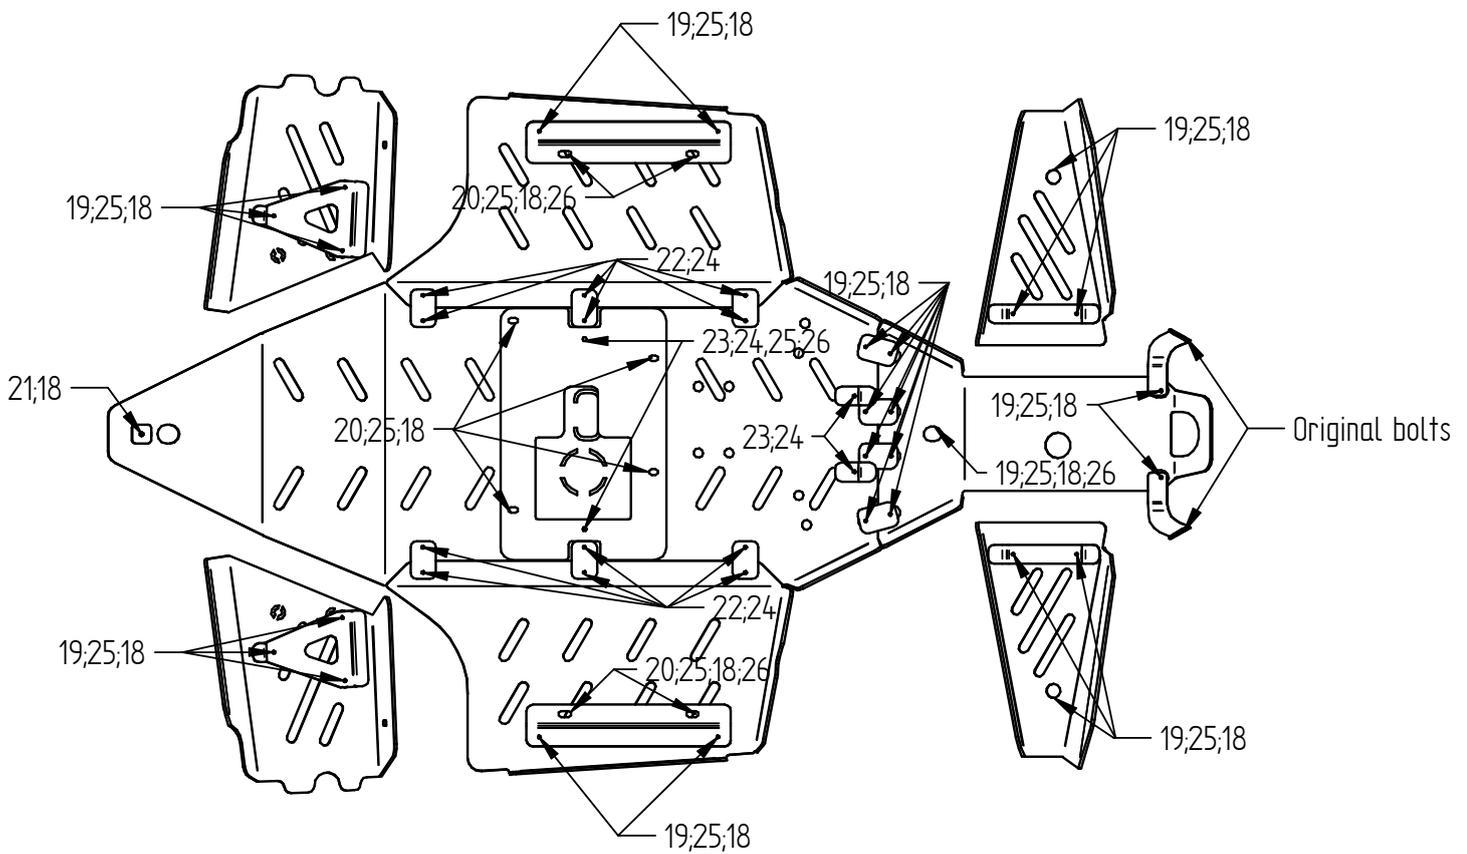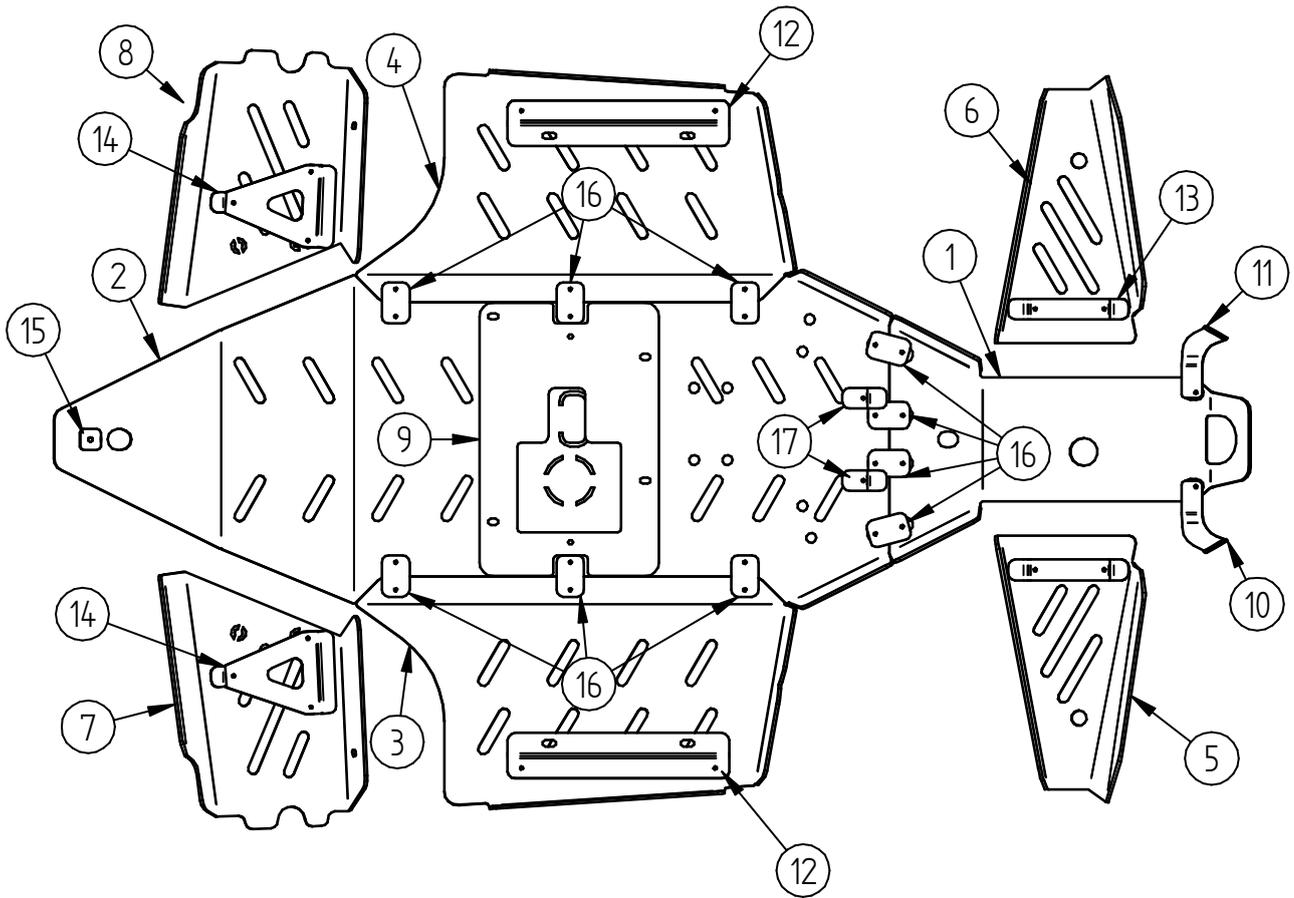

# FITTING INSTRUCTIONS


**Step 1** Remove all standard plastic covers and oil filter cover plate..




**Step 2** Install plate 02.1551K to middle protection.



**Step 3** Install side- and front protection brackets 02.10205, 02.16802 and 02.16803.

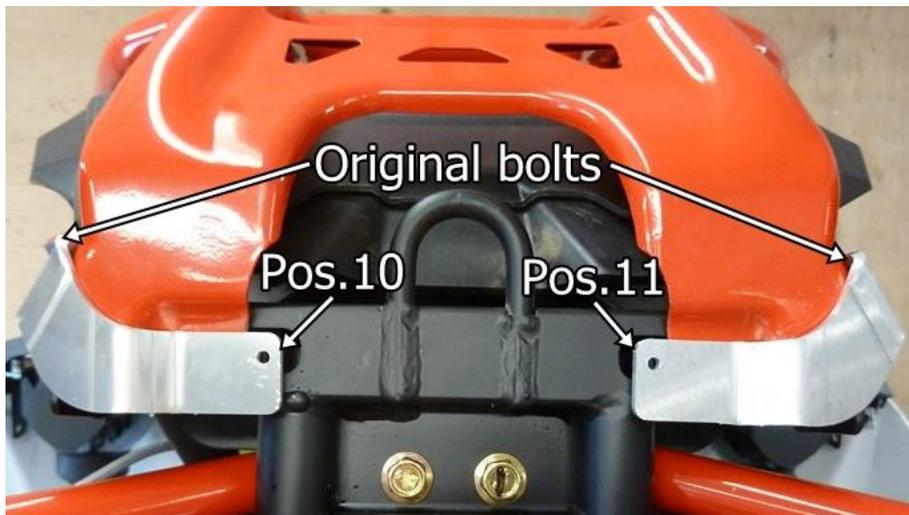


**Step 4** Install middle protection 02.16701.

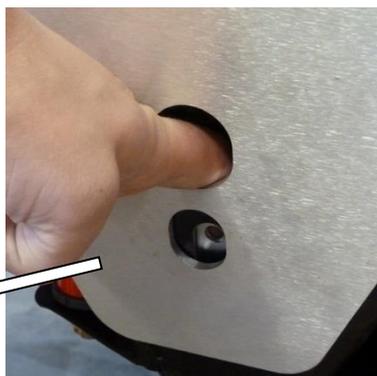


**Step 5** Install plates 02.5006 to middle protection.





**Step 6** Install side protections 02.10402 and 02.10403.

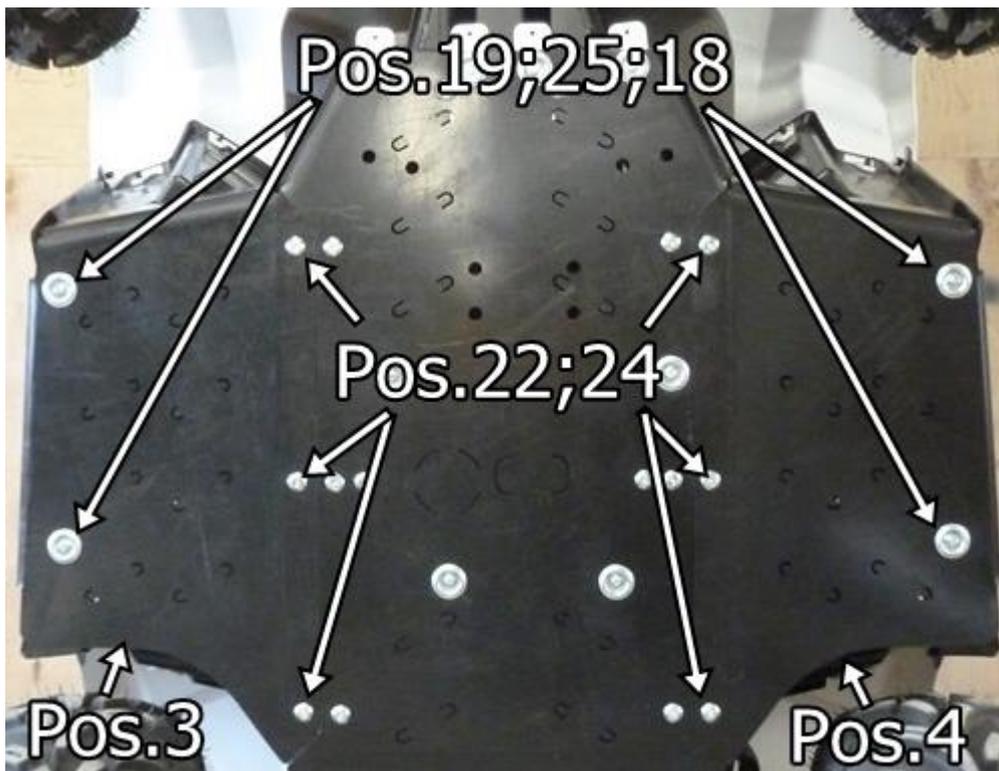


**Step 7** Install front protection 02.16901.

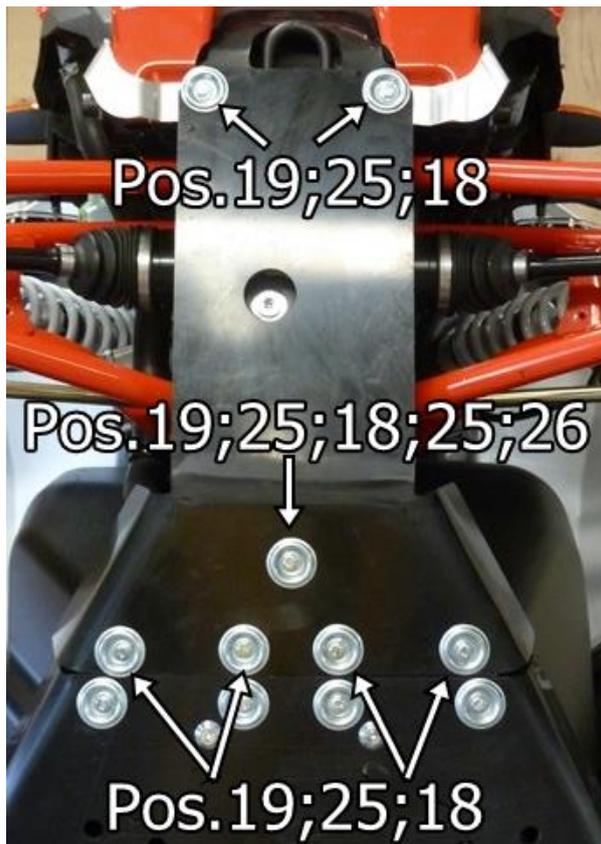

**Step 8** Install front arm protections 02.1542, 02.1543, use clamp 02.1528.

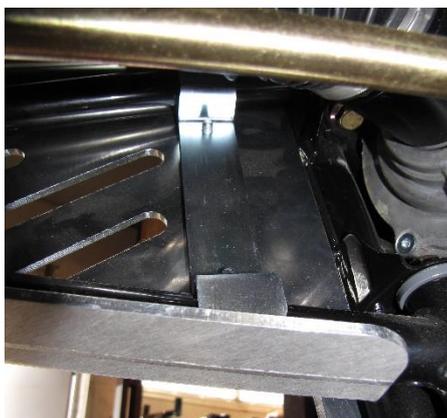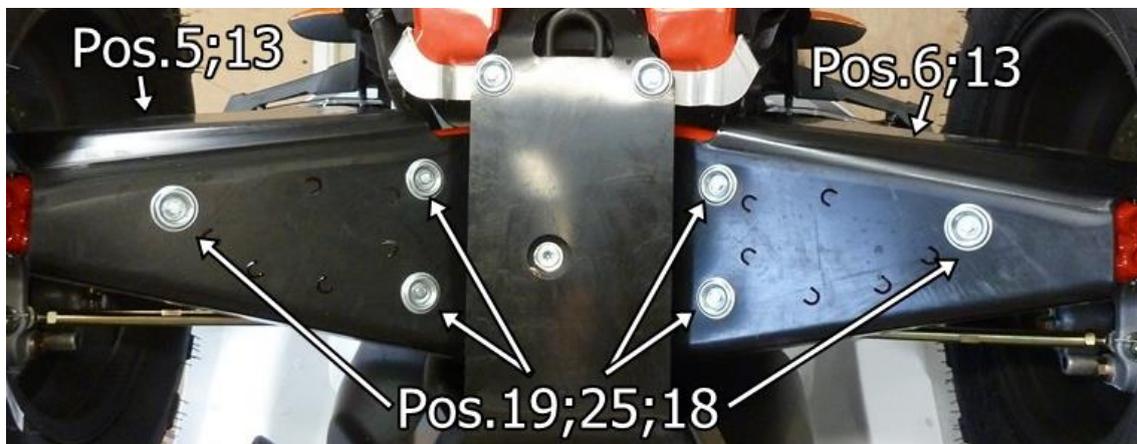

**Step 9** Install rear arm protections 02.1544, 02.1545, use clamp 02.1529.

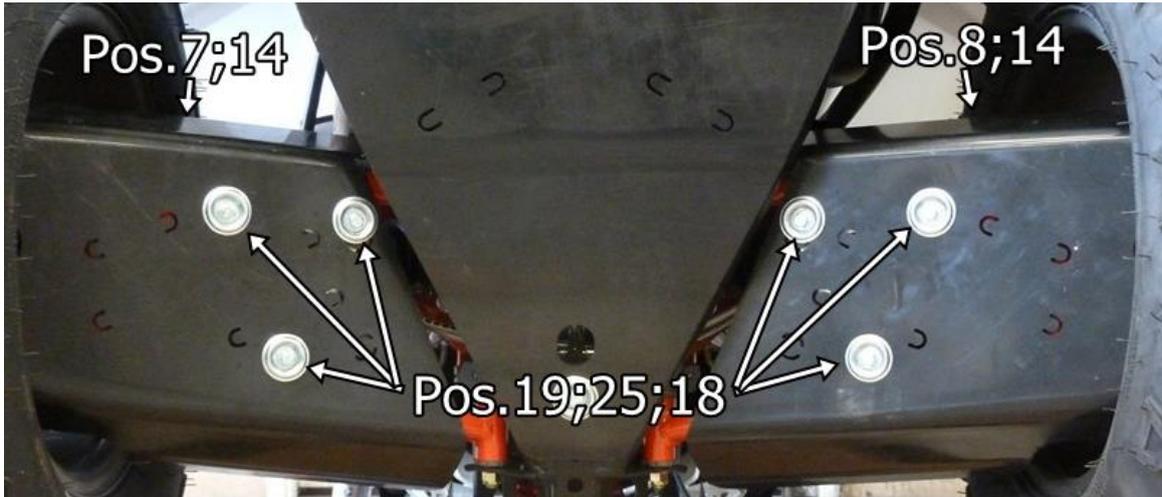







# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

