

# IRON BALTIC


## ALUMINIUM SKID PLATE

# CFORCE

## 450L

Code 02.17200

Version 07092023

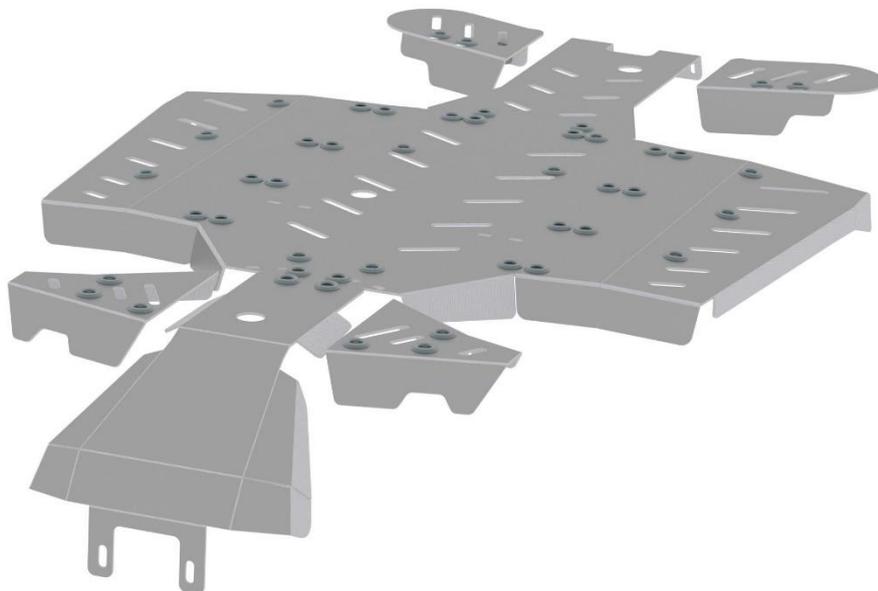

**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic [sales@ironbaltic.com](mailto:sales@ironbaltic.com)

Iron Baltic Ltd | +372 653 3711 | [sales@ironbaltic.com](mailto:sales@ironbaltic.com) | [www.ironbaltic.com](http://www.ironbaltic.com)



DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/7Hj2GVOf](https://code.ironbaltic.com/u/7Hj2GVOf)


# SPECIFICATION

Pos.	Description	Code	Amount
1	Middle protection	02.17201K	1
2	Front protection	02.17002	1
3	Rear protection	02.17003	1
4	Right side protection	02.17204	1
5	Left side protection	02.17205	1
6	Front right arm protection	02.17006	1
7	Front left arm protection	02.17007	1
8	Rear right arm protection	02.17008	1
9	Rear left arm protection	02.17009	1
10	Installation plate	02.5006	12
11	Installation plate	03.1502	2
12	Dished washer	14.503	46
13	Bolt M6x12 DIN 933	OT.02.02.030	4
14	Bolt M6x14 DIN 933	OT.02.02.040	30
15	Bolt M6x30 DIN 933	OT.02.02.080	2
16	Bolt M6x40 DIN 933	OT.02.02.100	8
17	Bolt M8x50 DIN 933	OT.02.02.240	2
18	Bolt M6x25 DIN 7991	OT.02.04.040	2
19	Bolt M8x20 DIN 7991	OT.02.04.150	2
20	Washer Ø6/15 SFS 3738	OT.04.03.020	44
21	Washer Ø8/20 SFS 3738	OT.04.03.030	2
22	Washer large Ø6/18 DIN 9021	OT.04.02.020	4
23	Washer Ø6	14.502	2
24	Washer Ø8	14.501	2
25	Nyloc nut M6 DIN 985	OT.03.02.030	4
26	Nyloc nut M8 DIN 985	OT.03.02.040	2

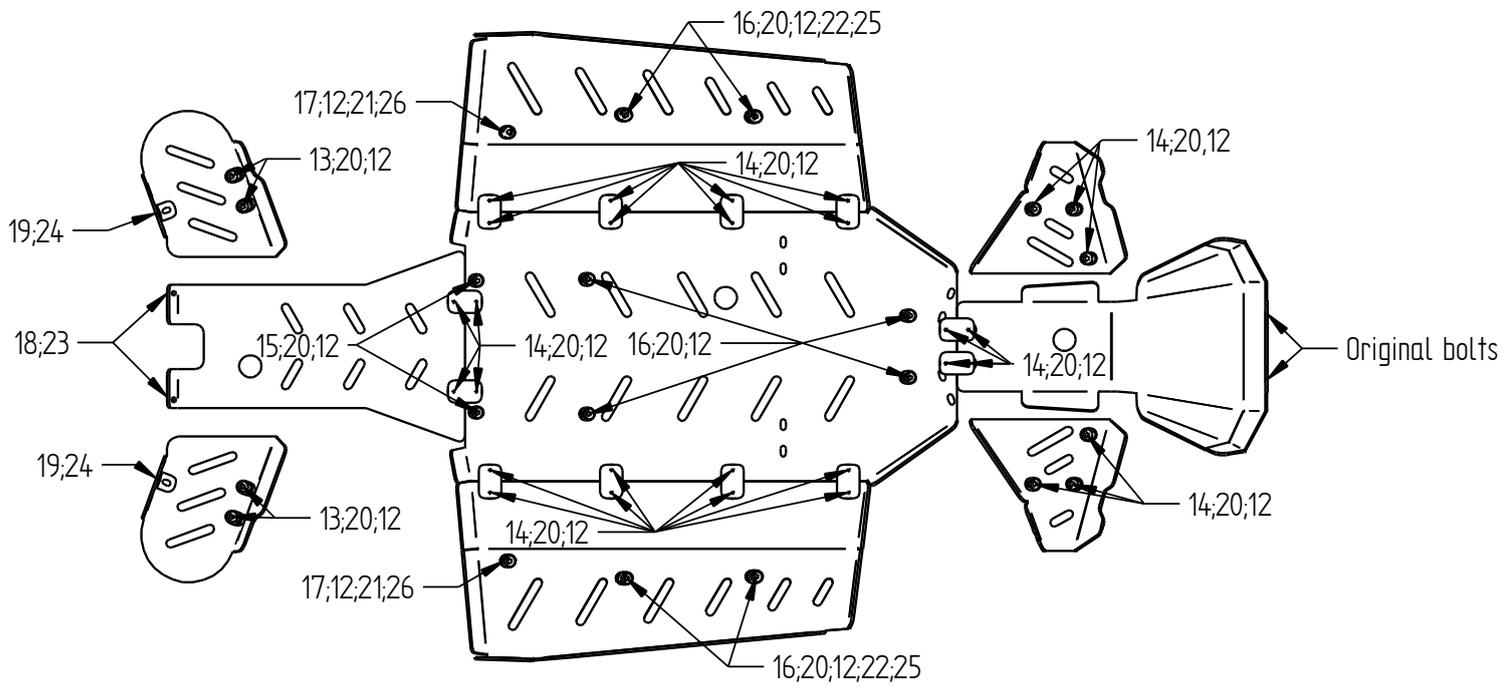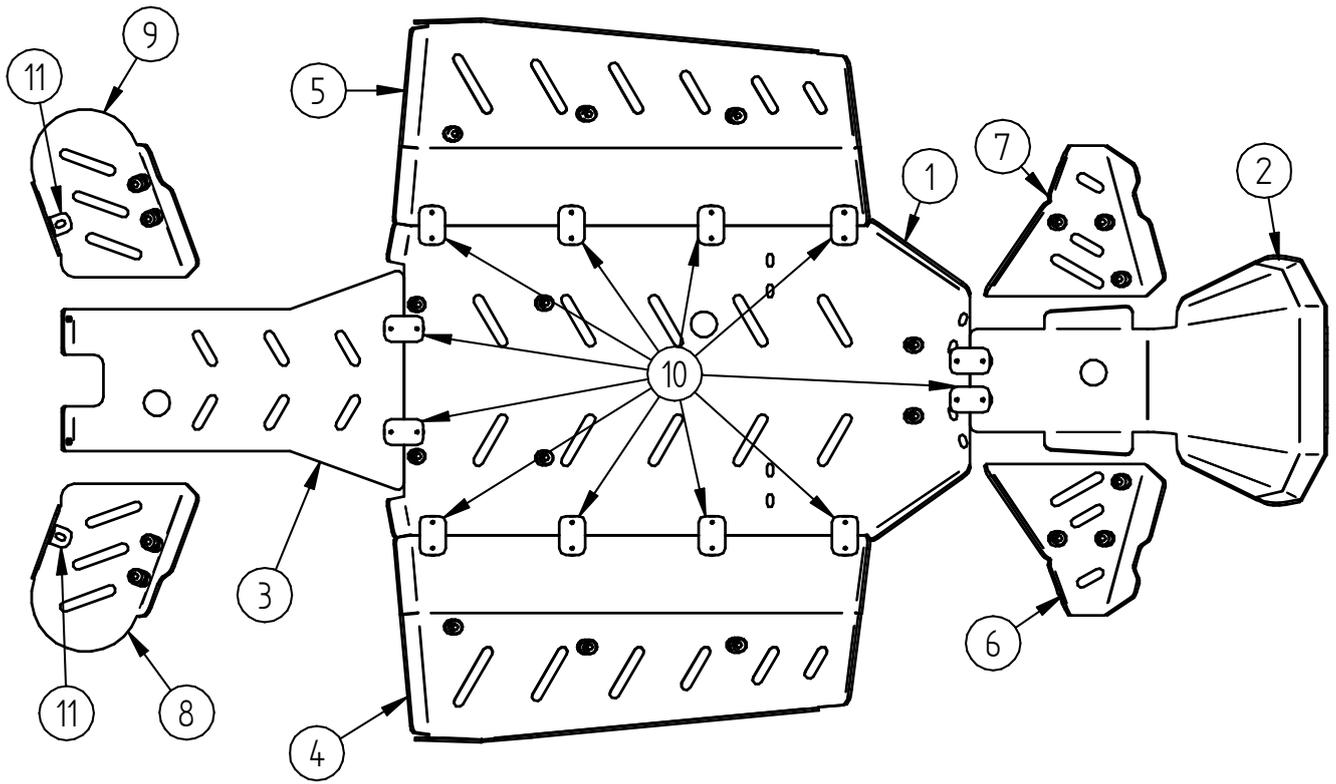

# FITTING INSTRUCTIONS

**Step 1** Remove all standard plastic covers and bolts indicated with arrows. Remove also footwell cover.

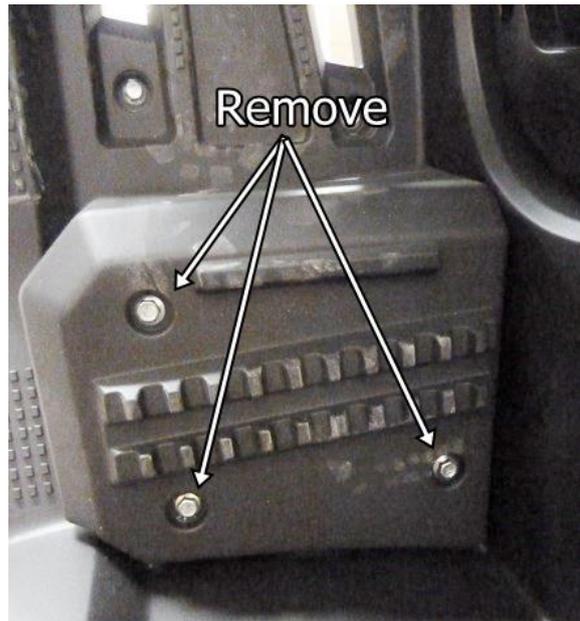


**Step 2** Install front protection 02.17002 and plates 02.5006.



**Step 3** Install the middle part 02.17201K.





**Step 4** Install plates 02.5006 to the middle part.

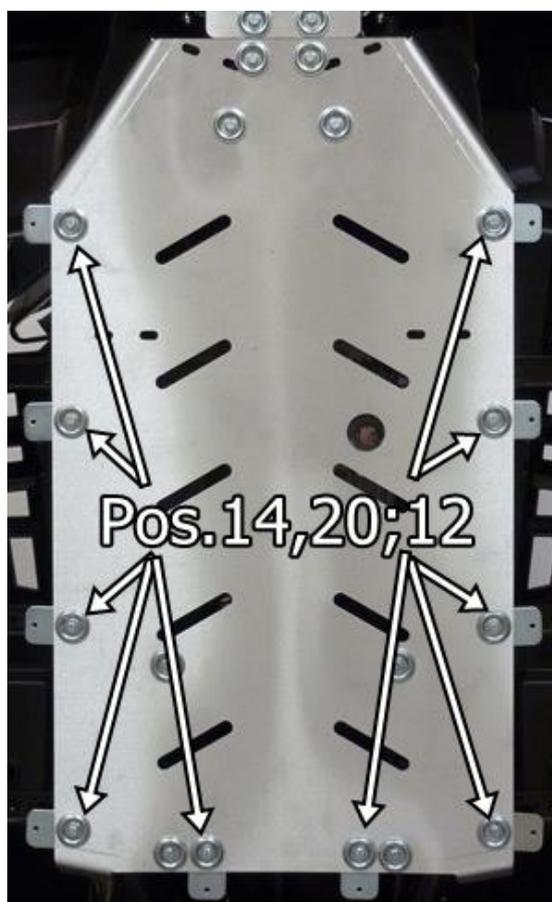


**Step 5** Install rear part 02.17003.



**Step 6** Install side protections 02.17204 and 02.17205.

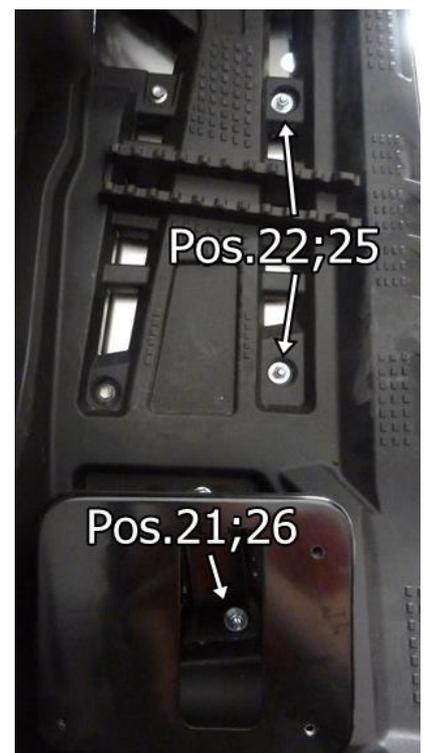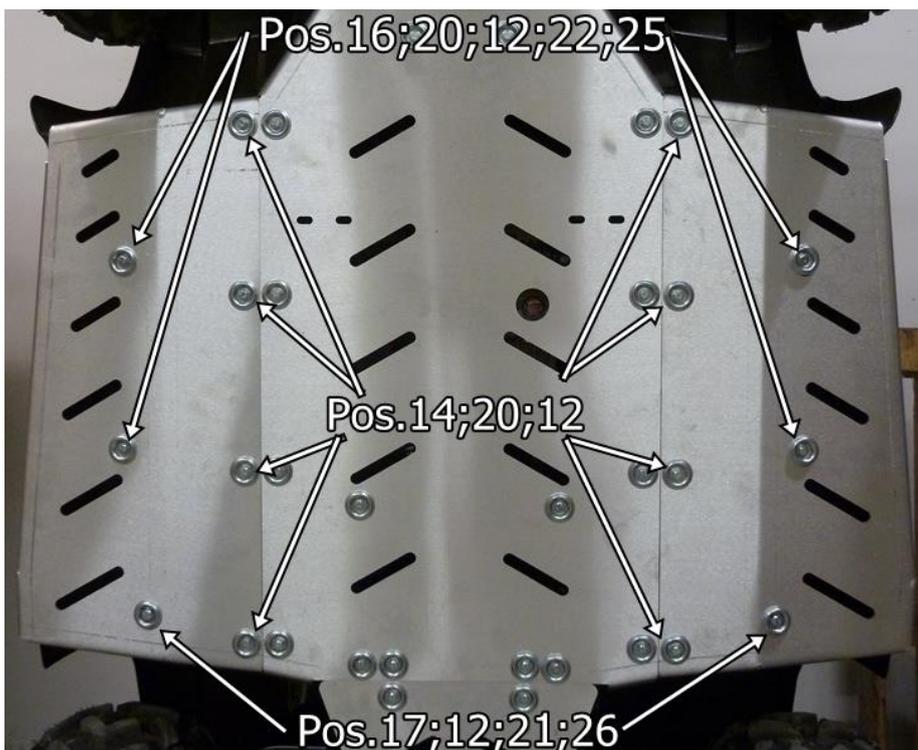

**Step 7** Install front arm protections 02.17006 and 02.17007.

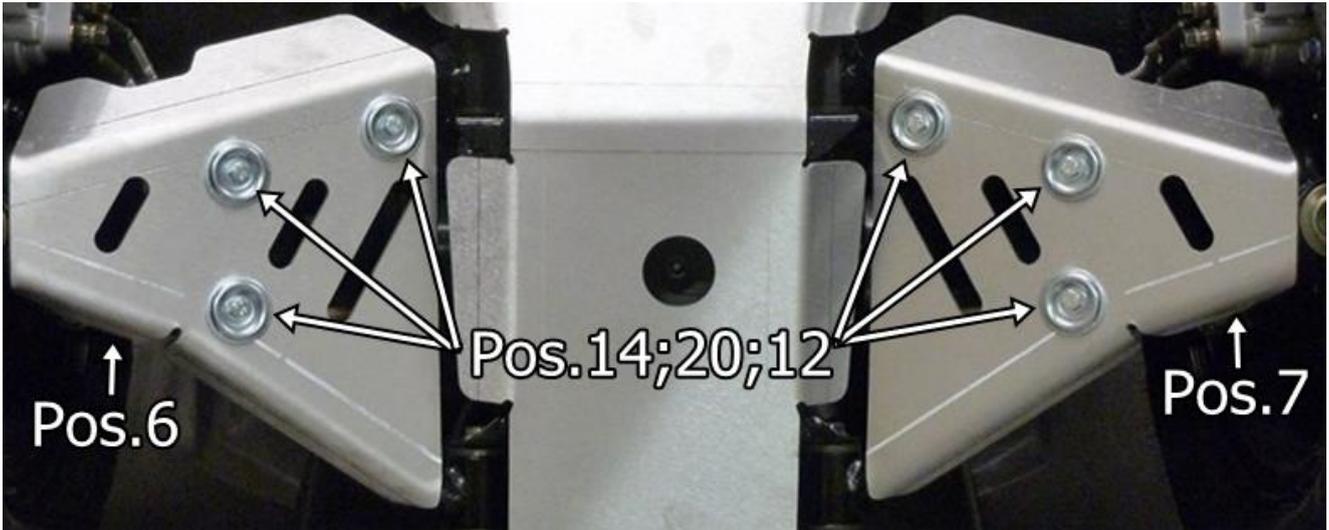

**Step 8** Install rear arm protections 02.17008 and 02.17009.



# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

