

IRON BALTIC


ALUMINIUM SKID PLATE

YAMAHA

Grizzly 700 (2016-...)

Code 02.17400

Version 07092023

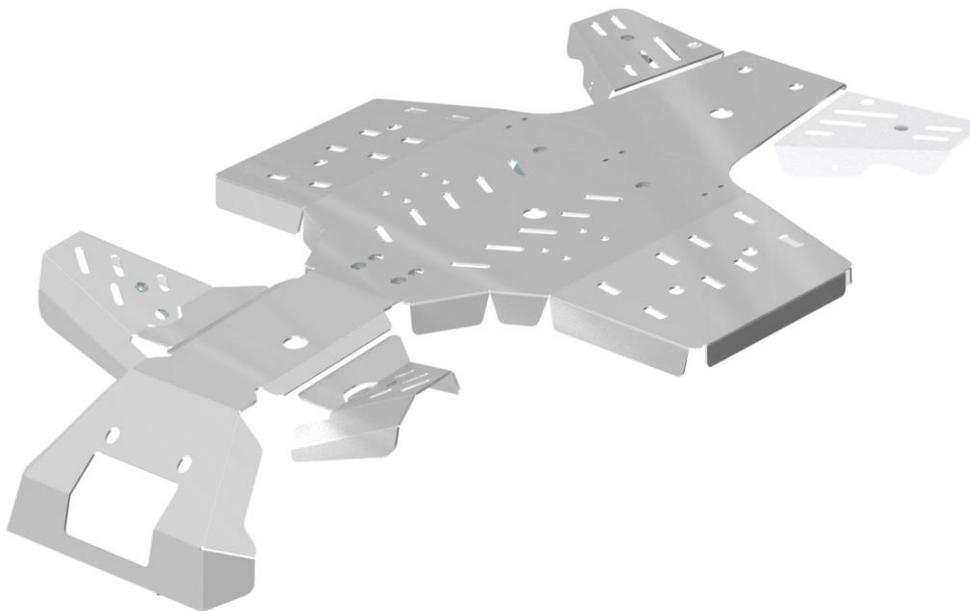

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com



DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/gZLM7CEn

SPECIFICATION

Pos.	Description	Code	Amount
1	Front protection	02.17401	1
2	Middle protection	02.13101	1
3	Rear protection	02.13103	1
4	Front right arm protection	02.13104	1
5	Front left arm protection	02.13105	1
6	Rear right arm protection	02.13106	1
7	Rear left arm protection	02.13107	1
8	Plate	02.718	2
9	Plate	02.5006	3
10	Bracket	02.1173	1
11	Bracket	02.4606	2
12	Clamp	02.5709	2
13	Bolt M6x16 DIN 7991	OT.02.04.020	6
14	Bolt M6x20 DIN 7991	OT.02.04.030	2
15	Bolt M6x16 DIN 933	OT.02.02.050	10
16	Bolt M6x20 DIN 933	OT.02.02.060	4
17	Bolt M6x25 DIN 933	OT.02.02.070	2
18	Bolt M6x40 DIN 933	OT.02.02.100	4
19	Bolt M6x50 DIN 933	OT.02.02.120	2
20	Bolt M8x16 DIN 933	OT.02.02.170	4
21	Washer Ø6/15 SFS 3738	OT.04.03.020	24
22	Washer Ø6/18 DIN 9021	OT.04.02.020	6
23	Conical washer Ø6	14.502	8
24	Dished washer	14.503	22
25	Nyloc nut M6 DIN 985	OT.03.02.030	8

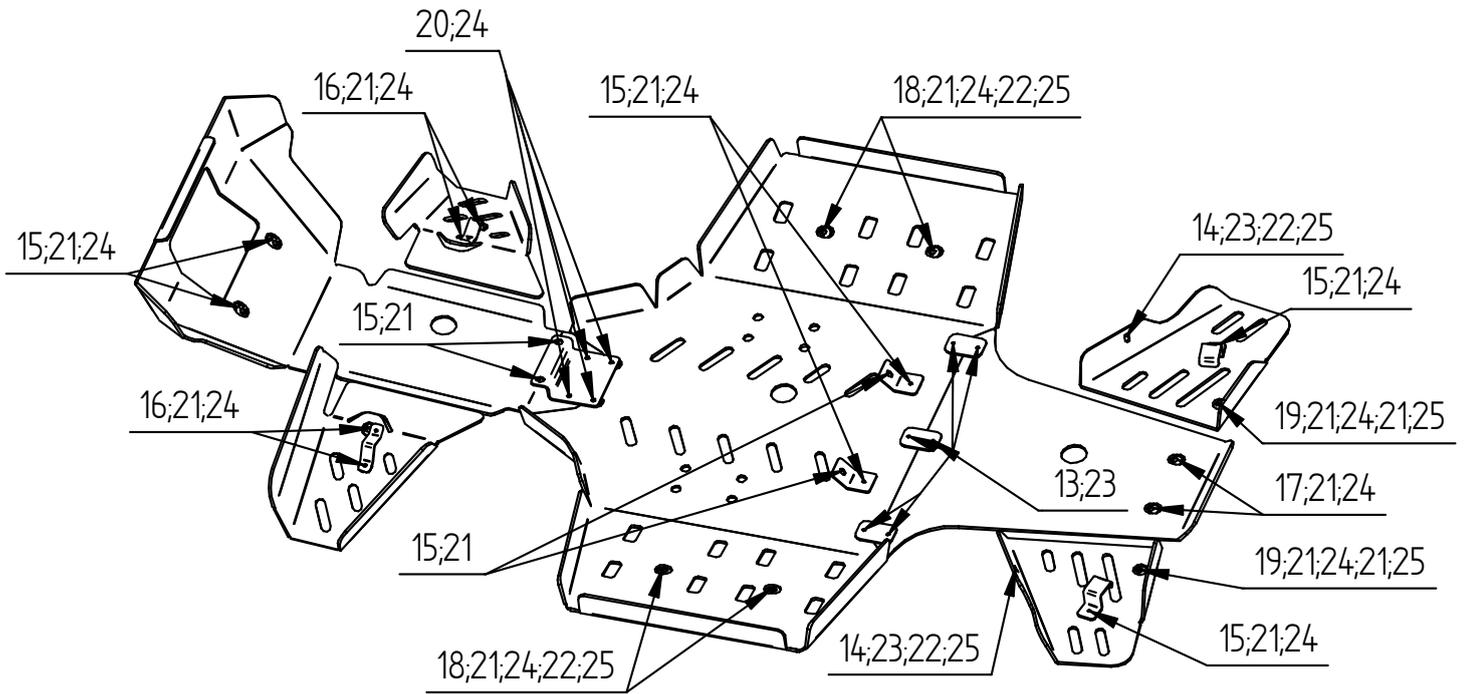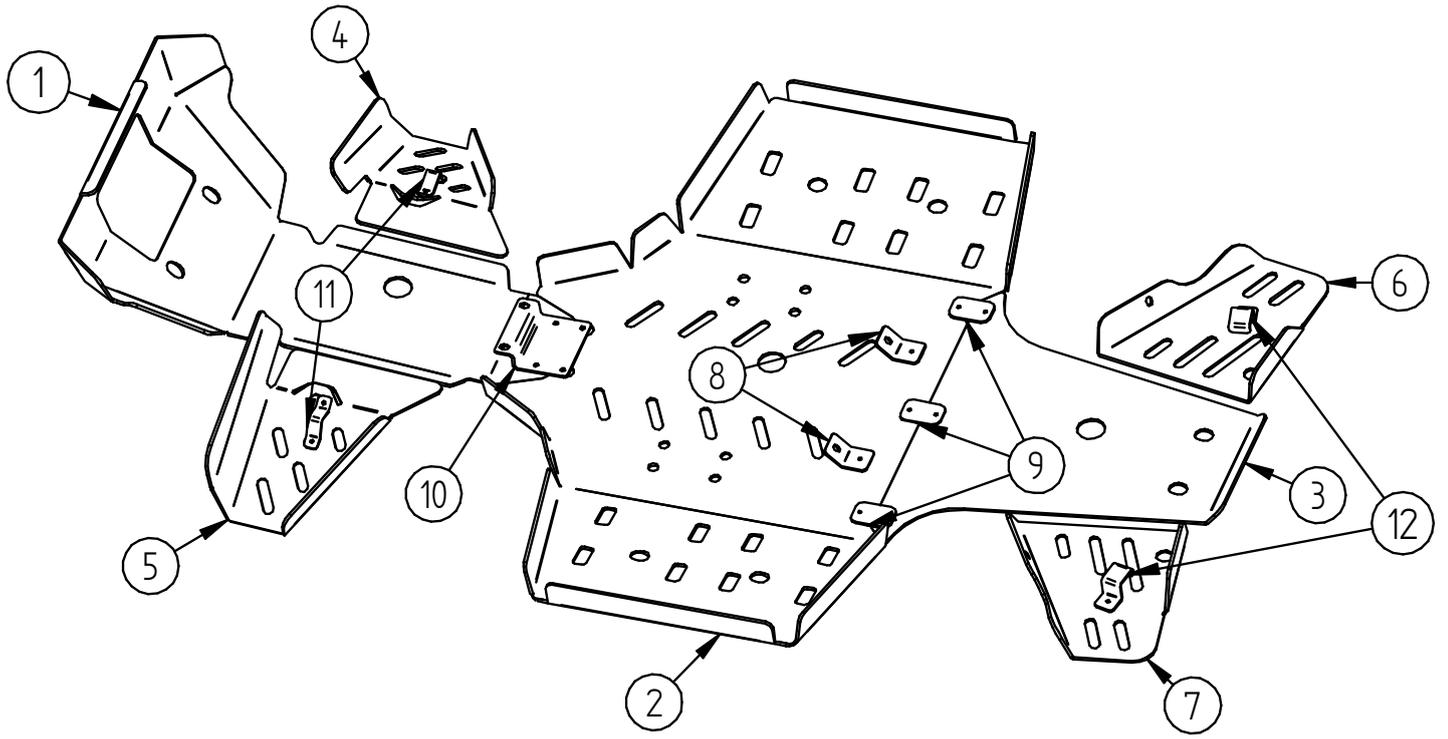


FITTING INSTRUCTIONS


Step 1 Remove all standard plastic protections.



Step 2 Install bracket 02.1173, use bolts M6x16 and washers $\varnothing 6/15$.

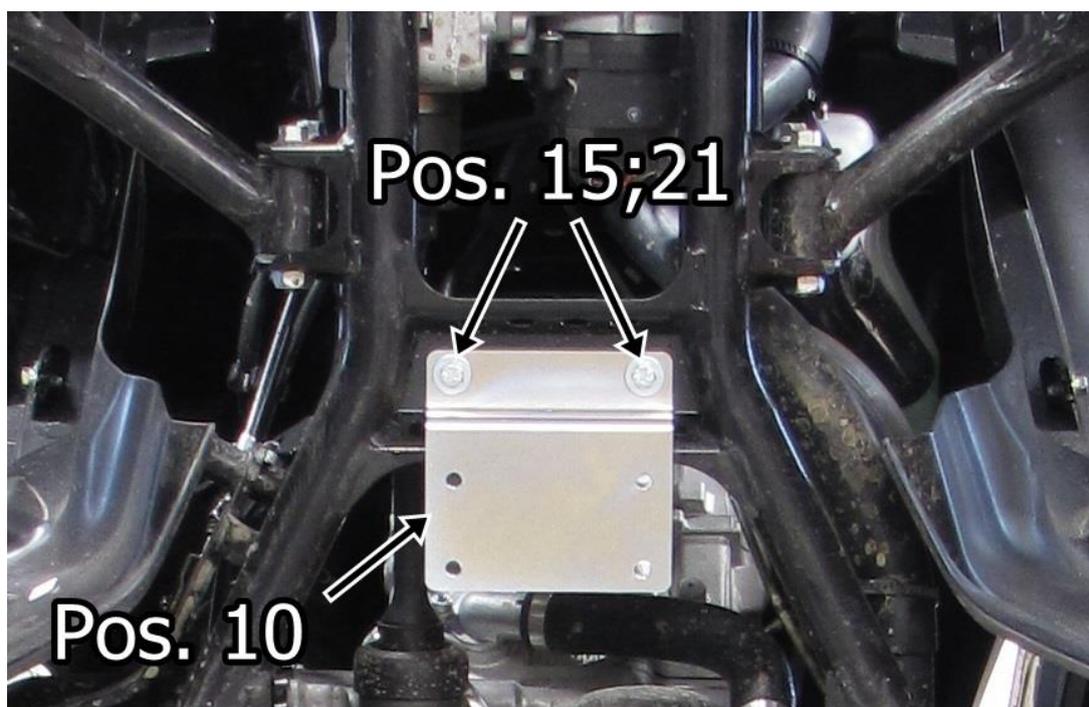


Step 3 Install plates 02.718, use bolts M6x16 and washers Ø6/15.

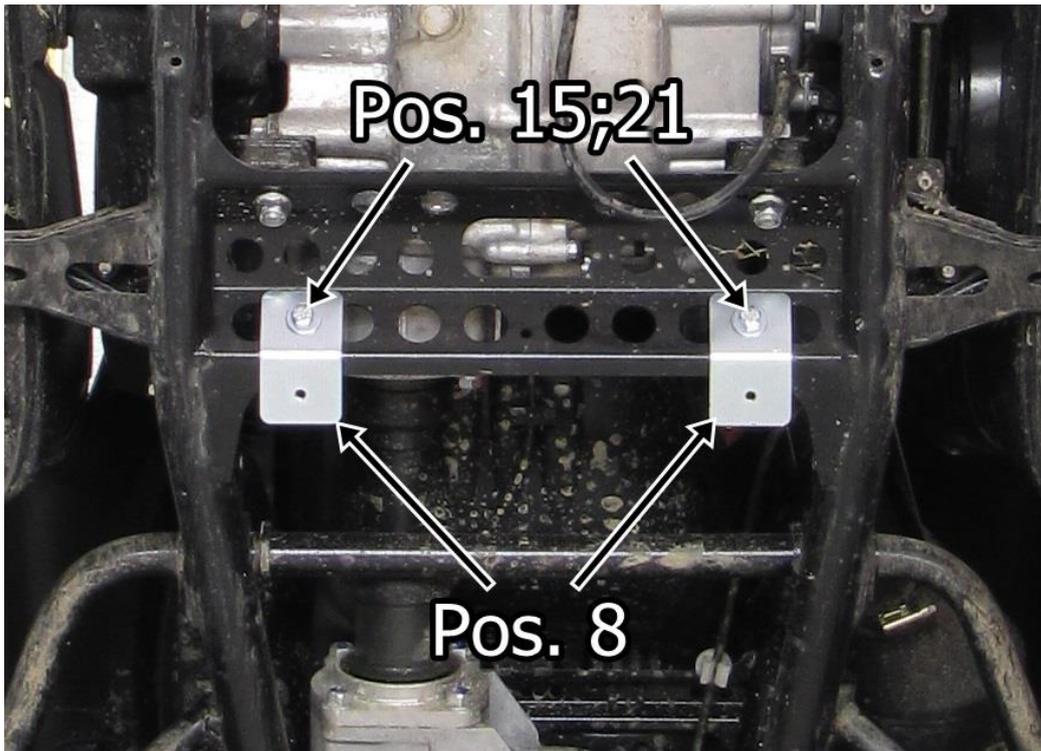

Step 4 Install middle protection 02.13101, use bolts M8x16, M6x16, M6x40; washers Ø6/15, Ø6/18 and nuts M6.



Step 5 Install plates 02.5006, use bolts M6x16.

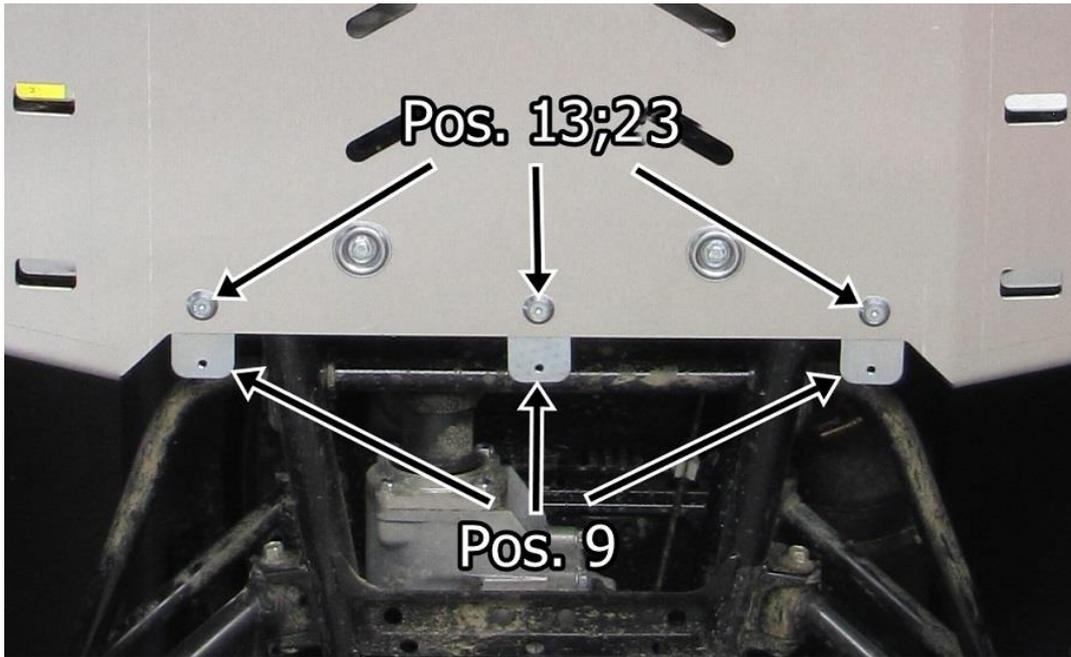

Step 6 Install front protection 02.17401, use bolts M6x16 and M8x16 and washers $\varnothing 6/15$.



Step 7 Install rear protection 02.13103, use bolts M6x16 and M6x25 and washers Ø6/15.



Step 8 Install front A-arms protections 02.13104 and 02.13105, use brackets 02.4606 and bolts M6x20 and washers Ø6/15.



Step 9

Install rear A-arms protections 02.13106 and 02.13107, use brackets 02.5709, bolts M6x16, M6x20, M6x50, washers \varnothing 6/15 and \varnothing 6/18 and nuts M6.



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

