

IRON BALTIC


PLASTIC SKID PLATE

YAMAHA

Grizzly 700 (2016-...)

Code 02.17500

Version 07092023

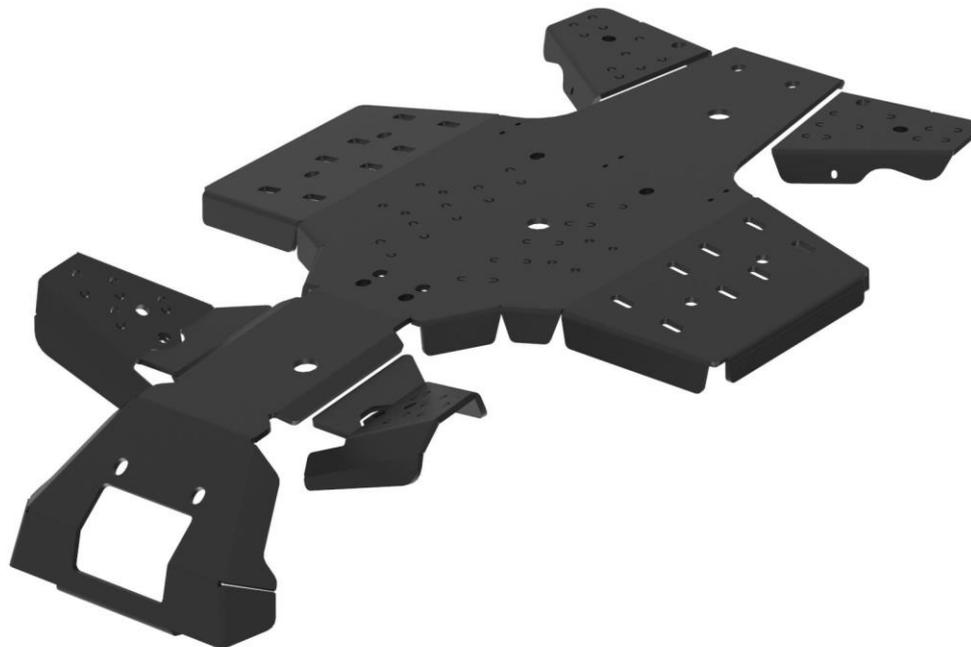

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com



DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/NZ8LYLE9

SPECIFICATION

Pos.	Description	Code	Amount
1	Front protection	02.17501	1
2	Middle protection	02.13201	1
3	Rear protection	02.13203	1
4	Front right arm protection	02.13204	1
5	Front left arm protection	02.13205	1
6	Rear right arm protection	02.13206	1
7	Rear left arm protection	02.13207	1
8	Plate	02.718	2
9	Plate	02.5006	3
10	Bracket	02.1173	1
11	Bracket	02.4606	2
12	Clamp	02.5709	2
13	Bolt M6x20 DIN 7991	OT.02.04.030	6
14	Bolt M6x25 DIN 7991	OT.02.04.040	2
15	Bolt M6x16 DIN 933	OT.02.02.050	4
16	Bolt M6x20 DIN 933	OT.02.02.060	6
17	Bolt M6x25 DIN 933	OT.02.02.070	4
18	Bolt M6x30 DIN 933	OT.02.02.080	2
19	Bolt M6x45 DIN 933	OT.02.02.110	4
20	Bolt M6x60 DIN 933	OT.02.02.140	2
21	Bolt M8x20 DIN 933	OT.02.02.180	4
22	Washer Ø6/15 SFS 3738	OT.04.03.020	24
23	Washer Ø6/18 DIN 9021	OT.04.02.020	6
24	Conical washer Ø6	14.502	8
25	Dished washer	14.503	22
26	Nyloc nut M6 DIN 985	OT.03.02.030	8

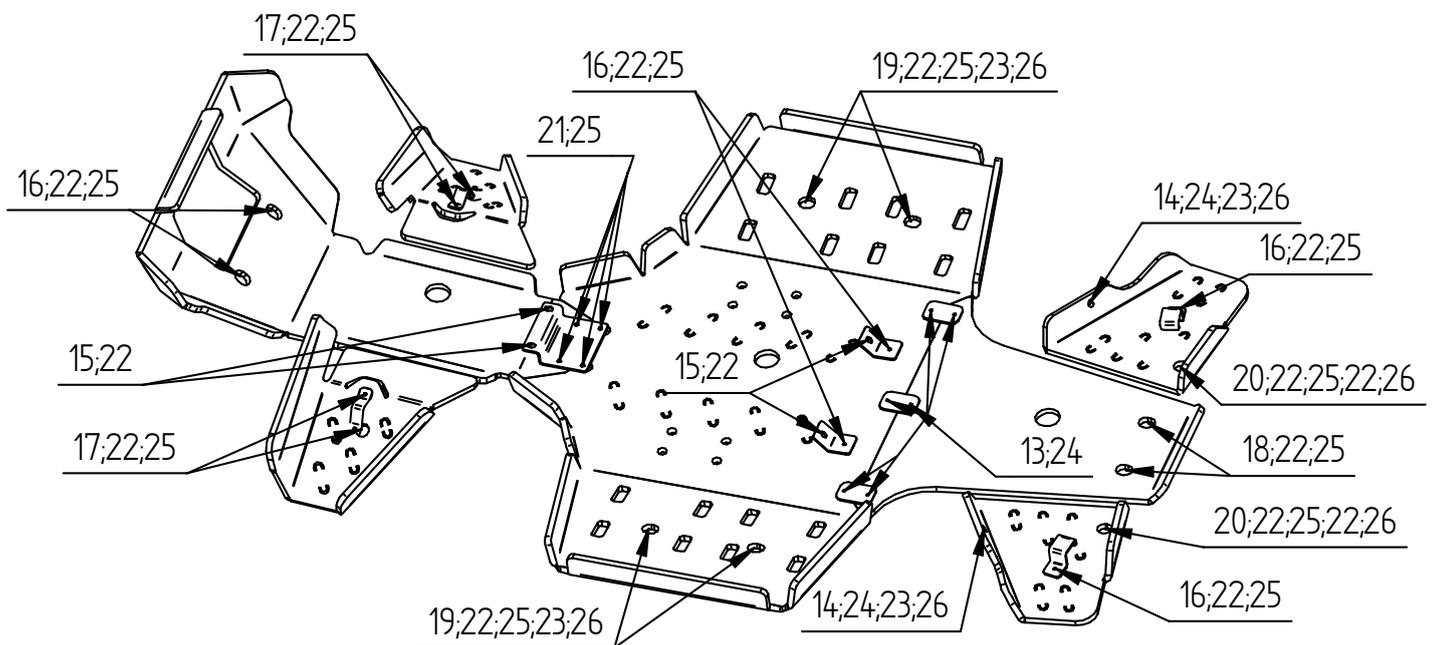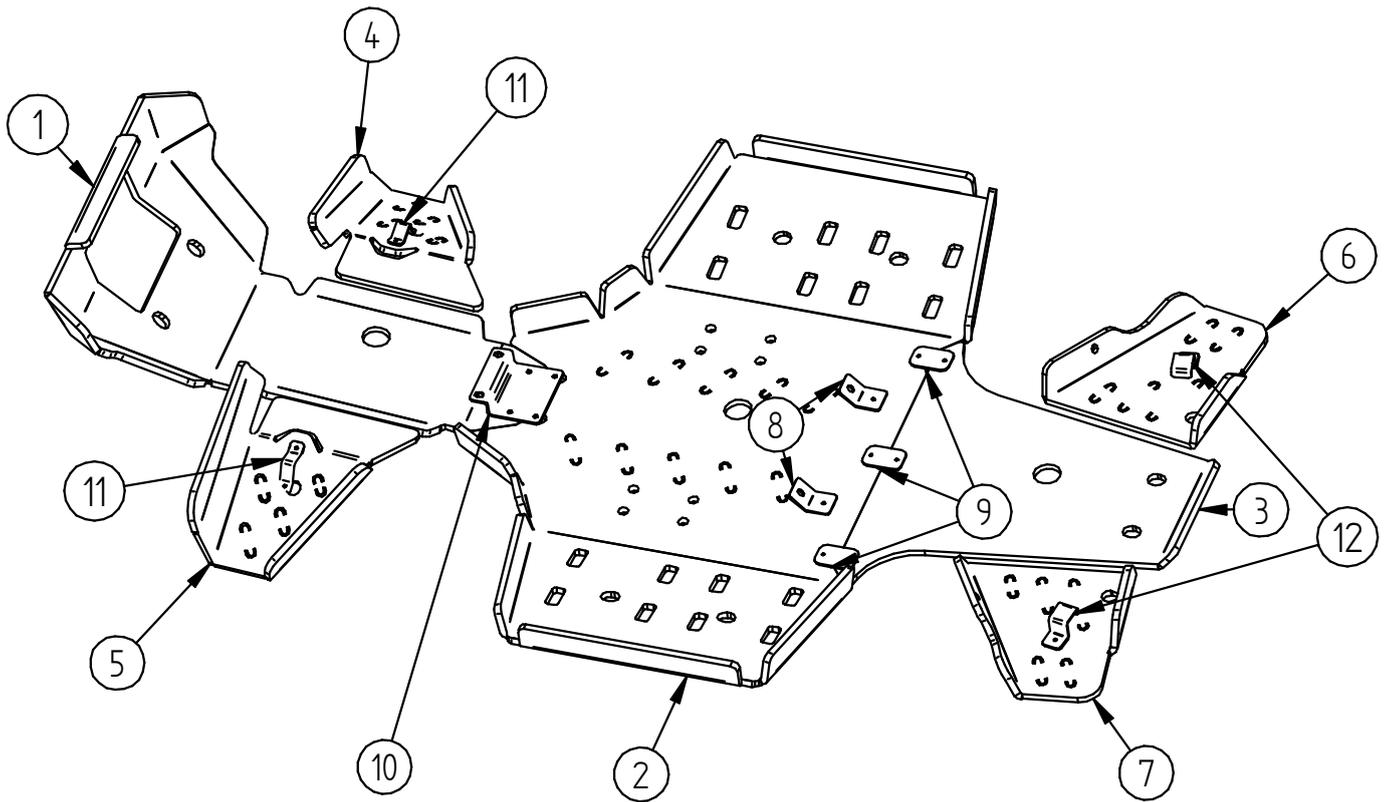


FITTING INSTRUCTIONS


Step 1 Remove all standard plastic protections.





Step 2 Install bracket 02.1173, use bolts M6x16 and washers $\varnothing 6/15$.

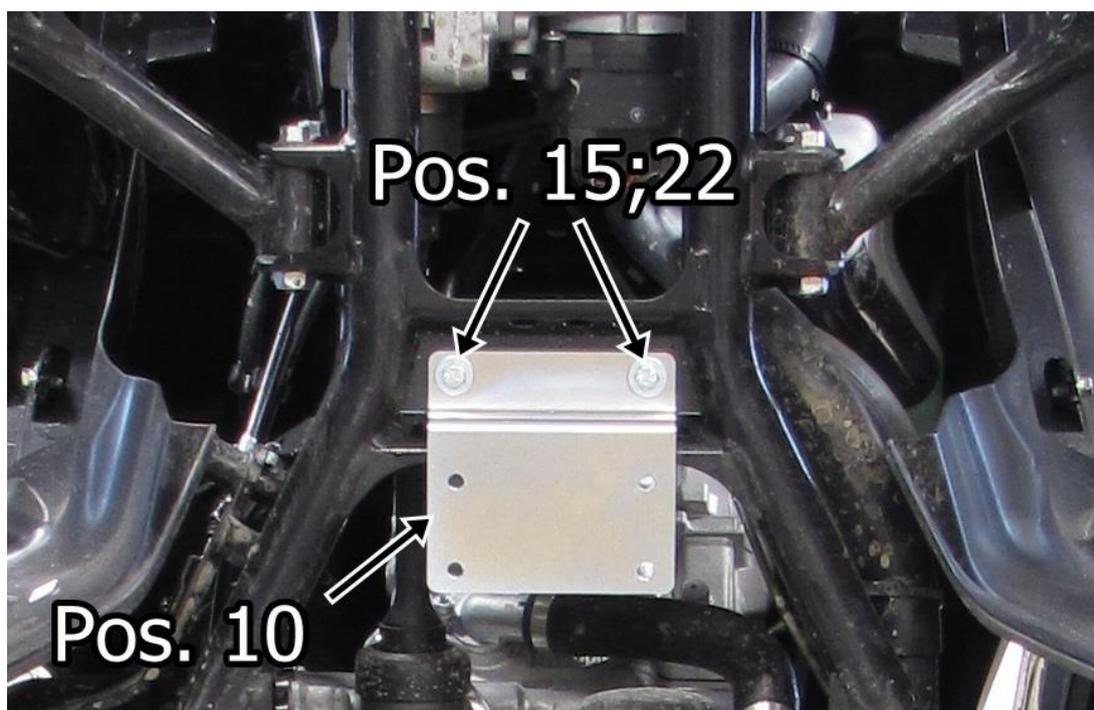


Step 3 Install plates 02.718, use bolts M6x16 and washers Ø6/15.

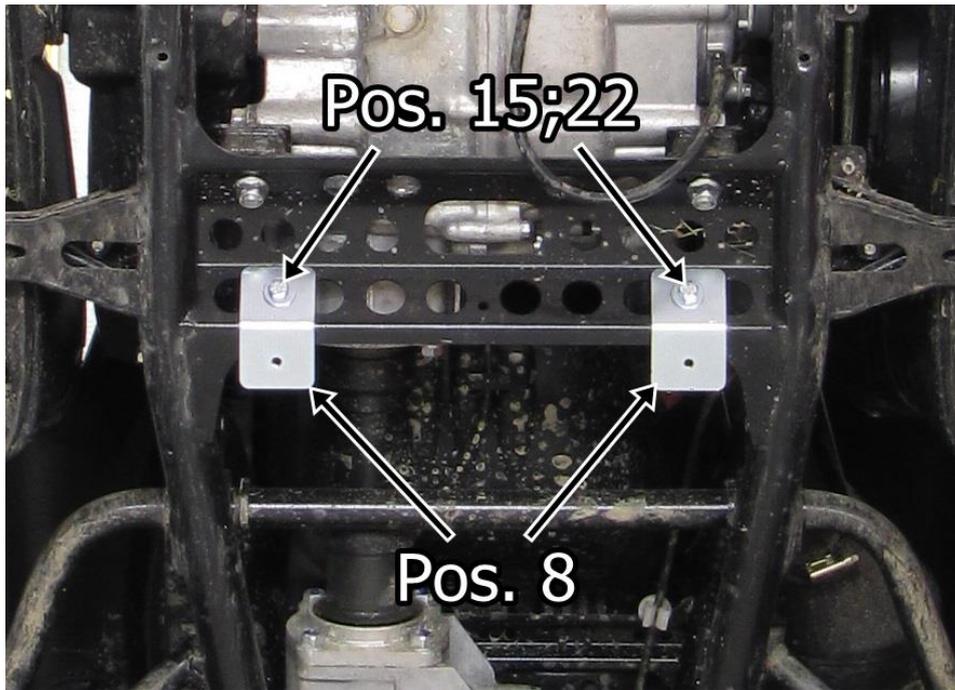

Step 4 Install middle protection 02.13201, use bolts M8x20, M6x20, M6x45; washers Ø6/15, Ø6/18 and nuts M6.

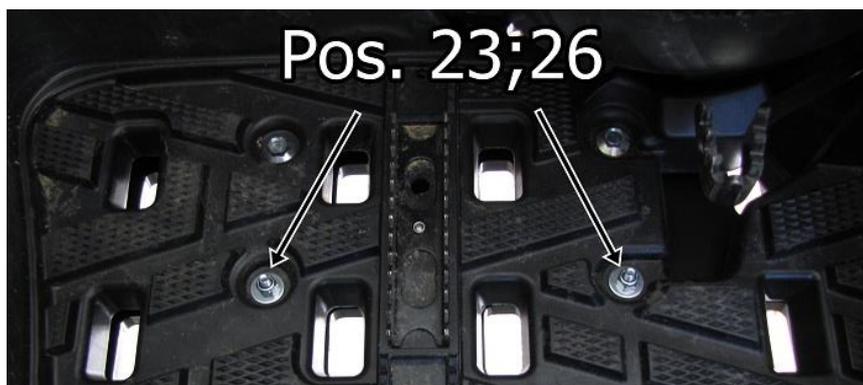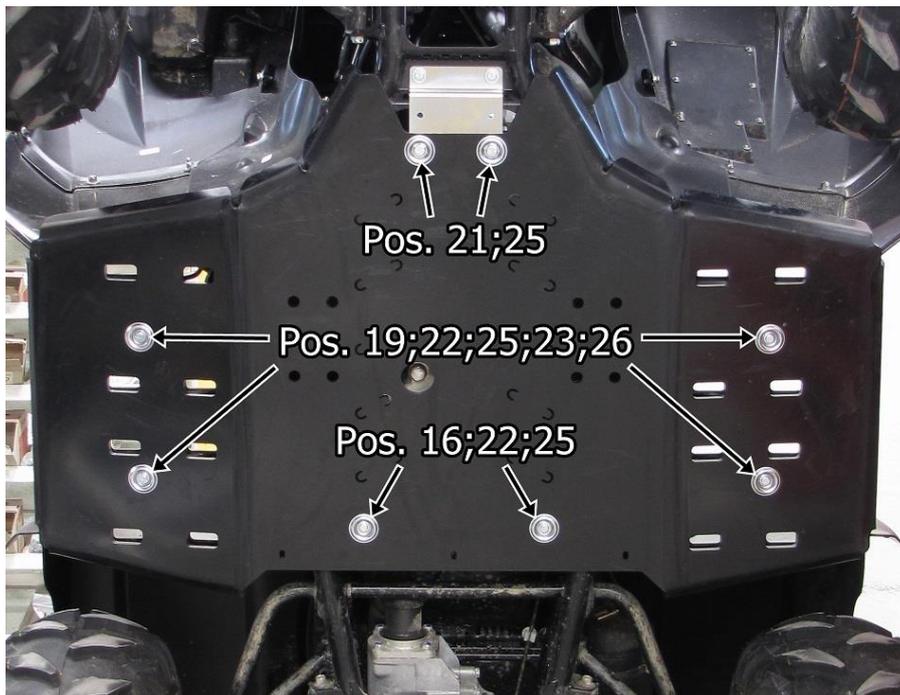


Step 5 Install plates 02.5006, use bolts M6x20.

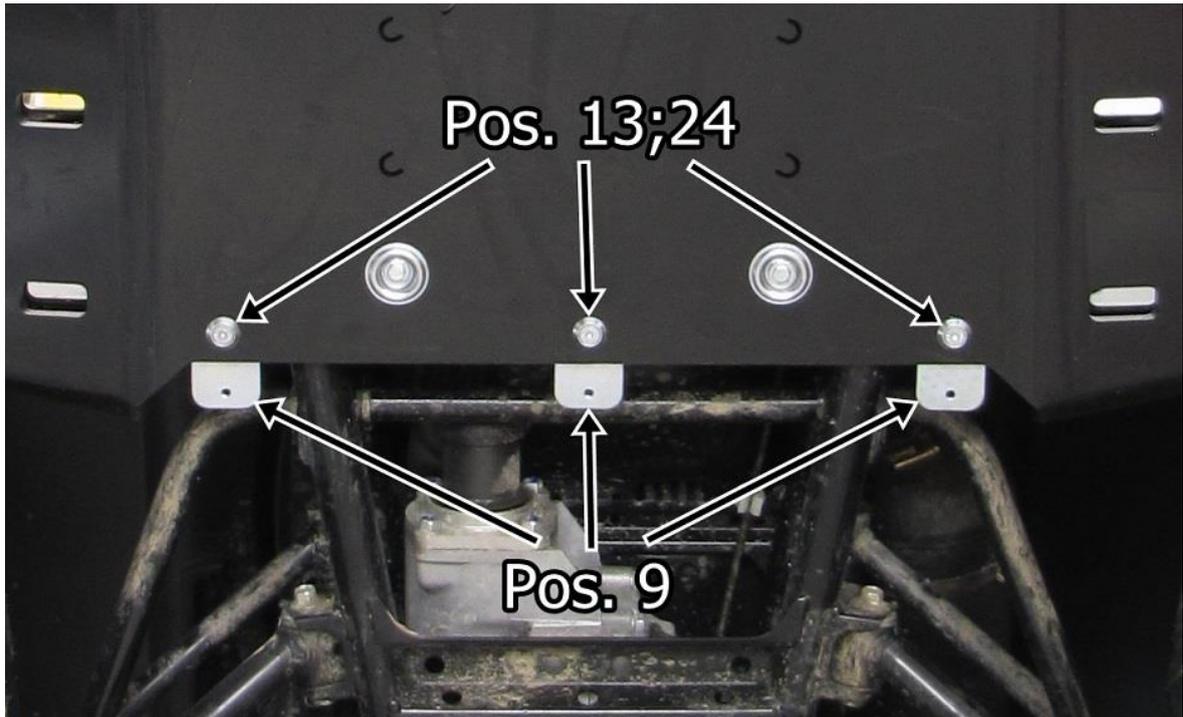


Step 6 Install front protection 02.17501, use bolts M6x20 and M8x20 and washers $\varnothing 6/15$.





Step 7 Install rear protection 02.13203, use bolts M6x20 and M6x30 and washers Ø6/15.

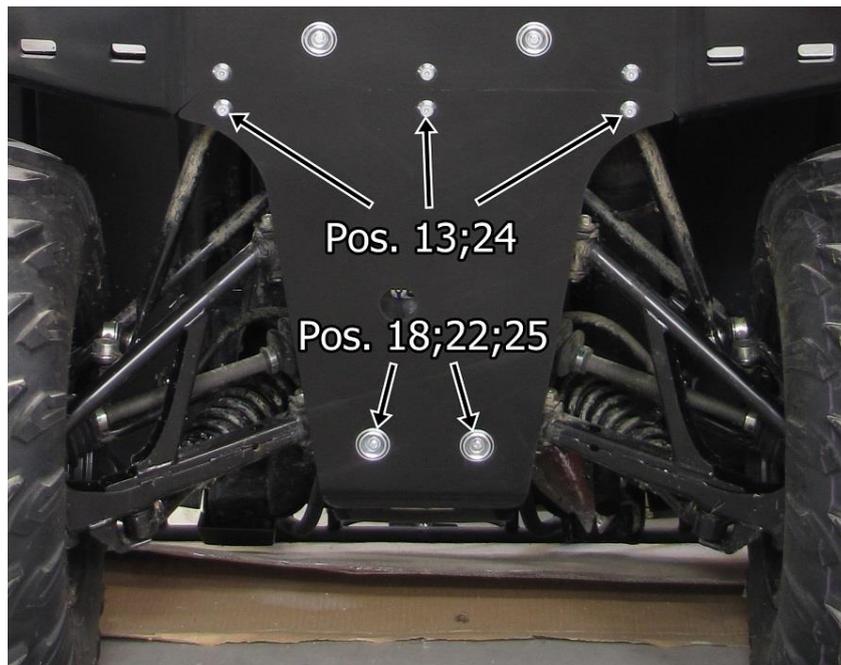

Step 8 Install front A-arms protections 02.13204 and 02.13205, use brackets 02.4606 and bolts M6x25 and washers Ø6/15.

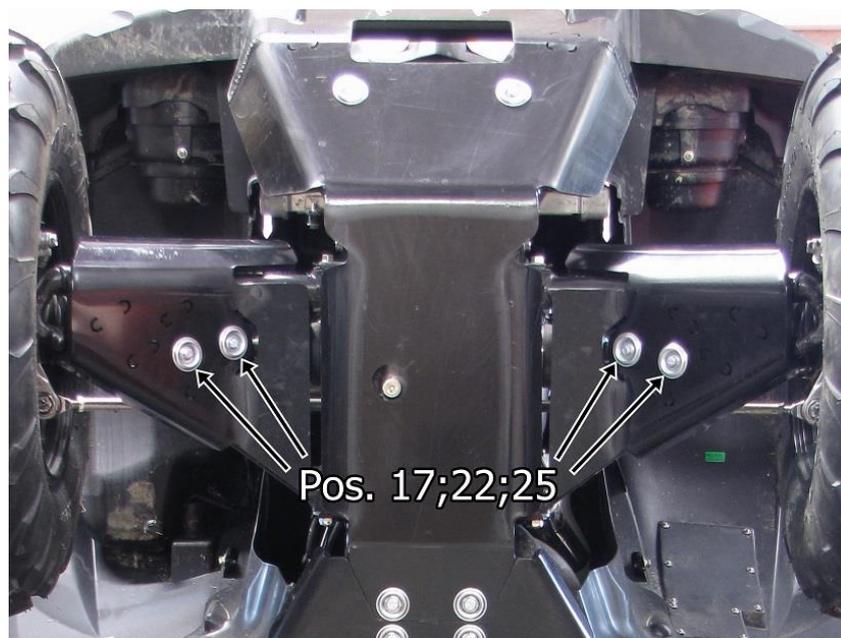

Samm 9 Install rear A-arms protections 02.13206 and 02.13207, use brackets 02.5709, bolts M6x20, M6x25, M6x60, washers \varnothing 6/15 and \varnothing 6/18 and nuts M6.

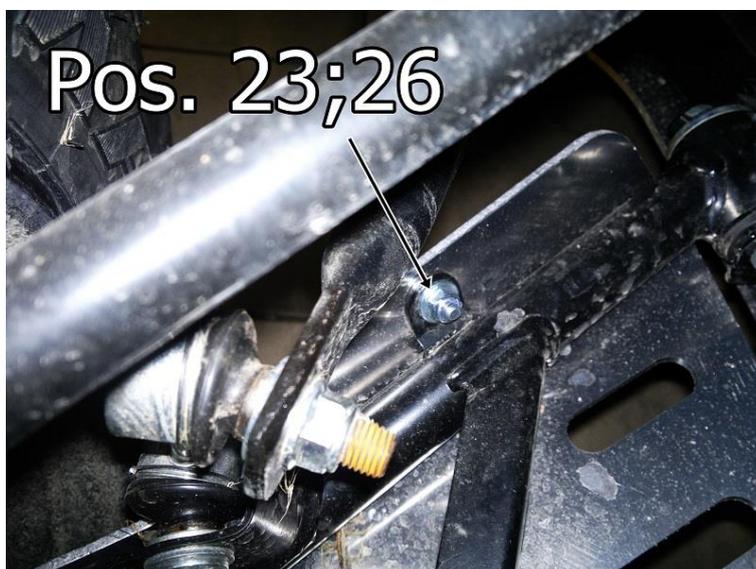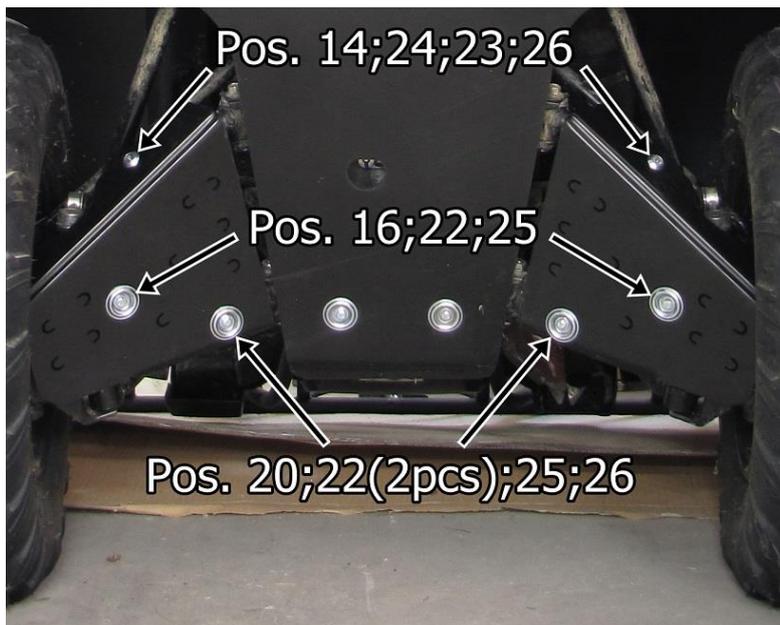



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

