

# IRON BALTIC


## ALUMINIUM SKID PLATE

# YAMAHA

## Kodiak 700

Code 02.17600

Version 08092023

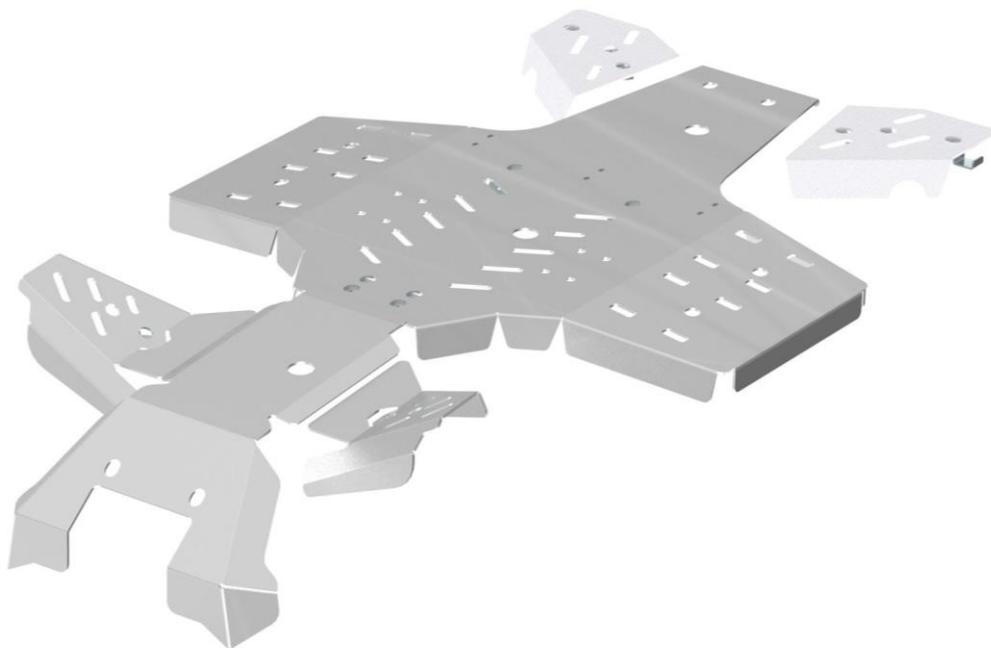

**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

Iron Baltic Ltd | +372 653 3711 | [sales@ironbaltic.com](mailto:sales@ironbaltic.com) | [www.ironbaltic.com](http://www.ironbaltic.com)



DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/49r3jMAW](http://code.ironbaltic.com/u/49r3jMAW)

# SPECIFICATION

| Pos. | Description                | Code         | Amount |
|------|----------------------------|--------------|--------|
| 1    | Front protection           | 02.17601     | 1      |
| 2    | Front right arm protection | 02.17602     | 1      |
| 3    | Front left arm protection  | 02.17603     | 1      |
| 4    | Rear right arm protection  | 02.17604     | 1      |
| 5    | Rear left arm protection   | 02.17605     | 1      |
| 6    | Middle protection          | 02.13101     | 1      |
| 7    | Rear protection            | 02.13103     | 1      |
| 8    | Plate                      | 02.718       | 2      |
| 9    | Plate                      | 02.719       | 2      |
| 10   | Bracket                    | 02.1173      | 1      |
| 11   | Bracket                    | 02.4606      | 2      |
| 12   | Plate                      | 02.5006      | 3      |
| 13   | Clamp                      | 02.5709      | 2      |
| 14   | Dished washer              | 14.503       | 24     |
| 15   | Bolt M6x16 DIN 7991        | OT.02.04.020 | 6      |
| 16   | Bolt M6x16 DIN 933         | OT.02.02.050 | 14     |
| 17   | Bolt M6x20 DIN 933         | OT.02.02.060 | 4      |
| 18   | Bolt M6x25 DIN 933         | OT.02.02.070 | 2      |
| 19   | Bolt M6x40 DIN 933         | OT.02.02.100 | 4      |
| 20   | Bolt M8x16 DIN 933         | OT.02.02.170 | 4      |
| 21   | Washer Ø6/15 SFS 3738      | OT.04.03.020 | 24     |
| 22   | Washer Ø6/18 DIN 9021      | OT.04.02.020 | 4      |
| 23   | Conical washer Ø6          | 14.502       | 6      |
| 24   | Nyloc nut M6 DIN 985       | OT.03.02.030 | 4      |

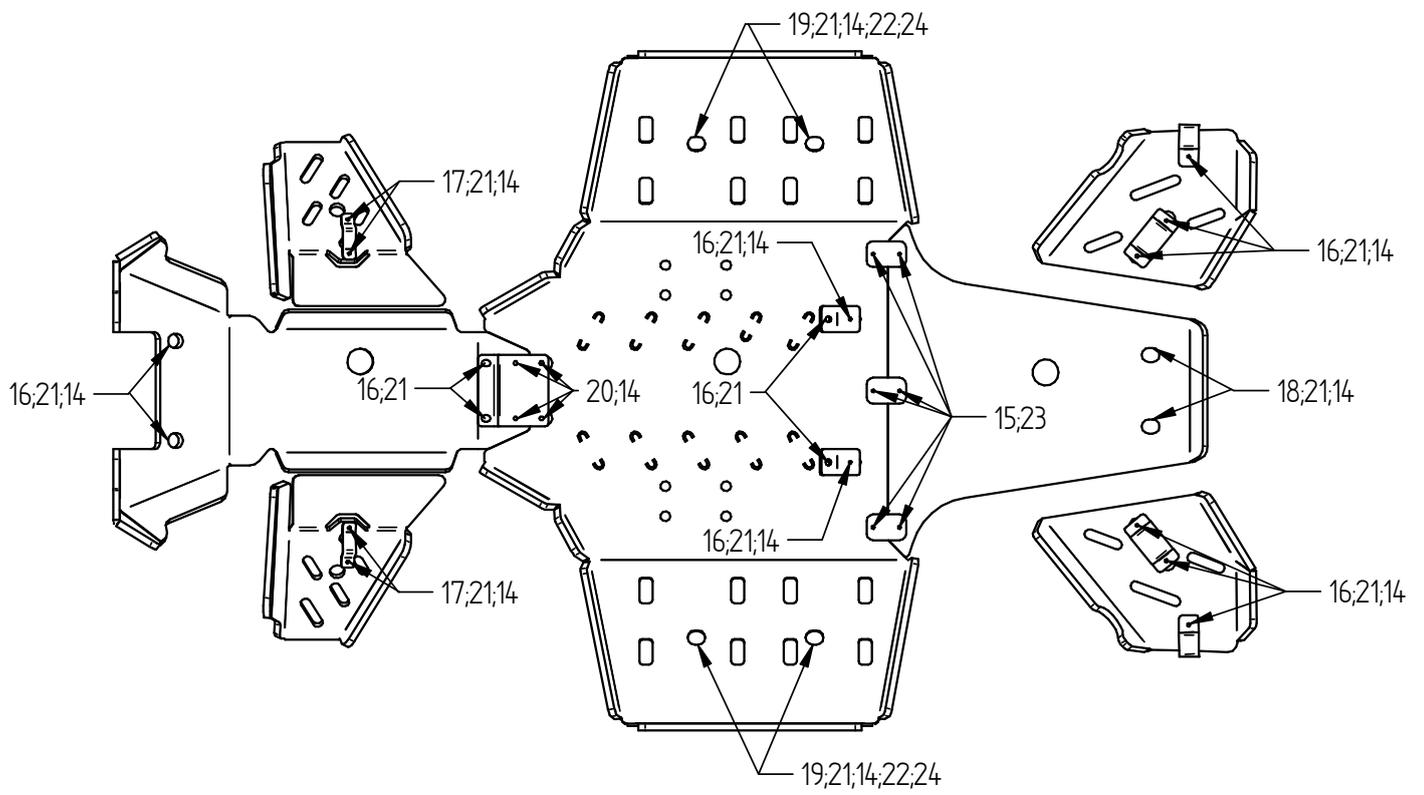
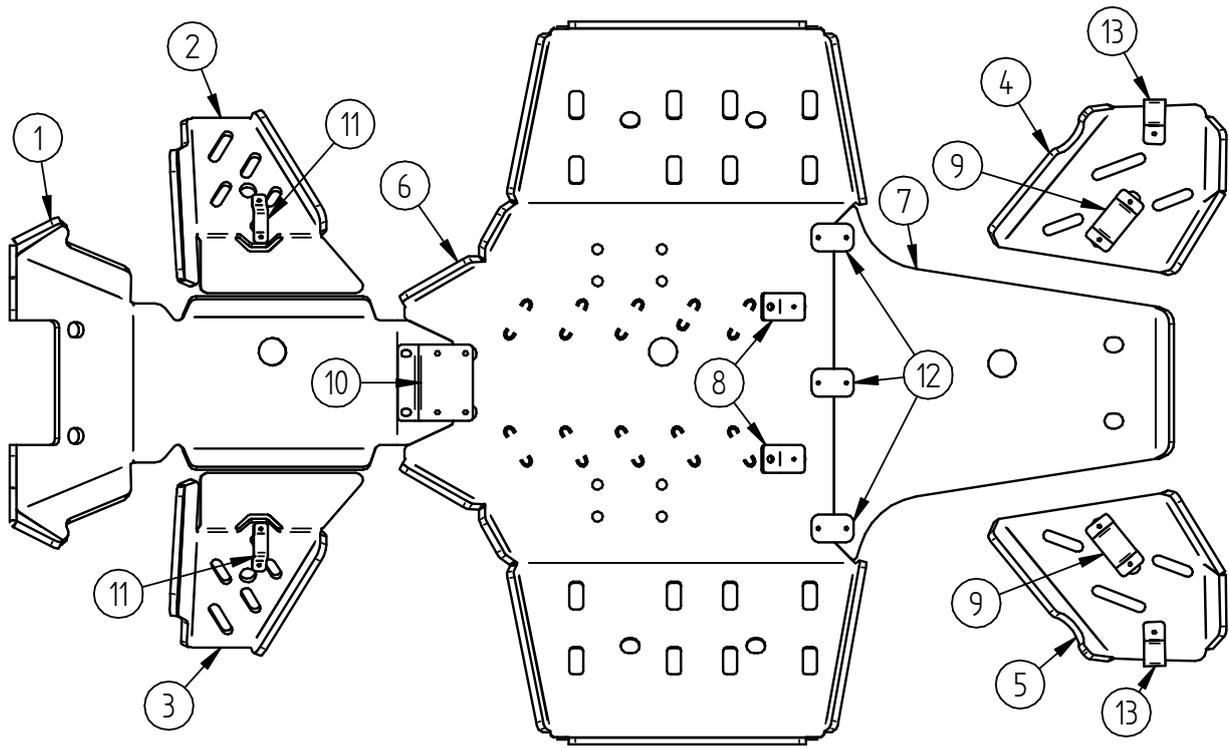


# FITTING INSTRUCTIONS


**Step 1** Remove all standard plastic protections and bolts indicated with arrows.




**Step 2** Install bracket 02.1173 and plates 02.718.

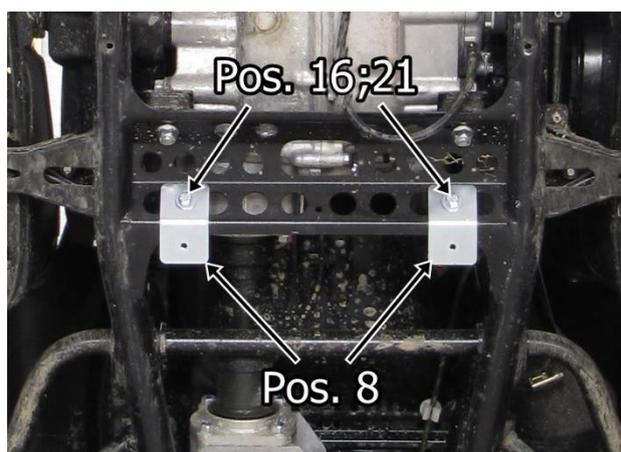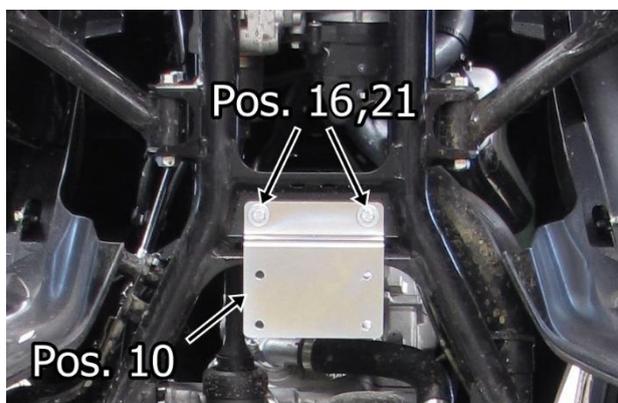

**Step 3** Install front arm protections 02.17602 and 02.17603.

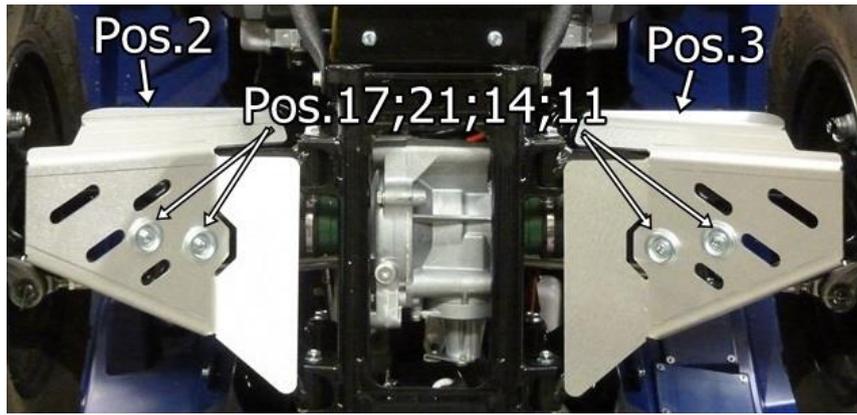


**Step 4** Install rear arm protections 02.17604 and 02.17605.

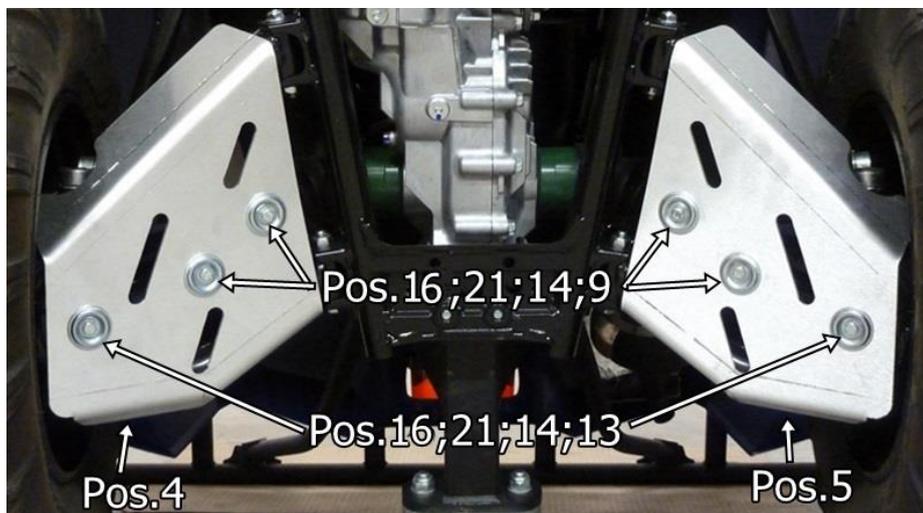


**Step 5** Install front protection 02.17601.




**Step 6** Install middle protection 02.13101.

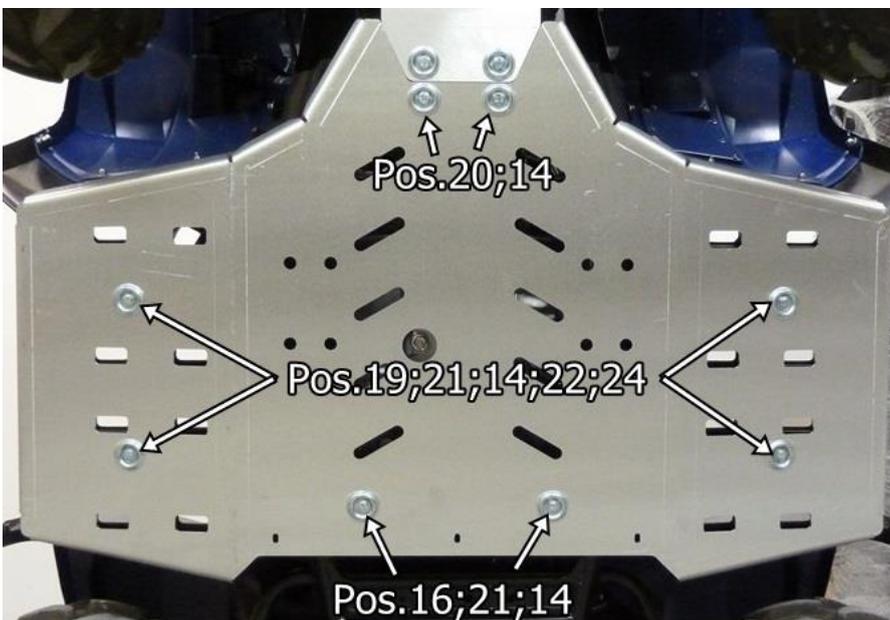

**Step 7** Install plates 02.5006 to the middle protection.

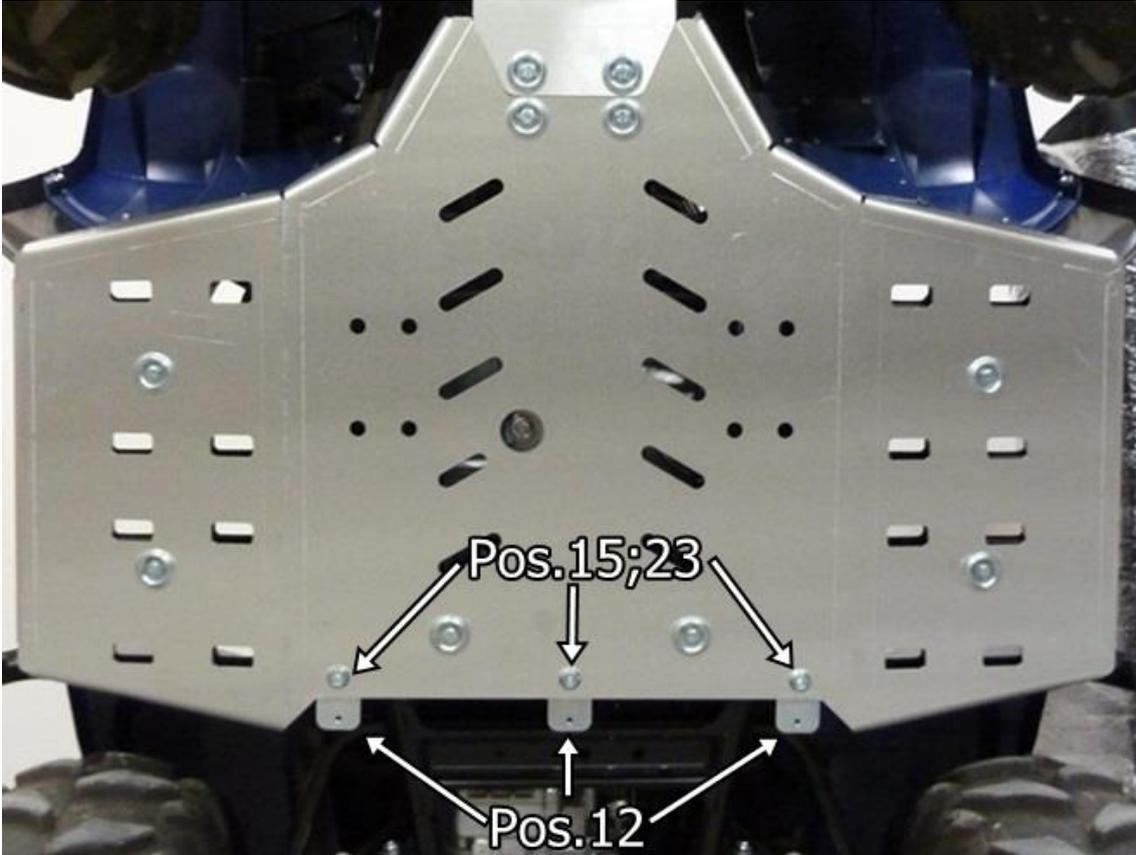

**Step 8** Install rear protection 02.13103.

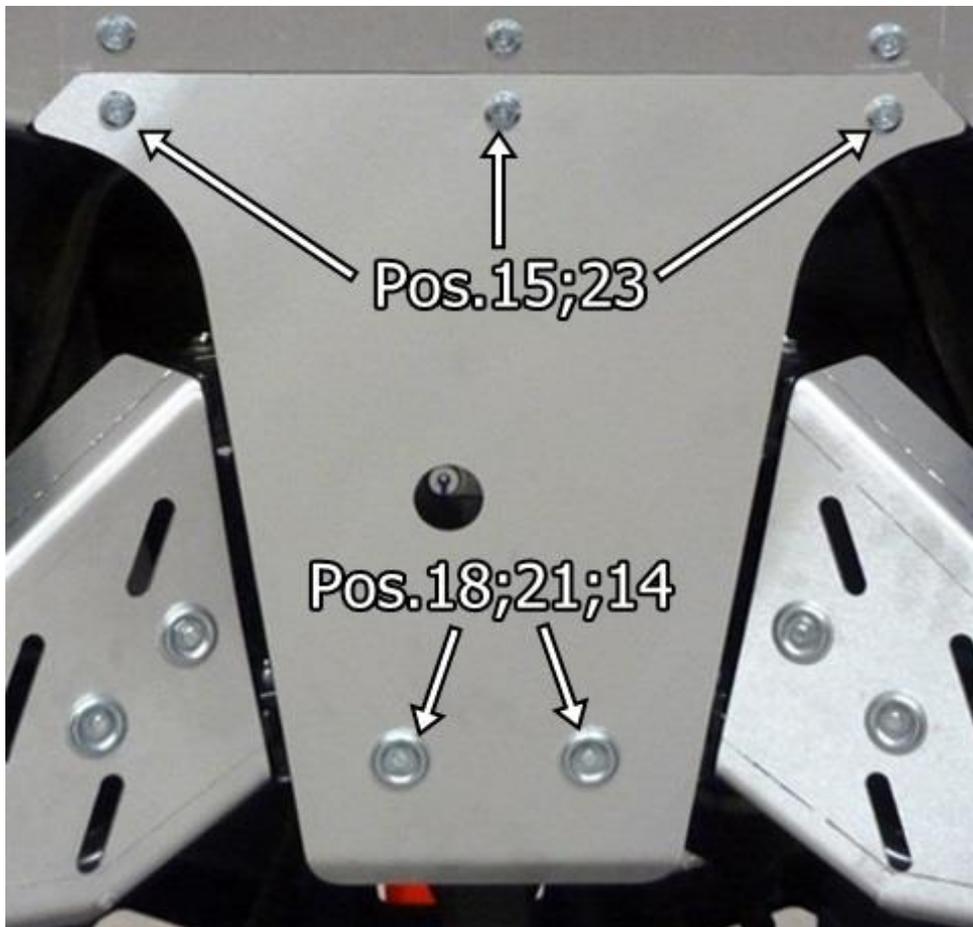

# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

