

# IRON BALTIC


## SKID PLATE

# POLARIS

## RZR 570

Code 02.17800

Version 08092023

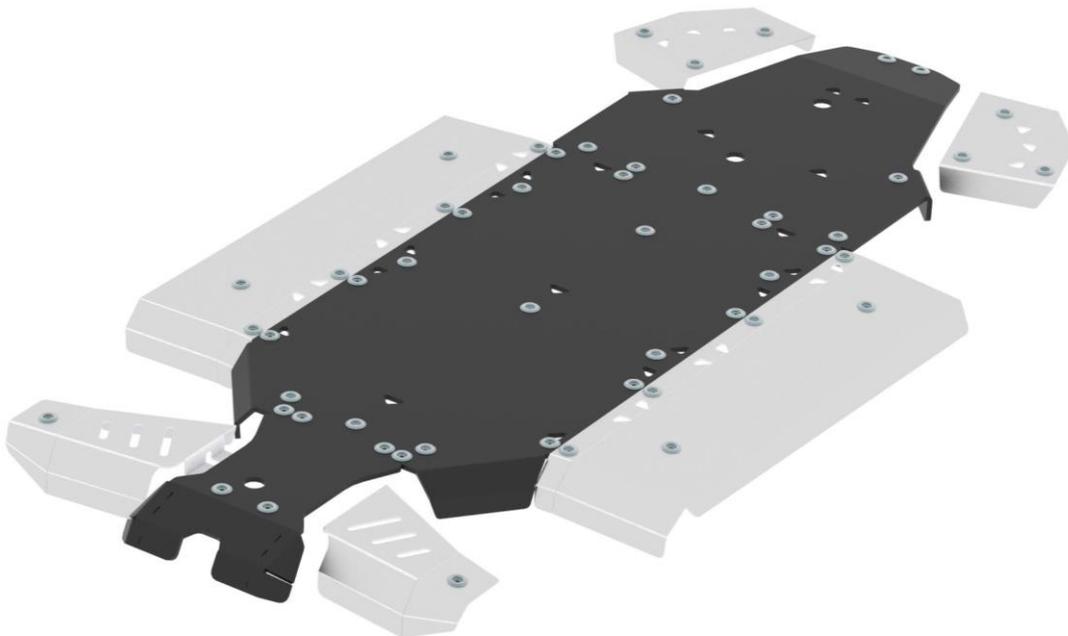

**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic [sales@ironbaltic.com](mailto:sales@ironbaltic.com)

Iron Baltic Ltd | +372 653 3711 | [sales@ironbaltic.com](mailto:sales@ironbaltic.com) | [www.ironbaltic.com](http://www.ironbaltic.com)



DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/iv2ieWX3](http://code.ironbaltic.com/u/iv2ieWX3)


# SPECIFICATION

| Pos. | Description                | Code         | Amount |
|------|----------------------------|--------------|--------|
| 1    | Front protection           | 02.17801     | 1      |
| 2    | Middle protection          | 02.17802     | 1      |
| 3    | Rear protection            | 02.17803     | 1      |
| 4    | Right side protection      | 02.17804     | 1      |
| 5    | Left side protection       | 02.17805     | 1      |
| 6    | Front left arm protection  | 02.17806     | 1      |
| 7    | Front right arm protection | 02.17807     | 1      |
| 8    | Rear right arm protection  | 02.14506     | 1      |
| 9    | Rear left arm protection   | 02.14507     | 1      |
| 10   | Installation plate         | 02.2305      | 8      |
| 11   | Installation plate         | 02.5006      | 12     |
| 12   | Installation plate         | 02.8210      | 2      |
| 13   | Installation angle         | 03.1502      | 4      |
| 14   | Dished washer              | 14.503       | 54     |
| 15   | Bolt M6x16 DIN 933         | OT.02.02.050 | 24     |
| 16   | Bolt M6x20 DIN 933         | OT.02.02.060 | 12     |
| 17   | Bolt M6x55 DIN 933         | OT.02.02.130 | 4      |
| 18   | Bolt M6x60 DIN 933         | OT.02.02.140 | 2      |
| 19   | Bolt M8x20 DIN 933         | OT.02.02.180 | 2      |
| 20   | Bolt M8x25 DIN 933         | OT.02.02.190 | 10     |
| 21   | Bolt M8x55 DIN 933         | OT.02.02.241 | 4      |
| 22   | Washer Ø6/15 SFS 3738      | OT.04.03.020 | 48     |
| 23   | Washer Ø8/20 SFS 3738      | OT.04.03.030 | 4      |
| 24   | Nyloc nut M6 DIN 985       | OT.03.02.030 | 6      |
| 25   | Nyloc nut M8 DIN 985       | OT.03.02.040 | 4      |

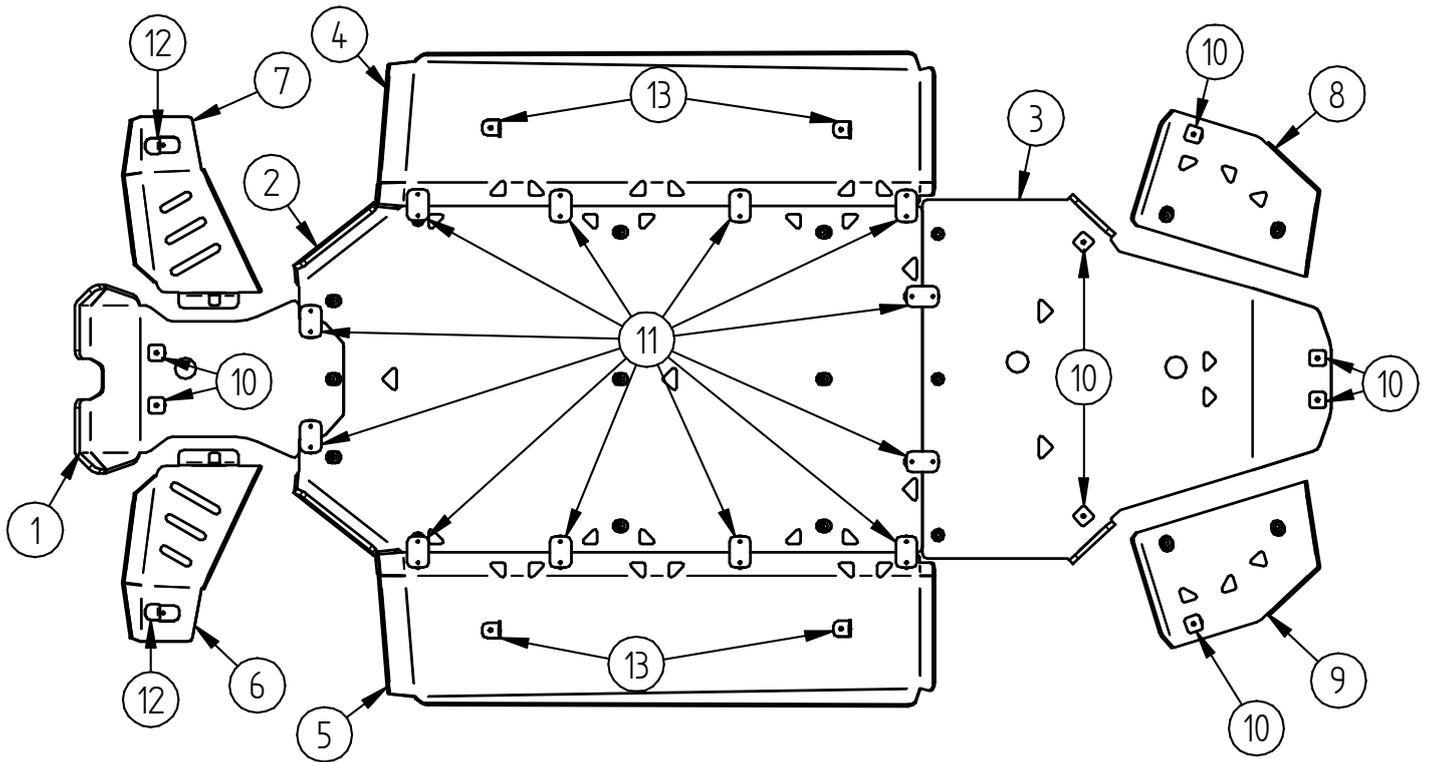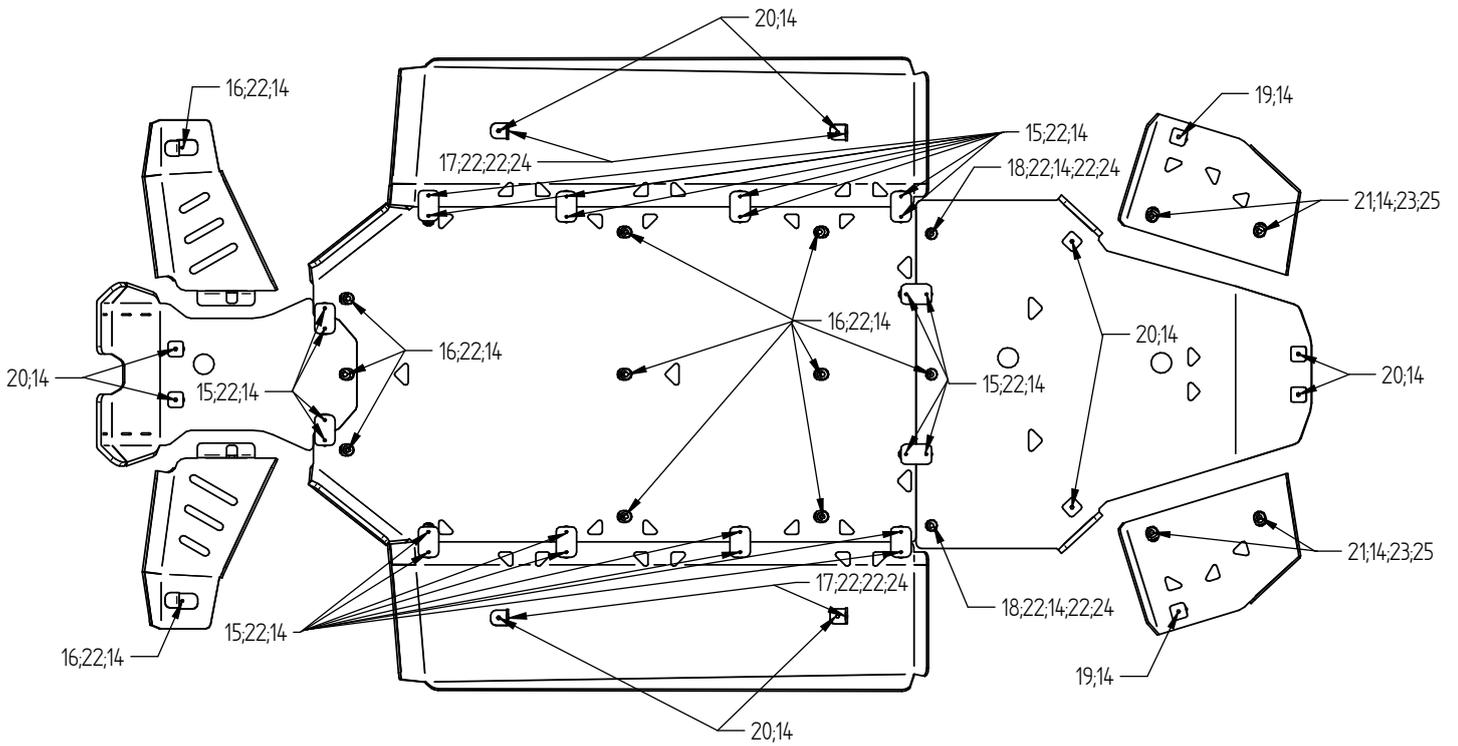


# FITTING INSTRUCTIONS


**Step 1** Remove all standard plastic covers.

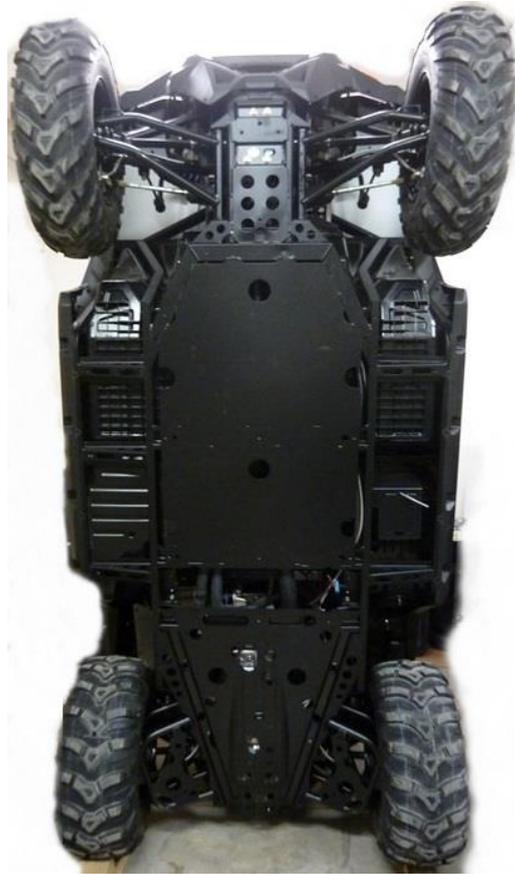

**Step 2** Install angles 03.1502.

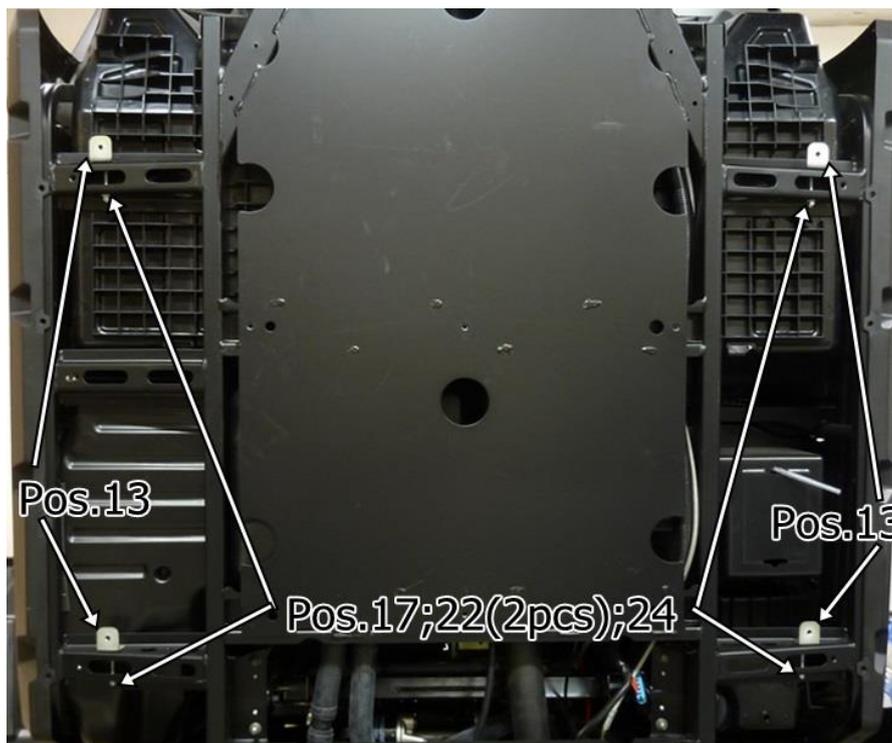


**Step 3** Install rear part of the protection 02.17803.

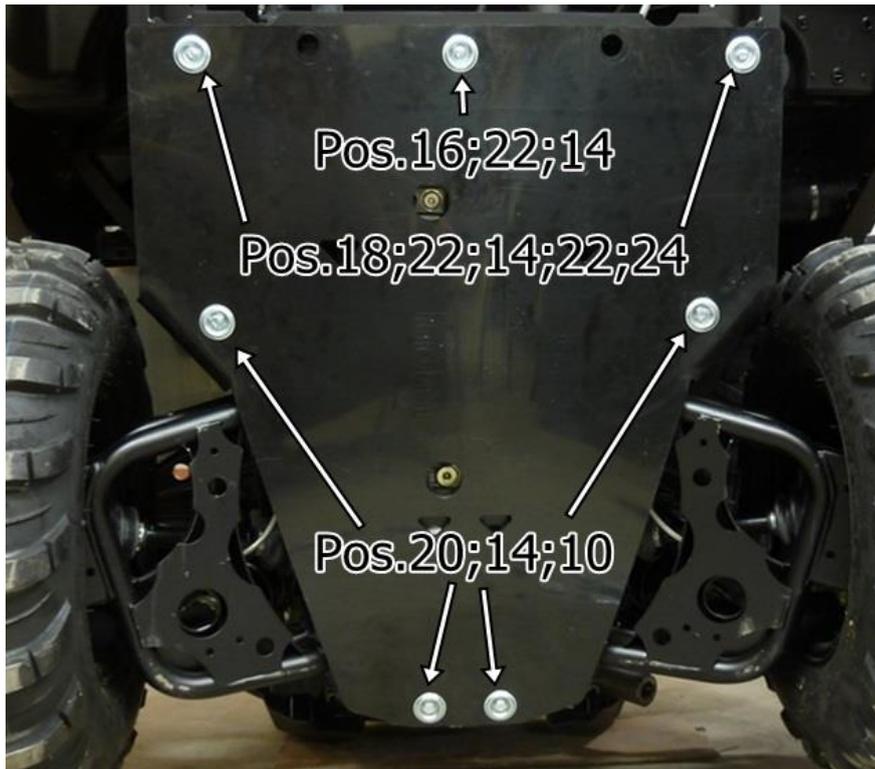


**Step 4** Install plates 02.5006 to the rear part.



**Step 5** Install middle protection 02.17802.

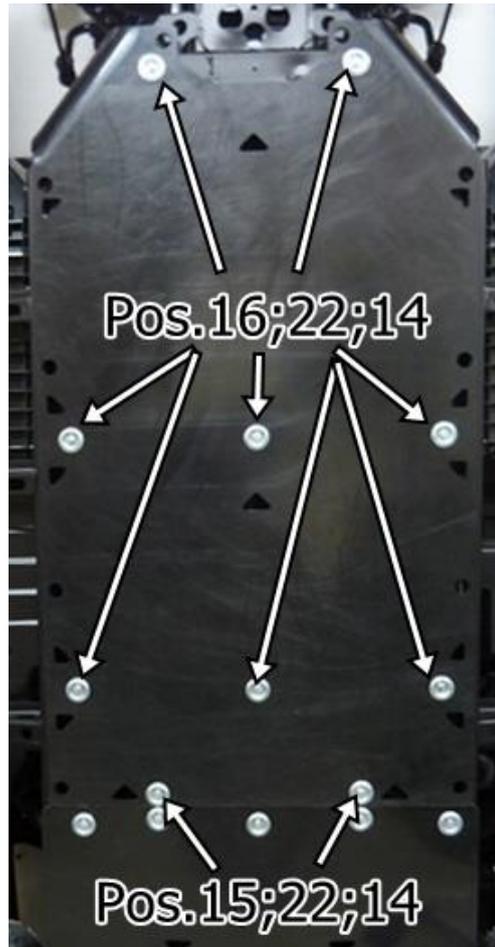


**Step 6** Install plates 02.5006 to the middle part.

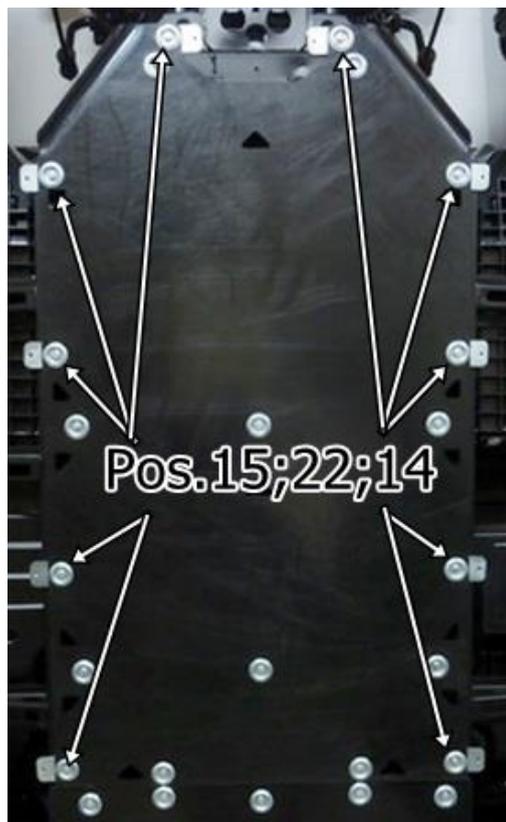

**Step 7** Install front protection 02.17801.



**Step 8** Install side protections 02.17804 and 02.17805.

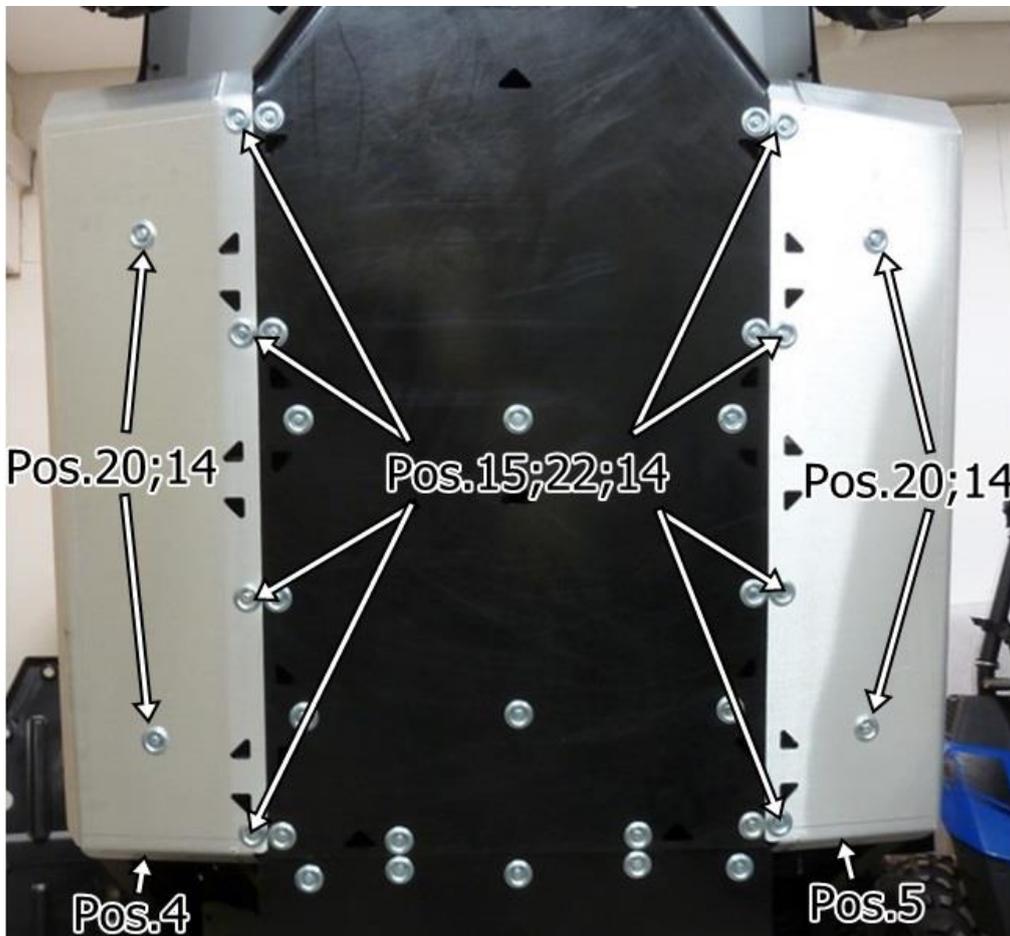

**Step 9** Install front arm protections 02.17806 and 02.17807.



**Step 10** Install rear arm protections 02.14506 and 02.14507.









# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

