

IRON BALTIC


ALUMINIUM SKID PLATE

POLARIS

XP 1000 Touring (...-2017)

Code 02.18000


Version 08092023

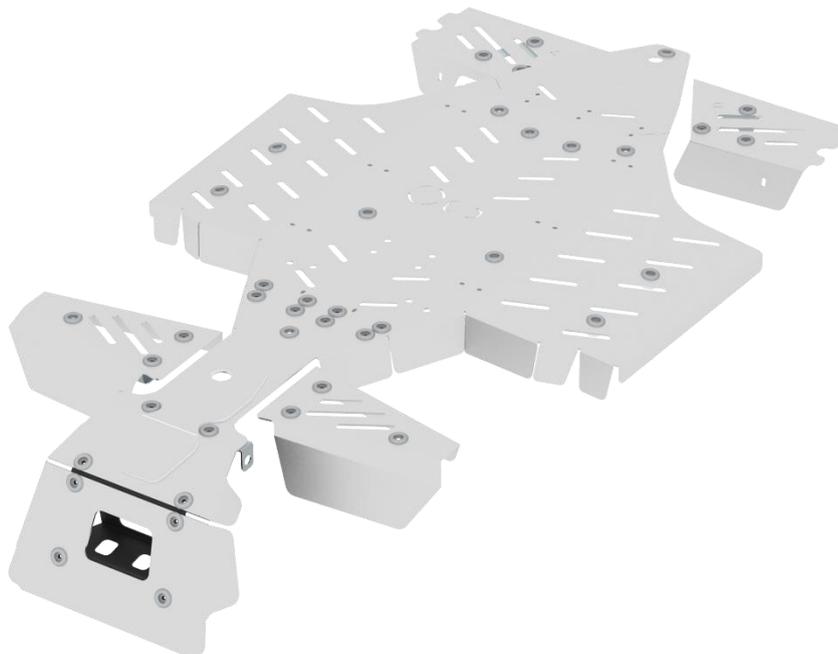

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com



DOWNLOAD MULTILINGUAL
USER MANUAL

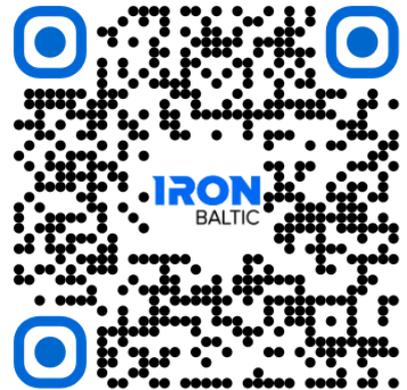

code.ironbaltic.com/u/zkwOGStL

SPECIFICATION

Pos.	Description	Code	Amount
1	Middle protection	02.18001K	1
2	Front protection	02.16602K	1
3	Rear right arm protection	02.16603	1
4	Rear protection	02.5502	1
5	Right side protection	02.5503K	1
6	Left side protection	02.5504K	1
7	Front right arm protection	02.1523	1
8	Front left arm protection	02.1524	1
9	Rear left arm protection	02.1526	1
10	Front upper protection	02.1527	1
11	Clamp for front arm protection	02.1528	2
12	Clamp for rear arm protection	02.1529	2
13	Front upper protection bracket	02.1550	1
14	Bracket	02.16604	2
15	Installation plate	02.2305	1
16	Installation plate	02.5006	13
17	Installation bracket	02.5709	2
18	Dished washer	14.503	40
19	Bolt M6x16 DIN 933	OT.02.02.050	29
20	Bolt M6x35 DIN 933	OT.02.02.090	4
21	Bolt M6x40 DIN 933	OT.02.02.100	2
22	Bolt M6x65 DIN 933	OT.02.02.145	4
23	Bolt M8x20 DIN 933	OT.02.02.180	1
24	Bolt M6x12 DIN 7991	OT.02.04.010	18
25	Bolt M6x20 DIN 7991	OT.02.04.030	2
26	Washer Ø6/15 SFS 3738	OT.04.03.020	44
27	Conical washer Ø6	14.502	20
28	Nyloc nut M6 DIN 985	OT.03.02.030	5

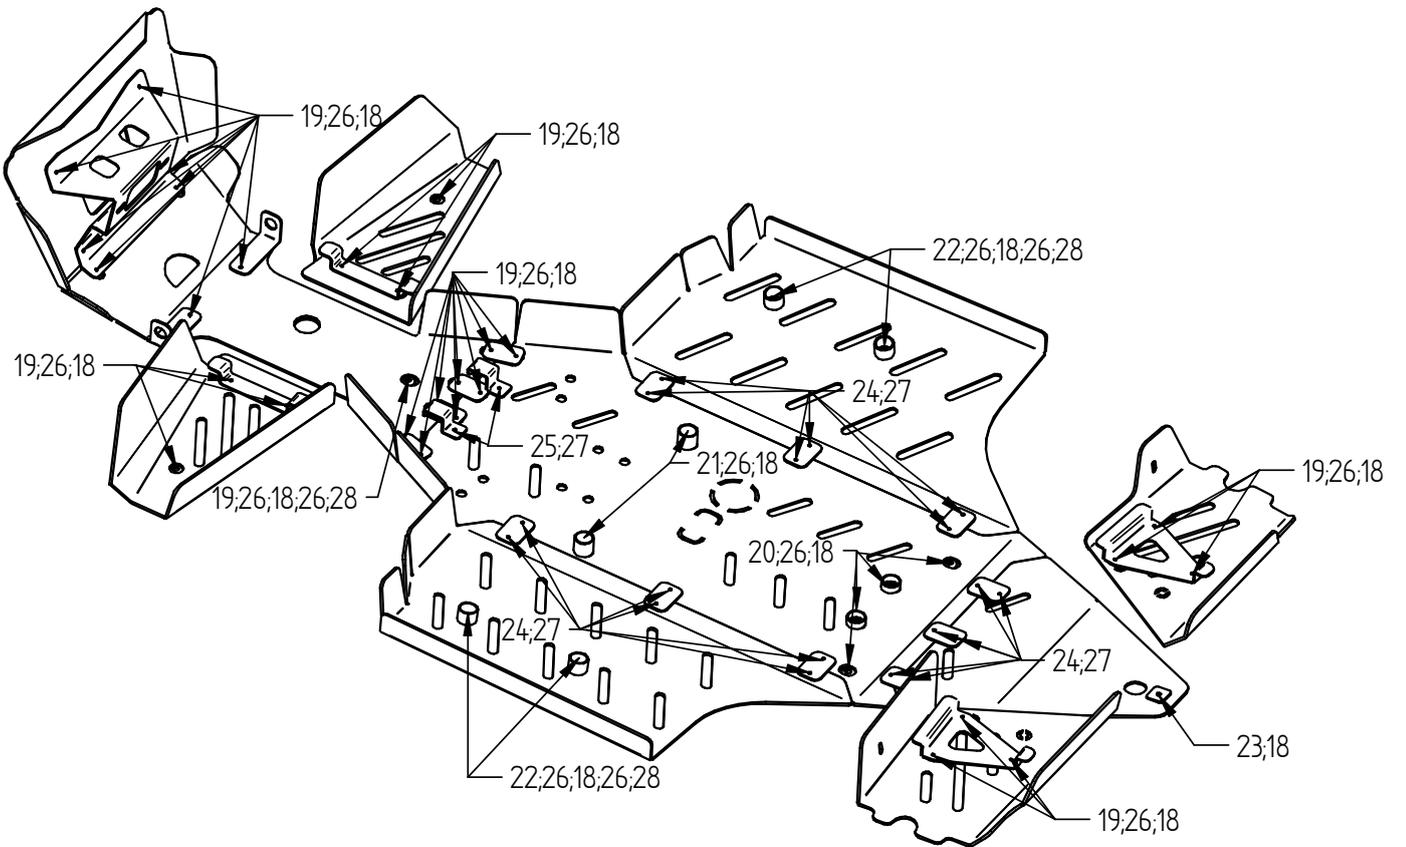
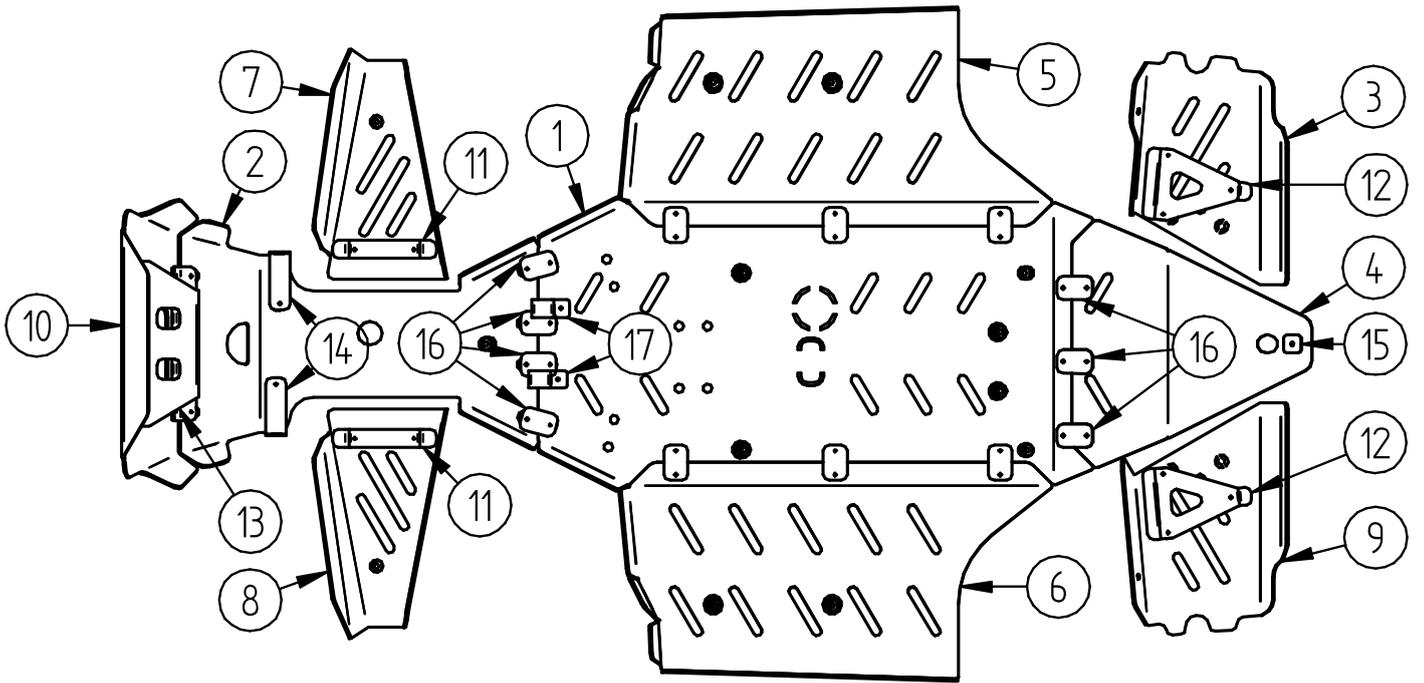


FITTING INSTRUCTIONS


Step 1 Remove all standard plastic covers.




Step 2 Install bracket 02.1550 and brackets 02.16604.

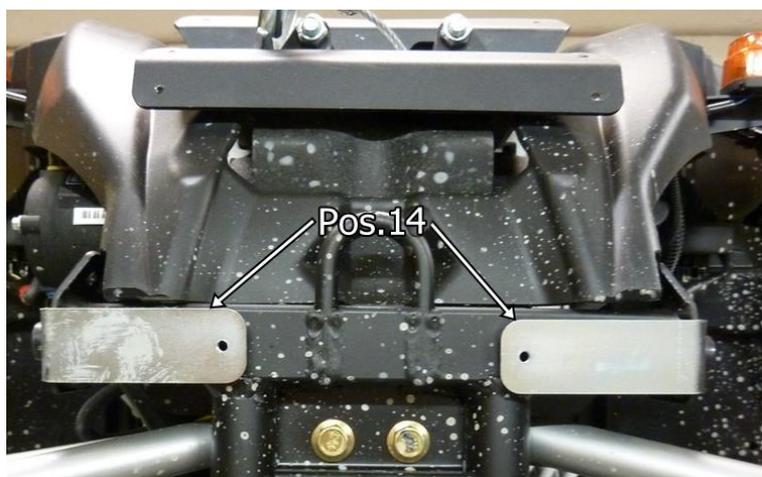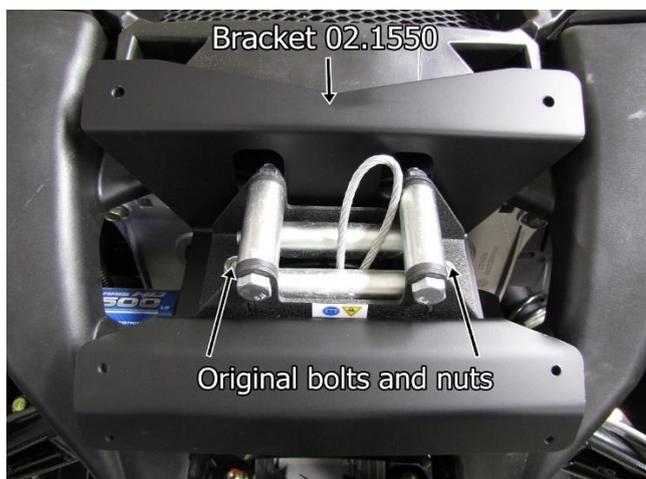


Step 3 Install front arm protections 02.1523 and 02.1524.

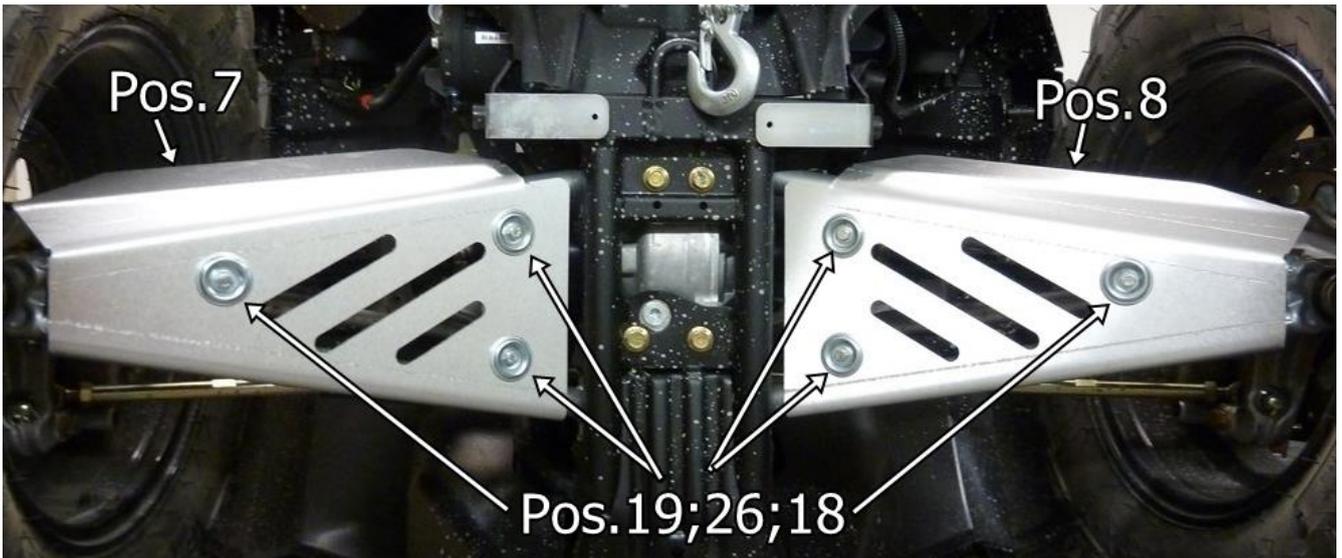

Step 4 Install rear arm protectors 02.16603 and 02.1526.

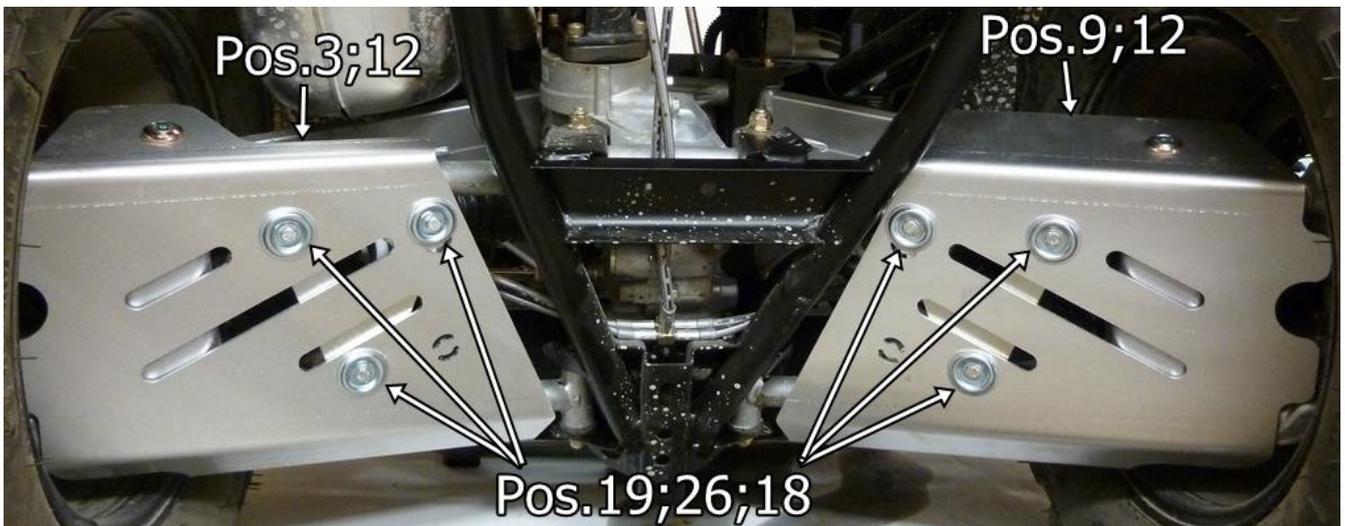

Step 5 Install front protection upper part 02.1527.

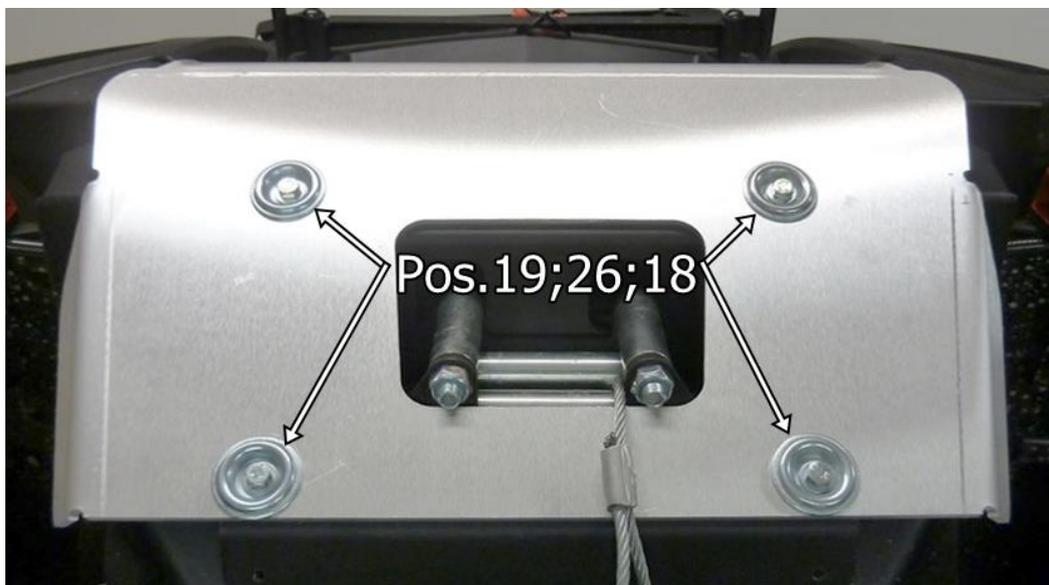


Step 6 Install front protection 02.16602K.




Step 7 Install plates 02.5006 to the front protection.



Step 8 Install middle part 02.18001K.

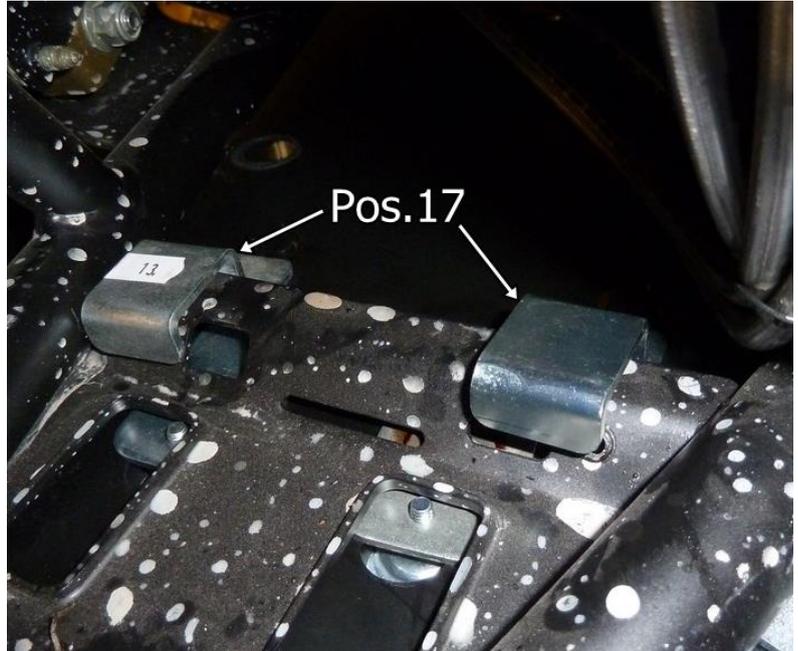


Step 9 Install fplates 02.5006 to middle part.

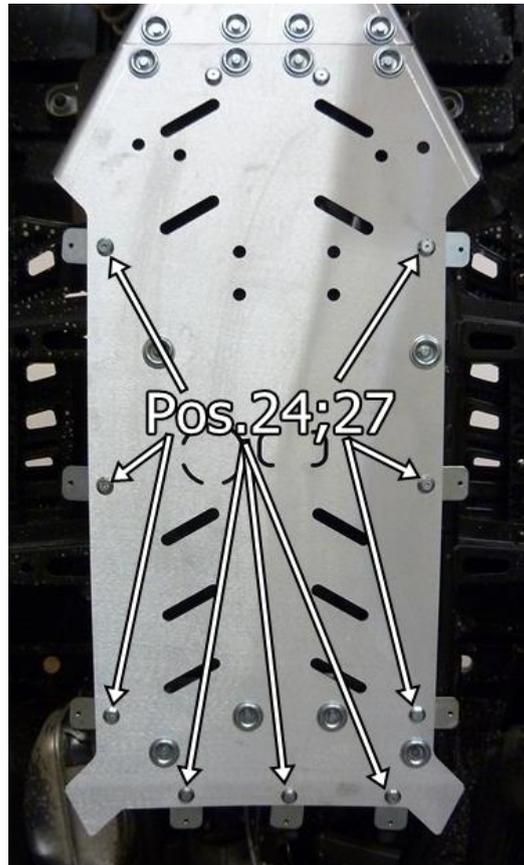

Step 10 Install rear part 02.5502.



Step 11 Install side protections 02.5503K and 02.5504K.

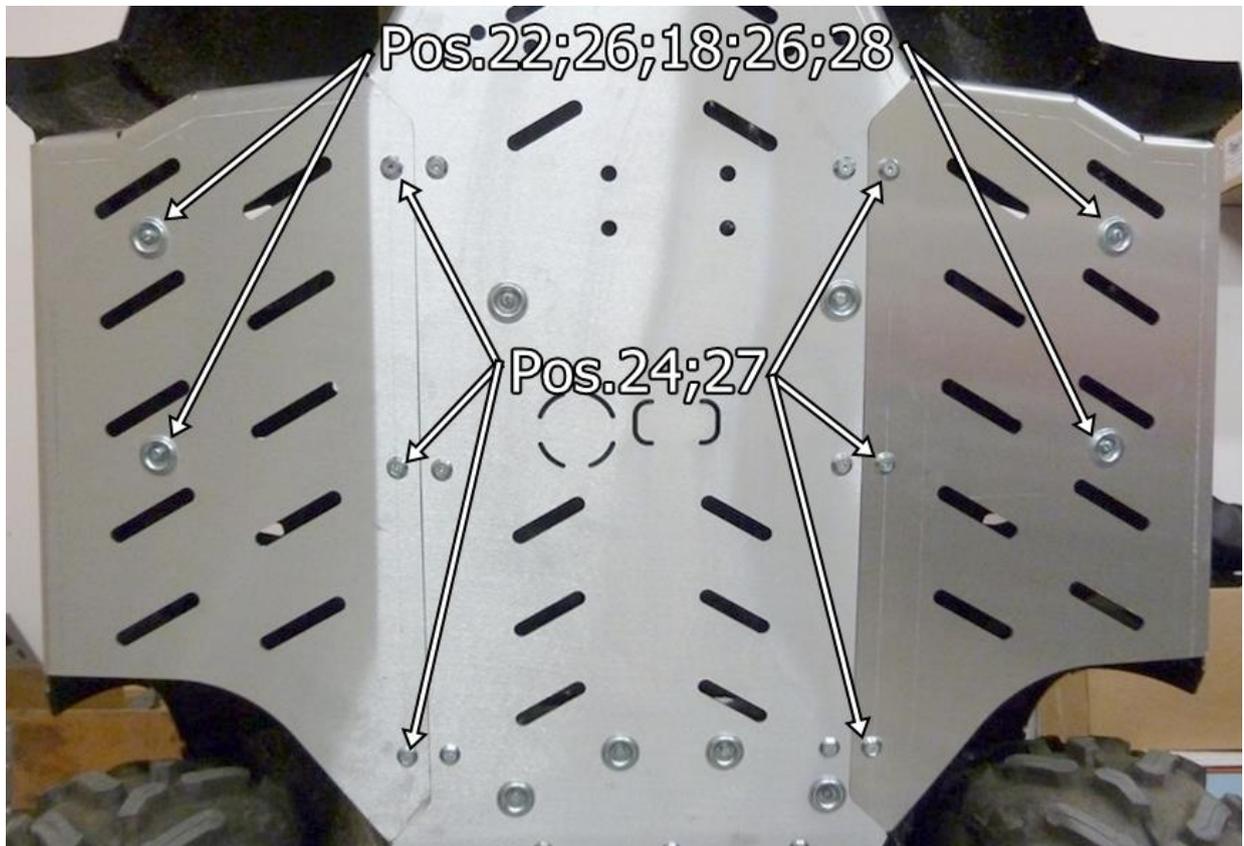

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

