

IRON BALTIC


PLASTIC SKID PLATE

POLARIS

XP 1000 Touring (...-2017)

Code 02.18100

Version 08092023

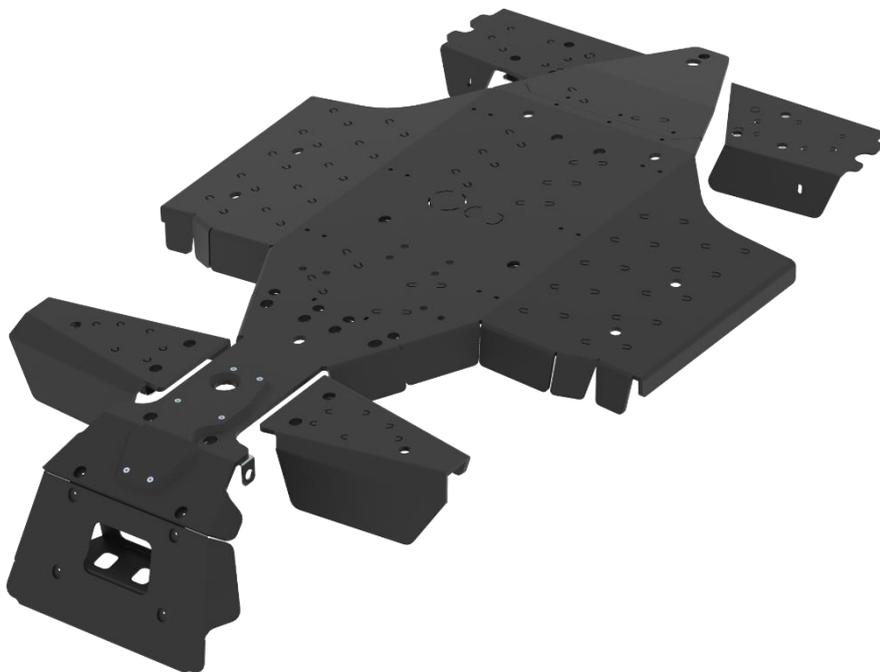

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com



DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/l8Pphm5k

SPECIFICATION

| Pos. | Description | Code | Amount |
|------|--------------------------------|--------------|--------|
| 1 | Middle protection | 02.18101K | 1 |
| 2 | Front protection | 02.16702K | 1 |
| 3 | Rear right arm protection | 02.16703 | 1 |
| 4 | Rear protection | 02.5402 | 1 |
| 5 | Right side protection | 02.5403K | 1 |
| 6 | Left side protection | 02.5404K | 1 |
| 7 | Front right arm protection | 02.1542 | 1 |
| 8 | Front left arm protection | 02.1543 | 1 |
| 9 | Rear left arm protection | 02.1545 | 1 |
| 10 | Front upper protection | 02.1553 | 1 |
| 11 | Clamp for front arm protection | 02.1528 | 2 |
| 12 | Clamp for rear arm protection | 02.1529 | 2 |
| 13 | Front upper protection bracket | 02.1550 | 1 |
| 14 | Bracket | 02.16604 | 2 |
| 15 | Installation plate | 02.2305 | 1 |
| 16 | Installation plate | 02.5006 | 13 |
| 17 | Installation bracket | 02.5709 | 2 |
| 18 | Dished washer | 14.503 | 40 |
| 19 | Bolt M6x20 DIN 933 | OT.02.02.060 | 29 |
| 20 | Bolt M6x35 DIN 933 | OT.02.02.090 | 4 |
| 21 | Bolt M6x45 DIN 933 | OT.02.02.110 | 2 |
| 22 | Bolt M6x65 DIN 933 | OT.02.02.145 | 4 |
| 23 | Bolt M8x20 DIN 933 | OT.02.02.180 | 1 |
| 24 | Bolt M6x16 DIN 7991 | OT.02.04.020 | 18 |
| 25 | Bolt M6x25 DIN 7991 | OT.02.04.040 | 2 |
| 26 | Washer Ø6/15 SFS 3738 | OT.04.03.020 | 44 |
| 27 | Washer Ø6 | 14.502 | 20 |
| 28 | Nyloc nut M6 DIN 985 | OT.03.02.030 | 5 |

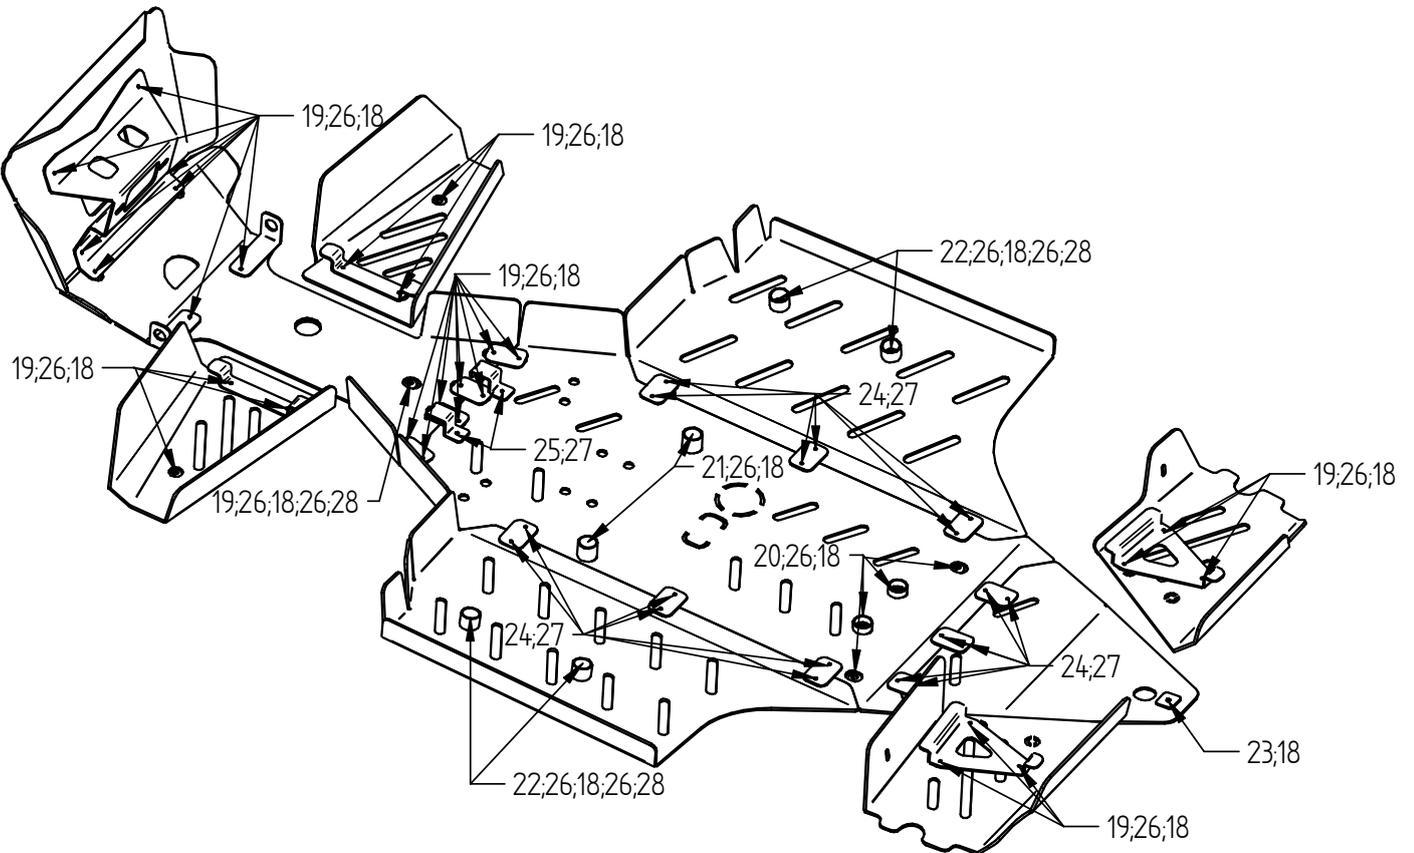
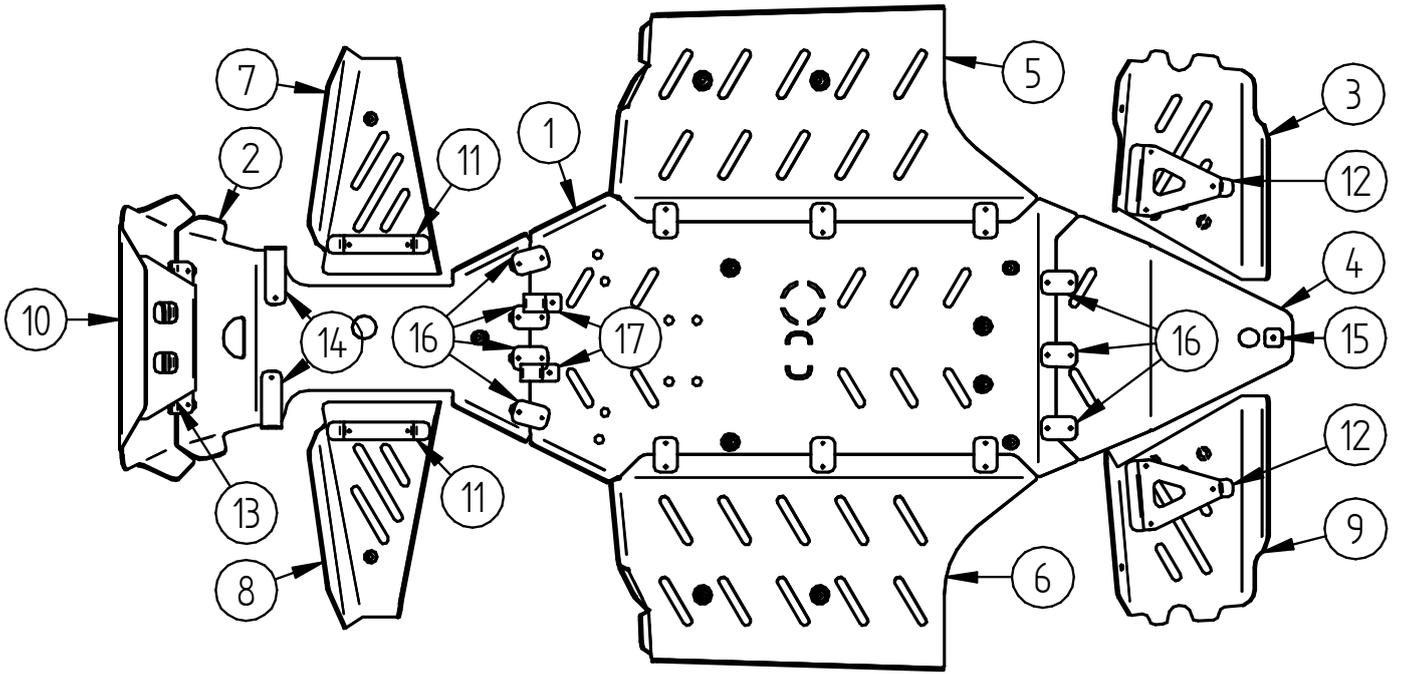


FITTING INSTRUCTIONS


Step 1 Remove all standard plastic covers.




Step 2 Install bracket 02.1550 and brackets 02.16604.

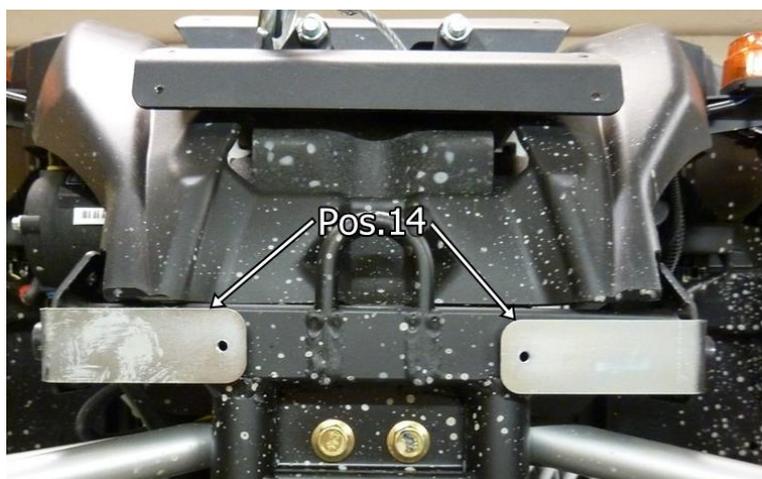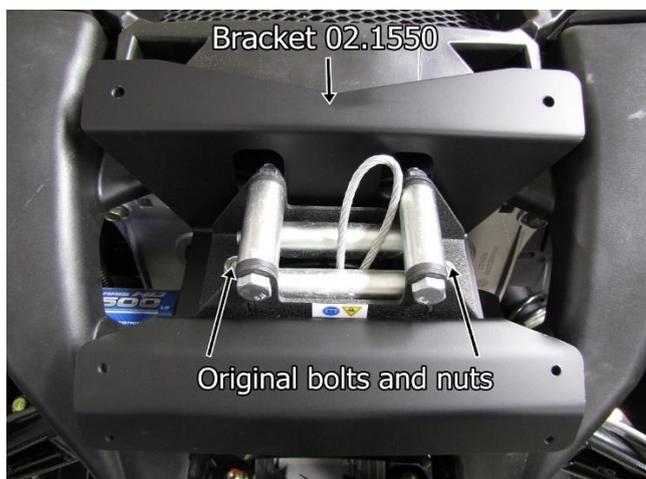

Step 3 Install front arm protections 02.1542 and 02.1543.

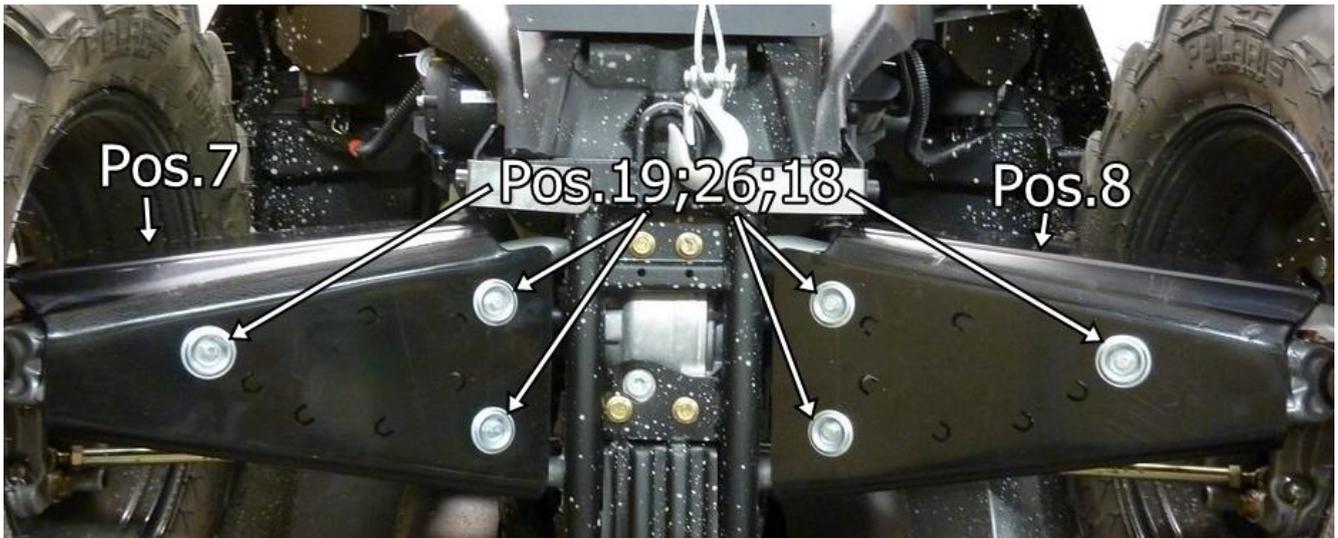

Step 4 Install rear arm protectors 02.16703 and 02.1545.

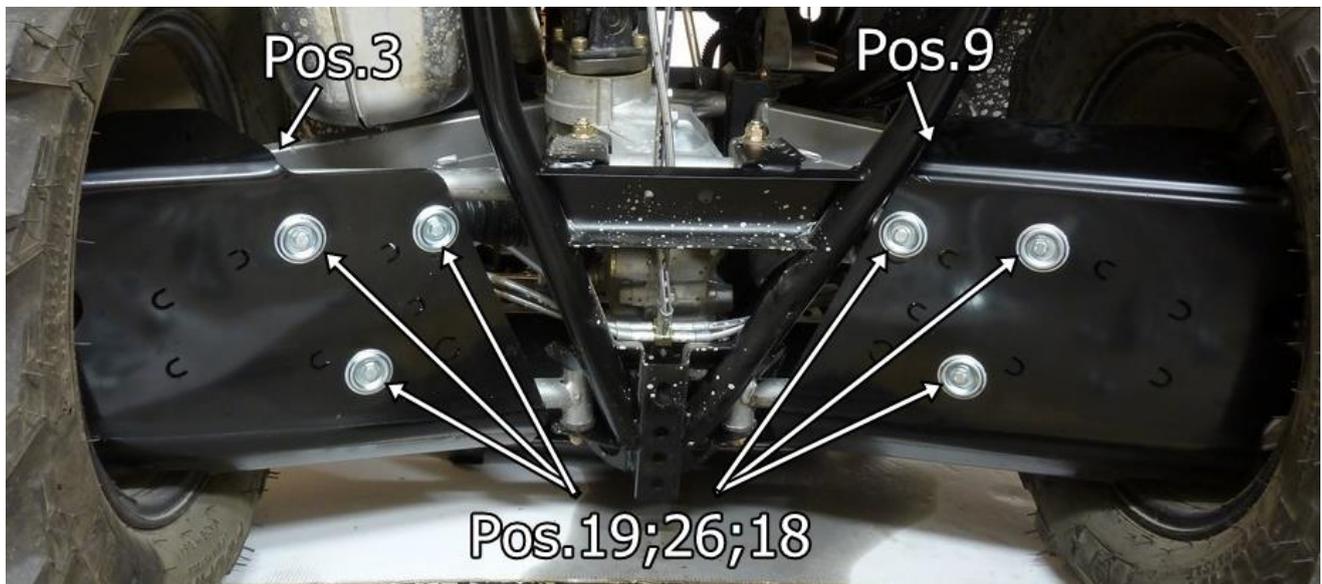


Step 5 Install front protection upper part 02.1553.





Step 6 Install front protection 02.16702K.




Step 7 Install plates 02.5006 to the front protection.

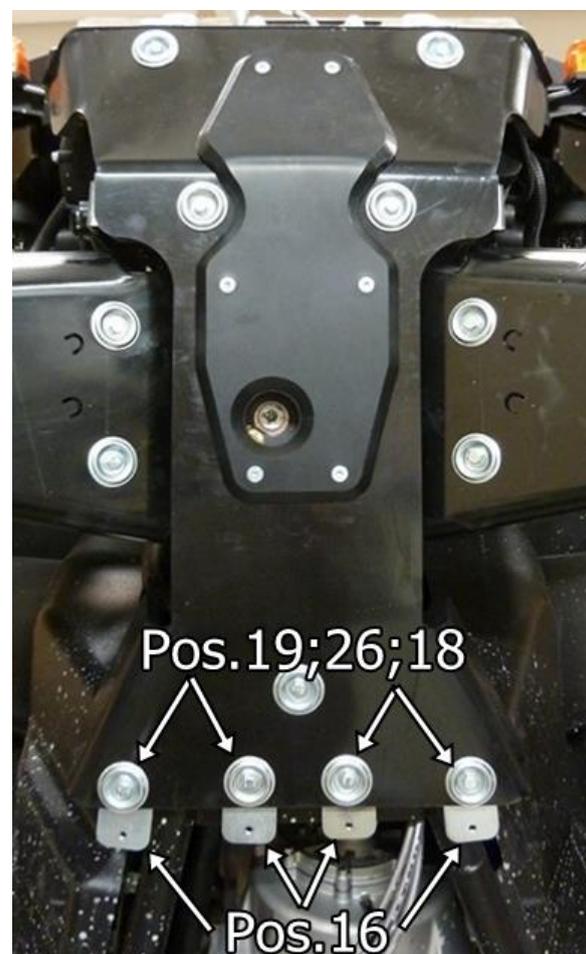


Step 8 Install middle part 02.18101K.

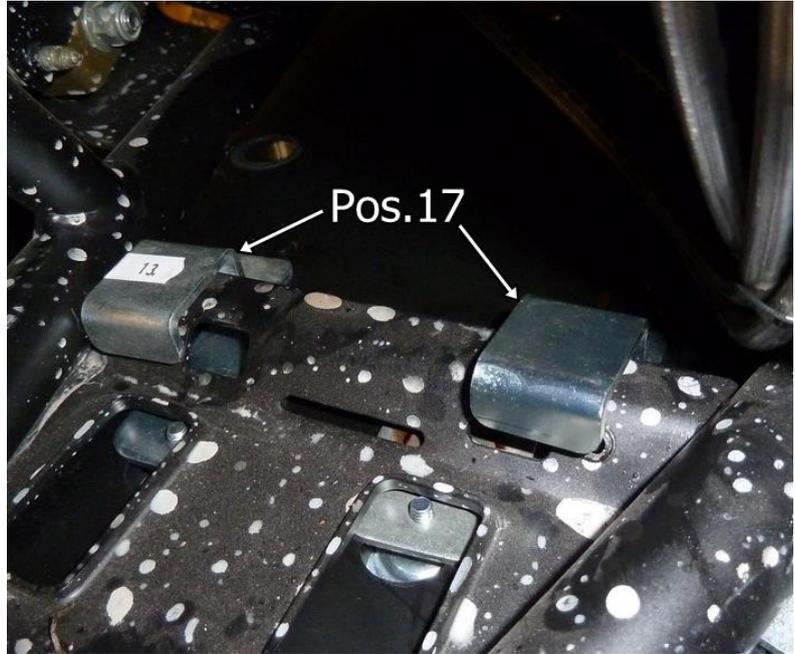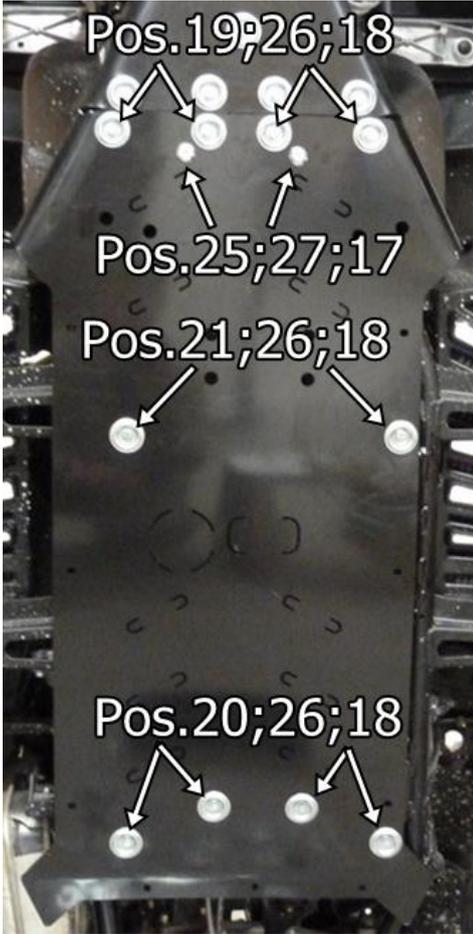


Step 9 Install plates 02.5006 to middle part.

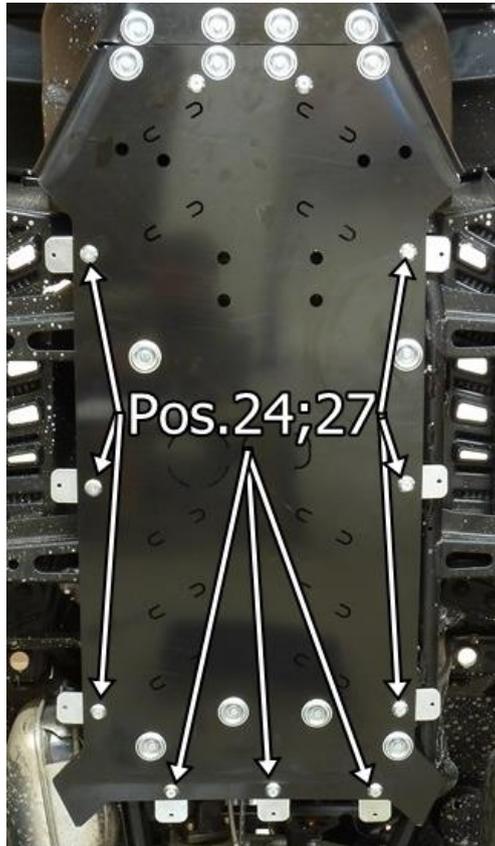

Step 10 Install rear part 02.5402.

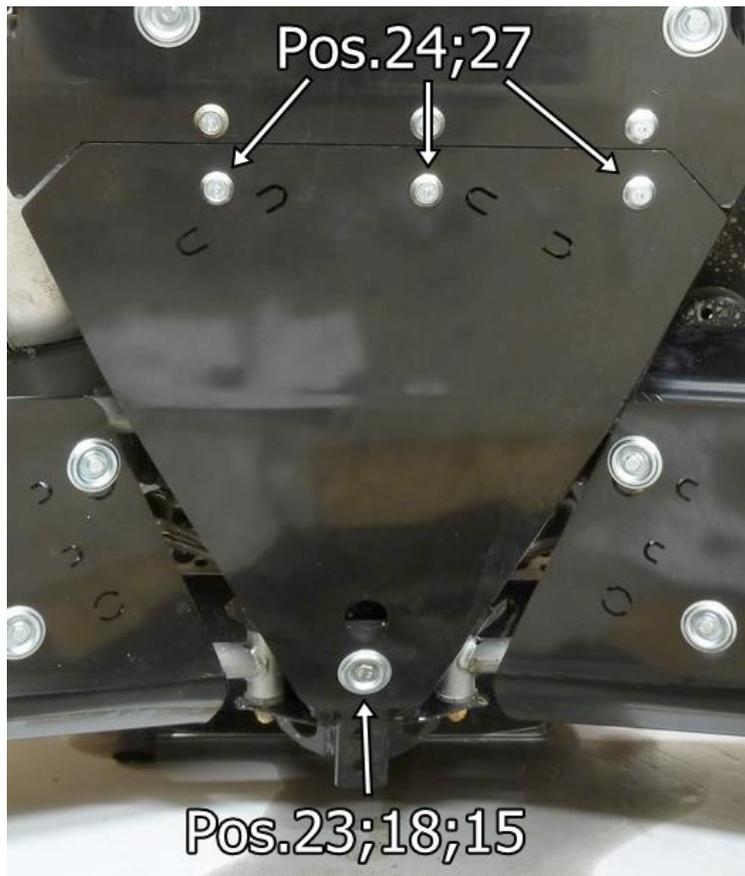

Step 11 Install side protections 02.5403K and 02.5404K.

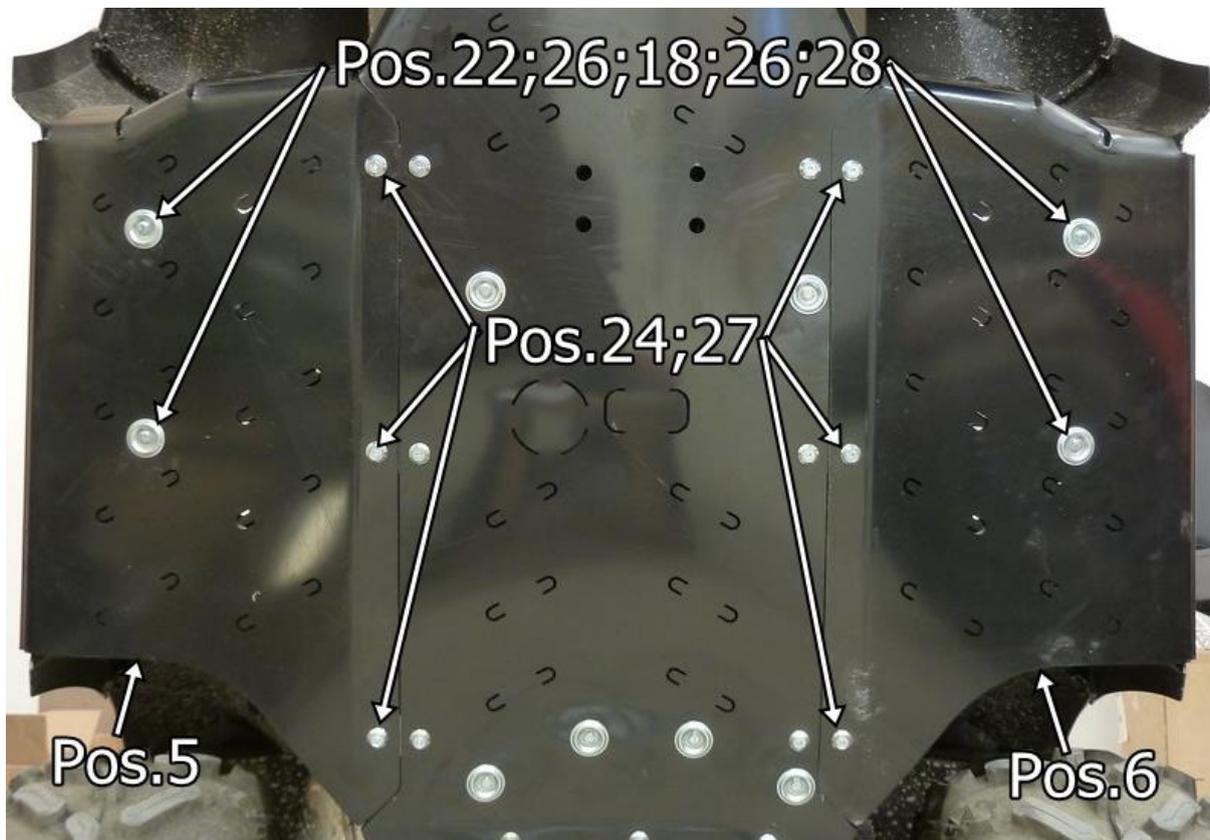

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

