

# IRON BALTIC


## ALUMINIUM SKID PLATE

# POLARIS

## 570 Big Boss

Code 02.18500

Version 10092023

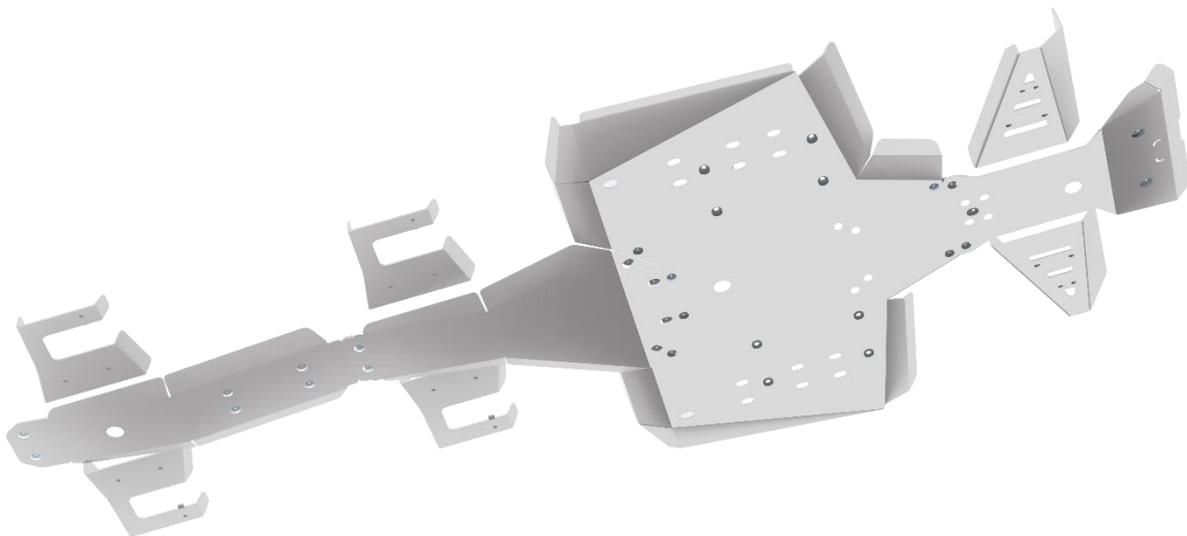

**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic [sales@ironbaltic.com](mailto:sales@ironbaltic.com)

Iron Baltic Ltd | +372 653 3711 | [sales@ironbaltic.com](mailto:sales@ironbaltic.com) | [www.ironbaltic.com](http://www.ironbaltic.com)



DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/AXfcQNQd](http://code.ironbaltic.com/u/AXfcQNQd)

# SPECIFICATION




Pos.	Description	Code	Amount
1	Middle part	02.13901	1
2	Front part	02.12502	1
3	Rear part 1	02.18501	1
4	Rear part 2	02.18502	1
5	Front right arm protection	02.1402	1
6	Front left arm protection	02.1403	1
7	Rear right arm protection	02.1404	2
8	Rear left arm protection	02.1405	2
9	Intallation plate left	02.12504K	1
10	Intallation plate right	02.12505K	1
11	Installation plate	02.5006	6
12	Front part bracket	02.12506	1
13	Installation plate	02.2305	3
14	Clamp for front arm protection	02.1416	1
15	Clamp for front arm protection	02.1417	1
16	Clamp for rear arm protection	02.1418	4
17	Installation plate	02.4011	4
18	Installation bracket	02.13902	2
19	Installation bracket	02.8210	2
20	Installation plate	02.4010	2
21	Dished washer	14.503	33
22	Bolt M6x12 DIN 933	OT.02.02.030	12
23	Bolt M6x16 DIN 933	OT.02.02.050	6
24	Bolt M6x16 DIN 7991	OT.02.04.020	8
25	Bolt M6x20 DIN 7991	OT.02.04.030	16
26	Bolt M8x16 DIN 933	OT.02.02.170	5
27	Bolt M8x20 DIN 933	OT.02.02.180	8
28	Bolt M8x25 DIN 7991	OT.02.04.160	4
29	Bolt M8x40 DIN 933	OT.02.02.220	2
30	Bolt UNC 10 x 1" DIN 912	OT.02.07.021	8
31	Conical washer Ø6	14.502	16
32	Conical washer Ø8	14.501	4
33	Washer Ø5/15 DIN 9021	OT.04.02.010	8
34	Washer Ø6/15 SFS 3738	OT.04.03.020	26
35	Nyloc nut M6 DIN 985	OT.03.02.030	8

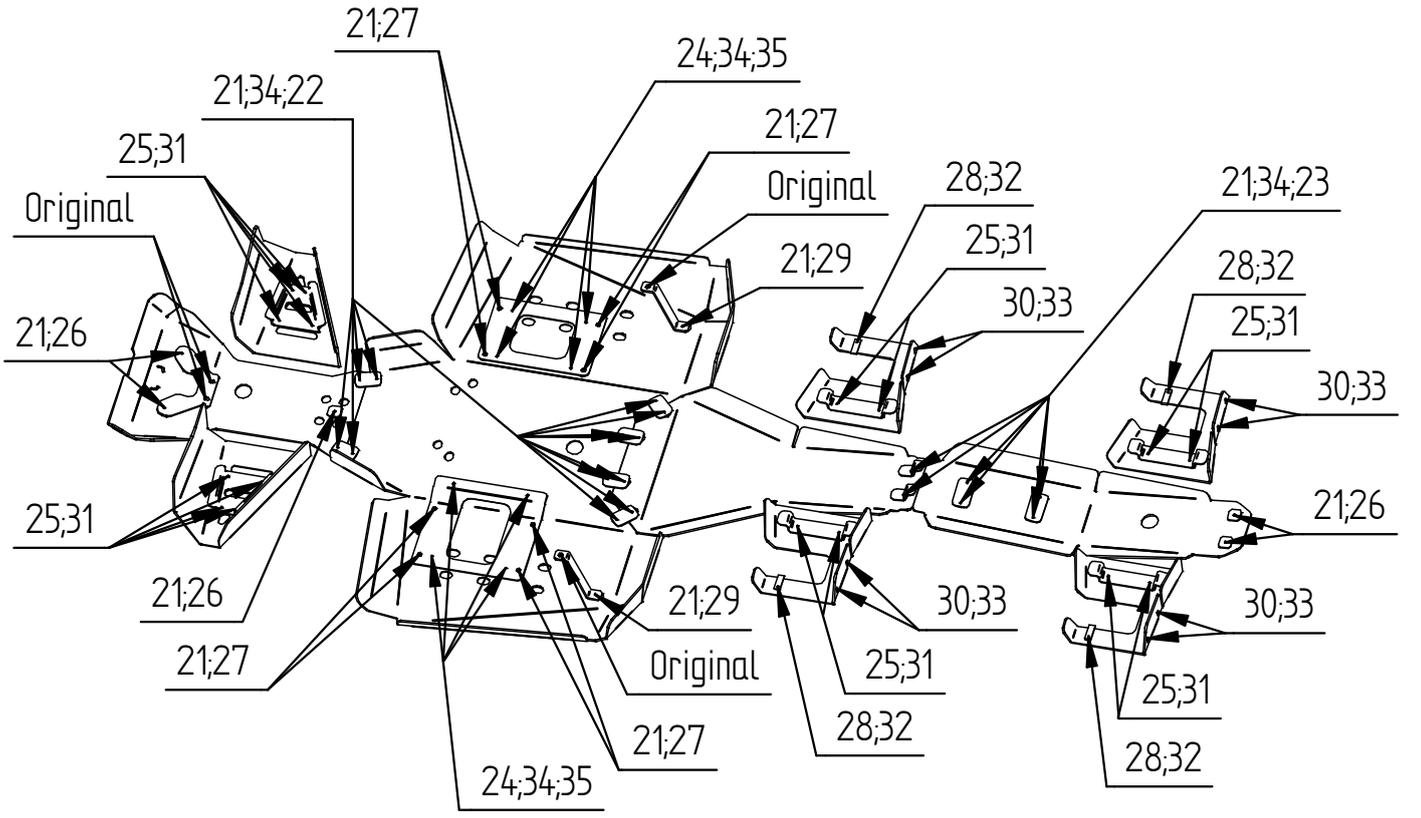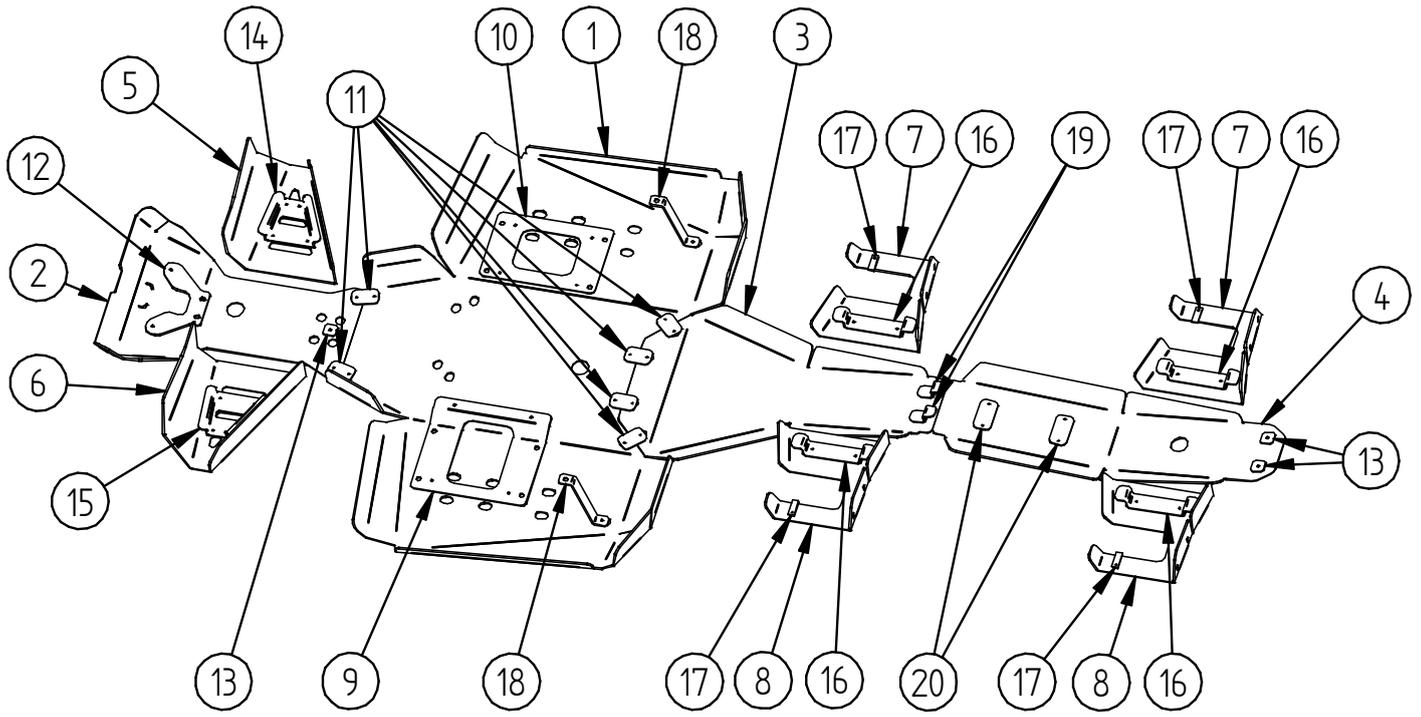


# FITTING INSTRUCTIONS

**Step 1** Remove all standard plastic covers.


**Step 2** Install bracket 02.12506, plates 02.12504, 0212505, clamps 02.13902, use bolts M6x16, washers Ø6/15 and nuts M6 (use 10mm spanner, 10mm socket wrench and 4mm hex key).

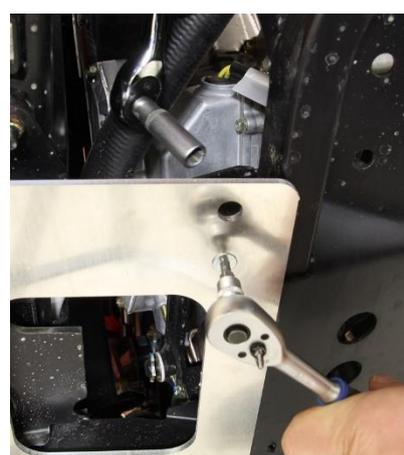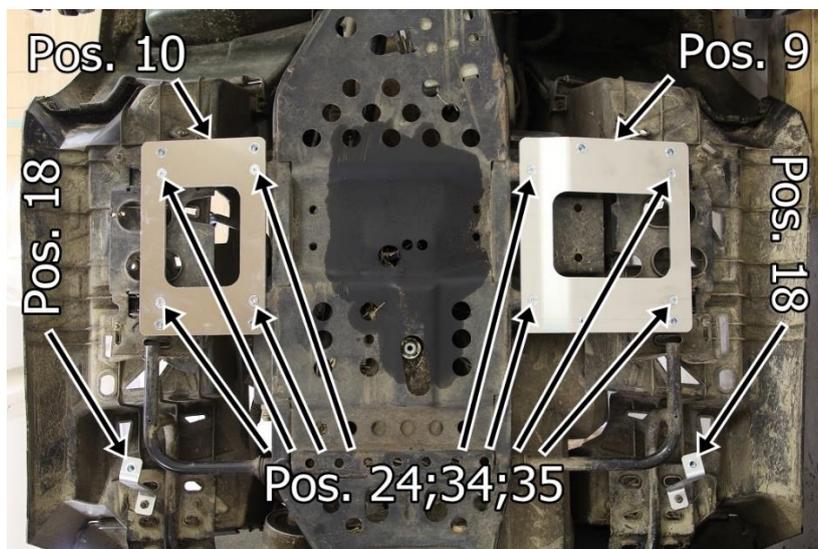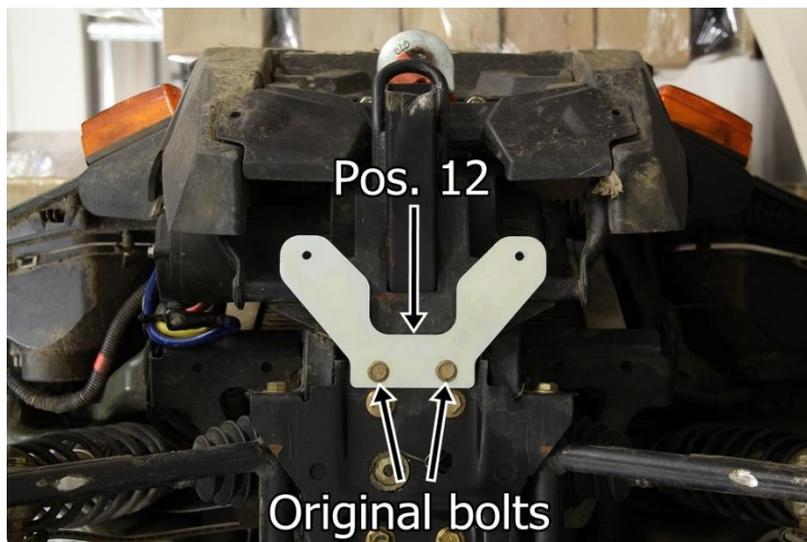


**Step 3** Install front arms protections 02.1402, 02.1403, use bolts M6x20 and front arm clamps 02.1416, 02.1417.

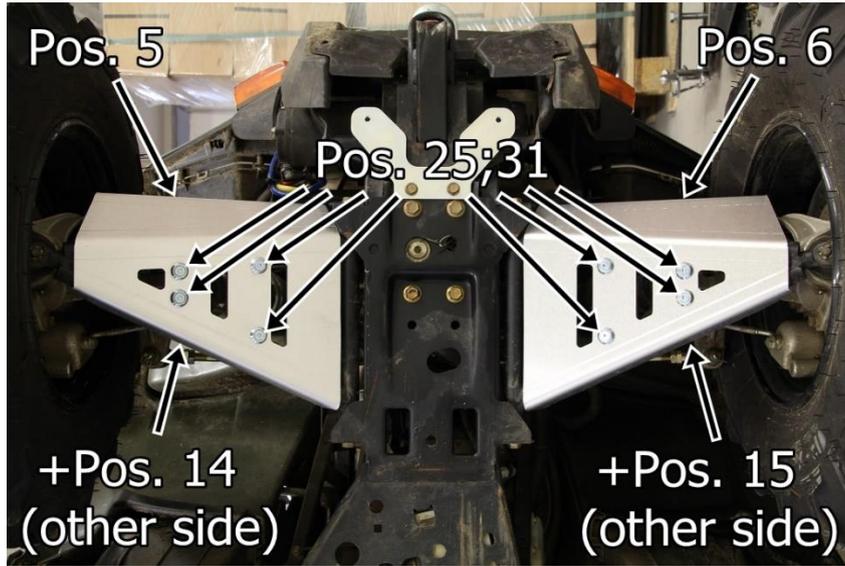


**Step 4** Install rear arms protections 02.1404, 02.1405, use bolts M6x20, M8x25, rear arm clamps 02.1418 and installation plate 02.4011.

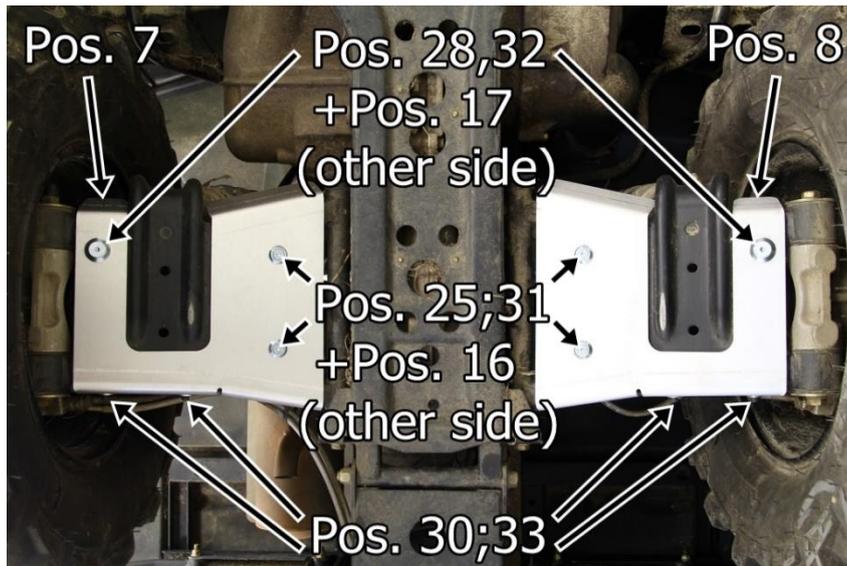


**Step 5** Install middle part 02.13901, use bolts M8x20 and M8x40.

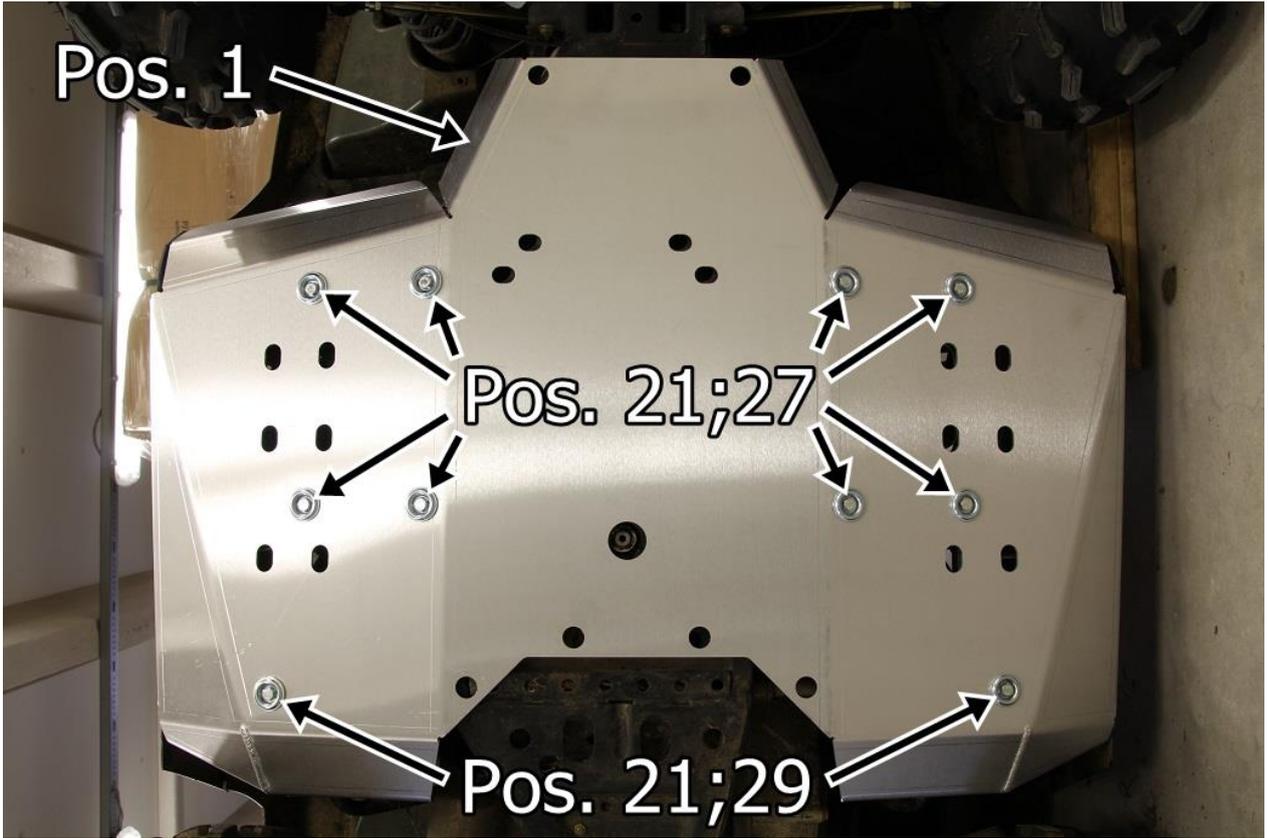


**Step 6** Install plates 02.5006, use bolts M6x12.

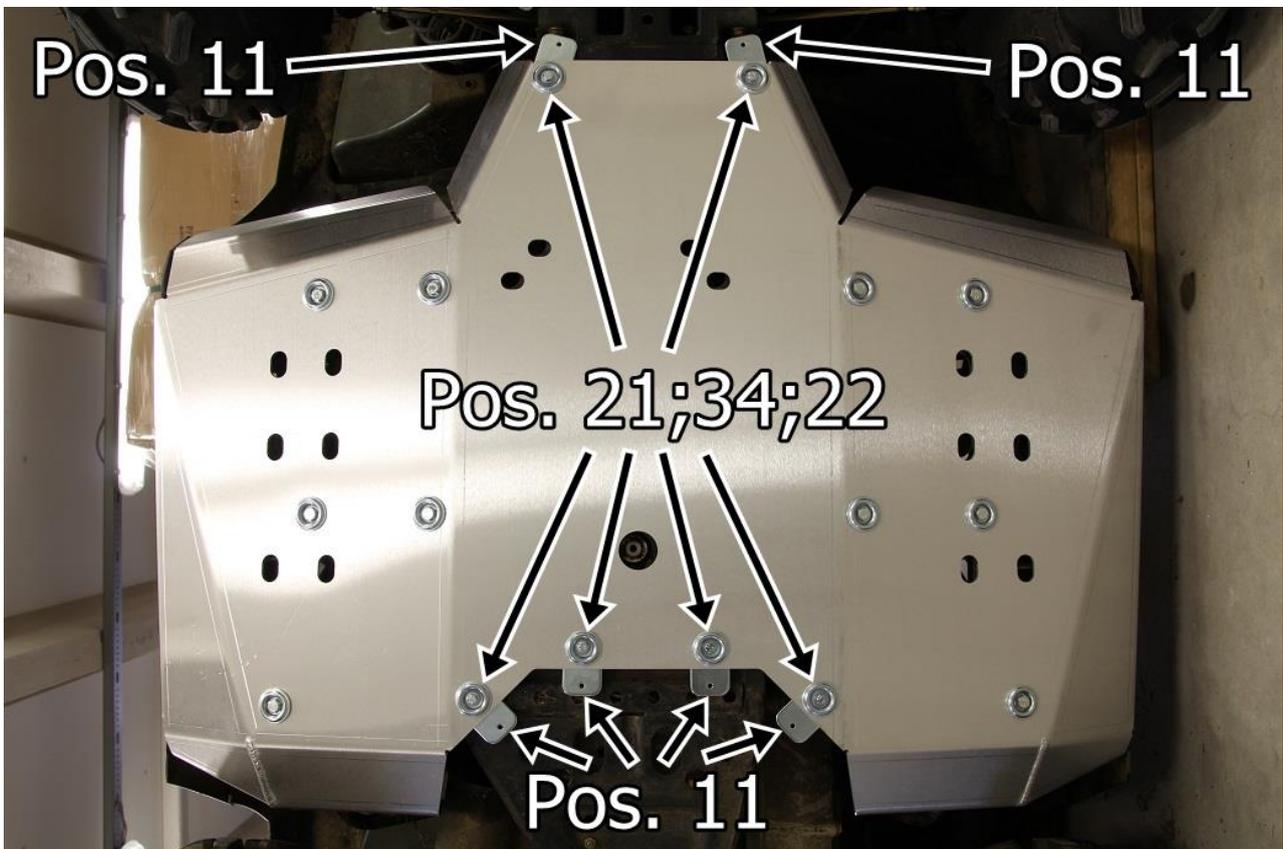


**Step 7** Install front part 02.12502, use bolts M6x12, M8x16 and plate 02.2305.

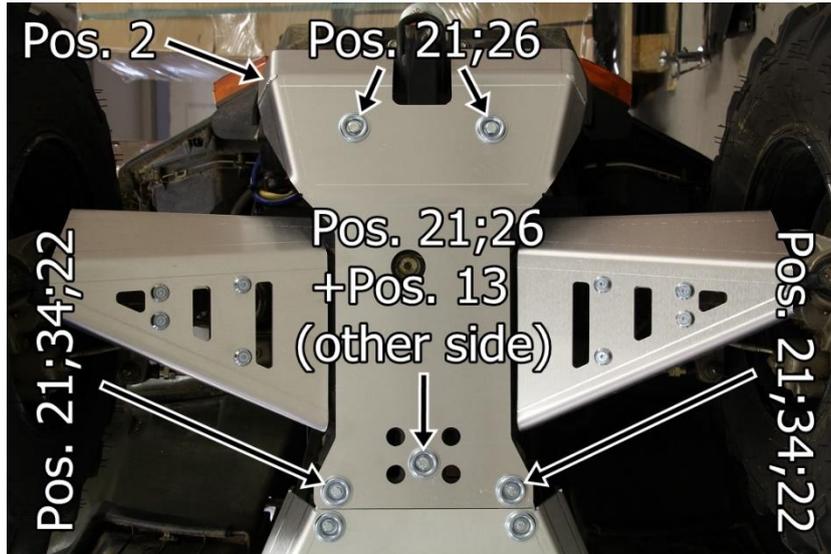

**Step 8** Install rear part 02.18501, use bolts M6x12, M6x16 and clamp 02.8210..

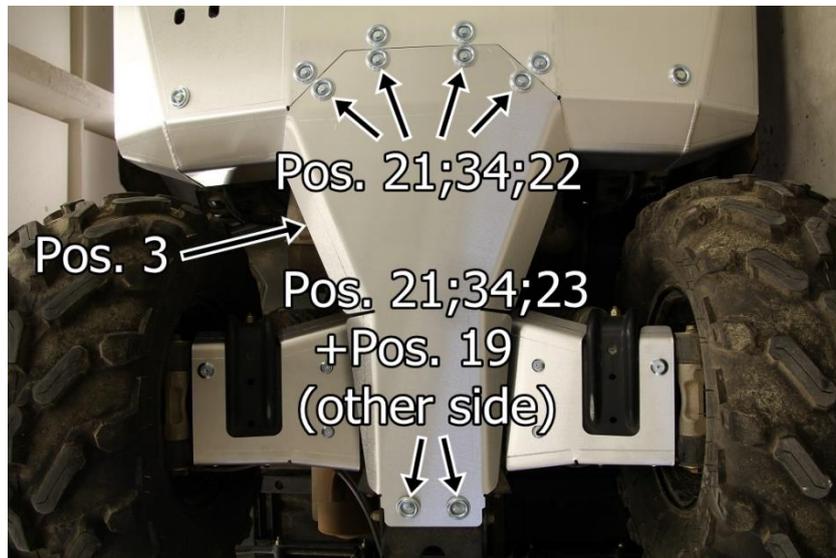

**Step 9** Install rear part 02.18502, use bolts M6x16, M8x16, plates 02.4010 and 02.2305.

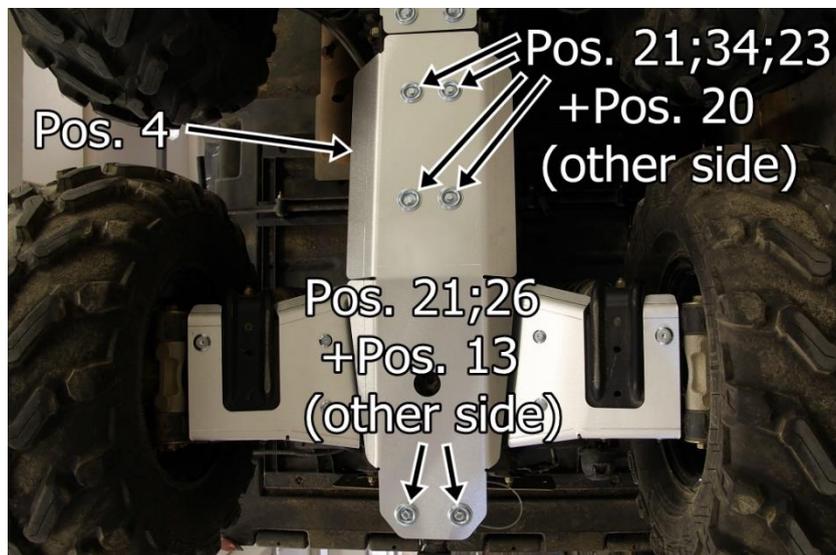

# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

