

IRON BALTIC

PLASTIC SKID PLATE

POLARIS

570 Big Boss


Code 02.18600

Version 10092023

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/eOC9oLVJ


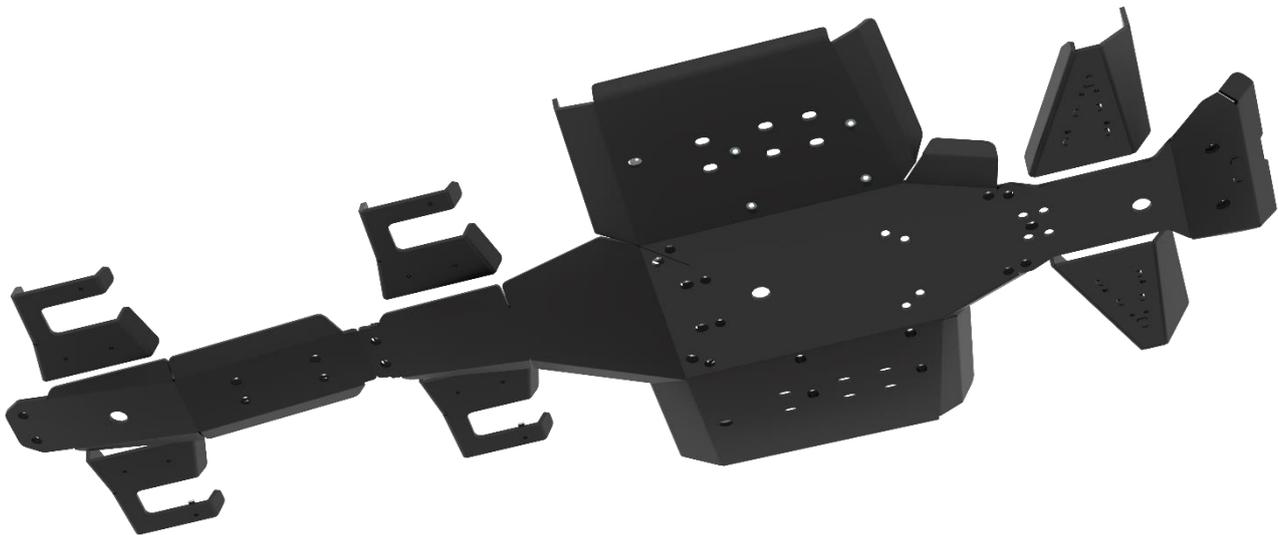


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION




Pos.	Description	Code	Amount
1	Middle part	02.14001	1
2	Front part	02.12602	1
3	Rear part 1	02.18601	1
4	Rear part 2	02.18602	1
5	Front right arm protection	02.1412	1
6	Front left arm protection	02.1413	1
7	Rear right arm protection	02.1414	2
8	Rear left arm protection	02.1415	2
9	Intallation plate left	02.12504K	1
10	Intallation plate right	02.12505K	1
11	Installation plate	02.5006	6
12	Front part bracket	02.12506	1
13	Installation plate	02.2305	3
14	Clamp for front arm protection	02.1416	1
15	Clamp for front arm protection	02.1417	1
16	Clamp for rear arm protection	02.1418	4
17	Installation plate	02.4011	4
18	Installation bracket	02.13902	2
19	Installation bracket	02.8210	2
20	Installation plate	02.4010	2
21	Dished washer	14.503	33
22	Bolt M6x16 DIN 933	OT.02.02.050	12
23	Bolt M6x20 DIN 933	OT.02.02.060	6
24	Bolt M6x16 DIN 7991	OT.02.04.020	8
25	Bolt M6x25 DIN 7991	OT.02.04.040	16
26	Bolt M8x20 DIN 933	OT.02.02.180	5
27	Bolt M8x25 DIN 933	OT.02.02.190	8
28	Bolt M8x30 DIN 7991	OT.02.04.170	4
29	Bolt M8x40 DIN 933	OT.02.02.220	2
30	Bolt UNC 10 x 1" DIN 912	OT.02.07.021	8
31	Washer Ø6	14.502	16
32	Washer Ø8	14.501	4
33	Washer Ø5/15 DIN 9021	OT.04.02.010	8
34	Washer Ø6/15 SFS 3738	OT.04.03.020	26
35	Nyloc nut M6 DIN 985	OT.03.02.030	8

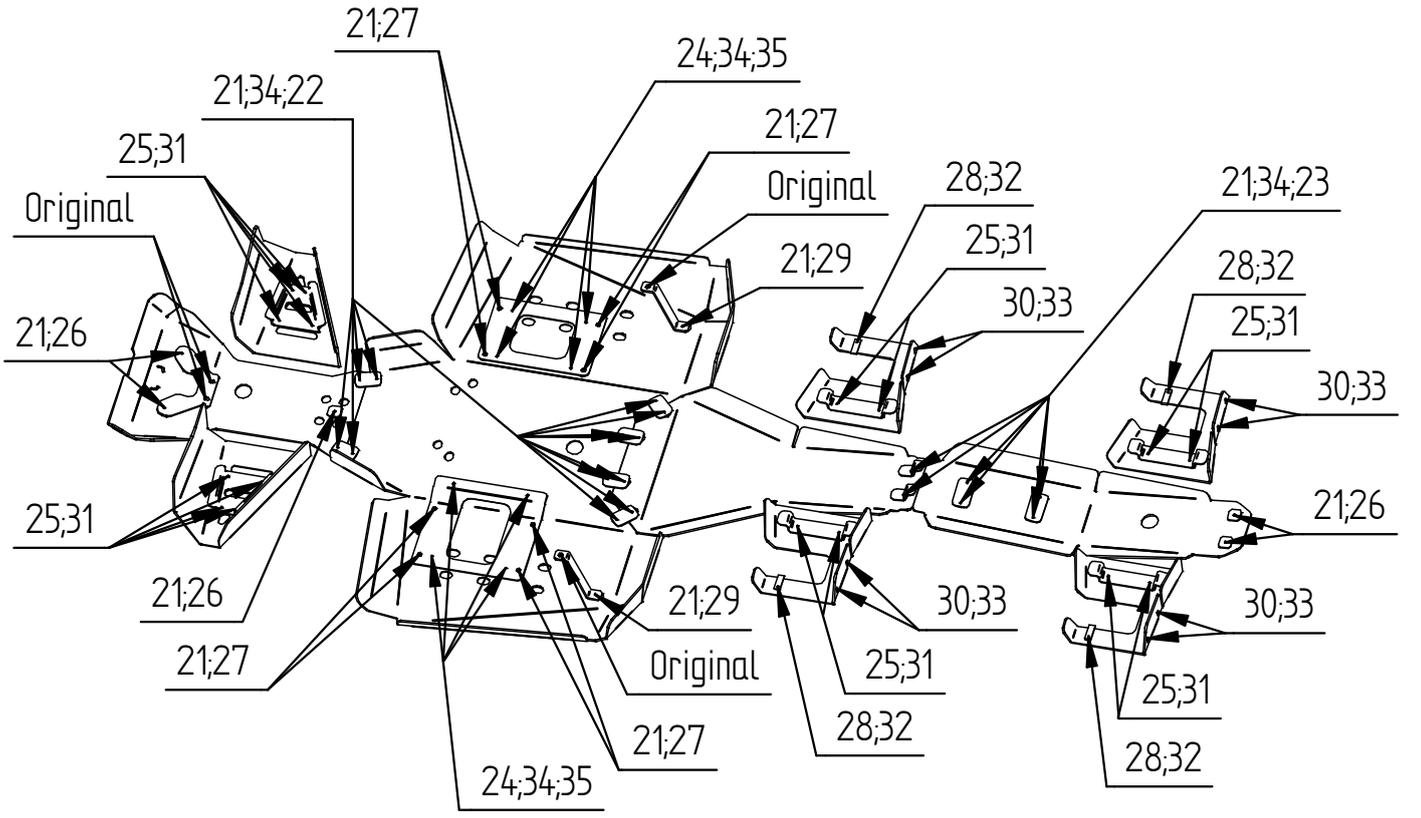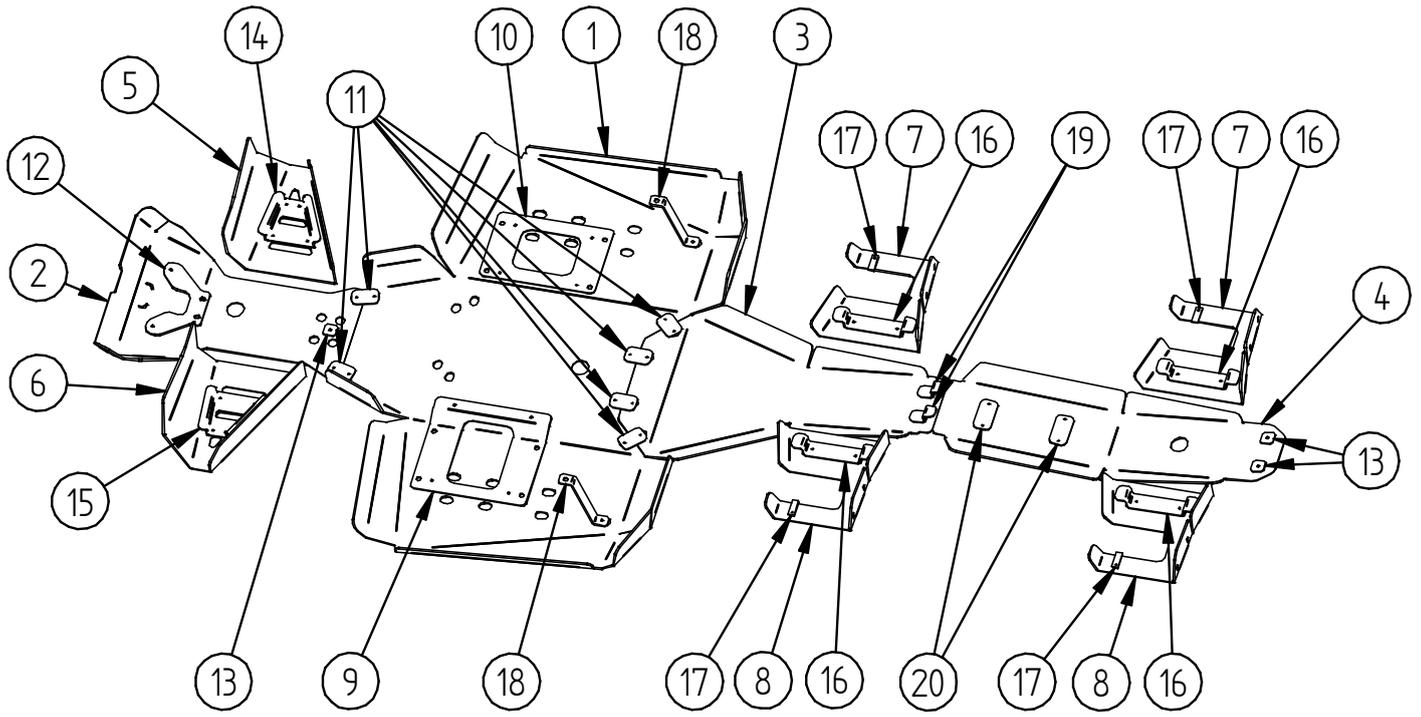


FITTING INSTRUCTIONS

Step 1 Remove all standard plastic covers.



Step 2 Install bracket 02.12506, plates 02.12504, 0212505, clamps 02.13902, use bolts M6x16, washers Ø6/15 and nuts M6. (use 10mm spanner, 10mm socket wrench and 4mm hex key).

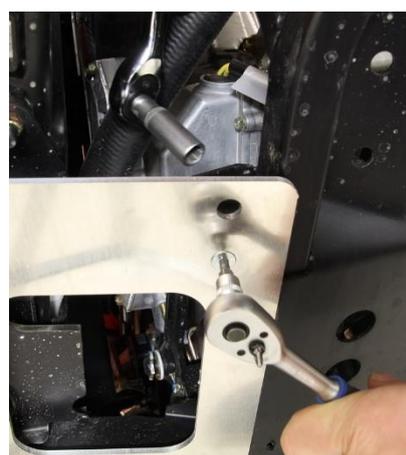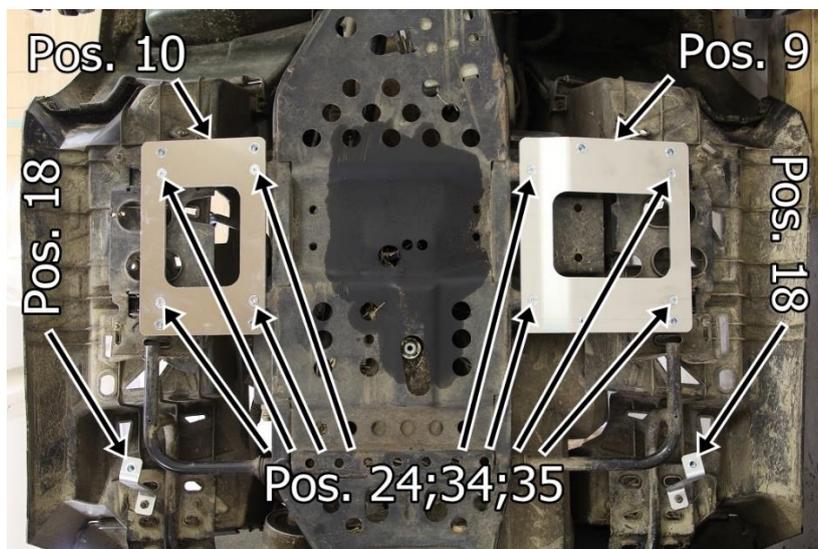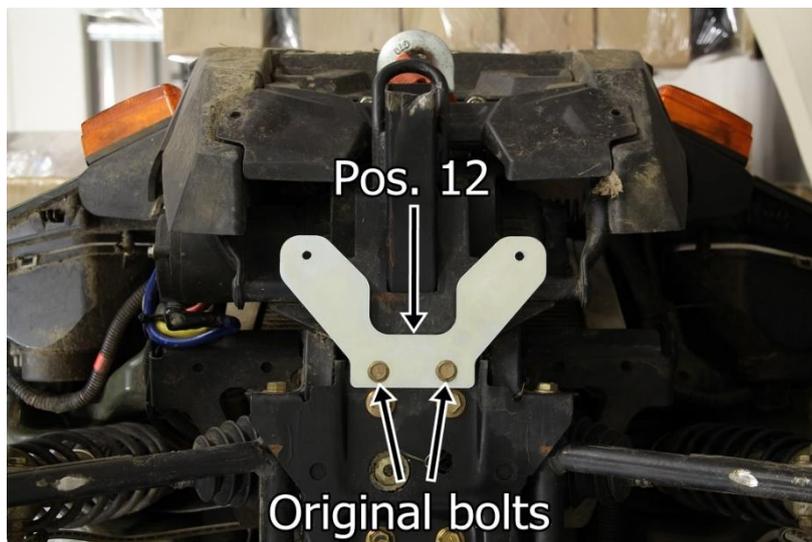


Step 3 Install front arms protections 02.1412, 02.1413, use bolts M6x25 and front arm clamps 02.1416, 02.1417.

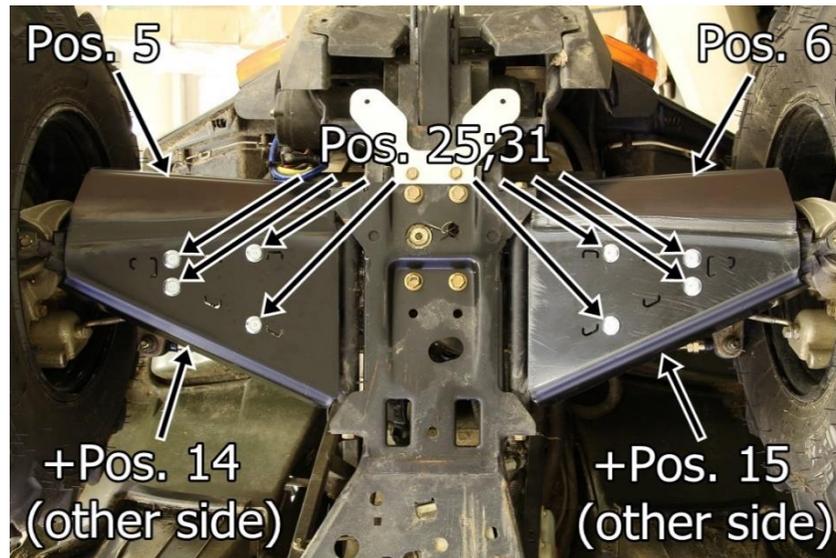


Step 4 Install rear arms protections 02.1414, 02.1415, use bolts M6x25, M8x30, rear arm clamps 02.1418 and installation plates 02.4011.

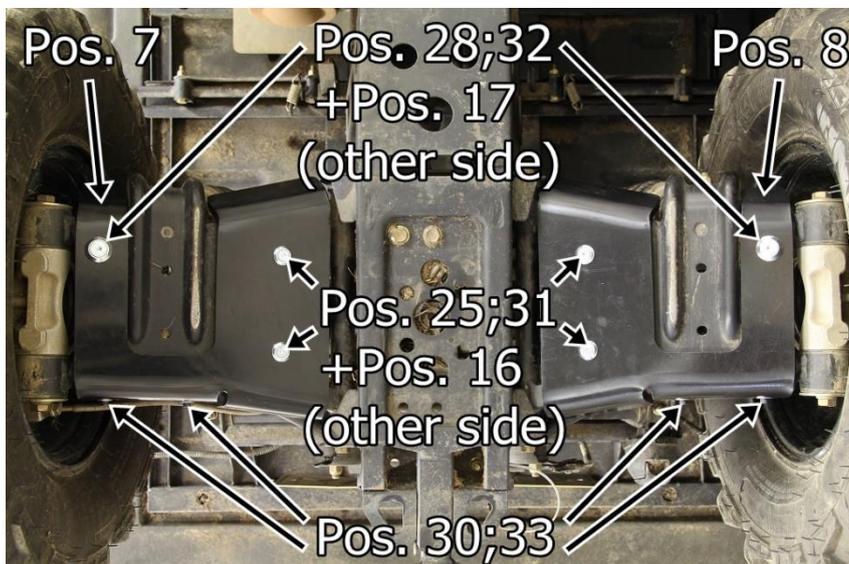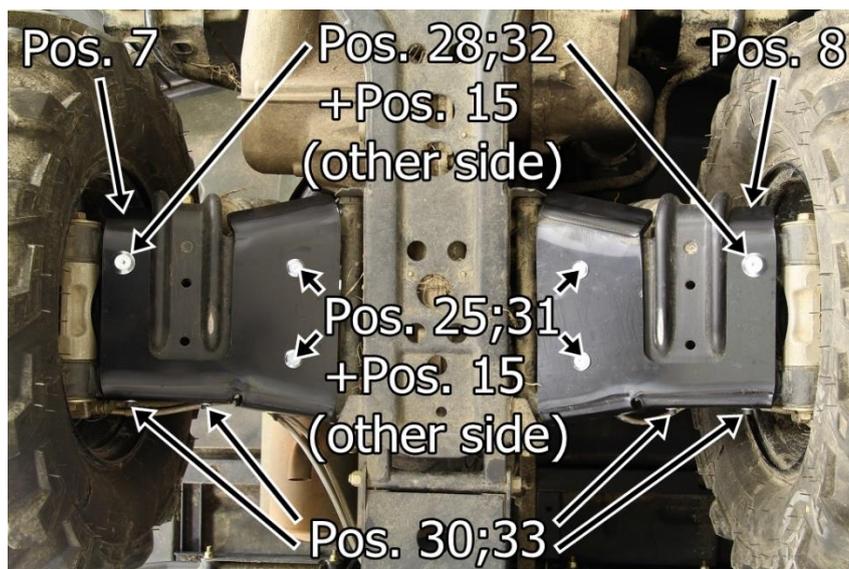


Step 5 Install middle part 02.14001, use bolts M8x25 and M8x40.

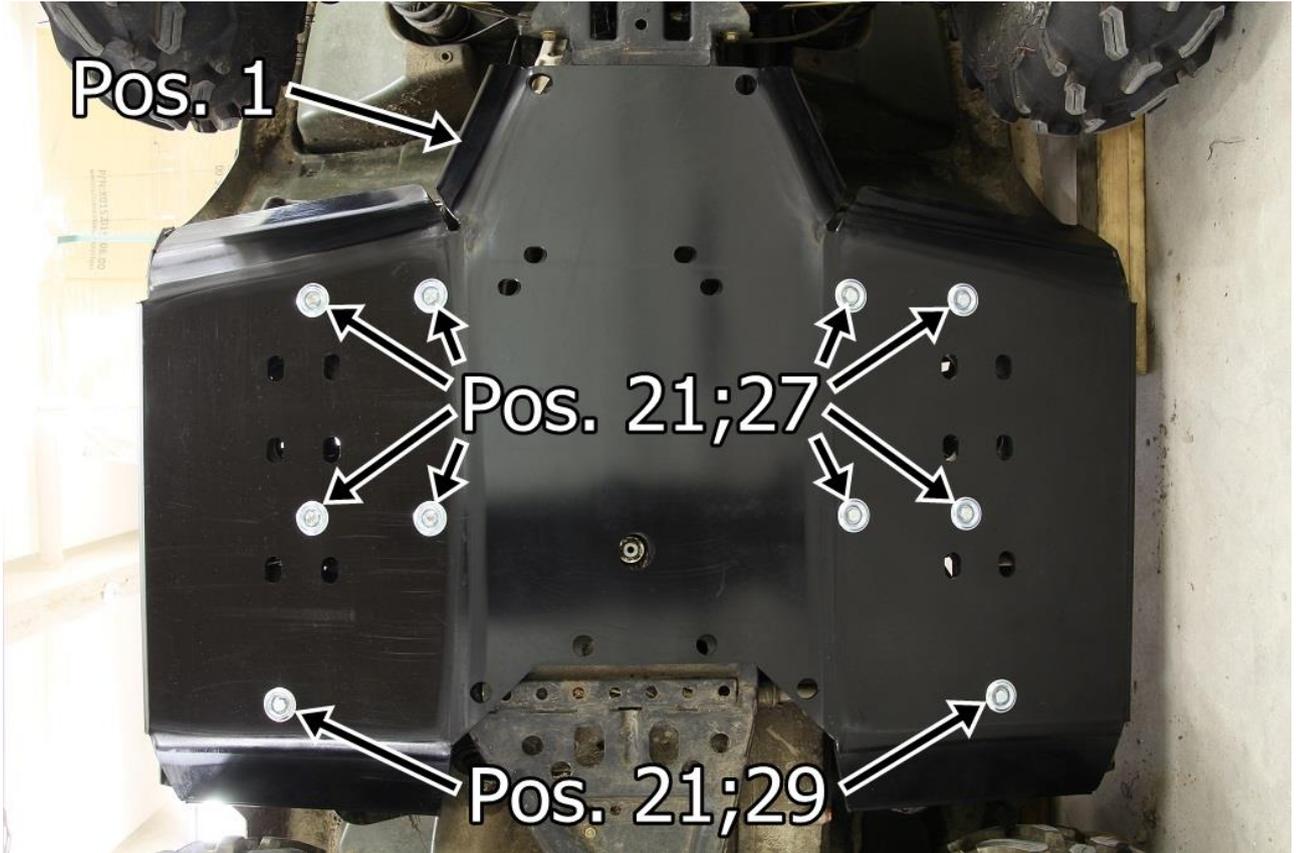


Step 6 Install plates 02.5006, use bolts M6x16.

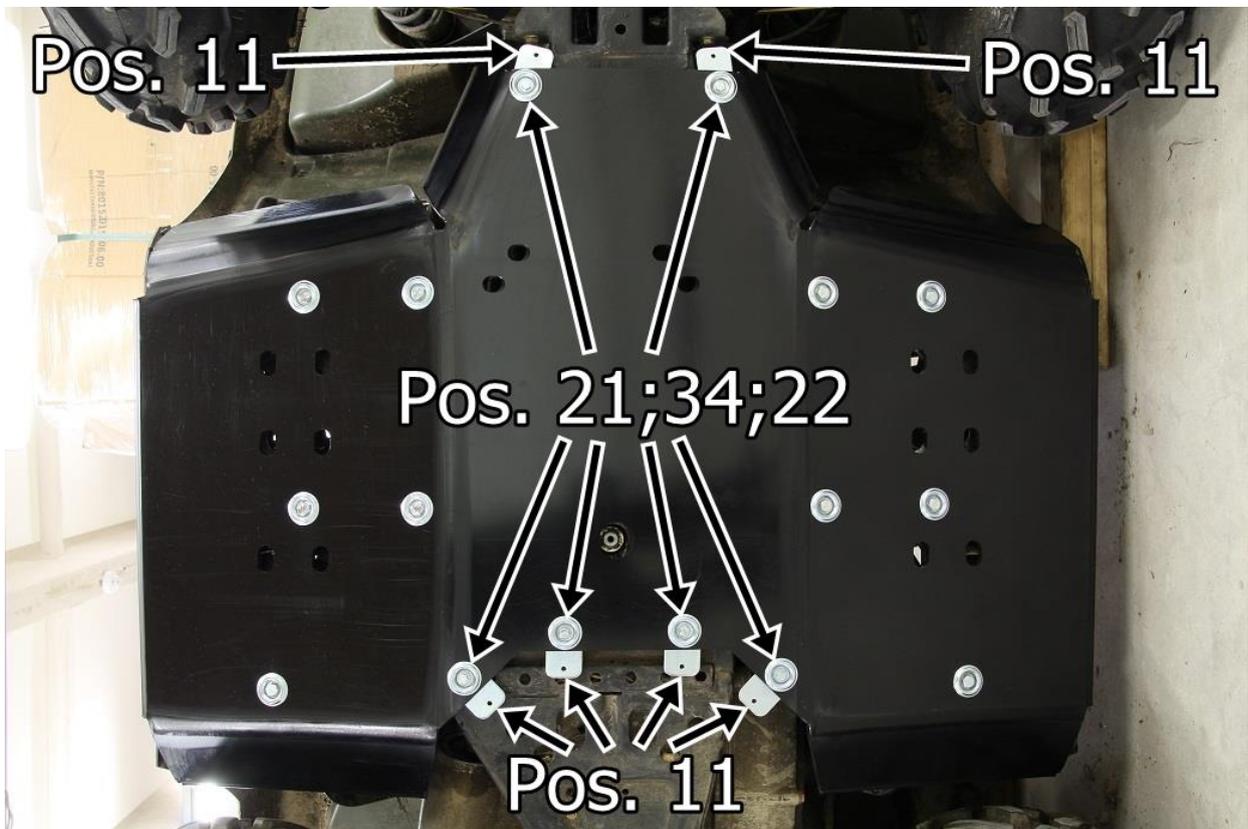


Step 7 Install front part 02.12602, use bolts M6x16, M8x20 and plate 02.2305.

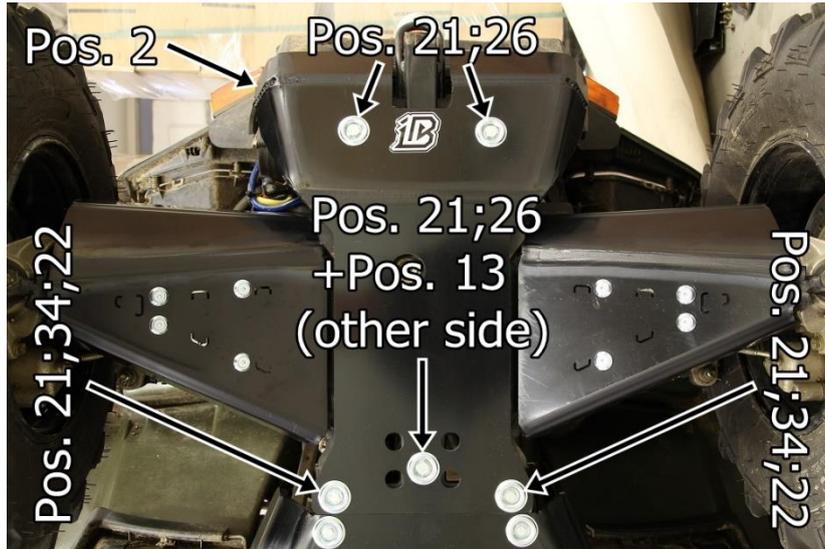

Step 8 Install rear part 02.18601, use bolts M6x16, M6x20 and clamp 02.8210.

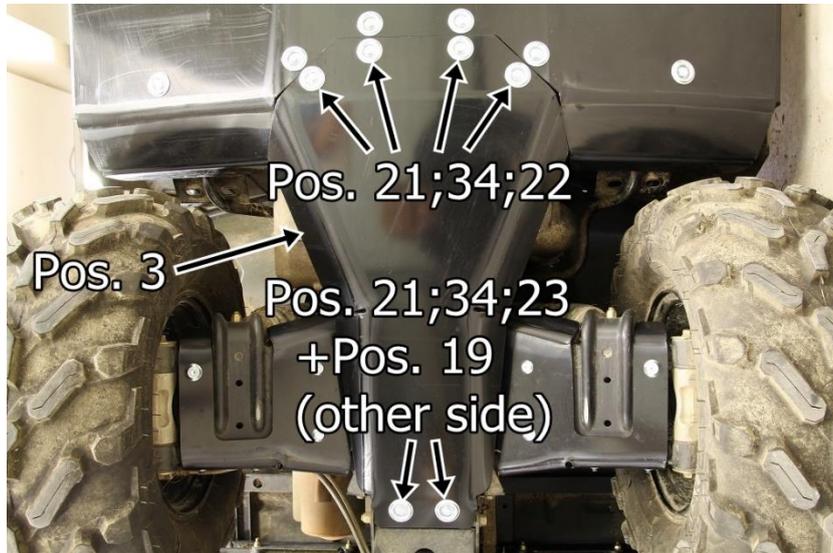

Step 9 Install rear part 02.18602, use bolts M6x20, M8x20, plates 02.4010 and 02.2305.

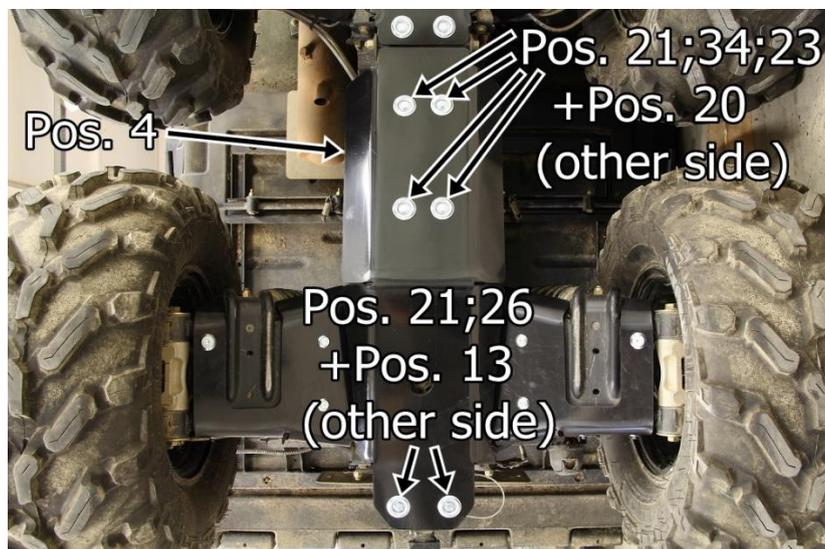

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

