

# IRON BALTIC

## ALUMINIUM SKID PLATE

### CAN AM

### Outlander 650+ G2 (2017-2018)

Code 02.18800

Version 10092023

DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/8QoUutNZ](https://code.ironbaltic.com/u/8QoUutNZ)

**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)


# SPECIFICATION

Pos.	Description	Code	Amount
1	Middle protection	02.8401K	1
2	Front protection	02.8402K	1
3	Rear protection	02.8203K	1
4	Front right A-arm protection	02.8204	1
5	Front left A-arm protection	02.8205	1
6	Rear right trailing arm protection	02.18801	1
7	Rear left trailing arm protection	02.18802	1
8	Bracket	03.3502	4
9	Plate	02.5006	4
10	Plate for front part	02.10004	1
11	Bush for front part	02.10005	2
12	Plate	02.2305	1
13	Clamp for front arm protection	02.8210	4
14	Clamp for rear arm protection	02.18803	2
15	Bracket	02.18804	2
16	Bracket	02.18805	2
17	Bracket	02.18806	2
18	Bolt M6x12 DIN 933	OT.02.02.030	10
19	Bolt M6x16 DIN 933	OT.02.02.050	4
20	Bolt M6x20 DIN 933	OT.02.02.060	2
21	Bolt M6x35 DIN 933	OT.02.02.090	2
22	Bolt M6x50 DIN 933	OT.02.02.120	4
23	Bolt M8x16 DIN 933	OT.02.02.170	10
24	Bolt M8x30 DIN 933	OT.02.02.200	1
25	Bolt M10x30 DIN 933	OT.02.02.320	2
26	Bolt M6x25 DIN 7991	OT.02.04.040	3
27	Bolt M8x50 DIN 7991	OT.02.04.200	2
28	Carriage bolt M8x25 DIN 603	OT.02.05.060	8
29	Washer Ø6/15 SFS 3738	OT.04.03.020	31
30	Washer Ø8/20 SFS 3738	OT.04.03.030	10
31	Washer Ø10/20 DIN 125	OT.04.01.040	4
32	Dished washer	14.503	31
33	Conical washer Ø6	14.502	3
34	Conical washer Ø8	14.501	2
35	Nyloc nut M6 DIN 985	OT.03.02.030	9
36	Nyloc nut M8 DIN 985	OT.03.02.040	10
37	Nyloc nut M10 DIN 985	OT.03.02.050	2




# FITTING INSTRUCTIONS


**Step 1** Remove all standard plastic covers and winch fairlead.

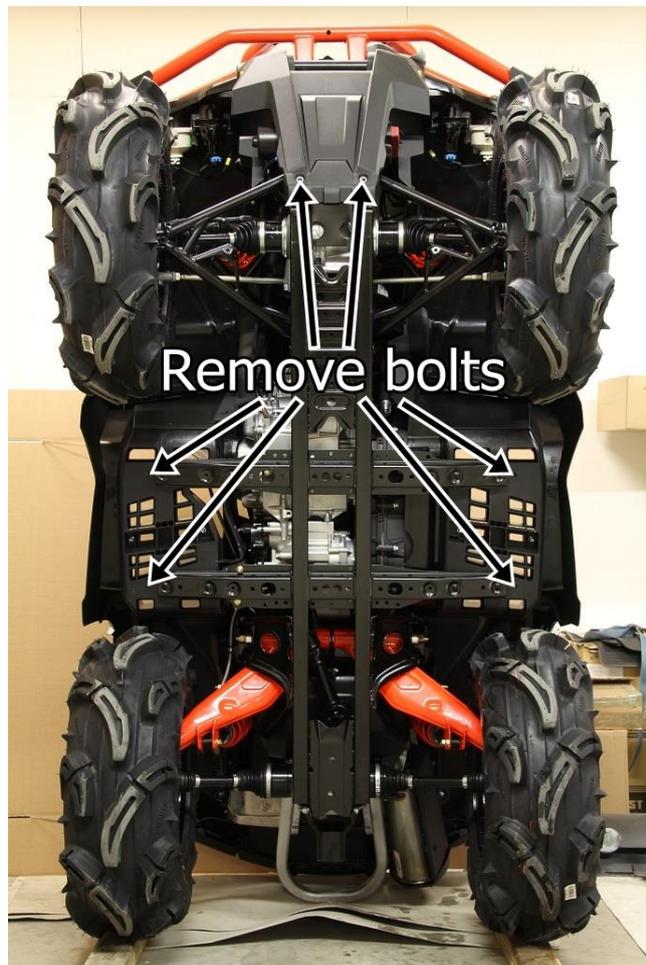


**Step 2** Install brackets 03.3502. Place brackets same plane as frame.

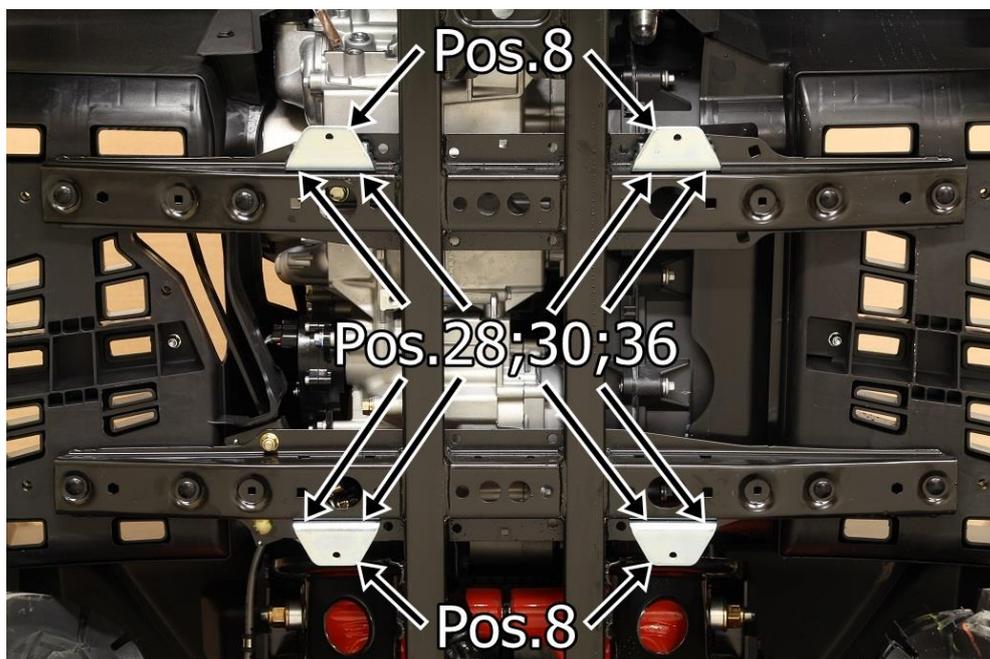





**Step 3** Install middle protection 02.8401K.

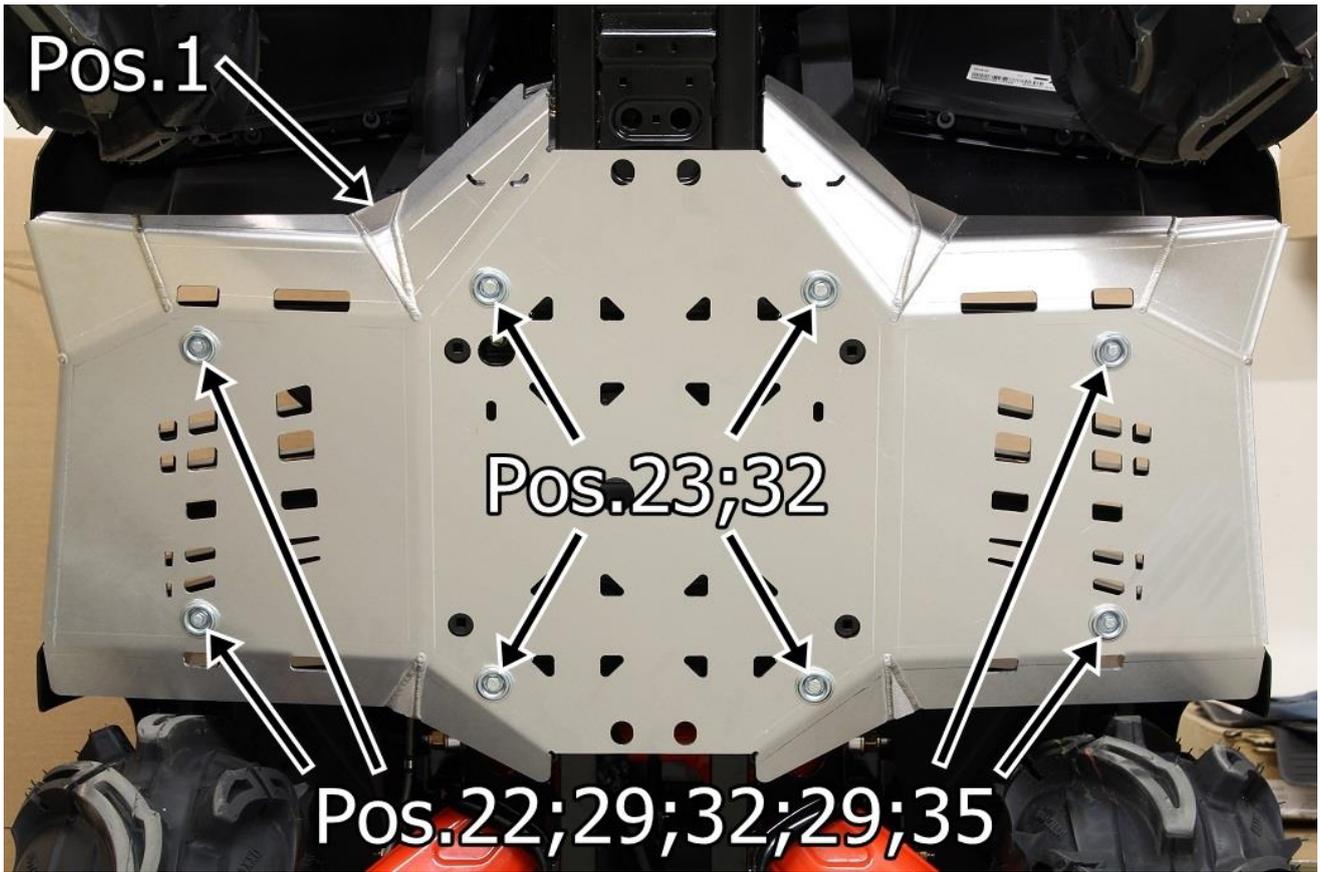


**Step 4** Install plates 02.5006.

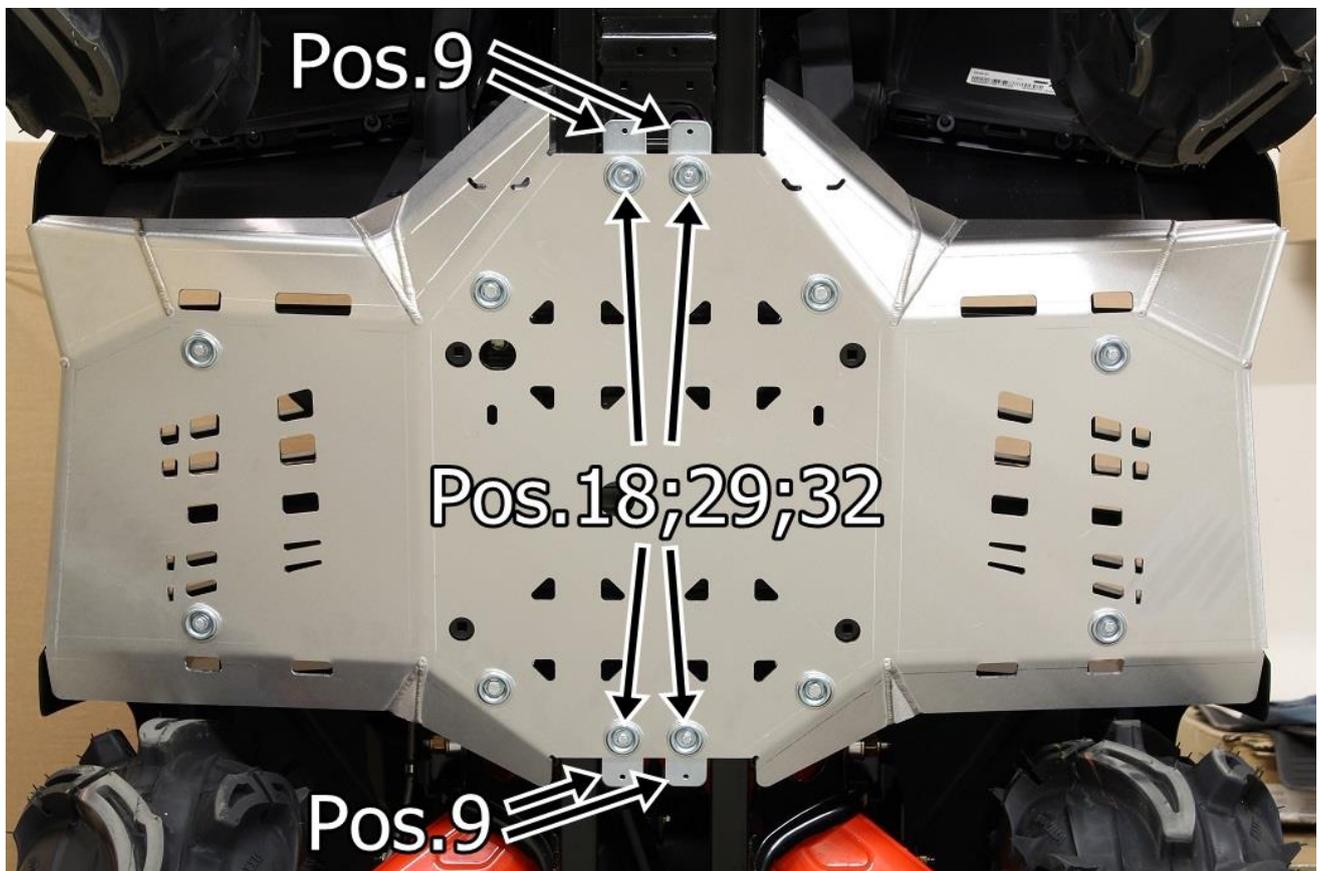


**Step 5** Install front protection 02.8402K.

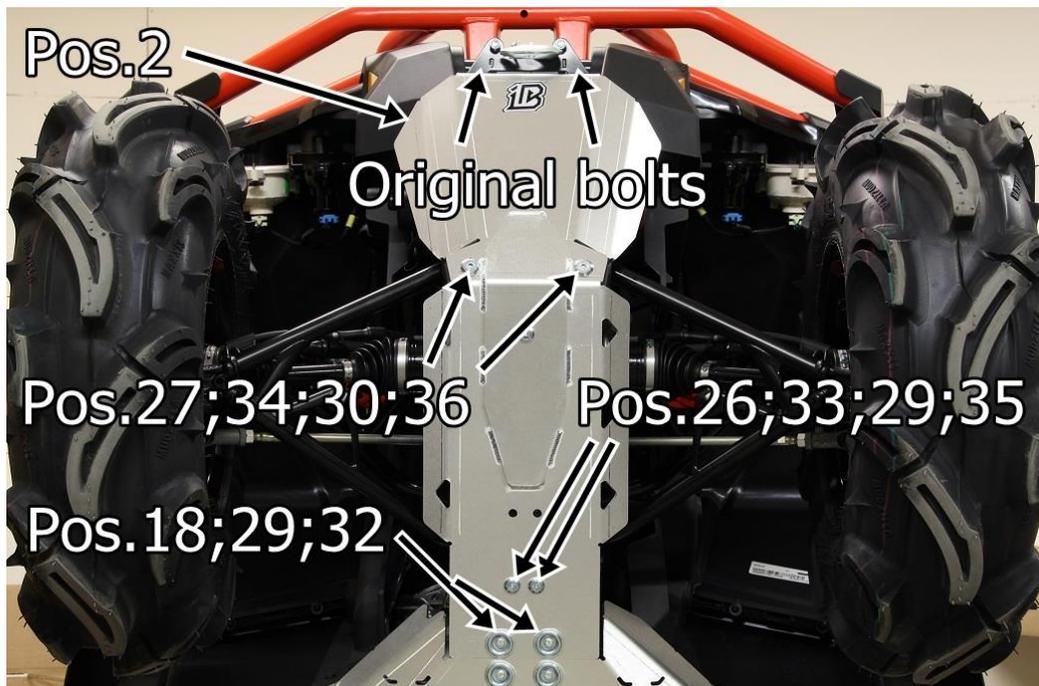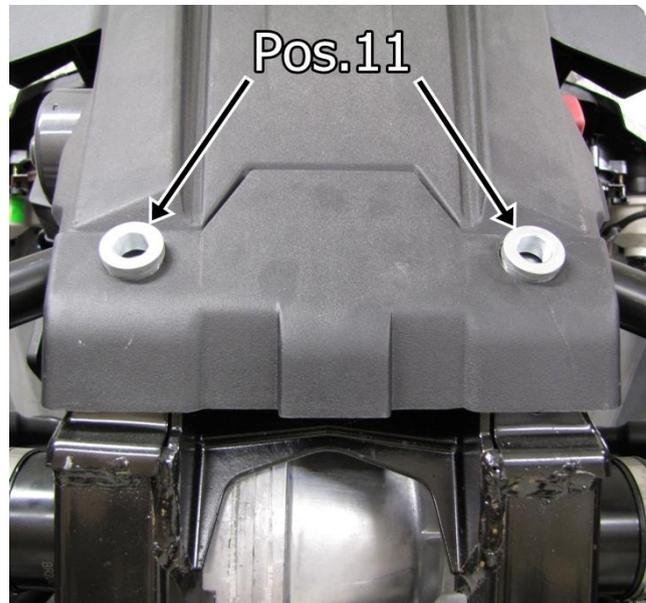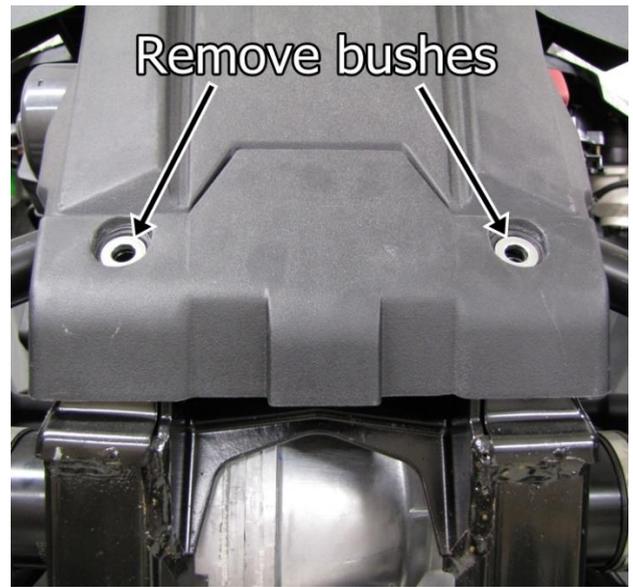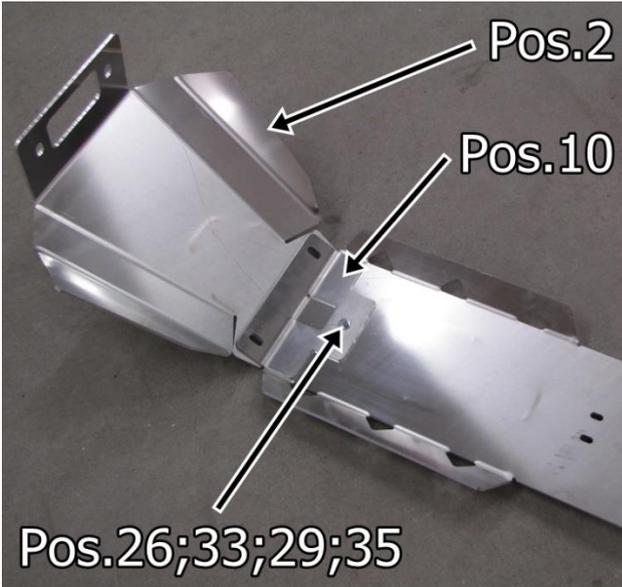

**Step 6** Install rear protection 02.8203K.

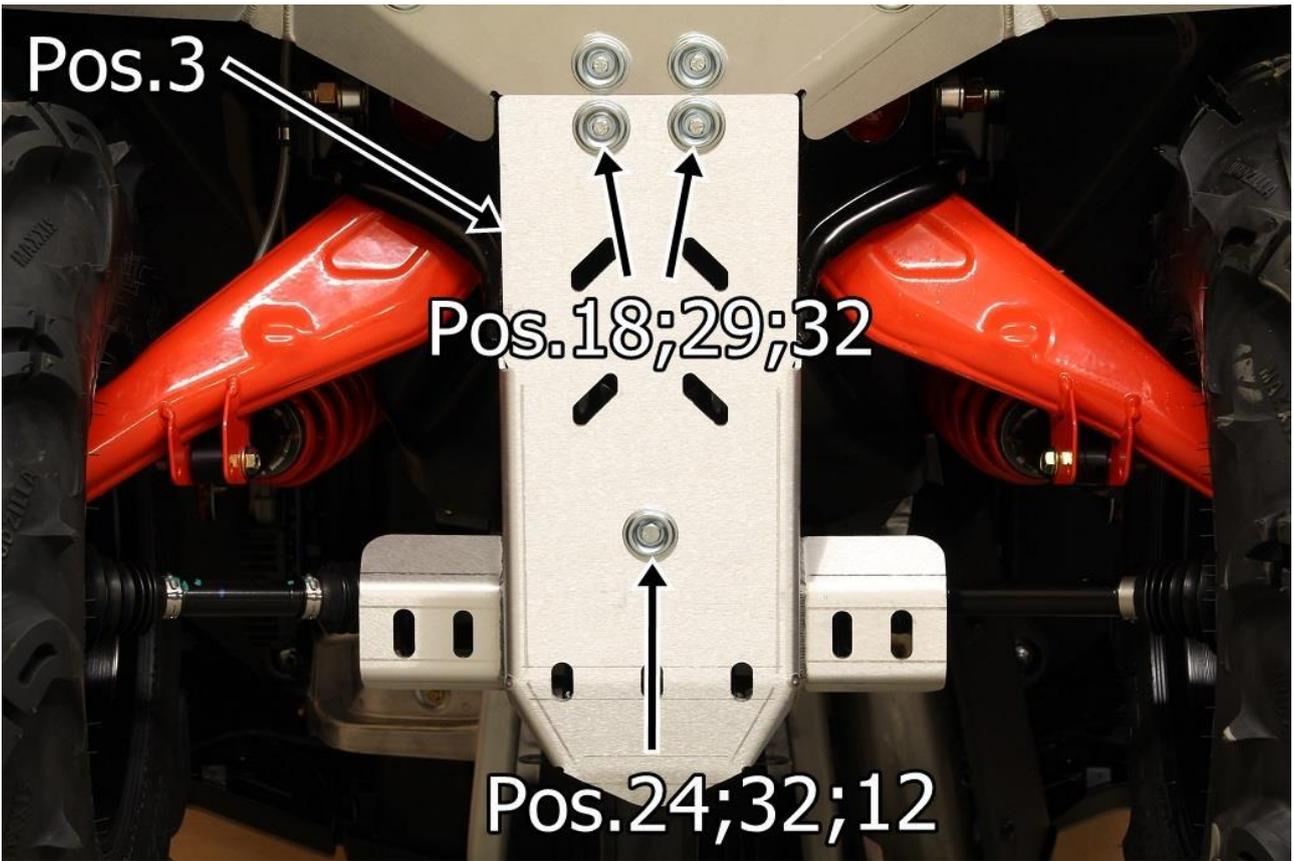


**Step 7** Install front A-arms protections 02.8204, 02.8205 and clamps 02.8210.

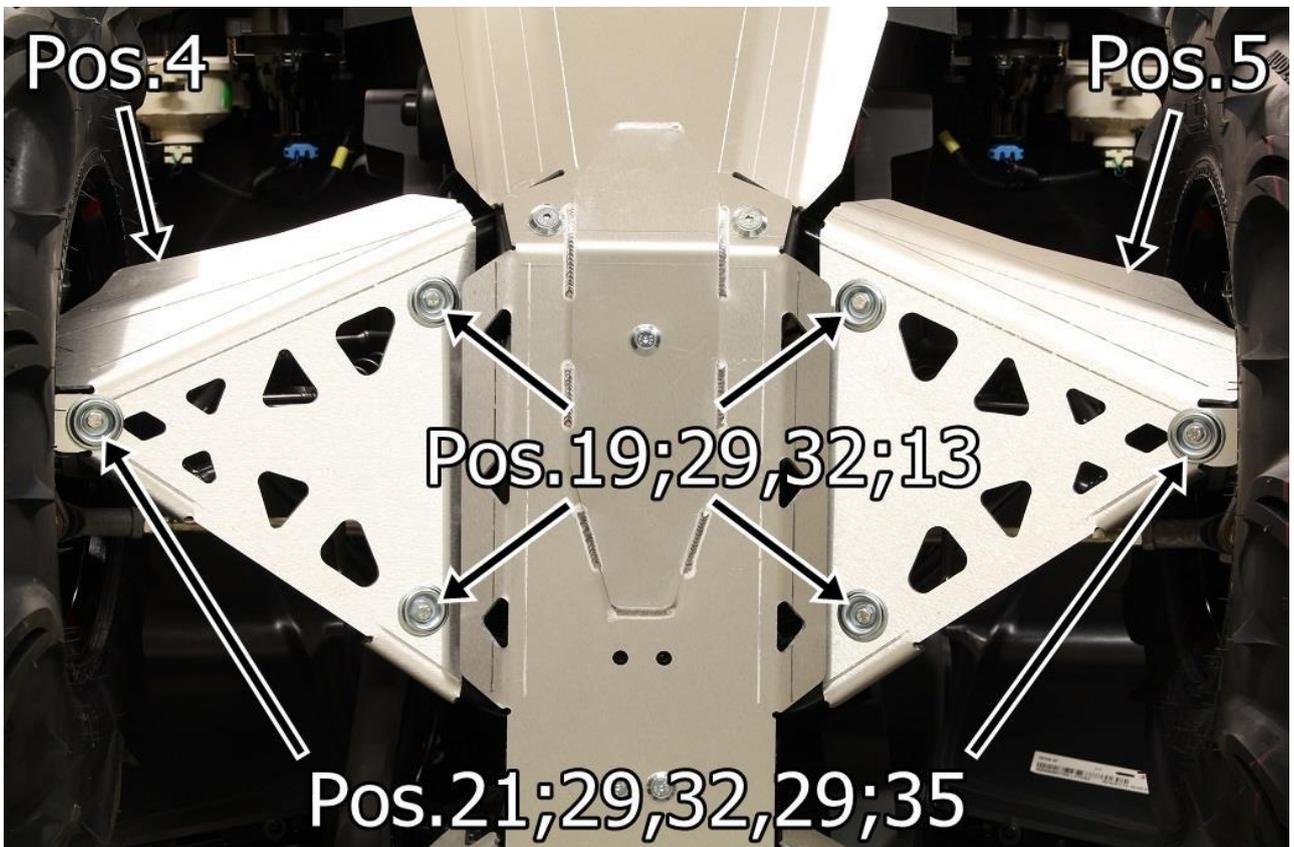


## Step 8

Install brackets 02.18804, 02.18805, 02.18806. On some models it can be impossible to install Pos.15 bracket. In that case, install the arm protector without Pos.15 bracket!


With brake and wheel scraper.

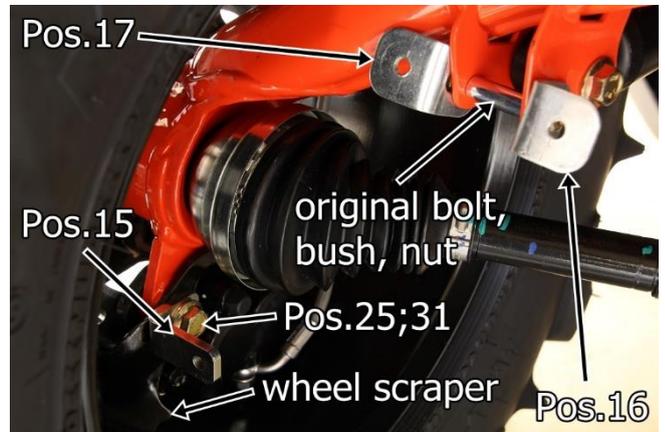

With brake only.

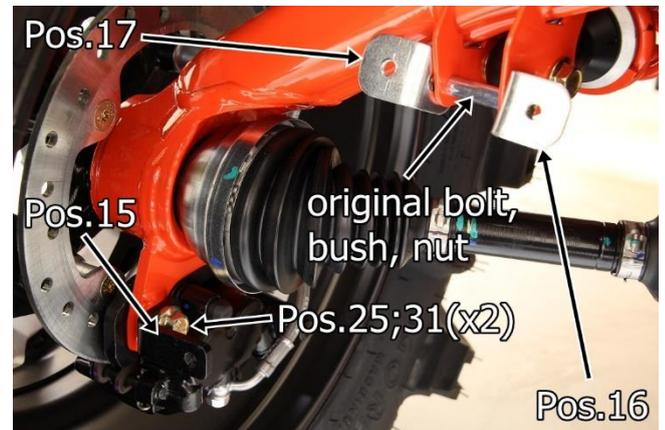

Without brake.


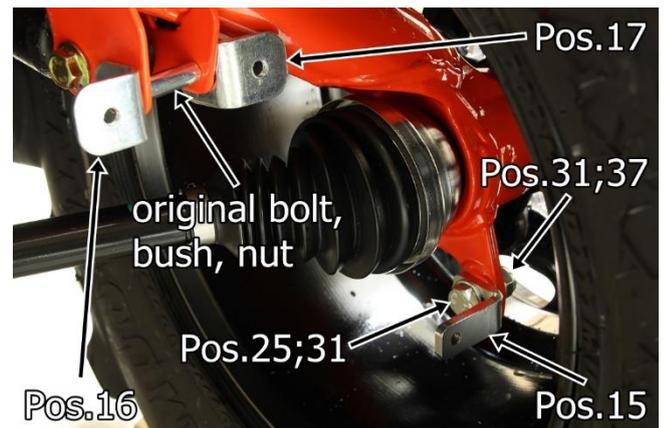


**NB!**

**Make sure that there is enough clearance (min 2mm) between the bolt Pos.26 and brake disc.**

**Step 9**

Install rear trailing arms protections 02.18801, 02.18802 and clamps 02.18803.

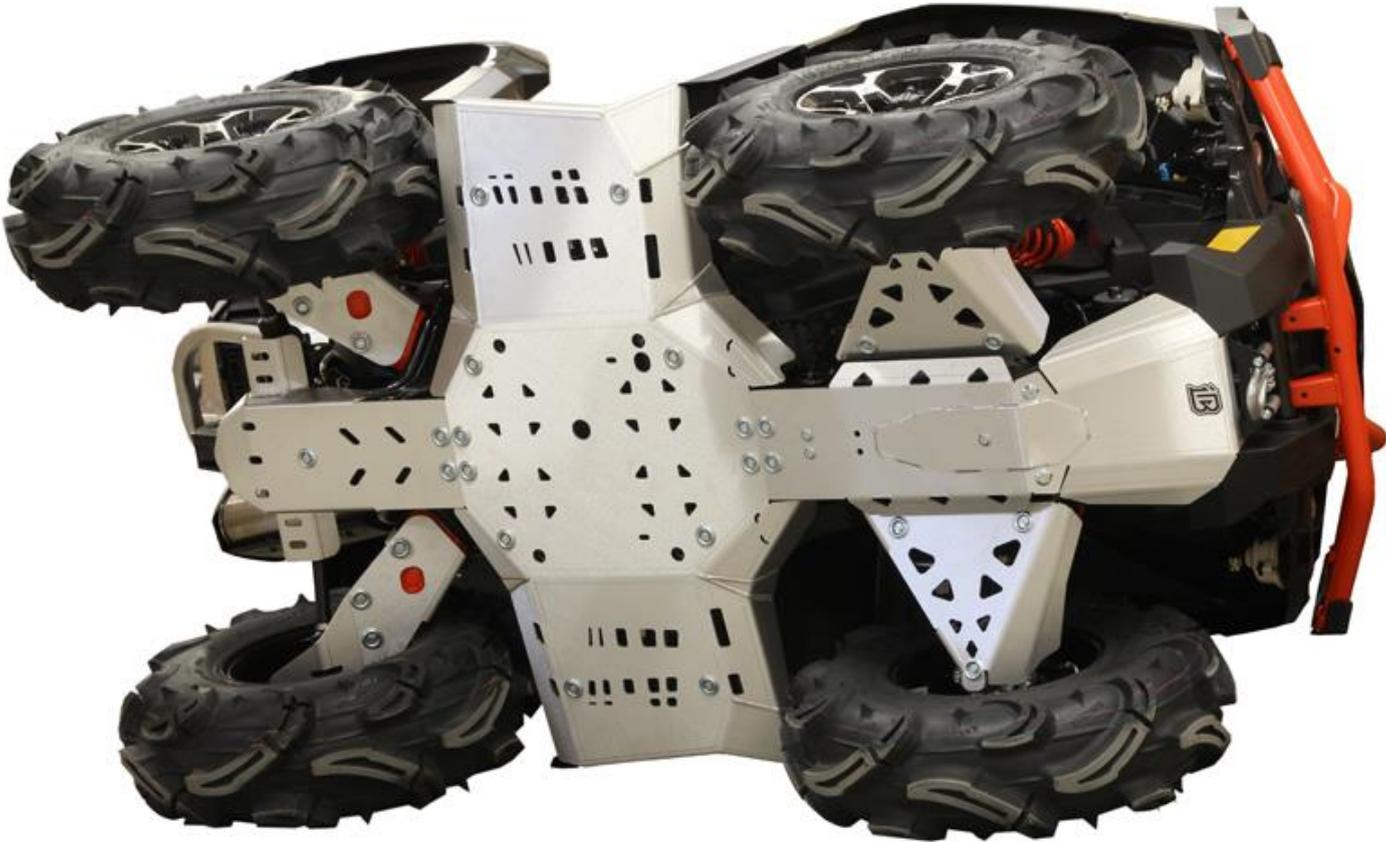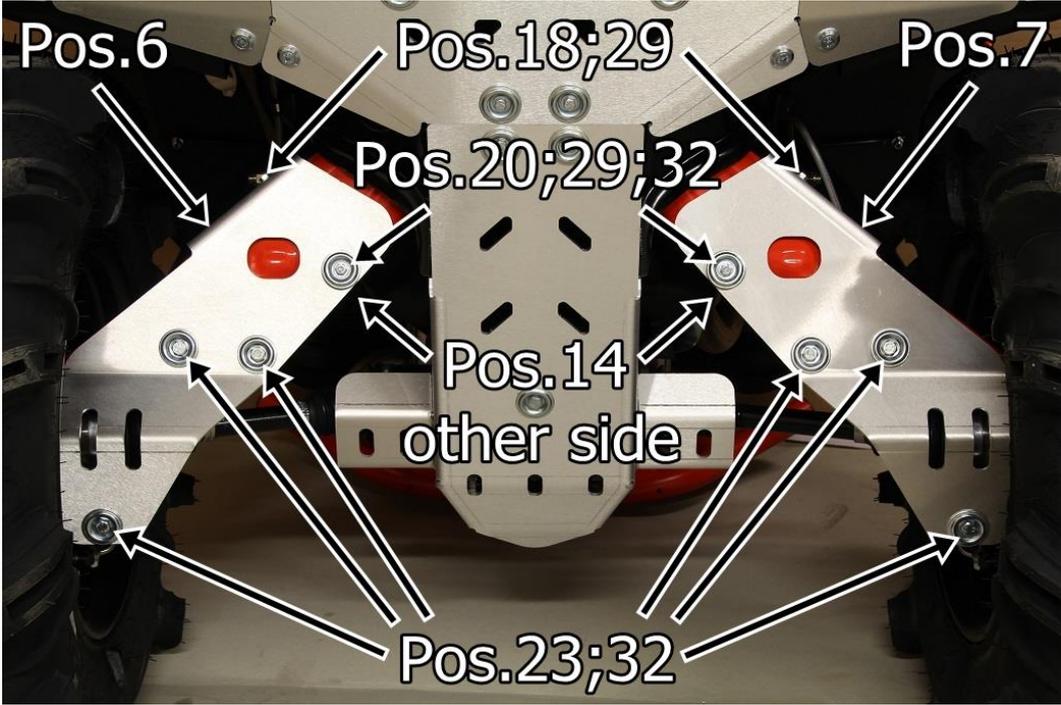





# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

