

REAR A-ARM GUARDS (ALUMINIUM)




code.ironbaltic.com/u/xeK1kEn3

CAN AM

G2 Outlander / Renegade (2017-...)

Code 02.18810VP

Version 10092023

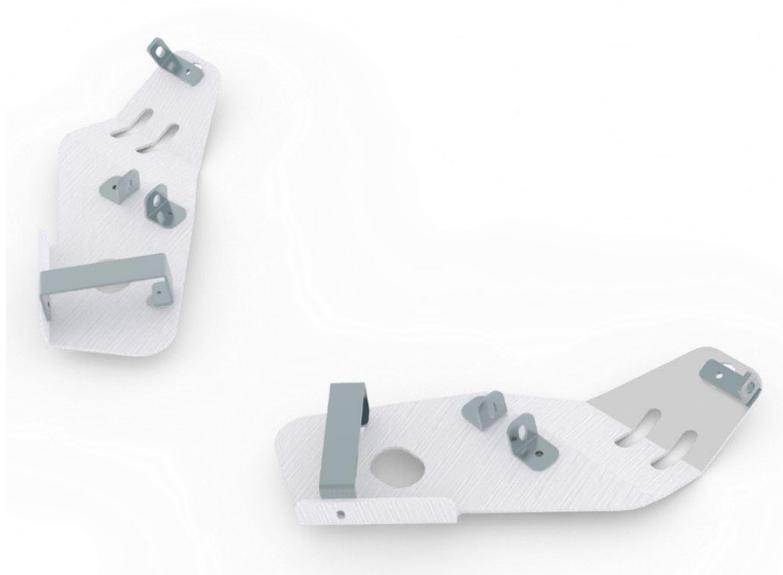


Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Rear right trailing arm protection	02.18801	1
2	Rear left trailing arm protection	02.18802	1
3	Clamp	02.18803	2
4	Bracket	02.18804	2
5	Bracket	02.18805	2
6	Bracket	02.18806	2
7	Dished washer	14.503	8
8	Bolt M6x12 DIN 933	OT.02.02.030	2
9	Bolt M6x20 DIN 933	OT.02.02.060	2
10	Bolt M8x16 DIN 933	OT.02.02.170	6
11	Bolt M10x30 DIN 933	OT.02.02.320	2
12	Washer Ø6/15 SFS 3738	OT.04.03.020	4
13	Washer Ø10/20 DIN 125	OT.04.01.040	4
14	Nyloc nut M10 DIN 985	OT.03.02.050	2

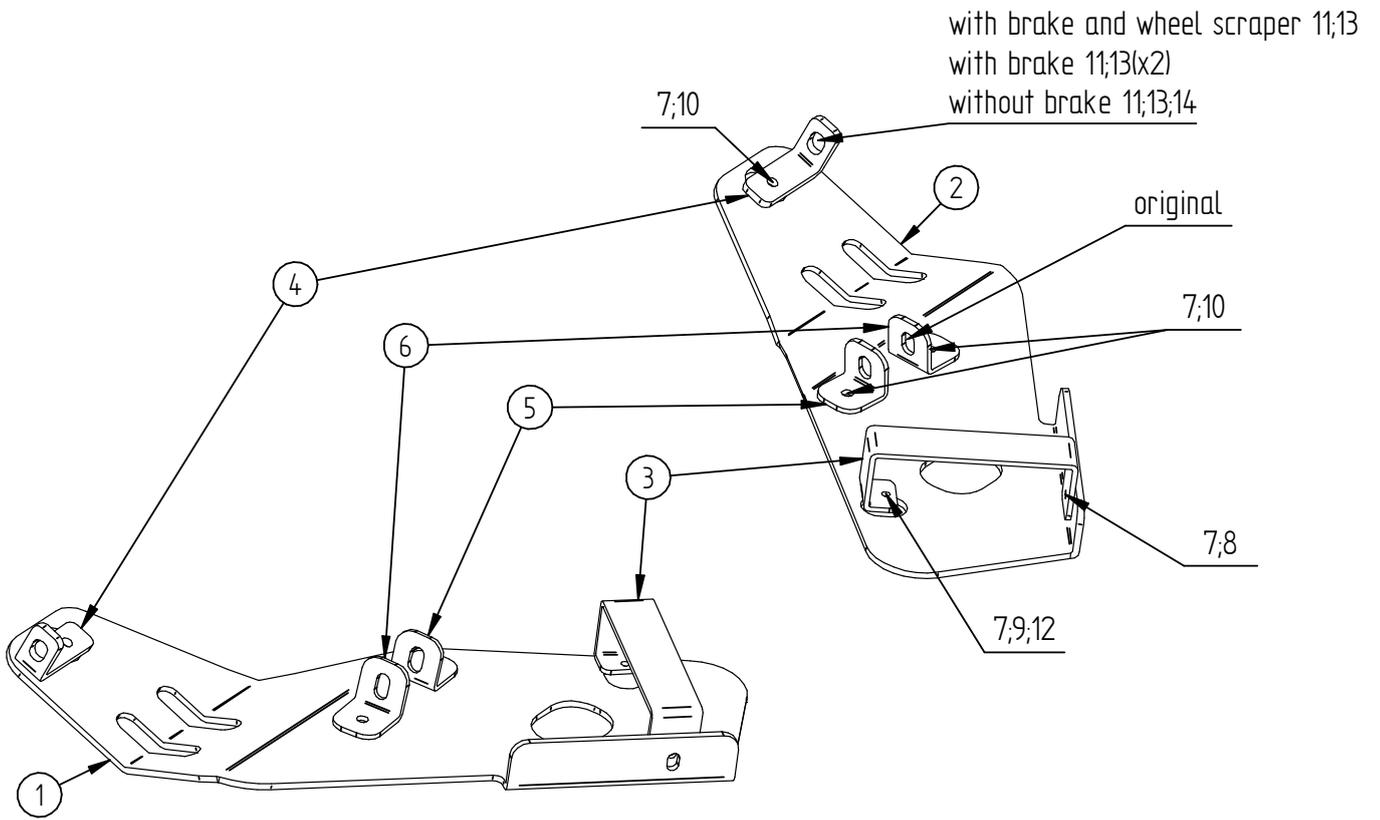


FITTING INSTRUCTIONS


Step 1 Remove original rear trailing arm protections.

Step 2 Install brackets 02.18804, 02.18805, 02.18806. On some models it can be impossible to install Pos.4 bracket. In that case, install the arm protector without Pos.4 bracket!


With brake and wheel scraper.

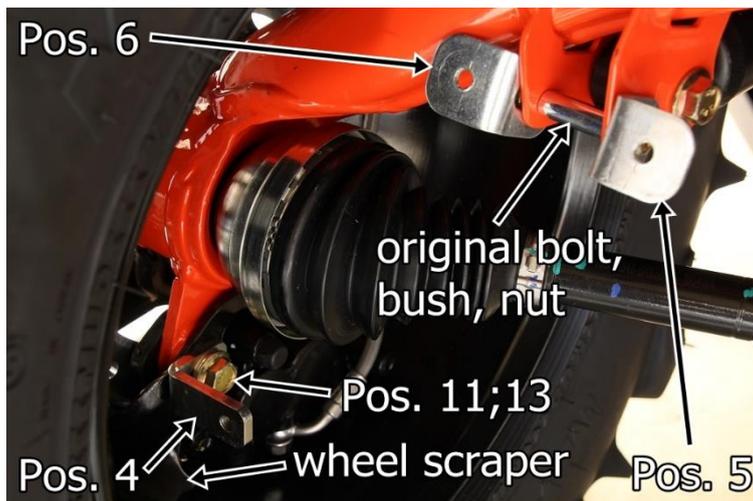

With brake.

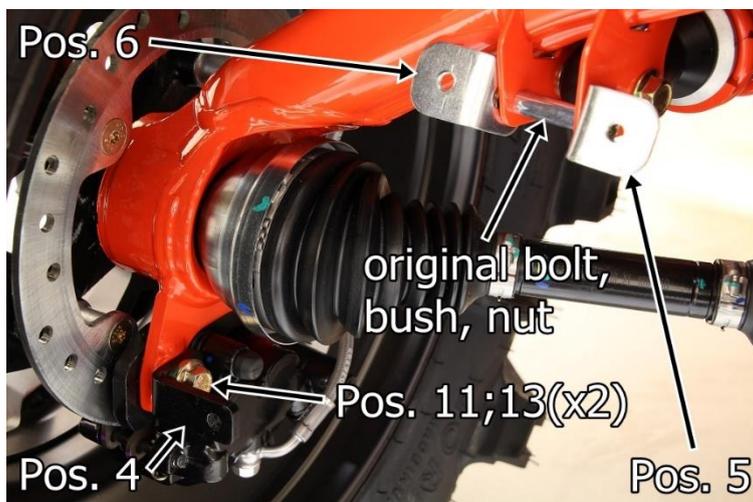

Without brake.

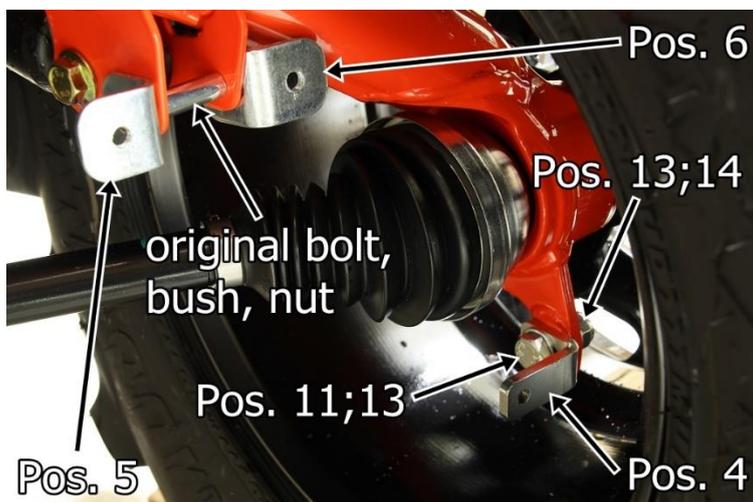




NB!

Make sure that there is enough clearance (min 2mm) between the bolt Pos.11 and brake disc.

Step 3 Install rear trailing arms protections 02.18801, 02.18802, use bolts M6x12, M6x20, M8x20 and clamps 02.18803.

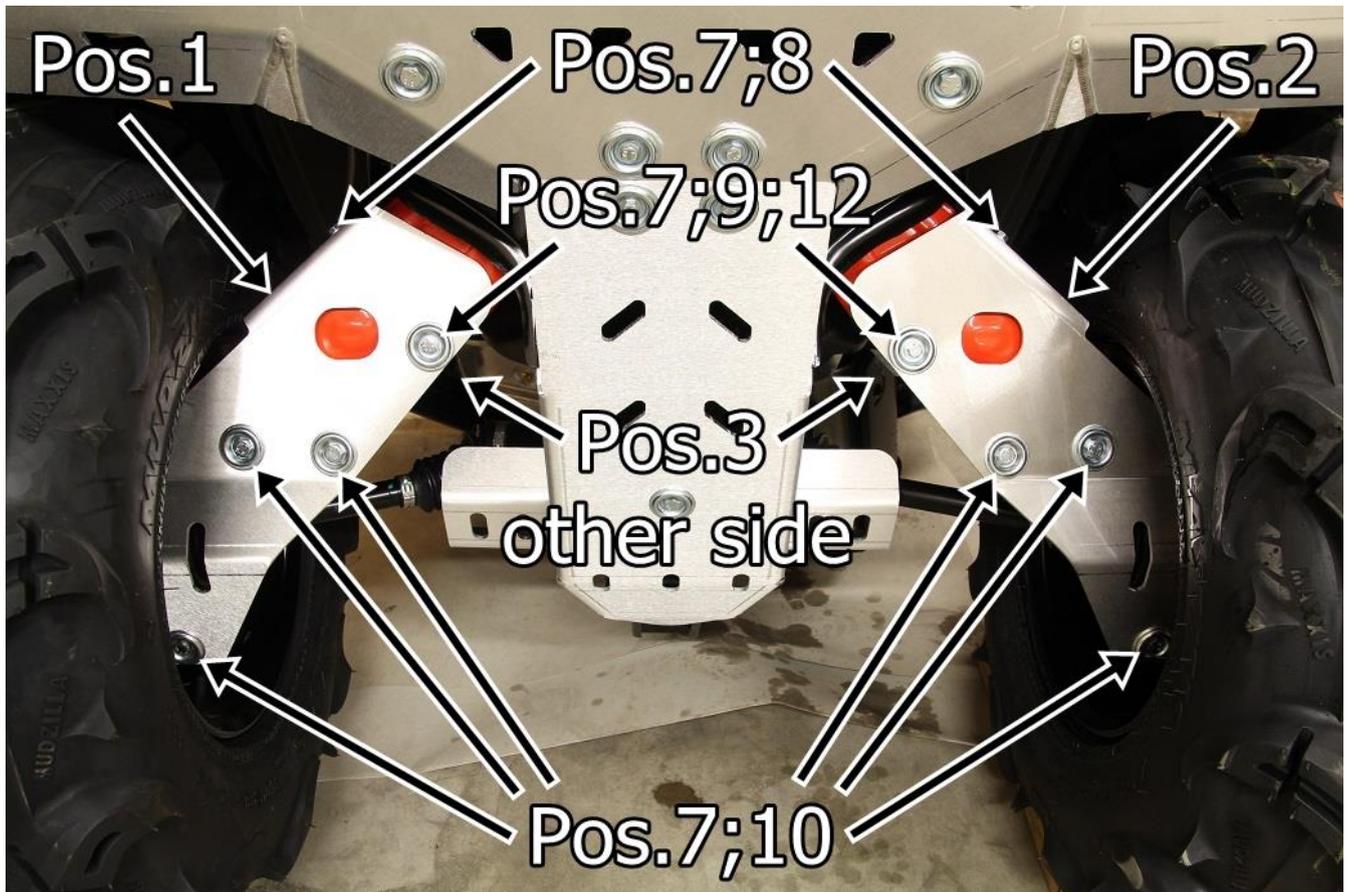

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

