

IRON BALTIC

PLASTIC SKID PLATE

CAN AM

Outlander 650+ G2 (2017-2018)

Code 02.18900

Version 10092023

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/Yo4YfsuT

Keep this manual for future reference!


If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION


Pos.	Description	Code	Amount
1	Middle protection	02.8501	1
2	Front protection	02.8502K	1
3	Rear protection	02.8303K	1
4	Right side part	02.8503	1
5	Left side part	02.8504	1
6	Front right A-arm protection	02.8304	1
7	Front left A-arm protection	02.8305	1
8	Rear right trailing arm protection	02.18901	1
9	Rear left trailing arm protection	02.18902	1
10	Bracket	03.3502	4
11	Plate	02.5006	11
12	Connecting plate (20)	02.8311	2
13	Connecting plate (40)	02.10006	2
14	Front part bracket	02.8506	1
15	Plate for front part	02.10004	1
16	Bush for front part	02.10005	2
17	Plate	02.2305	1
18	Clamp for front arm protection	02.8210	4
19	Clamp for rear arm protection	02.18803	2
20	Bracket	02.18804	2
21	Bracket	02.18805	2
22	Bracket	02.18806	2
23	Bolt M6x16 DIN 933	OT.02.02.050	10
24	Bolt M6x20 DIN 933	OT.02.02.060	6
25	Bolt M6x25 DIN 933	OT.02.02.070	2
26	Bolt M6x40 DIN 933	OT.02.02.100	2
27	Bolt M6x60 DIN 933	OT.02.02.140	4
28	Bolt M8x20 DIN 933	OT.02.02.180	13
29	Bolt M8x35 DIN 933	OT.02.02.210	1
30	Bolt M10x30 DIN 933	OT.02.02.320	2
31	Bolt M6x20 DIN 7991	OT.02.04.030	20
32	Bolt M6x30 DIN 7991	OT.02.04.050	3
33	Bolt M8x60 DIN 7991	OT.02.04.210	2
34	Carriage bolt M8x25 DIN 603	OT.02.05.060	8
35	Washer Ø6/15 SFS 3738	OT.04.03.020	33
36	Washer Ø8/20 SFS 3738	OT.04.03.030	10
37	Washer Ø10/20 DIN 125	OT.04.01.040	4
38	Dished washer	14.503	36
39	Conical washer Ø6	14.502	22
40	Conical washer Ø8	14.501	2
41	Nyloc nut M6 DIN 985	OT.03.02.030	9
42	Nyloc nut M8 DIN 985	OT.03.02.040	10
43	Nyloc nut M10 DIN 985	OT.03.02.050	2

FITTING INSTRUCTIONS


Step 1 Remove all standard plastic covers and winch fairlead.

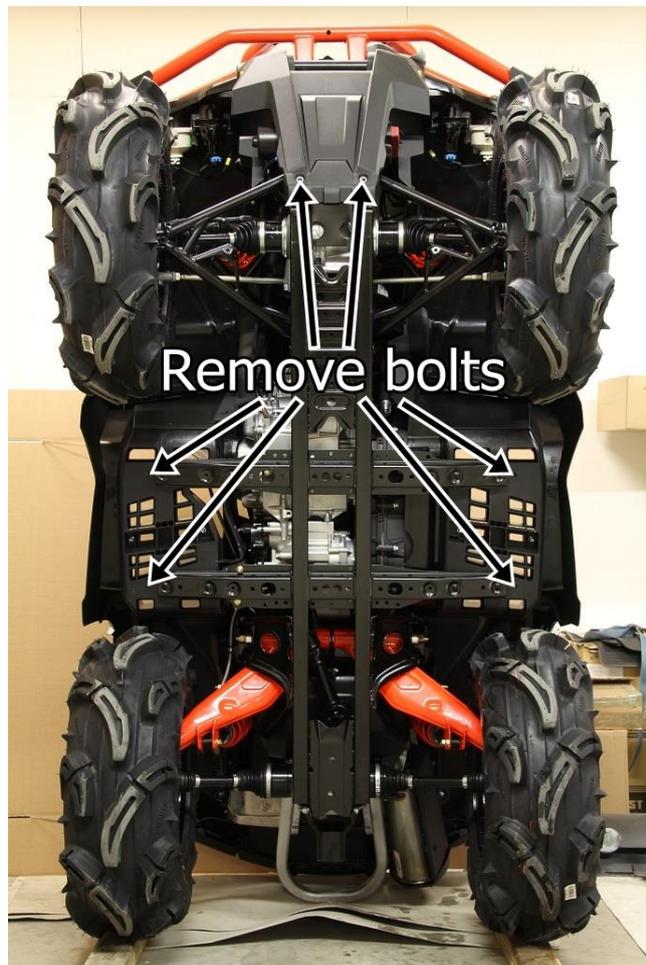



Step 2 Install brackets 03.3502. Place brackets same plane as frame.

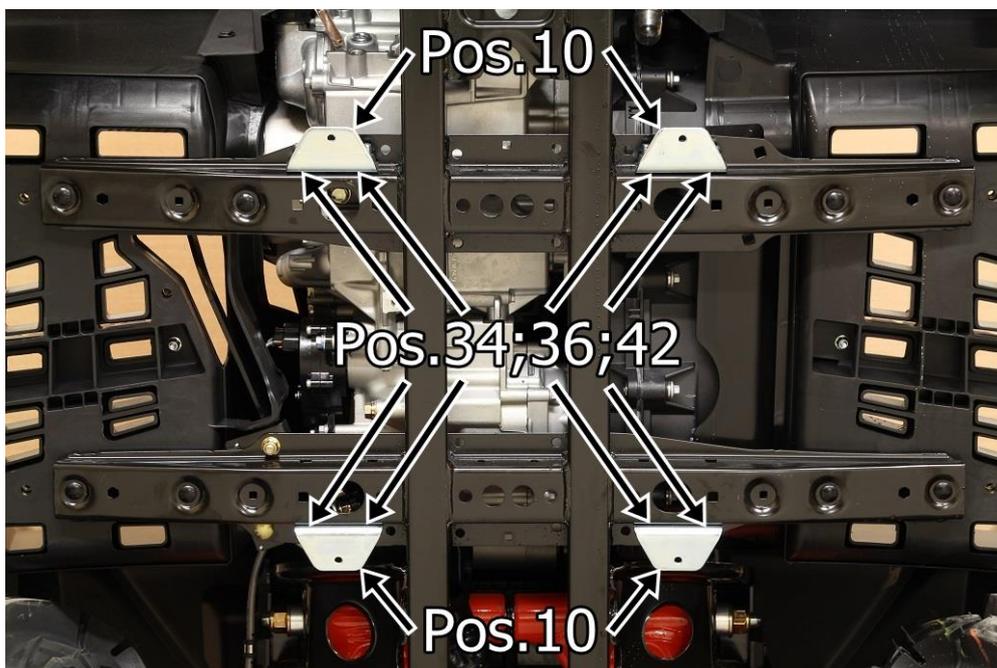


Step 3 Install middle protection 02.8501.

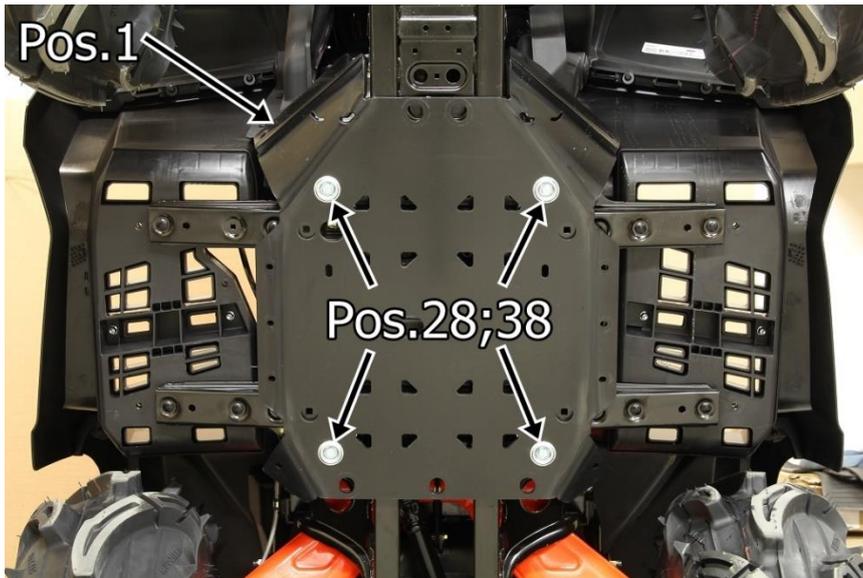




Step 4 Install plates 02.5006, 02.8311, 02.10006.

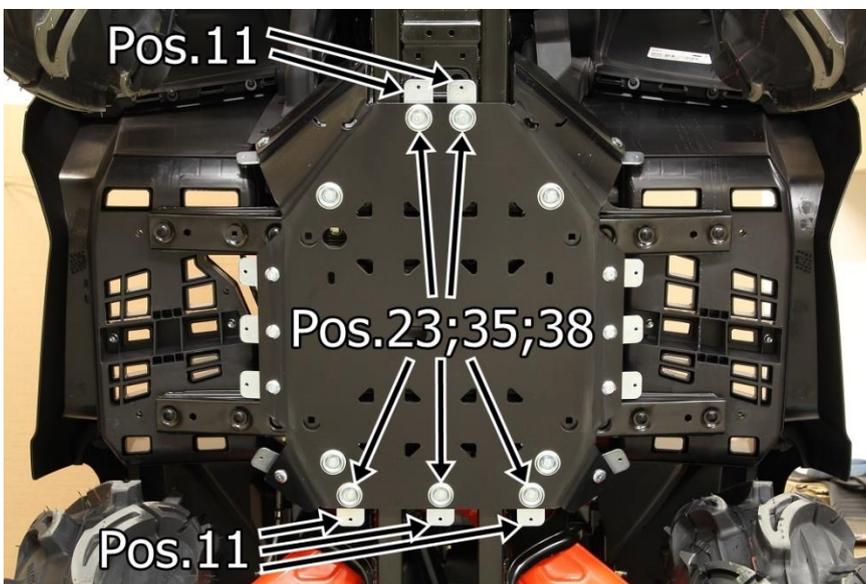
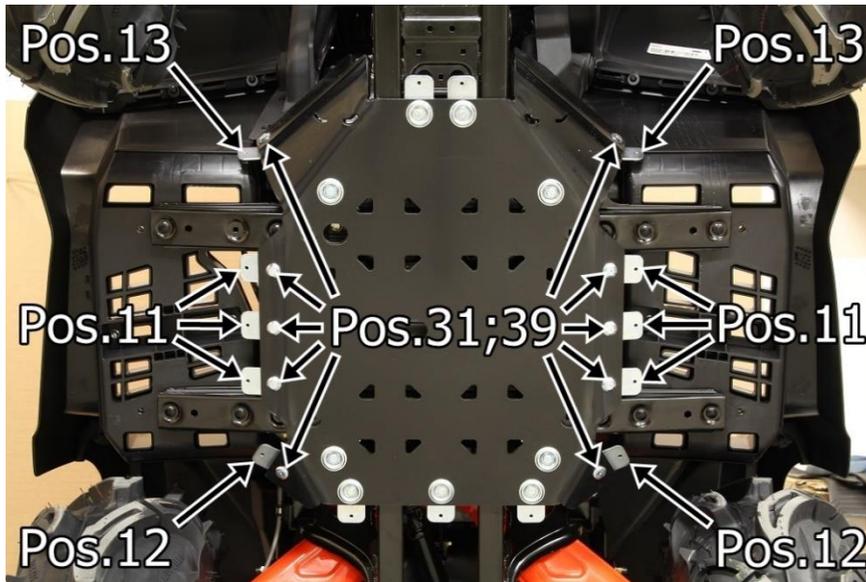


Step 5 Install right side protection 02.8503 and left side protection 02.8504.

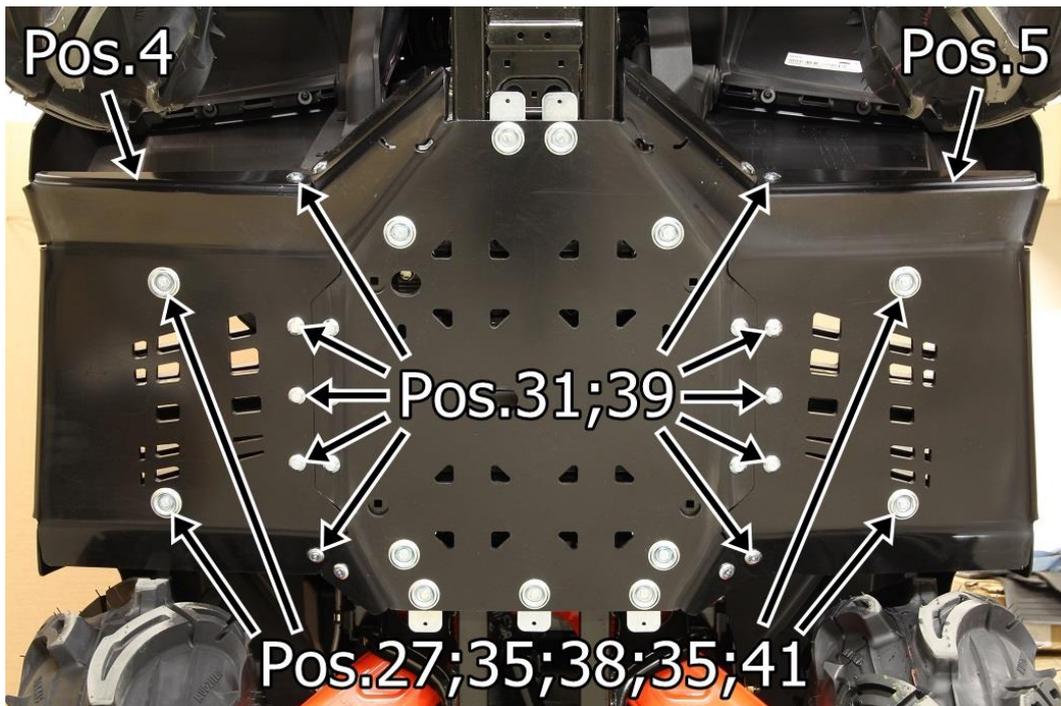


Step 6 Install front protection 02.8502K.

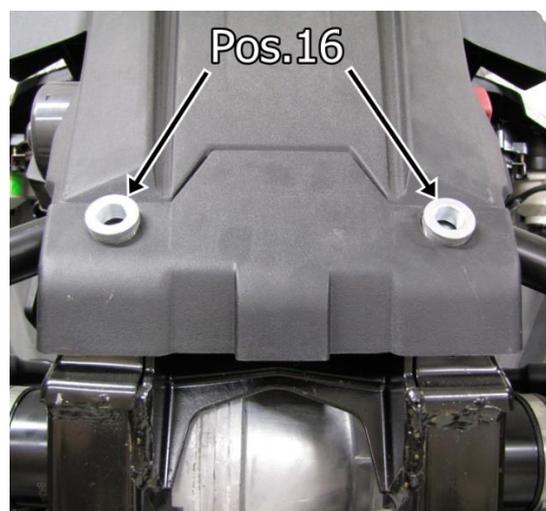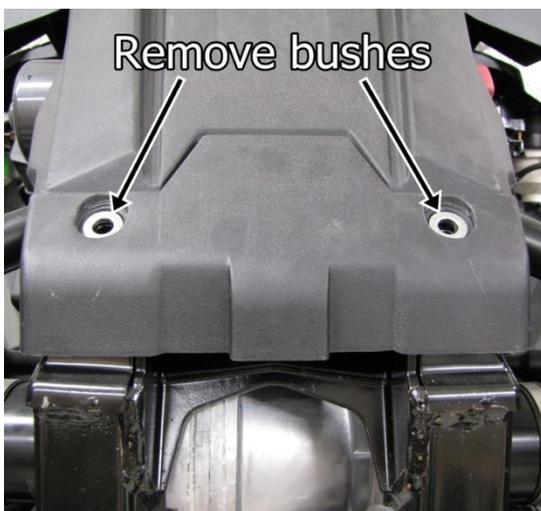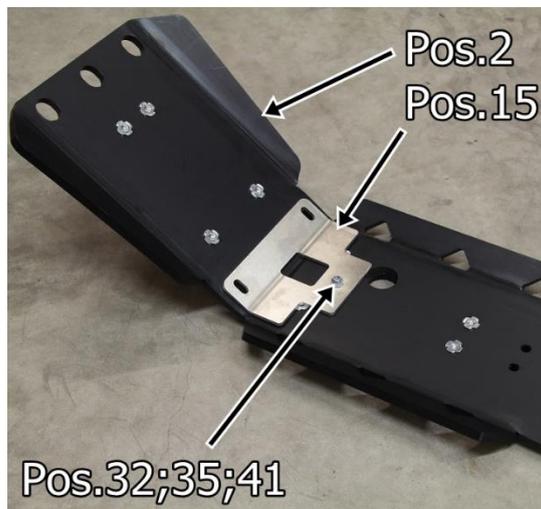

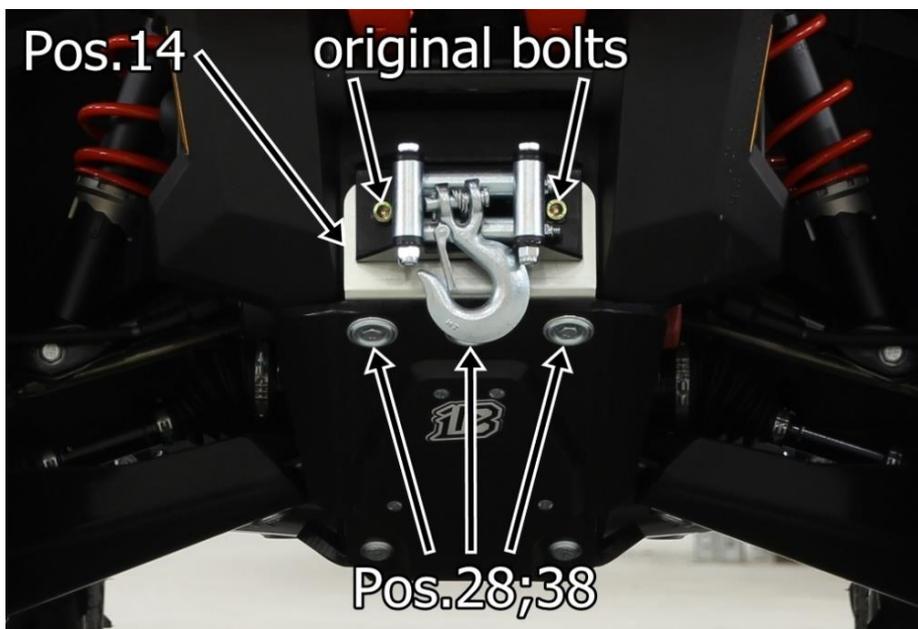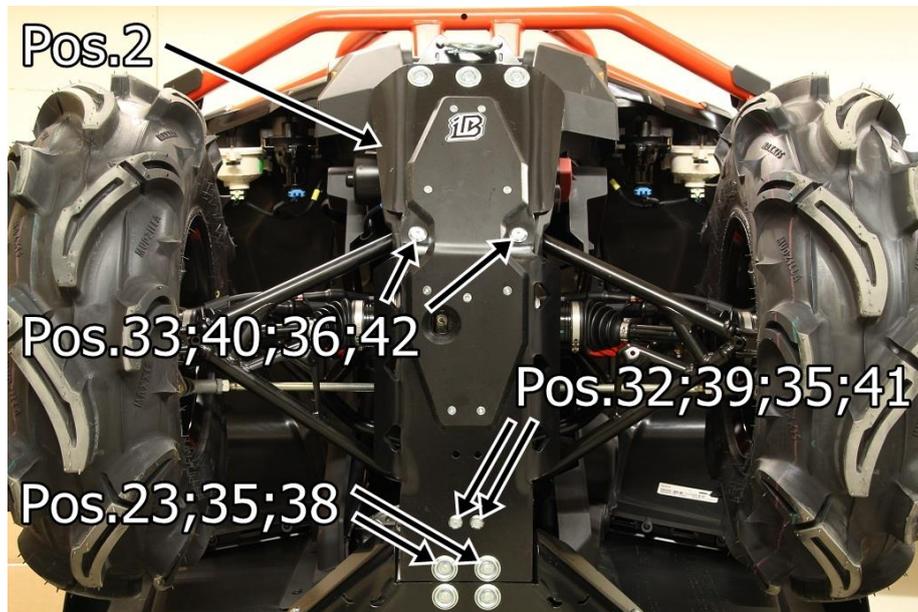


Step 7 Install rear protection 02.8303K.

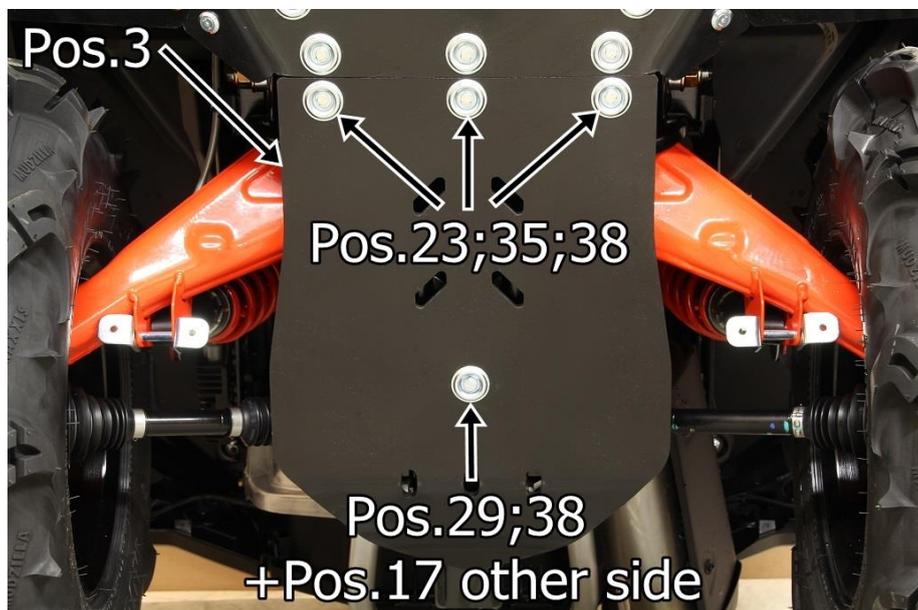

Step 8


Install front A-arms protections 02.8304, 02.8305 and clamps 02.8210.

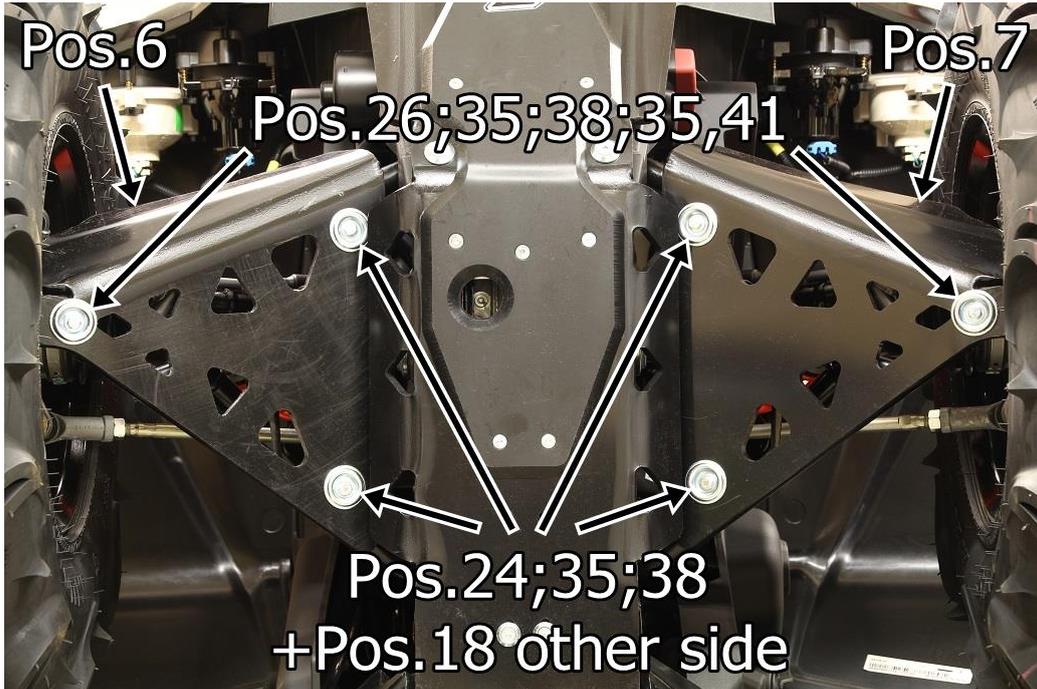


Step 9

Install brackets 02.18804, 02.18805, 02.18806. On some models it can be impossible to install Pos.20 bracket. In that case, install the arm protector without Pos.20 bracket!


With brake and wheel scraper.

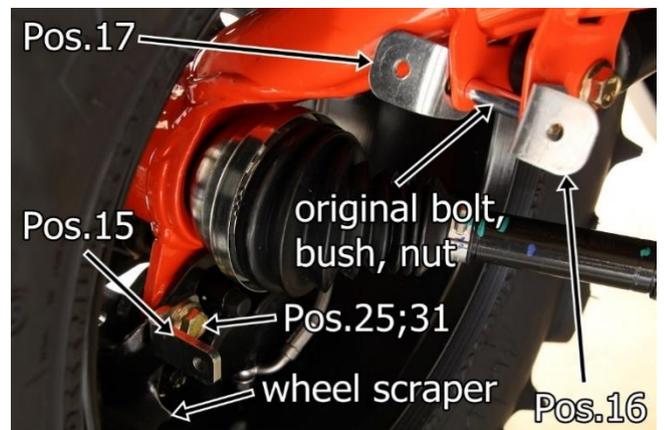

With brake only.

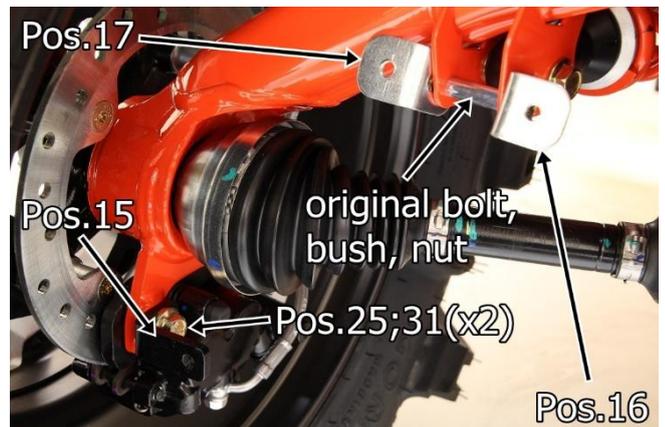


Without brake.

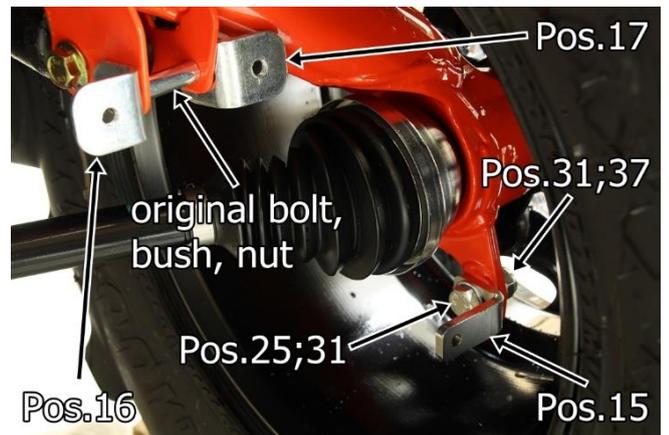


NB!

Make sure that there is enough clearance (min 2mm) between the bolt Pos.30 and brake disc.

Step 10 Install rear trailing arms protections 02.18901, 02.18902 and clamps 02.18803.

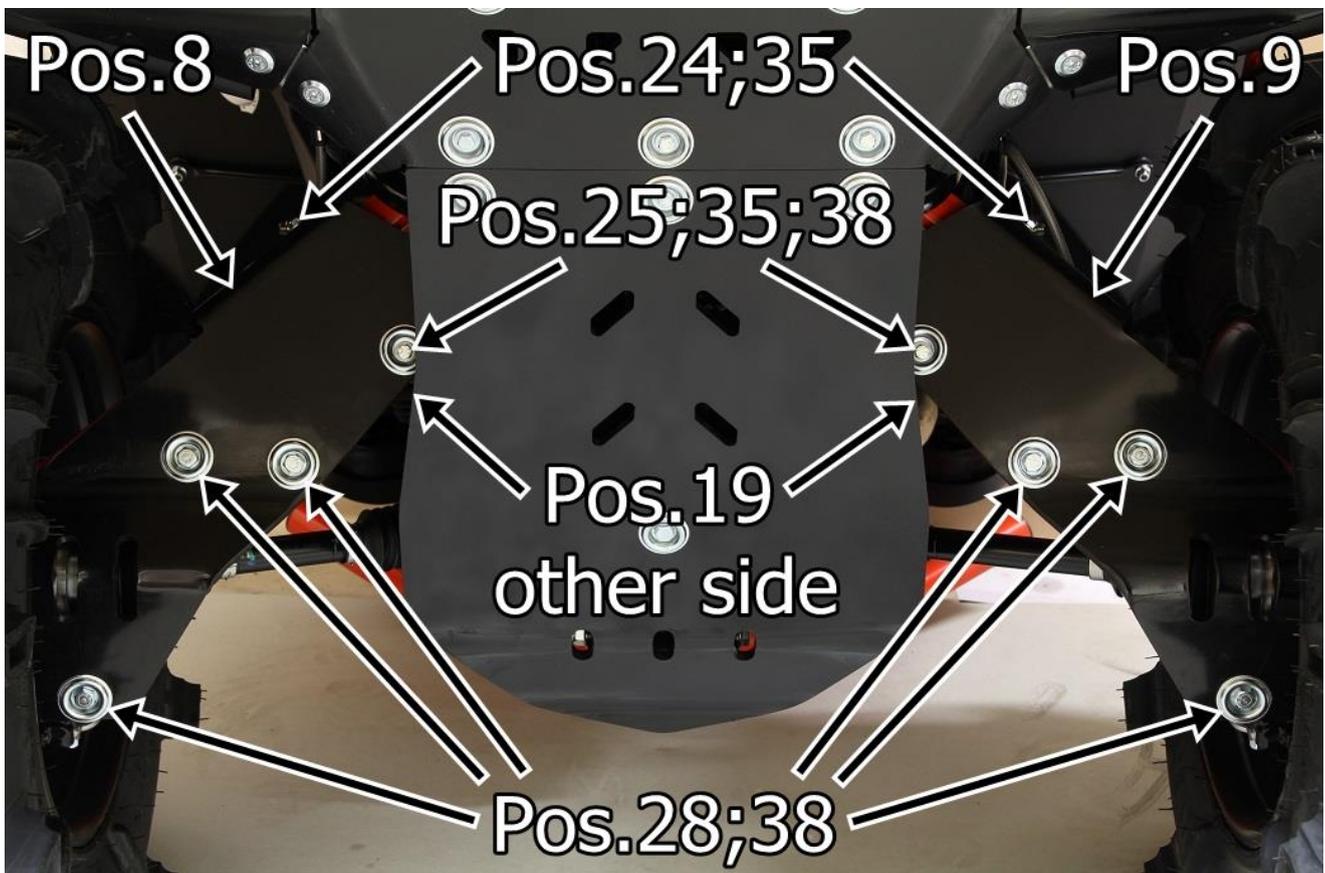

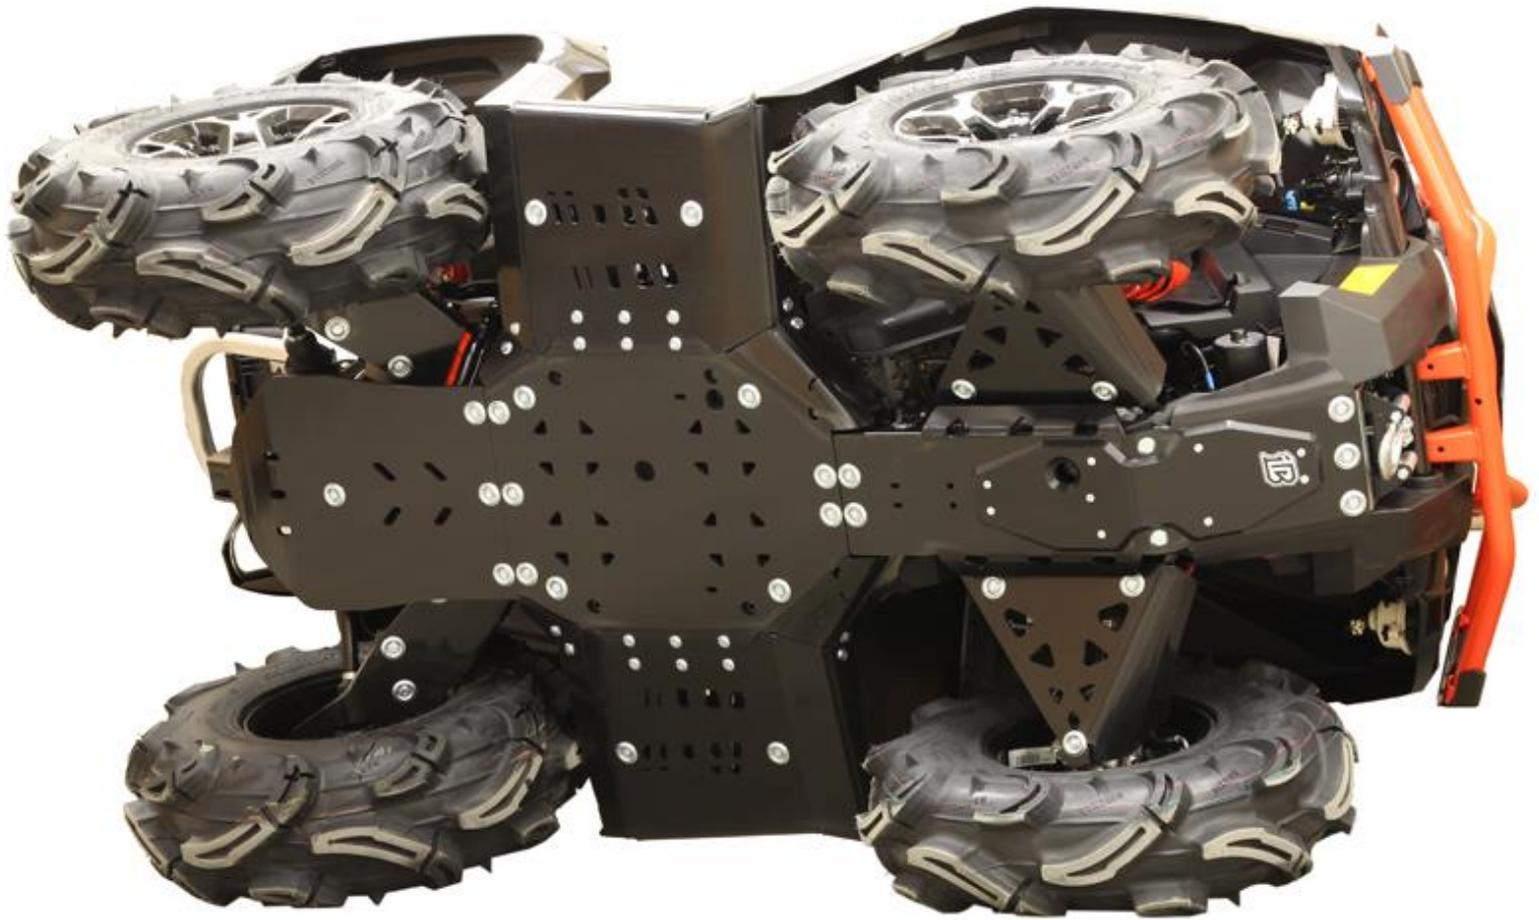

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

