



[code.ironbaltic.com/u/q87BwDCV](https://code.ironbaltic.com/u/q87BwDCV)


## REAR A-ARM GUARDS (PLASTIC)

### CAN AM

### G2 Outlander / Renegade (2017-...)

Code 02.18910VP

Version 10092023

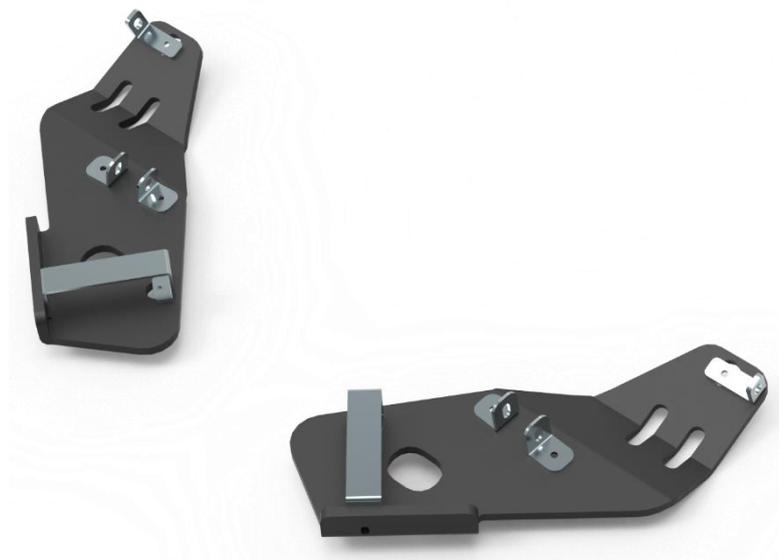


**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Rear right trailing arm protection	02.18901	1
2	Rear left trailing arm protection	02.18902	1
3	Clamp	02.18803	2
4	Bracket	02.18804	2
5	Bracket	02.18805	2
6	Bracket	02.18806	2
7	Dished washer	14.503	8
8	Bolt M6x20 DIN 933	OT.02.02.060	2
9	Bolt M6x25 DIN 933	OT.02.02.070	2
10	Bolt M8x20 DIN 933	OT.02.02.180	6
11	Bolt M10x30 DIN 933	OT.02.02.320	2
12	Washer Ø6/15 SFS 3738	OT.04.03.020	4
13	Washer Ø10/20 DIN 125	OT.04.01.040	4
14	Nyloc nut M10 DIN 985	OT.03.02.050	2

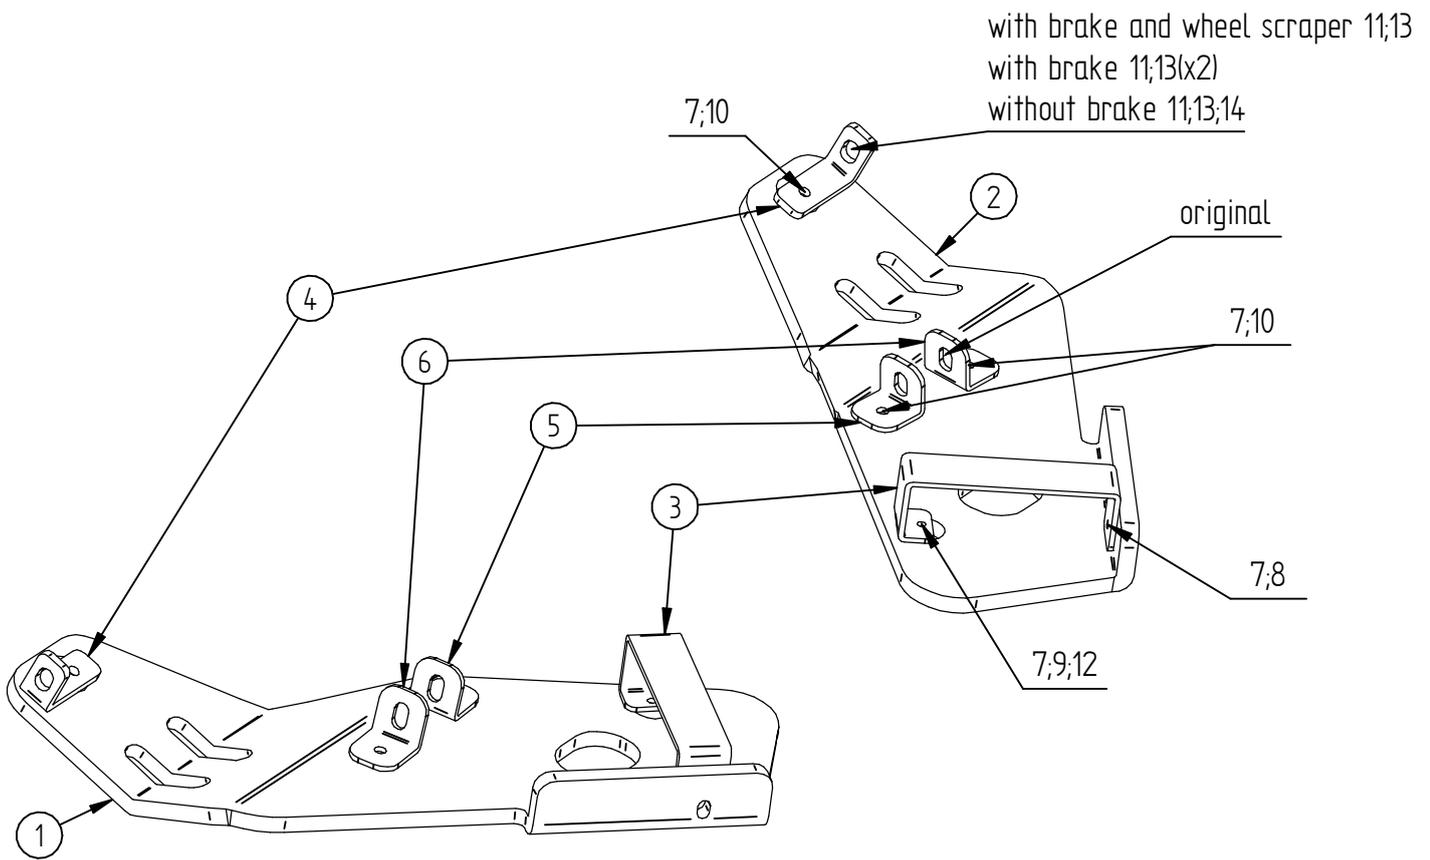


# FITTING INSTRUCTIONS


**Step 1** Remove original rear trailing arm protections.

**Step 2** Install brackets 02.18804, 02.18805, 02.18806. On some models it can be impossible to install Pos.4 bracket. In that case, install the arm protector without Pos.4 bracket!


With brake and wheel scraper.

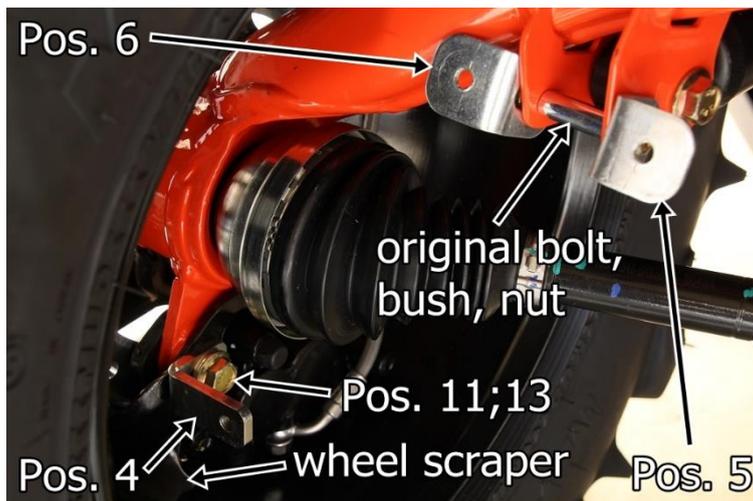

With brake.

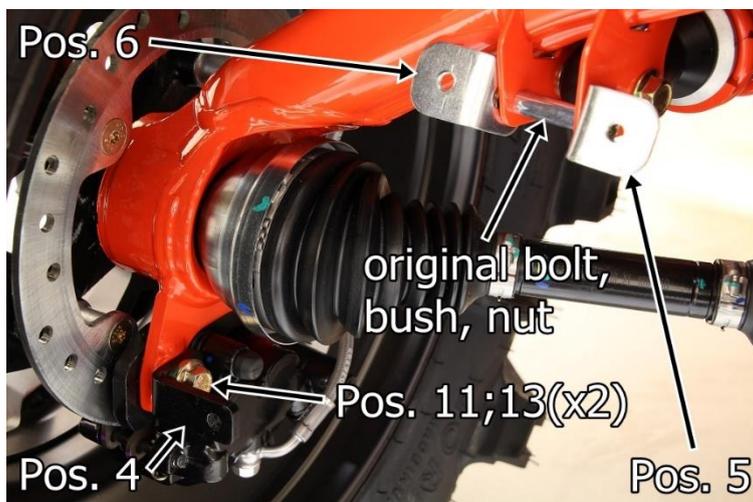

Without brake.

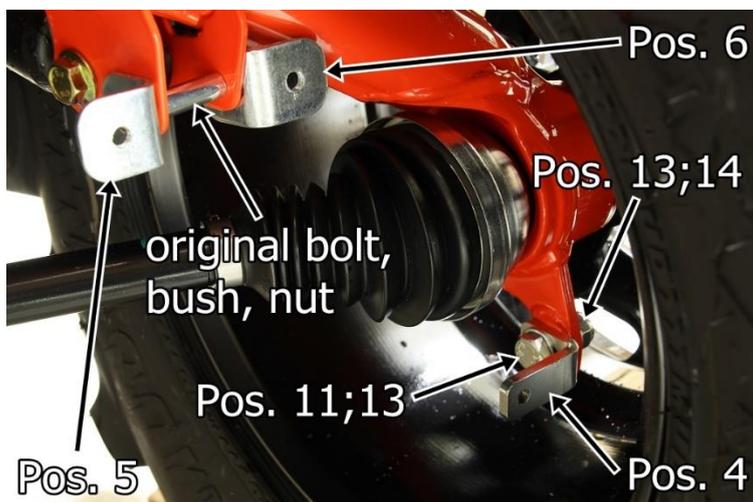




**NB!**

**Make sure that there is enough clearance (min 2mm) between the bolt Pos.11 and brake disc.**

**Step 3** Install rear trailing arms protections 02.18901, 02.18902, use bolts M6x12, M6x20, M8x20 and clamps 02.18803.

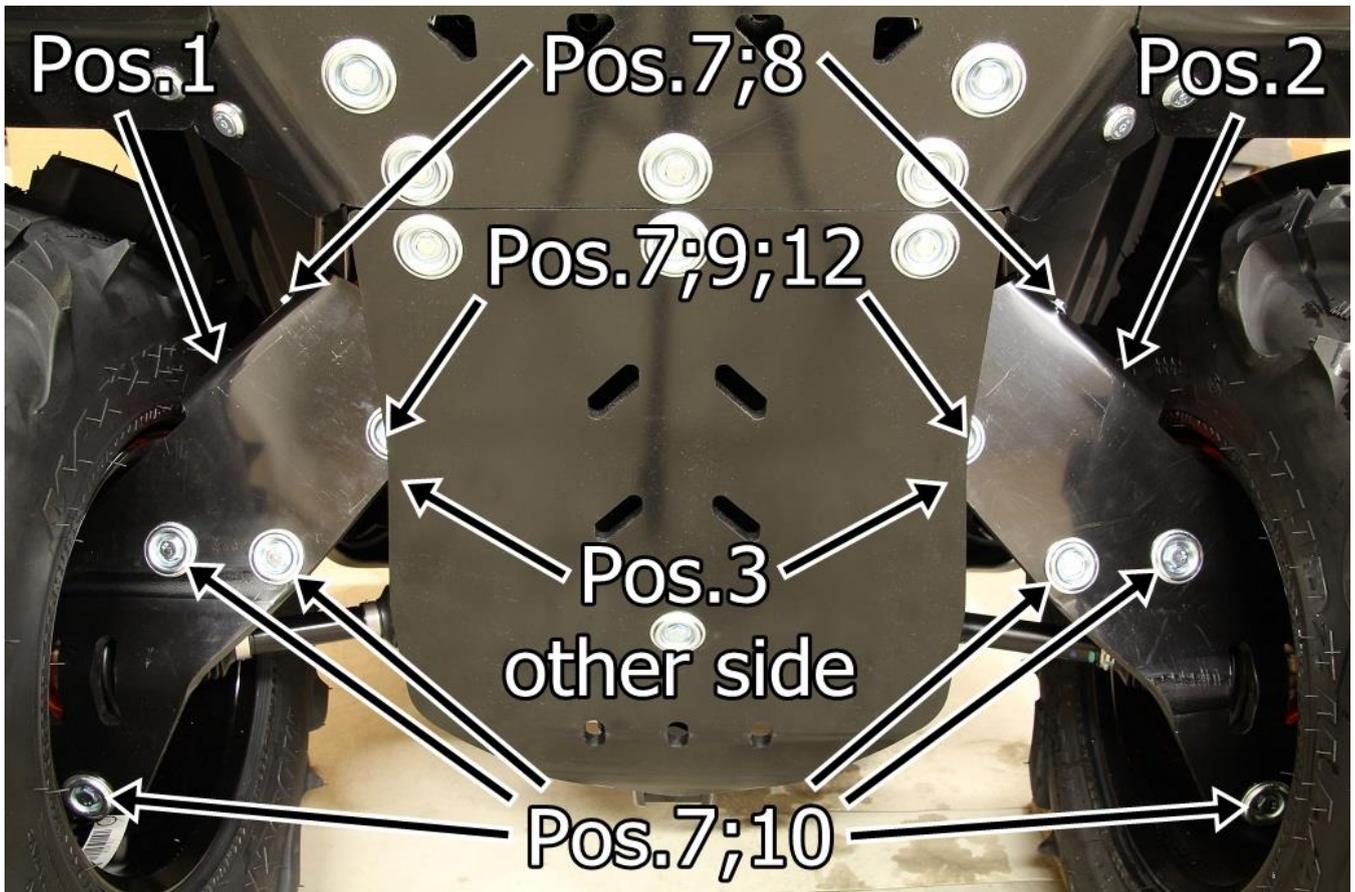





# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

