

IRON BALTIC

PLASTIC SKID PLATE

CAN AM

Renegade XMR 2017

Code 02.19100

Version 10092023

DOWNLOAD MULTILINGUAL
USER MANUAL




code.ironbaltic.com/u/VIPoZTRf

Keep this manual for future reference!


If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Middle protection	02.8301	1
2	Front protection	02.18301K	1
3	Rear protection	02.8303K	1
4	Right side protection	02.18303	1
5	Left side protection	02.18304	1
6	Front right A-arm protection	02.8304	1
7	Front left A-arm protection	02.8305	1
8	Rear right trailing arm protection	02.18901	1
9	Rear left trailing arm protection	02.18902	1
10	Plate	02.2305	1
11	Plate	02.5006	13
12	Plate	02.8312	2
13	Clamp for front arm protection	02.8210	4
14	Clamp for rear arm protection	02.18803	2
15	Bracket	02.18804	2
16	Bracket	02.18805	2
17	Bracket	02.18806	2
18	Bolt M6x16 DIN 933	OT.02.02.050	10
19	Bolt M6x20 DIN 933	OT.02.02.060	6
20	Bolt M6x25 DIN 933	OT.02.02.070	2
21	Bolt M6x30 DIN 933	OT.02.02.080	4
22	Bolt M6x40 DIN 933	OT.02.02.100	2
23	Bolt M6x45 DIN 933	OT.02.02.110	4
24	Bolt M8x20 DIN 933	OT.02.02.180	6
25	Bolt M8x35 DIN 933	OT.02.02.210	1
26	Bolt M10x30 DIN 933	OT.02.02.320	2
27	Bolt M6x20 DIN 7991	OT.02.04.030	20
28	Bolt M6x30 DIN 7991	OT.02.04.050	2
29	Washer Ø6/15 SFS 3738	OT.04.03.020	32
30	Washer Ø10/20 DIN 125	OT.04.01.040	4
31	Dished washer	14.503	33
32	Conical washer Ø6	14.502	22
33	Nyloc nut M6 DIN 985	OT.03.02.030	8
34	Nyloc nut M10 DIN 985	OT.03.02.050	2

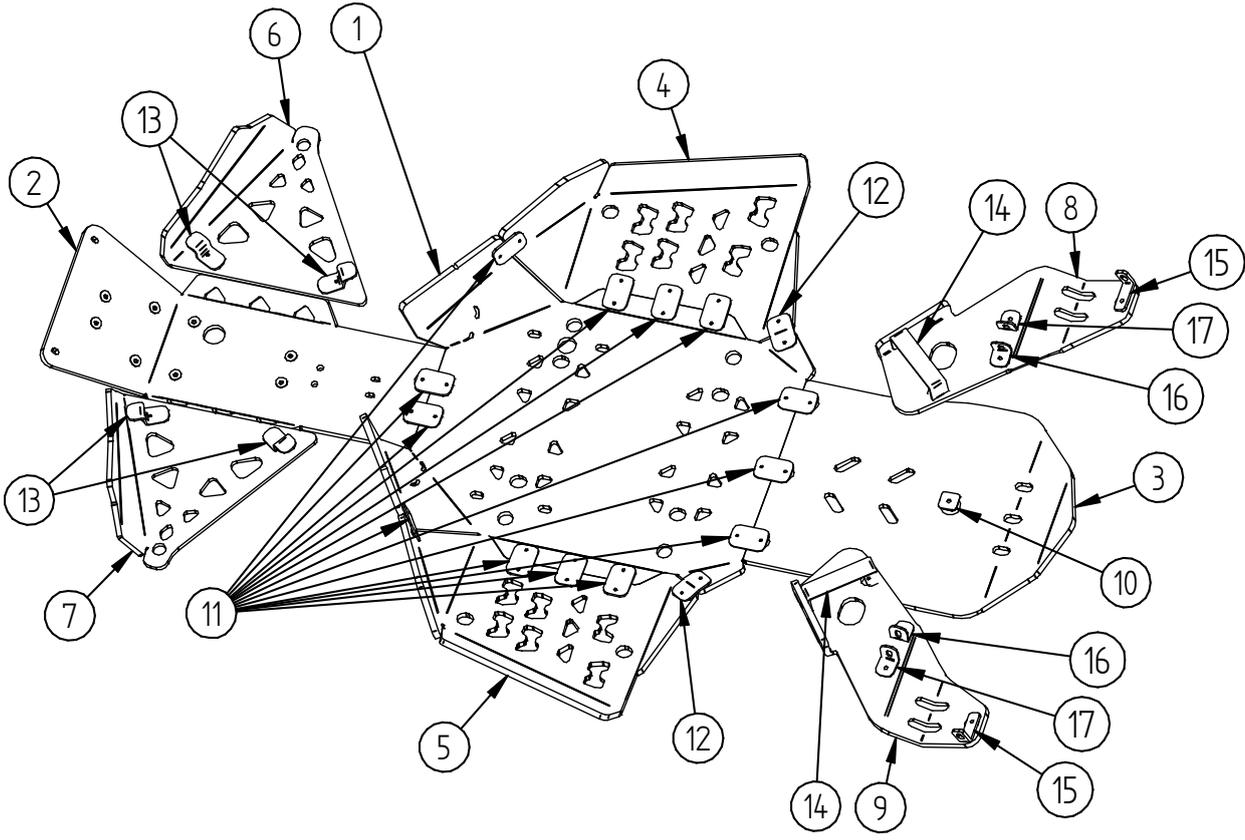


with brake and wheel scraper 26;30
 with brake 26;30(x2)
 without brake 26;30;34

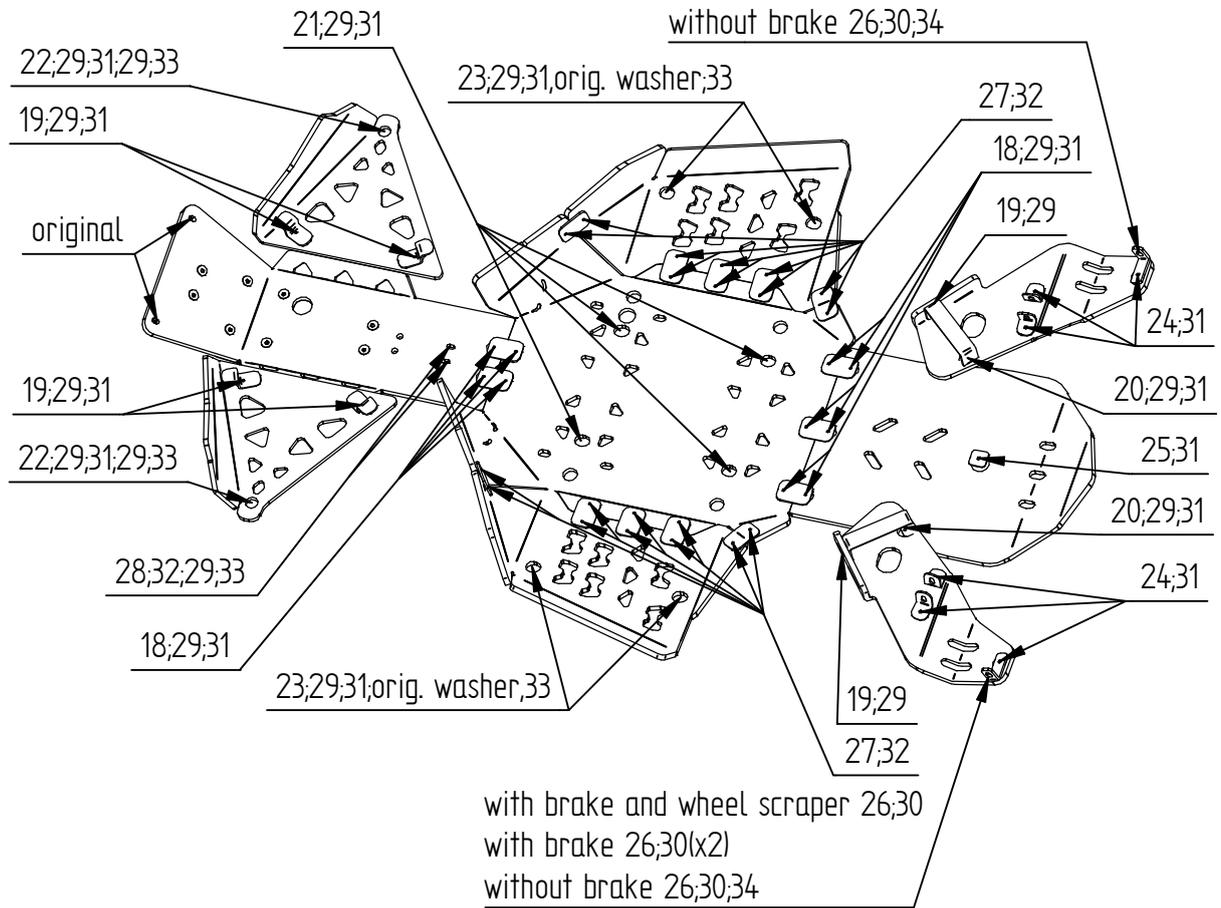


FITTING INSTRUCTIONS



Step 1 Remove all standard plastic covers.

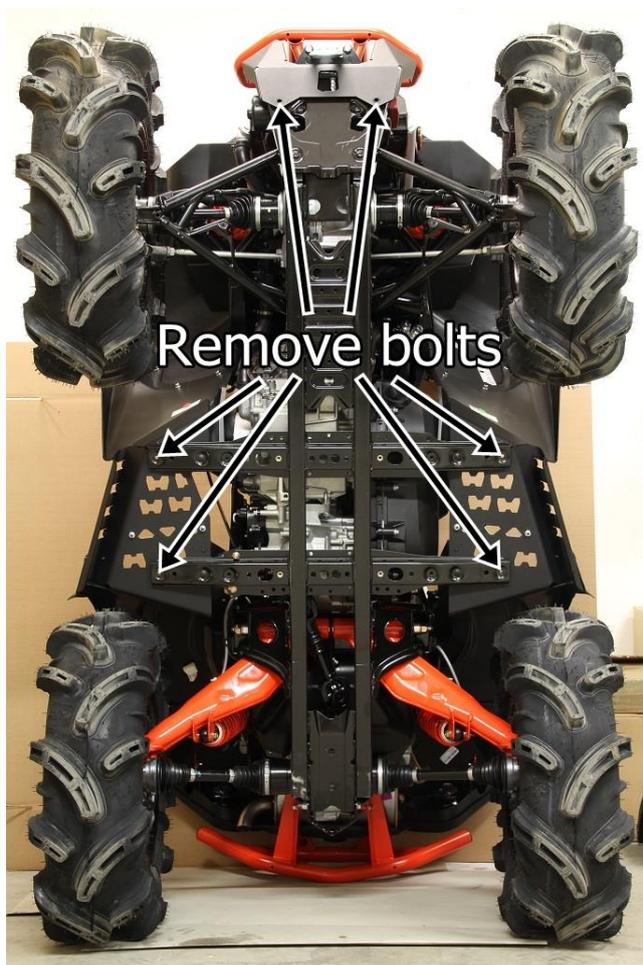


Step 2 Install middle protection 02.8301.

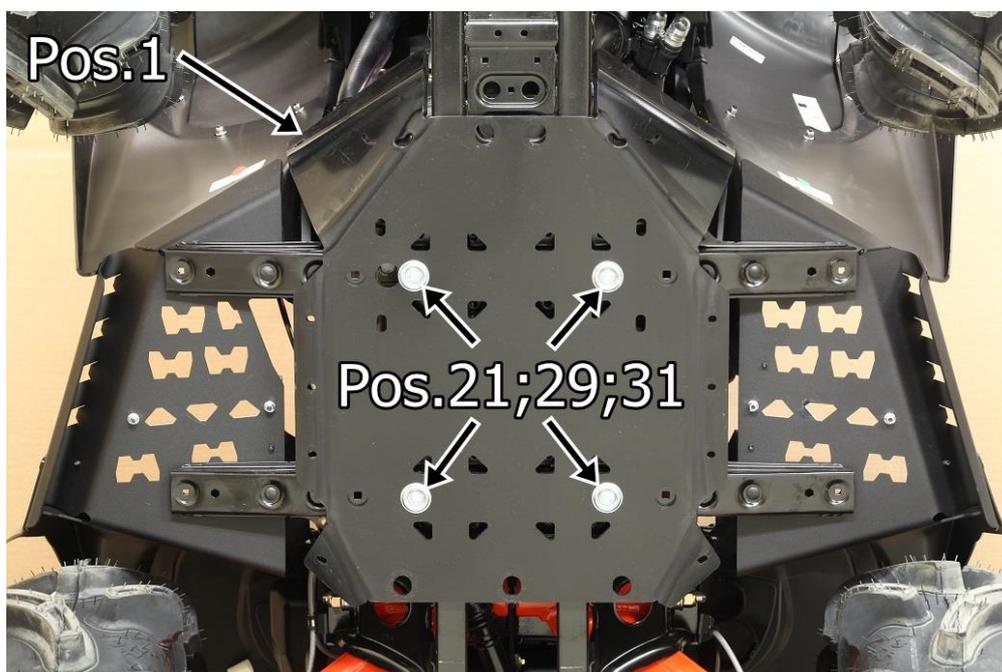


Step 3 Install plates 02.5006 and 02.8312.

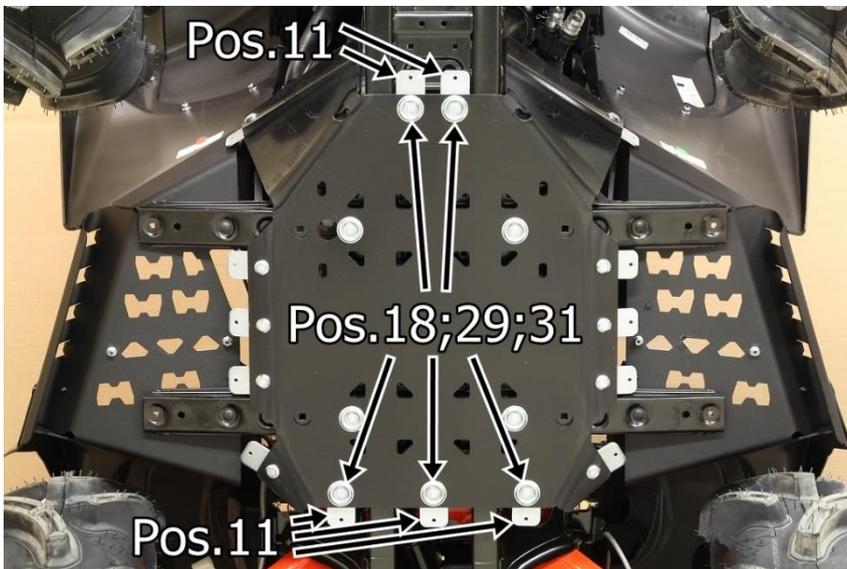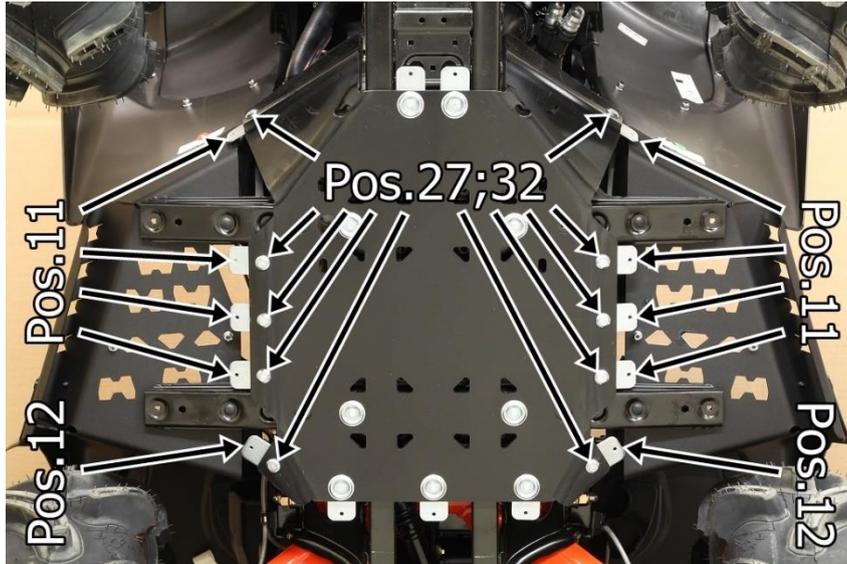


Step 4 Install right side protection 02.18303 and left side protection 02.18304.

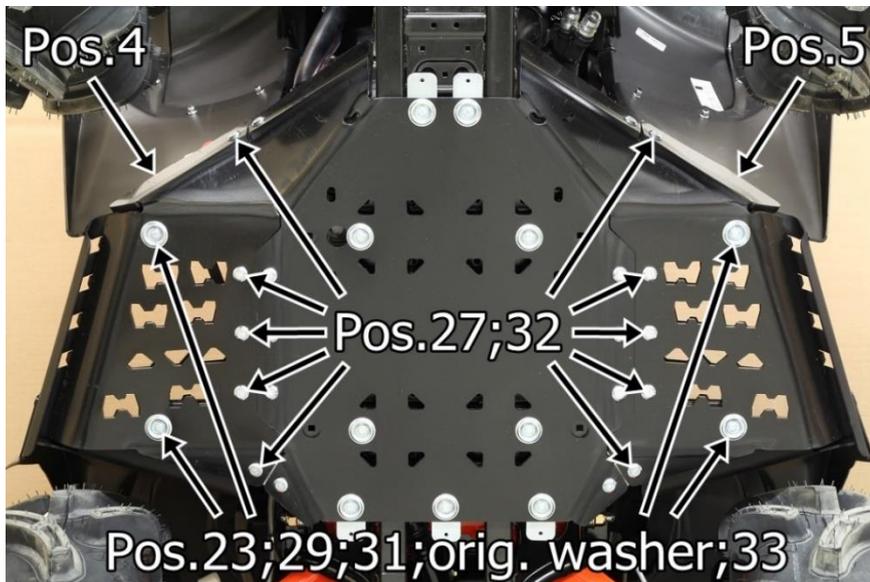

Step 5 Install front protection 02.18301K.

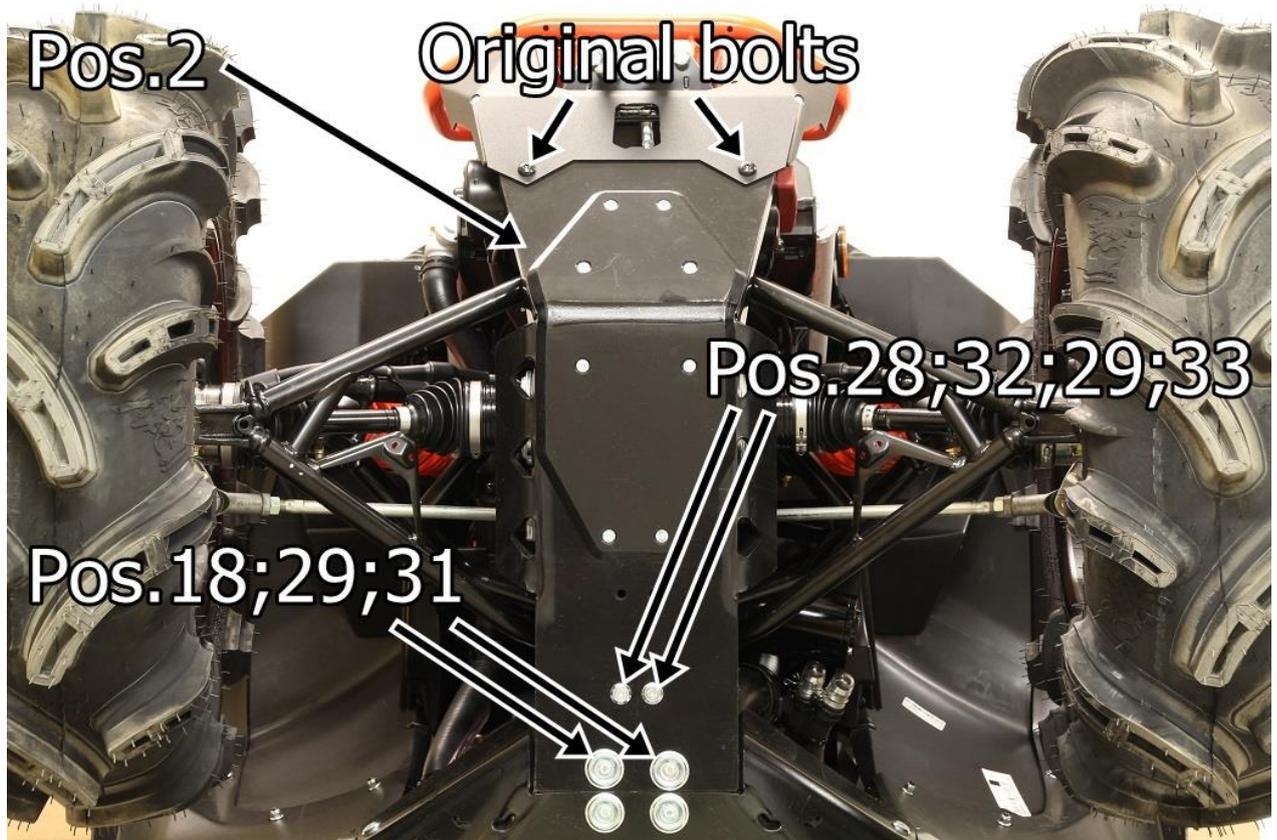


Step 6 Install rear protection 02.8303K.

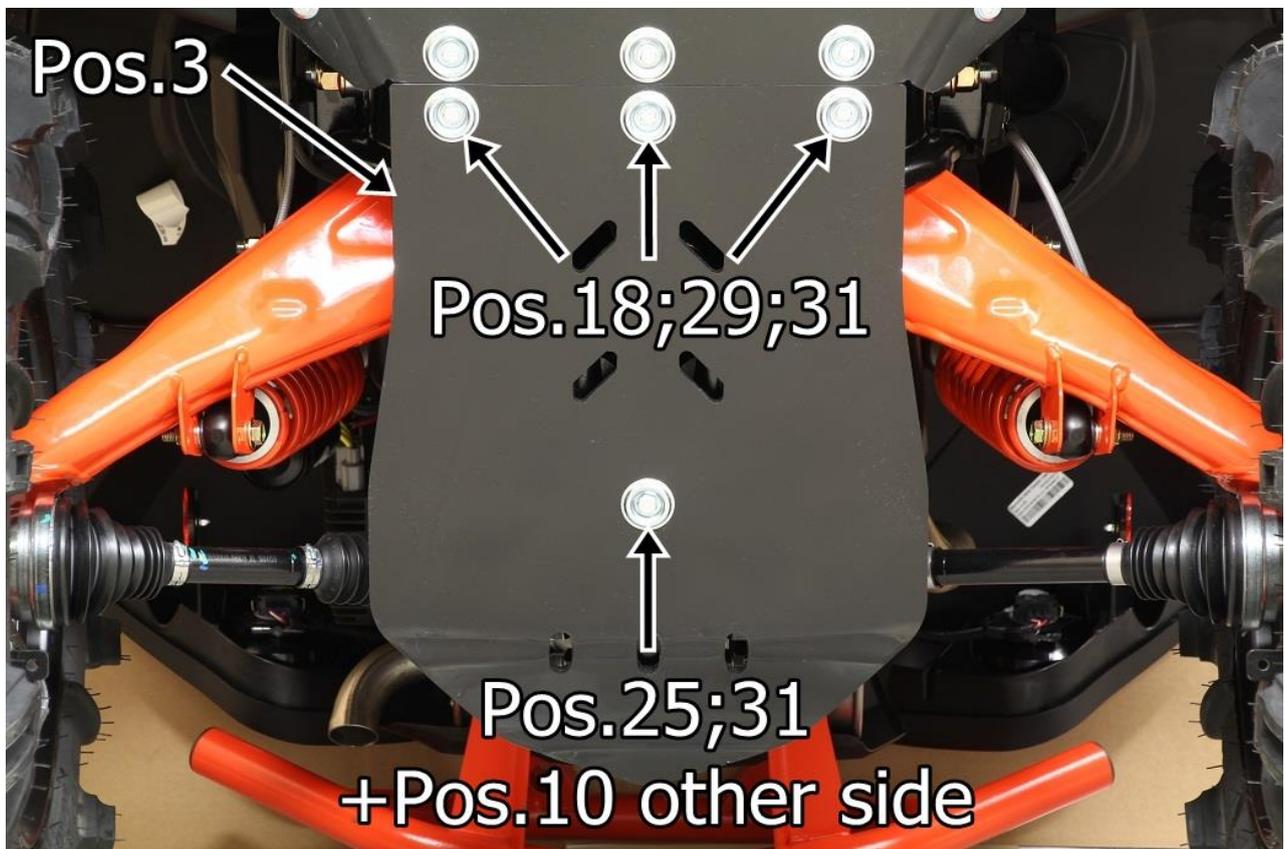

Step 7


Install front A-arms protections 02.8304, 02.8305 and clamps 02.8210.

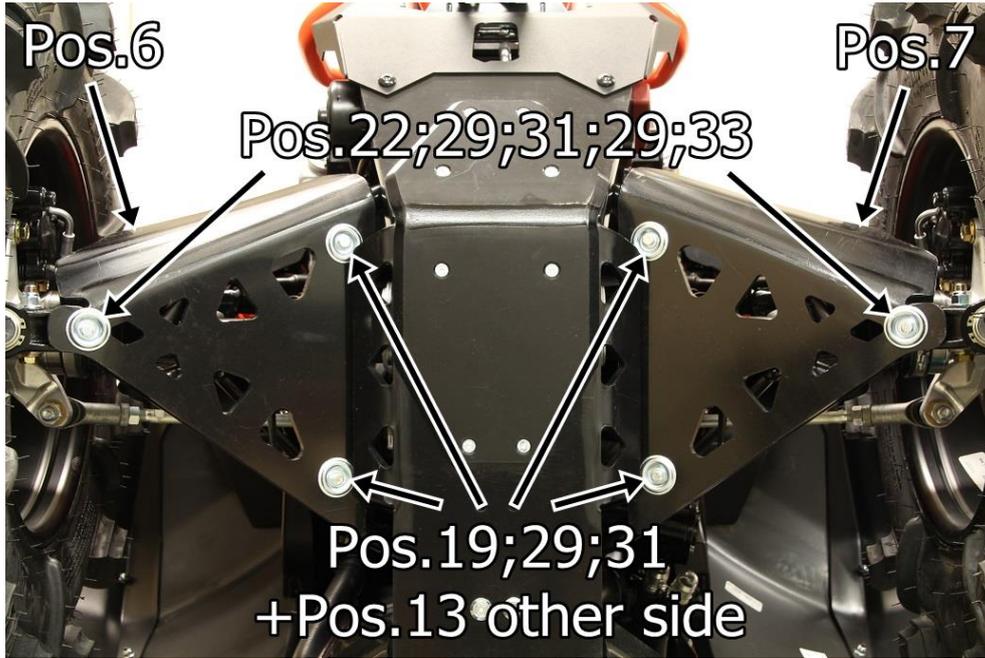


Step 8

Install brackets 02.18804, 02.18805, 02.18806.


With brake and wheel scraper.

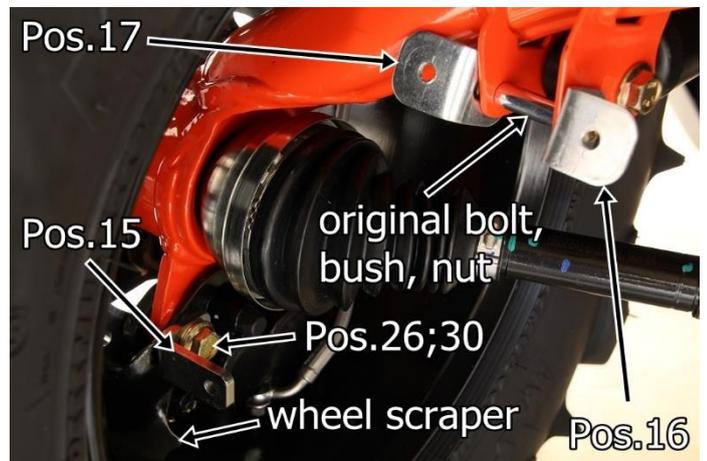

With brake only.

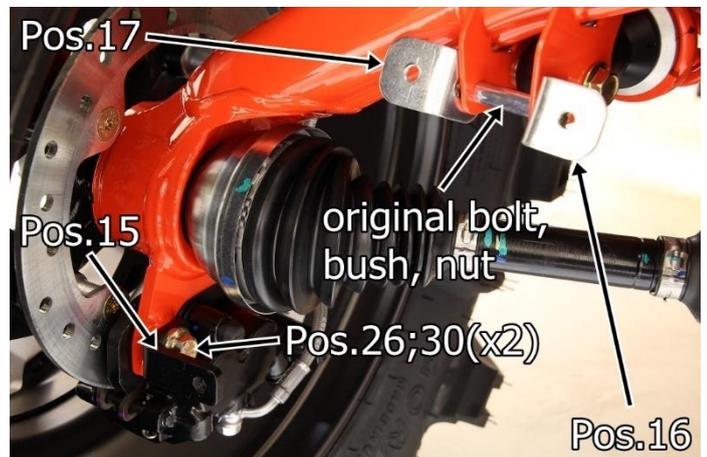


Without brake.

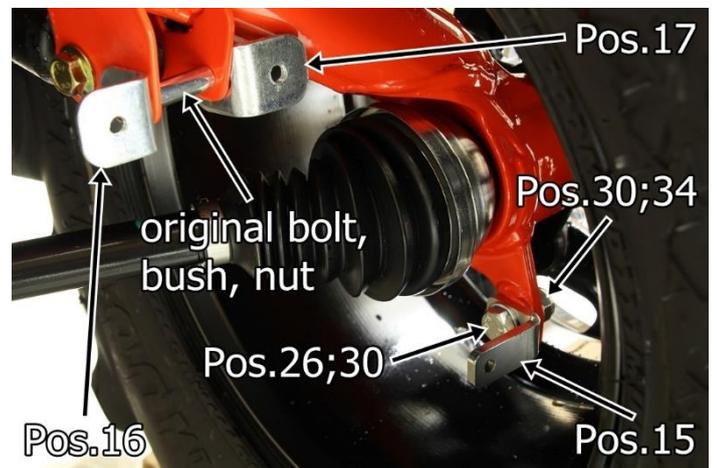

NB!

Make sure that there is enough clearance (min 2mm) between the bolt Pos.26 and brake disc.

Step 9 Install rear trailing arms protections 02.18901, 02.18902 and clamps 02.18803.

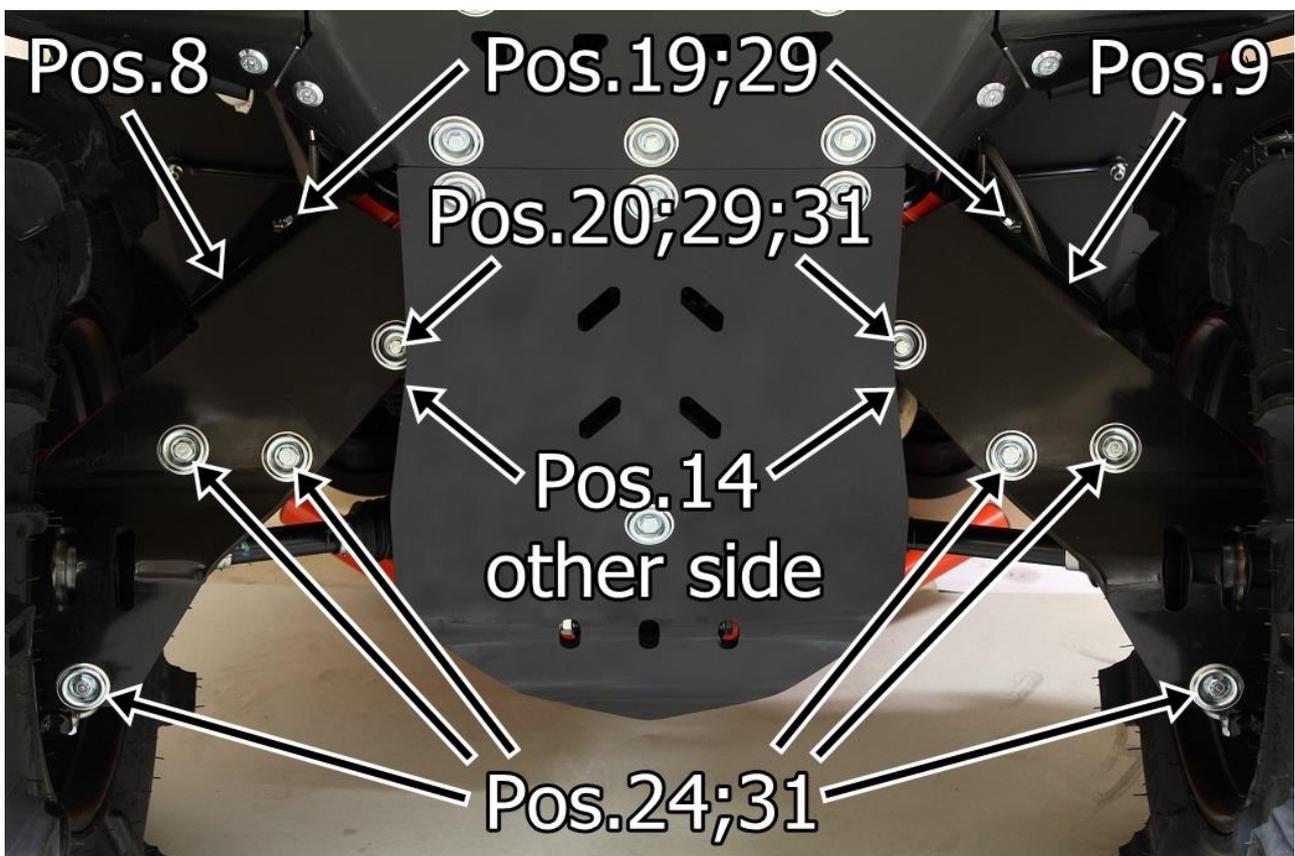

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

