

IRON BALTIC

DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/ZZjs5dMk

PLASTIC SKID PLATE

CAN AM

G2 Outlander MAX 650/850/1000

Code 02.19300

Version 11092023





Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com


SPECIFICATION

Pos.	Description	Code	Amount
1	Middle protection	02.10101	1
2	Front protection	02.8502K	1
3	Rear protection	02.8303K	1
4	Right side part	02.10102	1
5	Left side part	02.10103	1
6	Front right A-arm protection	02.8304	1
7	Front left A-arm protection	02.8305	1
8	Rear right trailing arm protection	02.18901	1
9	Rear left trailing arm protection	02.18902	1
10	Bracket	03.3502	4
11	Bracket	03.1502	2
12	Plate	02.2305	1
13	Plate	02.5006	11
14	Plate for front part	02.10004	1
15	Bush for front part	02.10005	2
16	Front part bracket	02.8506	1
17	Connecting plate (40)	02.10006	2
18	Connecting plate (45)	02.10104	2
19	Clamp for front arm protection	02.8210	4
20	Clamp for rear arm protection	02.18803	2
21	Bracket	02.18804	2
22	Bracket	02.18805	2
23	Bracket	02.18806	2
24	Bolt M6x16 DIN 933	OT.02.02.050	10
25	Bolt M6x20 DIN 933	OT.02.02.060	6
26	Bolt M6x25 DIN 933	OT.02.02.070	2
27	Bolt M6x40 DIN 933	OT.02.02.100	2
28	Bolt M6x60 DIN 933	OT.02.02.140	4
29	Bolt M8x20 DIN 933	OT.02.02.180	15
30	Bolt M8x35 DIN 933	OT.02.02.210	1
31	Bolt M10x30 DIN 933	OT.02.02.320	2
32	Bolt M6x20 DIN 7991	OT.02.04.030	20
33	Bolt M6x30 DIN 7991	OT.02.04.050	3
34	Bolt M8x60 DIN 7991	OT.02.04.210	2
35	Carriage bolt M8x25 DIN 603	OT.02.05.060	8
36	Washer Ø6/15 SFS 3738	OT.04.03.020	33
37	Washer Ø8/20 SFS 3738	OT.04.03.030	12
38	Washer Ø10/20 DIN 125	OT.04.01.040	4
39	Dished washer	14.503	36
40	Conical washer Ø6	14.502	22
41	Conical washer Ø8	14.501	2
42	Nyloc nut M6 DIN 985	OT.03.02.030	9
43	Nyloc nut M8 DIN 985	OT.03.02.040	10
44	Nyloc nut M10 DIN 985	OT.03.02.050	2

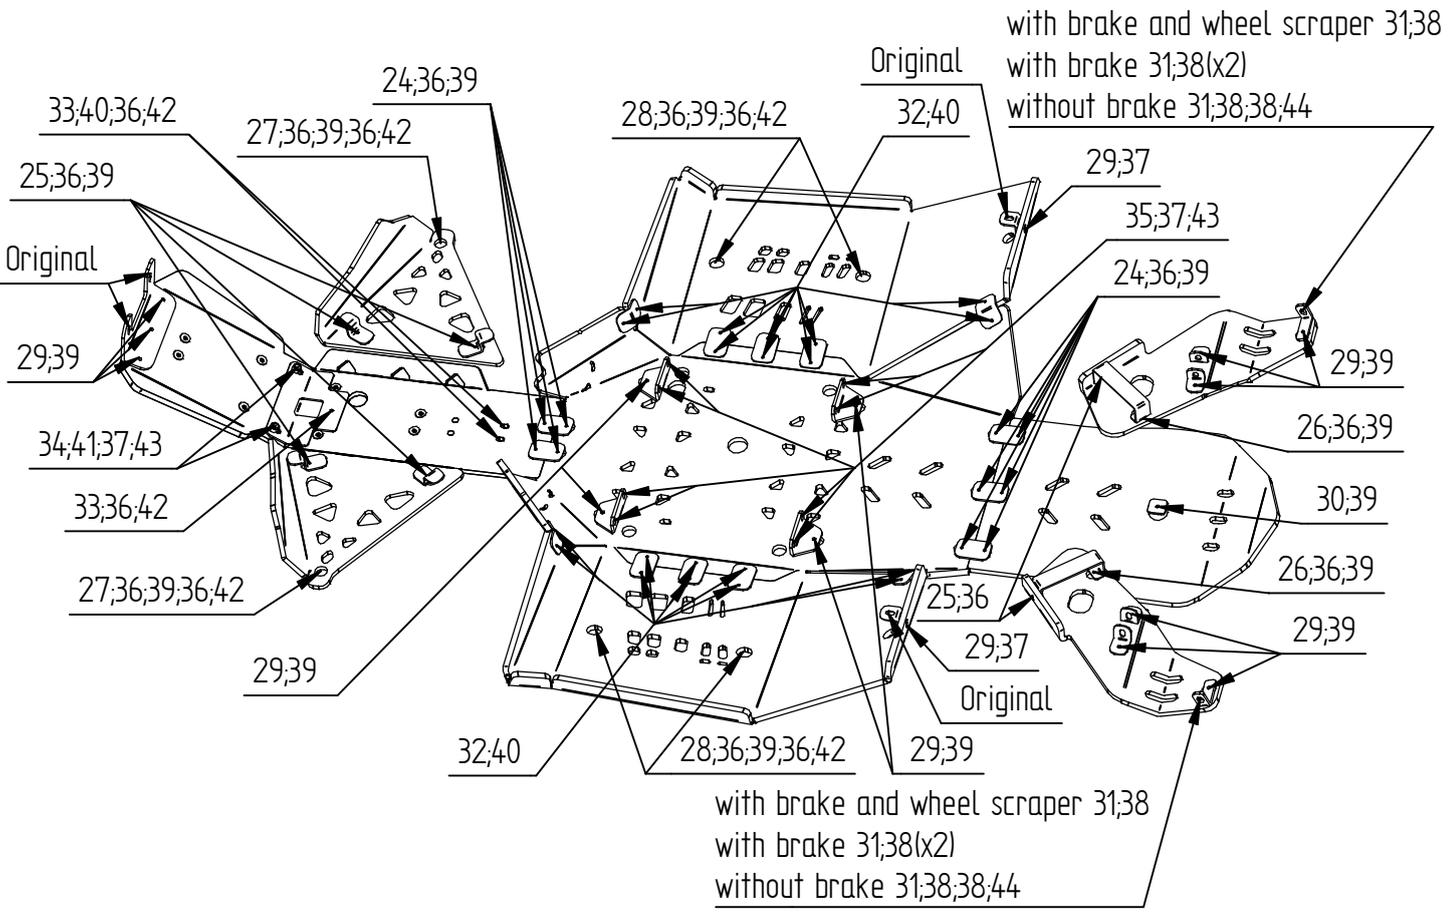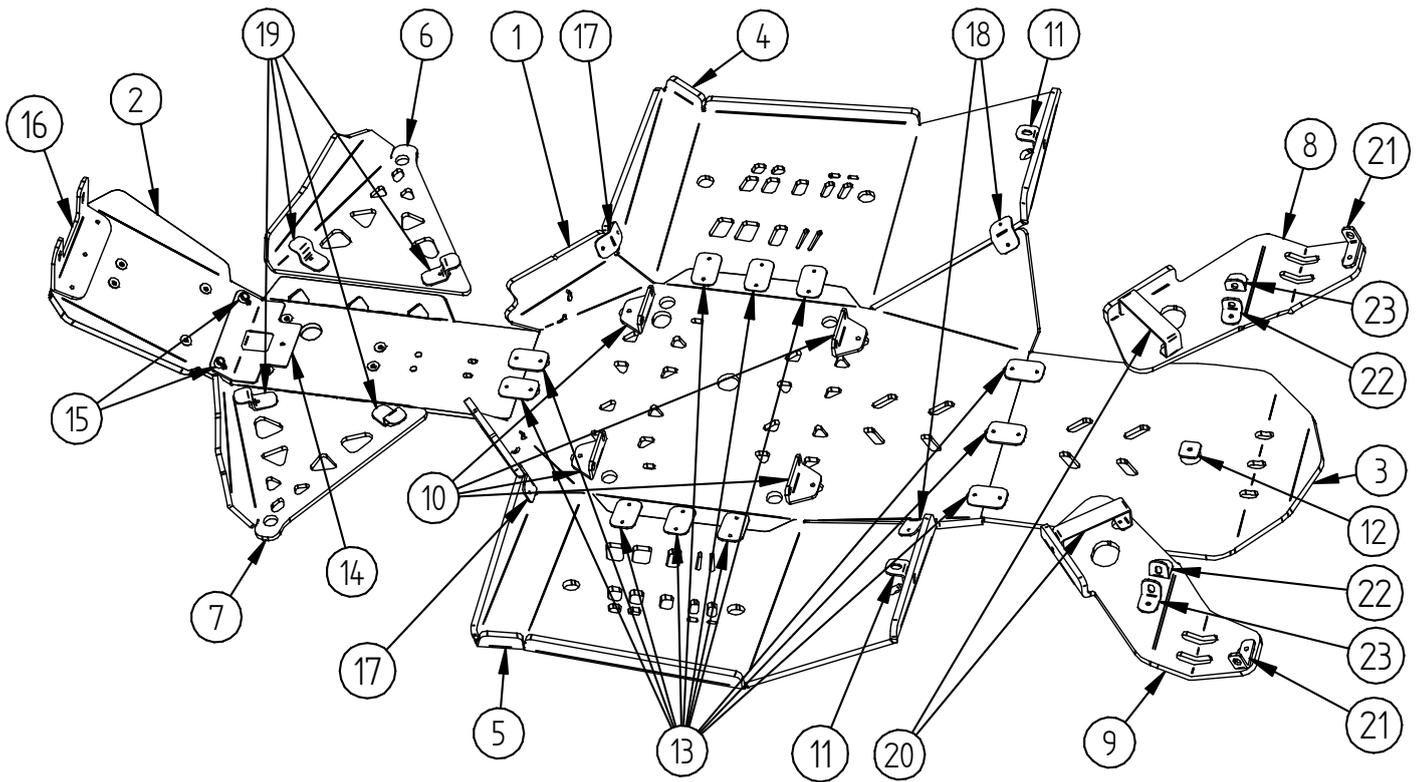


FITTING INSTRUCTIONS


Step 1 Remove all standard plastic covers and winch fairlead.

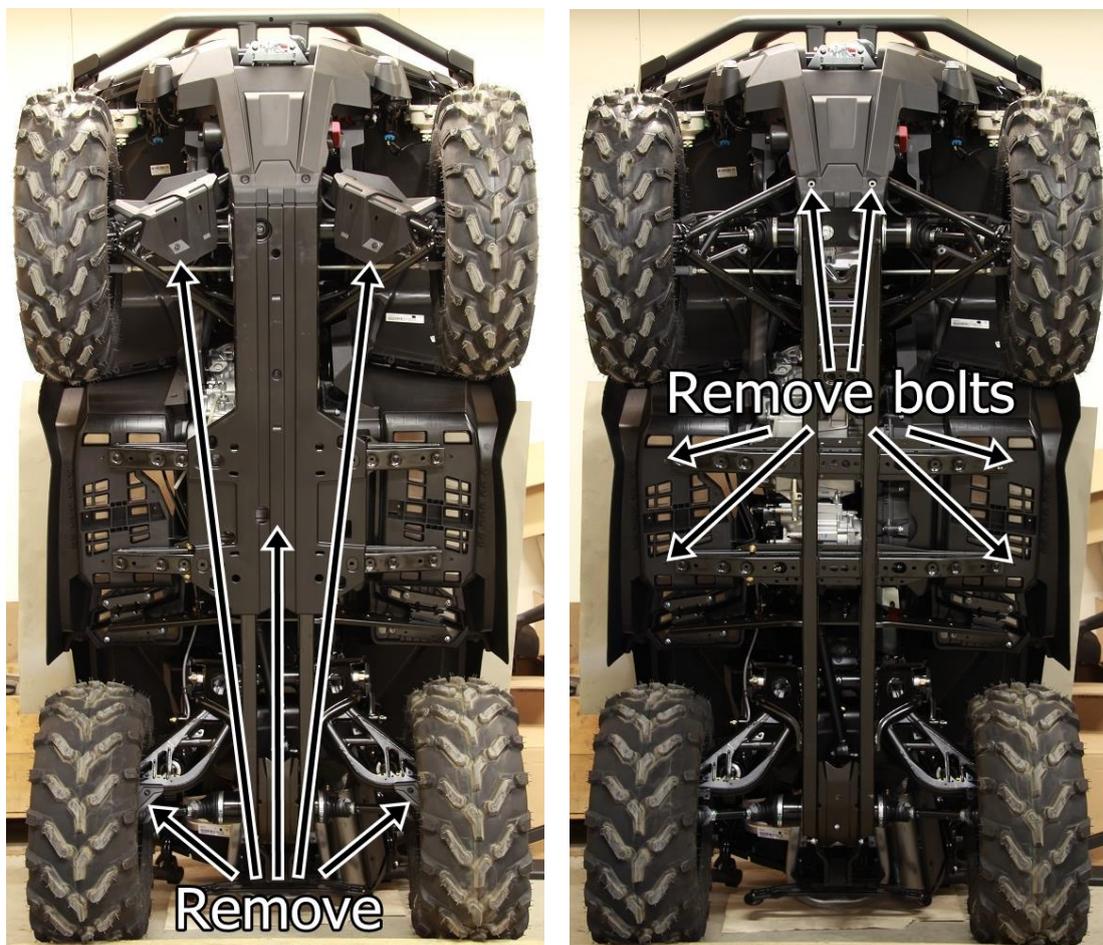



Step 2 Install brackets 03.3502 and 03.1502. Place brackets same plane as frame.

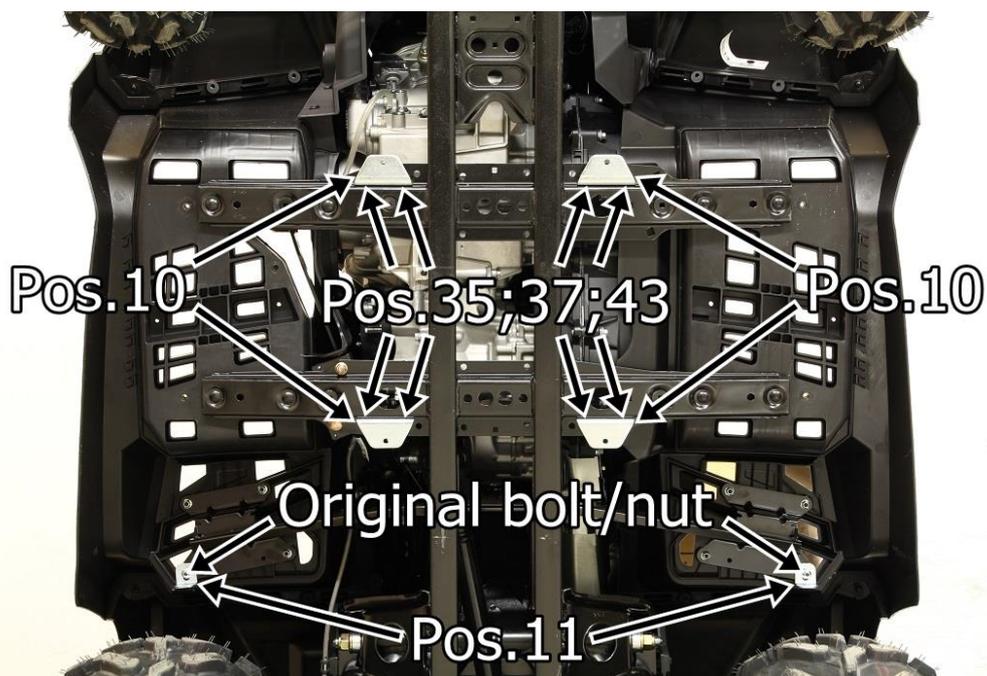


Step 3 Install middle protection 02.10101.

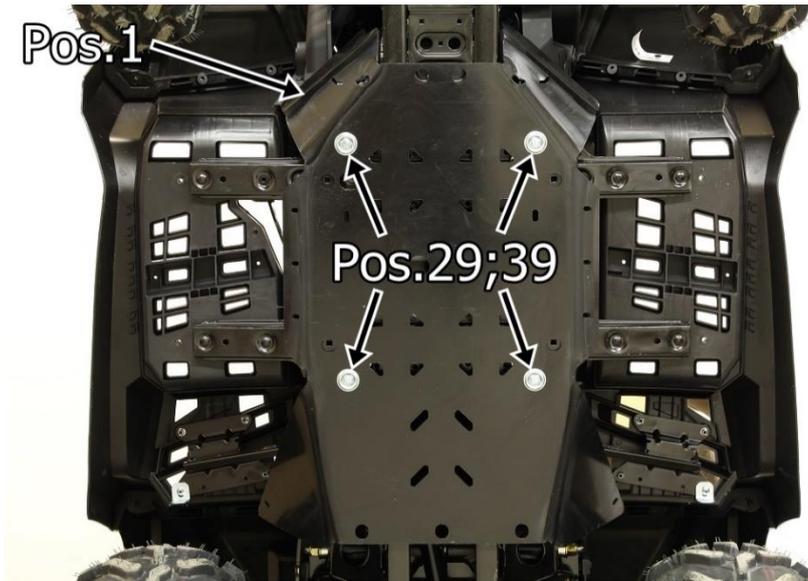





Step 4 Install plates 02.5006, 02.10006, 02.10104.

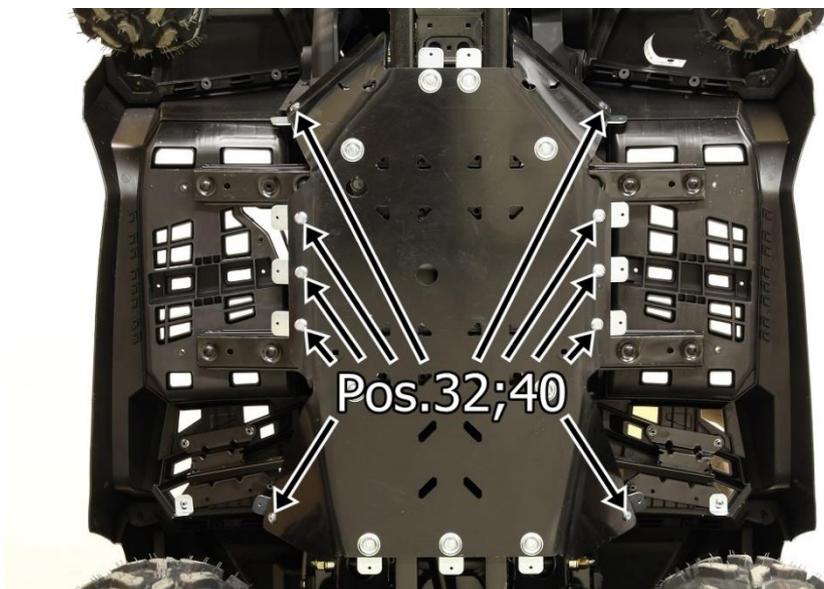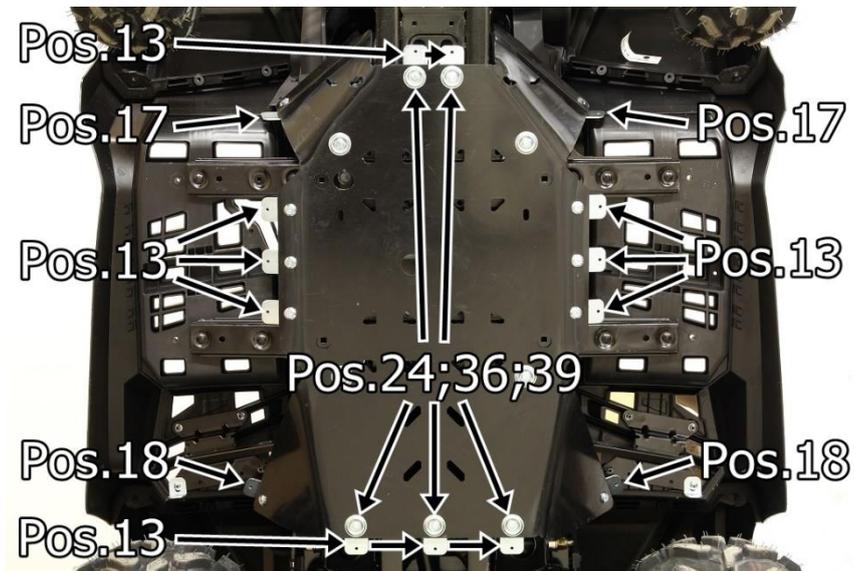


Step 5 Install right side protection 02.10102 and left side protection 02.10103.

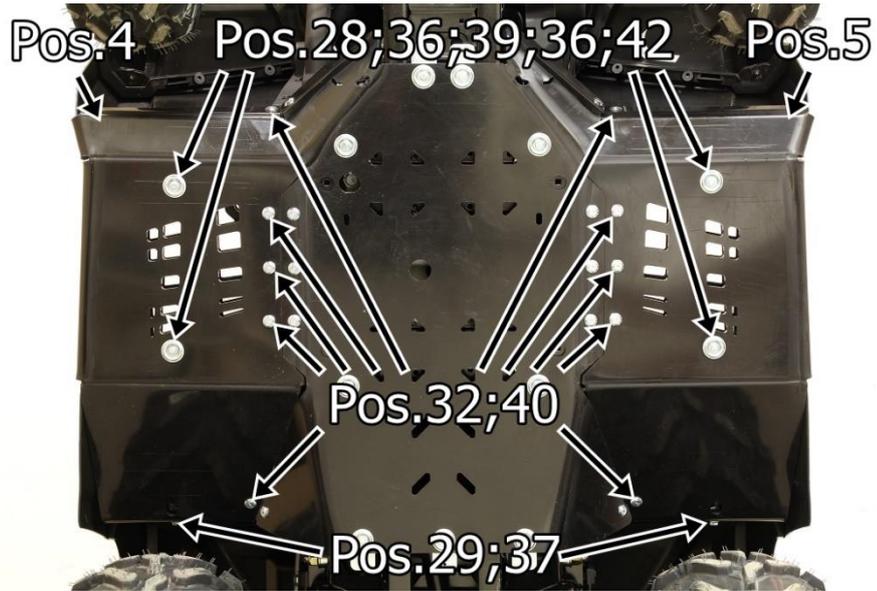


Step 6 Install front protection 02.8502K.

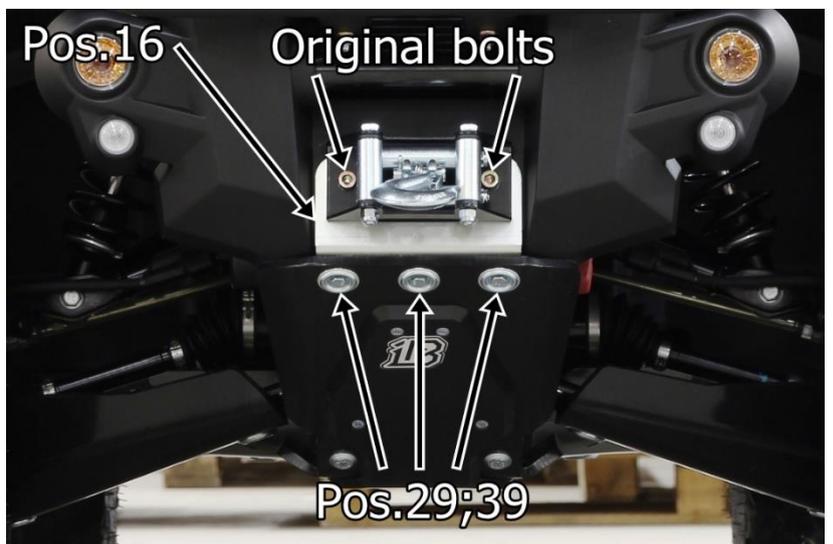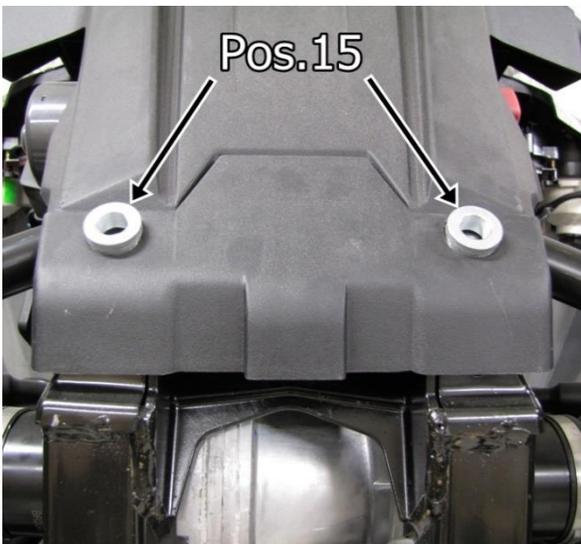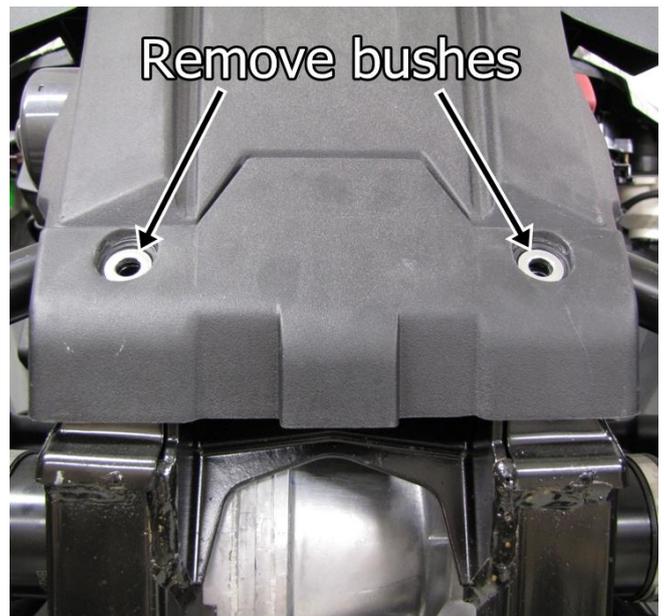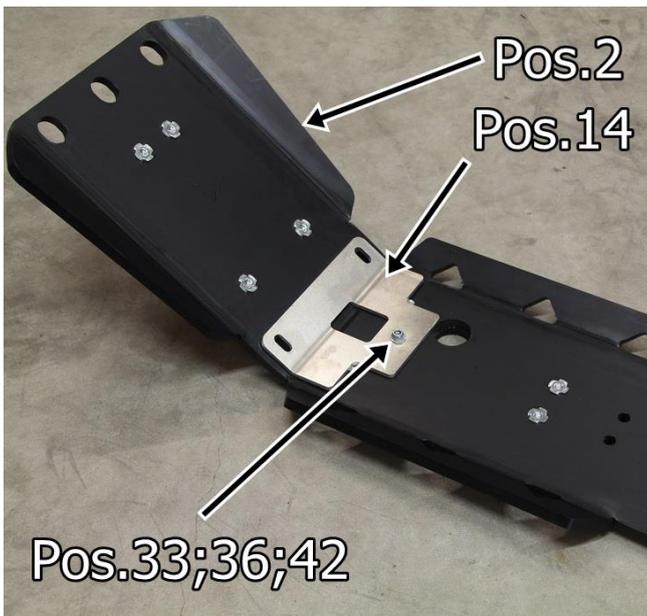

Step 7 Install rear protection 02.8303K.

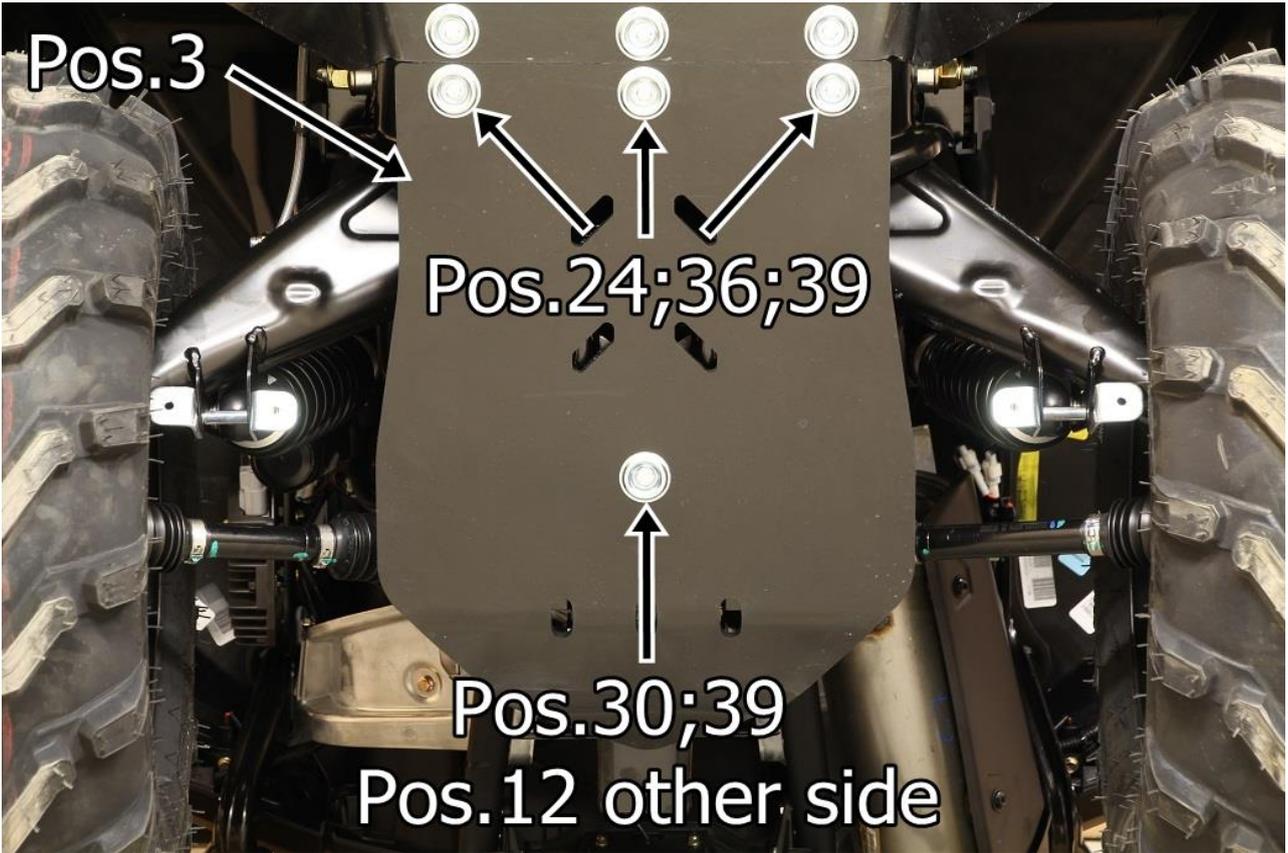


Step 8 Install front A-arms protections 02.8304, 02.8305 and clamps 02.8210.

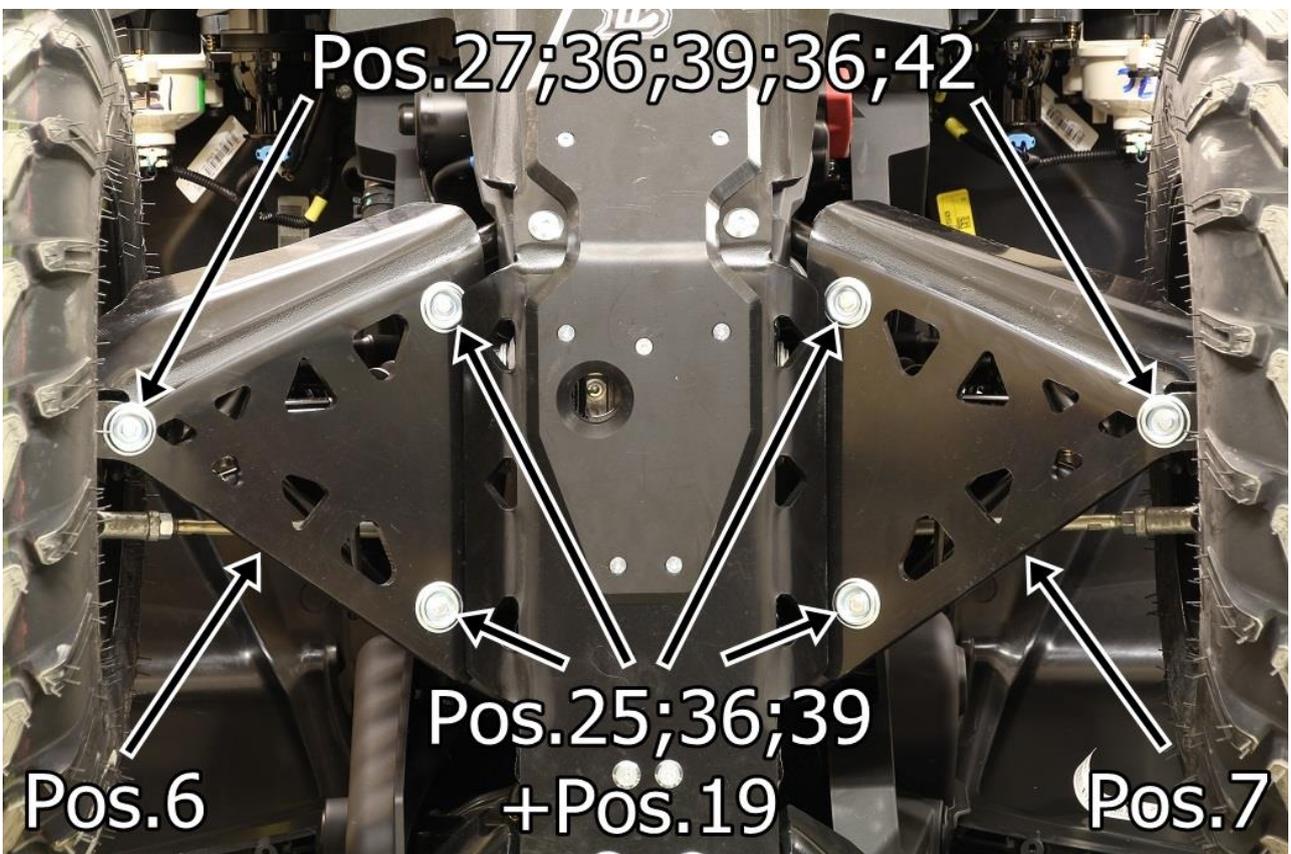


Step 9 Install brackets 02.18804, 02.18805, 02.18806.


With brake and wheel scraper.

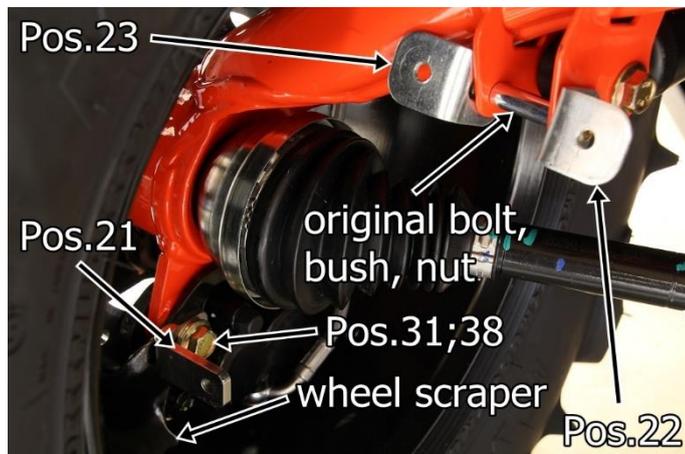

With brake.

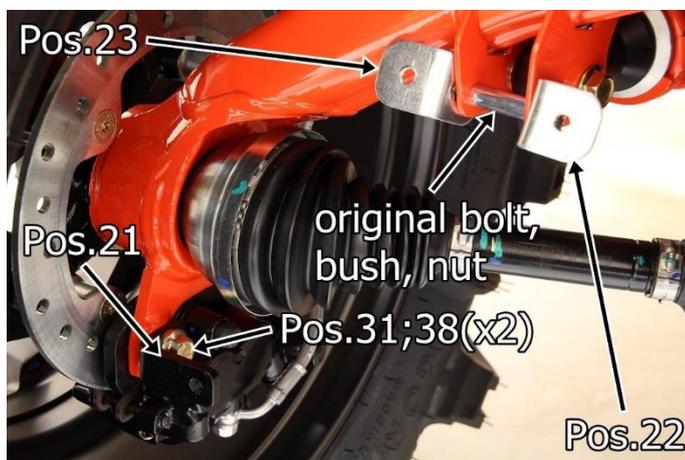


Without brake.

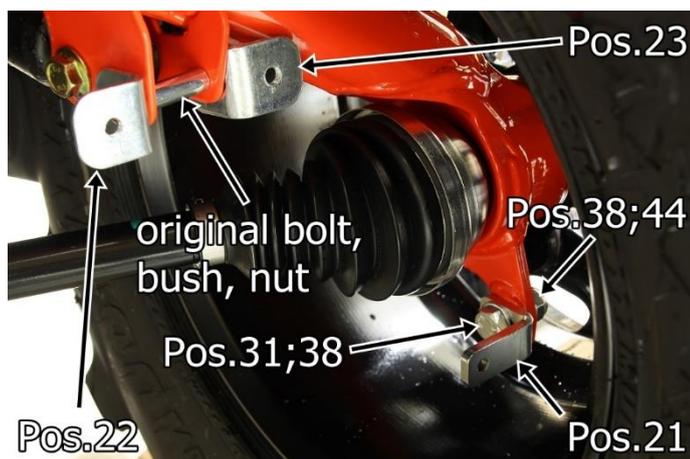

NB!

Make sure that there is enough clearance (min 2mm) between the bolt Pos.31 and brake disc.

Step 10 Install rear trailing arms protections 02.18901, 02.18902 and clamps 02.18803.

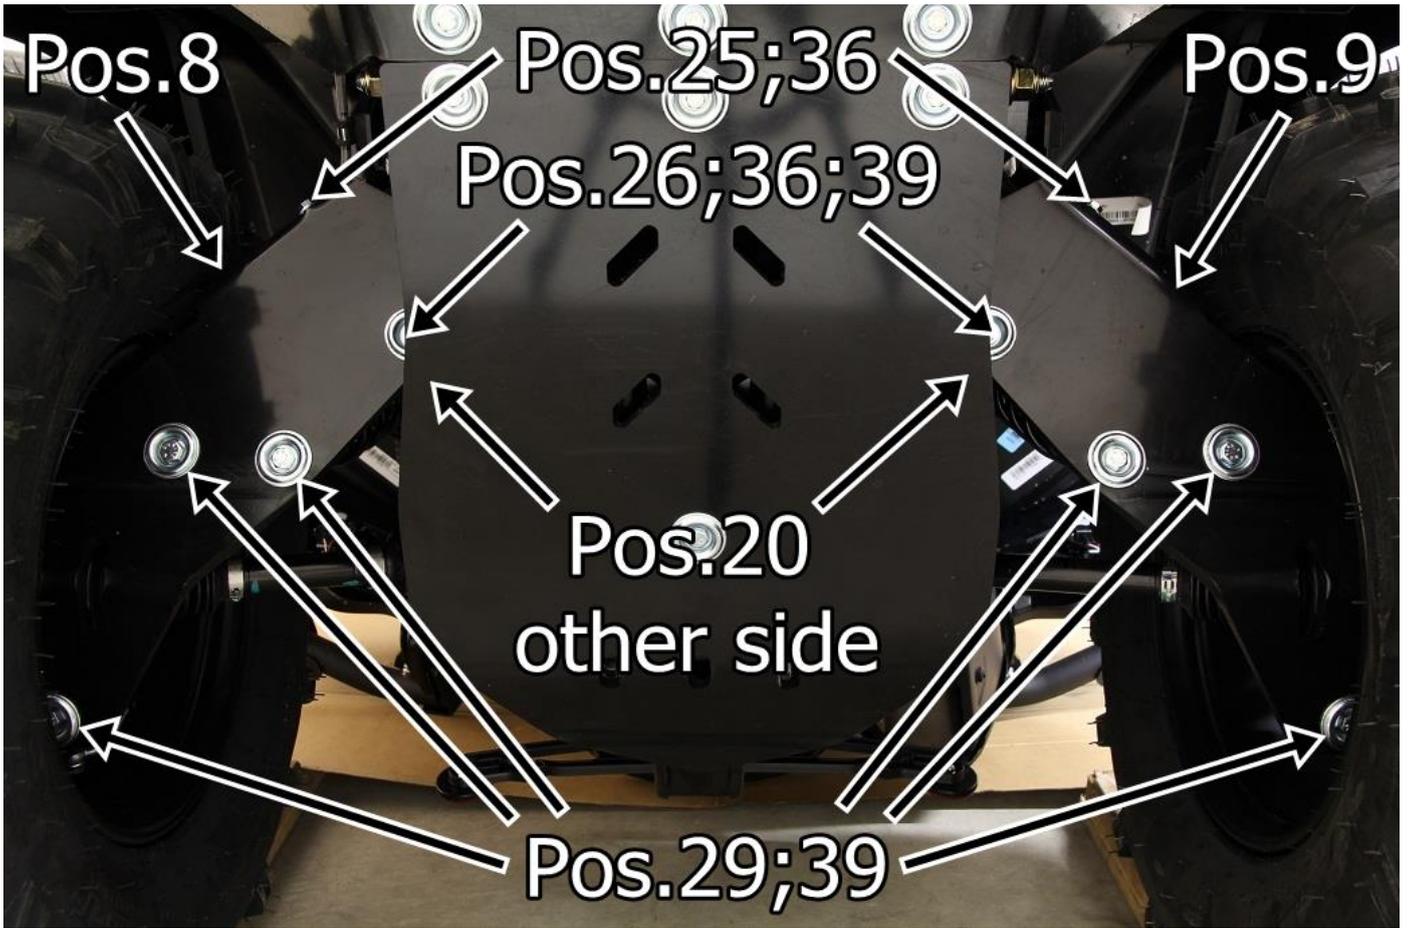

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

