

IRON BALTIC

ALUMINIUM SKID PLATE

SUZUKI

Eiger 400

Code 02.200

Version 14092023

DOWNLOAD MULTILINGUAL
USER MANUAL





code.ironbaltic.com/u/swE4mPaZ

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com

SPECIFICATION

Pos.	Description	Code	Amount
1	Skid plate	02.201K	1
2	Rear skid plate	02.203K	1
3	Front right arm protection	02.205	1
4	Front left arm protection	02.206	1
5	Clamp	02.207	1
6	Bush	20.103	2
7	Bracket	02.811	2
8	Bracket	02.812	2
9	Pipe clamp bracket 32	Vastus 32	3
10	Bolt M6x16	DIN933	12
11	Bolt M6x20	DIN933	4
12	Bolt M6x30	DIN933	4
13	Bolt M6x55	DIN933	4
14	Bolt M8x45	DIN933	2
15	Bolt M10x35	DIN933	2
16	Washer Ø6/15	SFS3738	8
17	Washer Ø6/18	DIN 9021	24
18	Washer Ø8/20	SFS3738	2
19	Washer Ø10/20	DIN 125	4
20	Dished washer	14.503	10
21	Nyloc nut M6	DIN 985	4
22	Nyloc nut M8	DIN 985	2
23	Nyloc nut M10	DIN 985	2

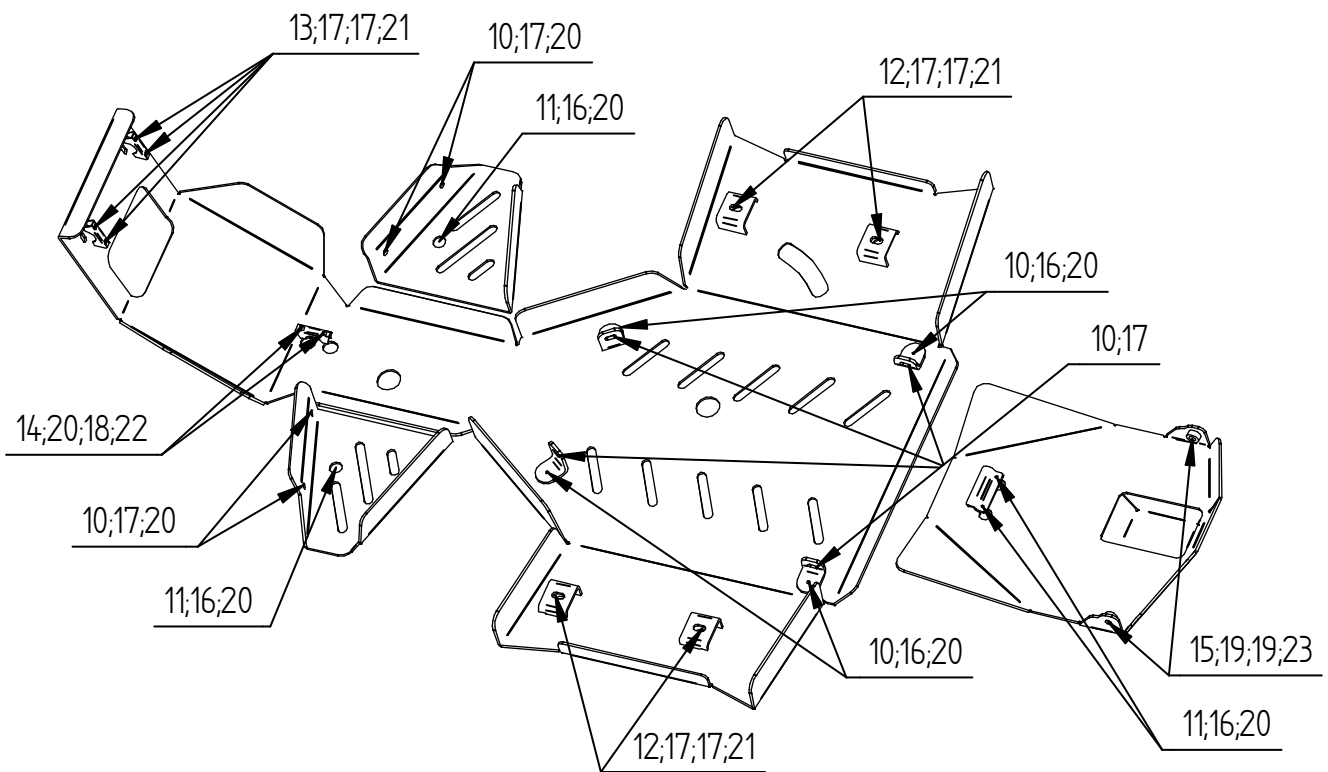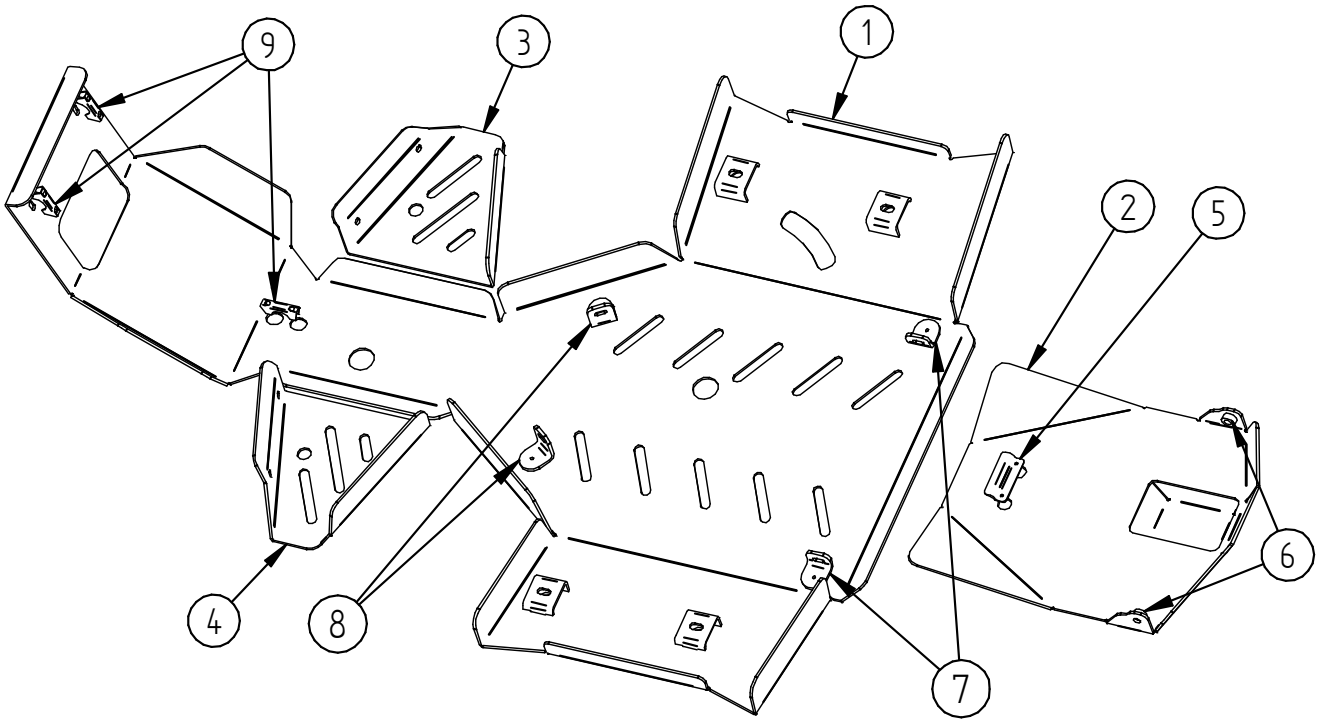


FITTING INSTRUCTIONS


Step 1 Remove all standard plastic protections.





Step 2 Install brackets 02.811 and 02.812, use bolts M6x16 and washers Ø6/18.

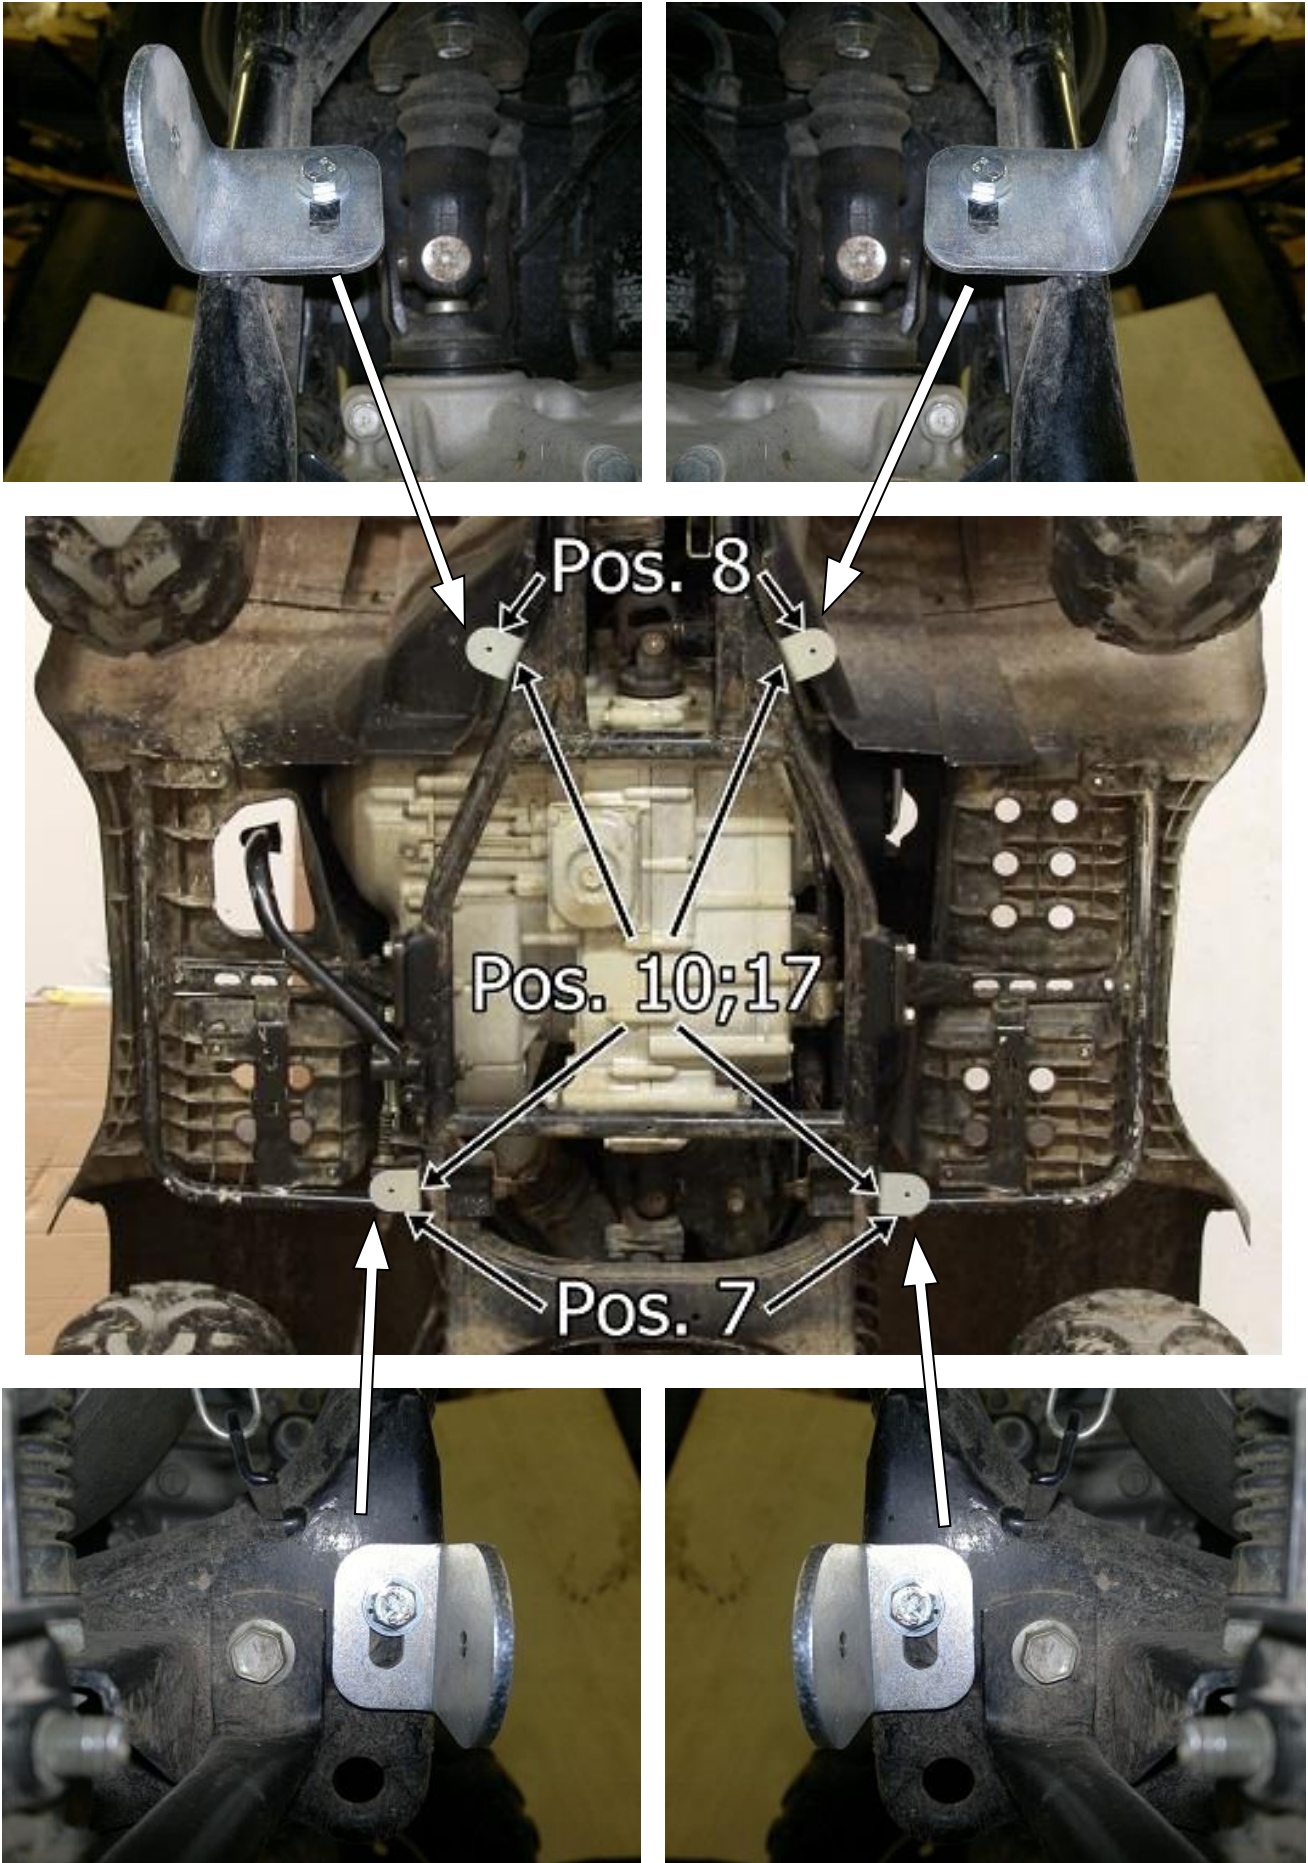






Step 3 Install protections 02.205 and 02.206, use bolts M6x16 and M6x20.

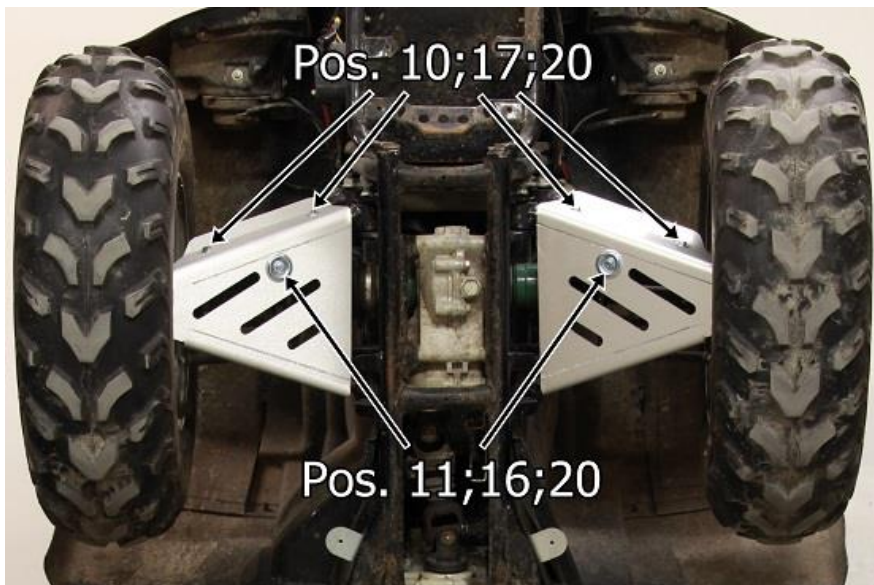

Step 4 Install rear skid plate 02.203K, use bolts M6x20 and M10x35.

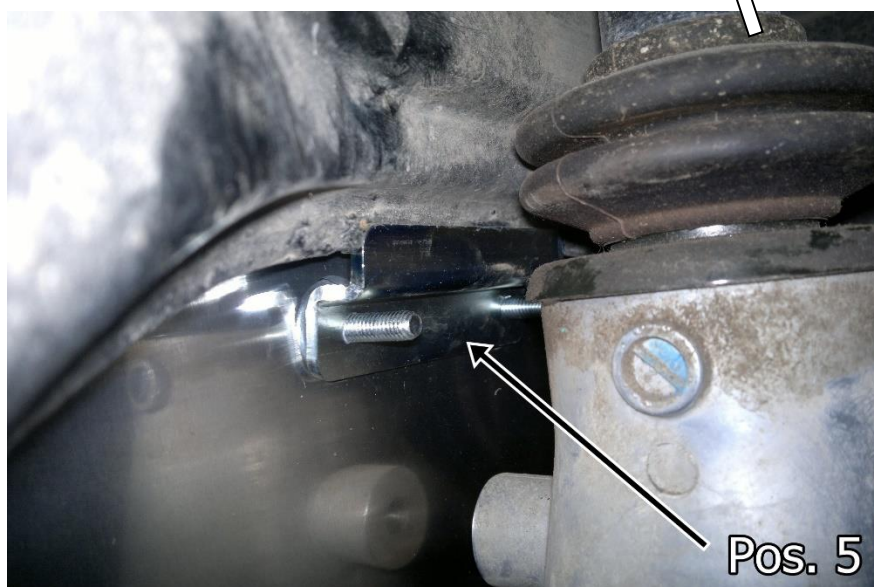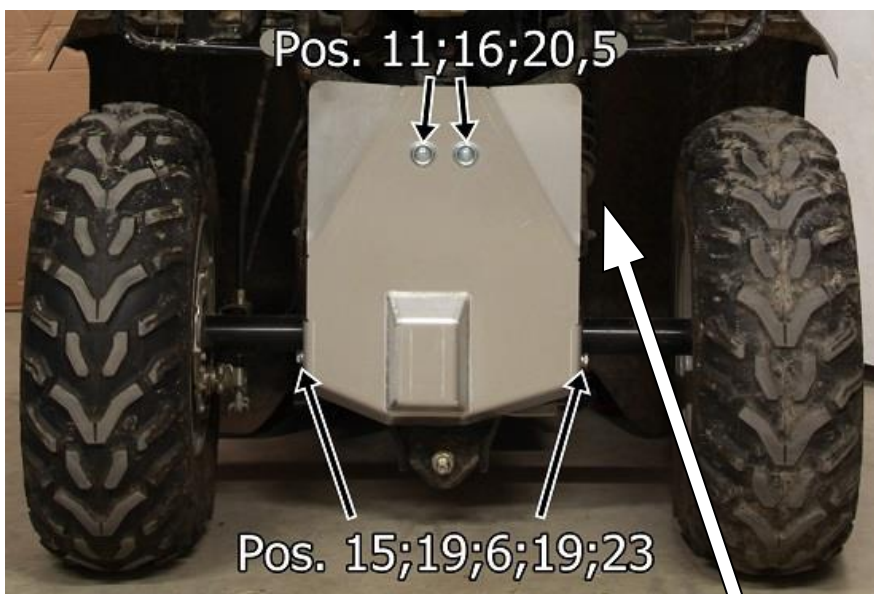

Step 5 Install skid plate 02.201K, use bolts M6x16, M6x30, M6x55 and M8x45.

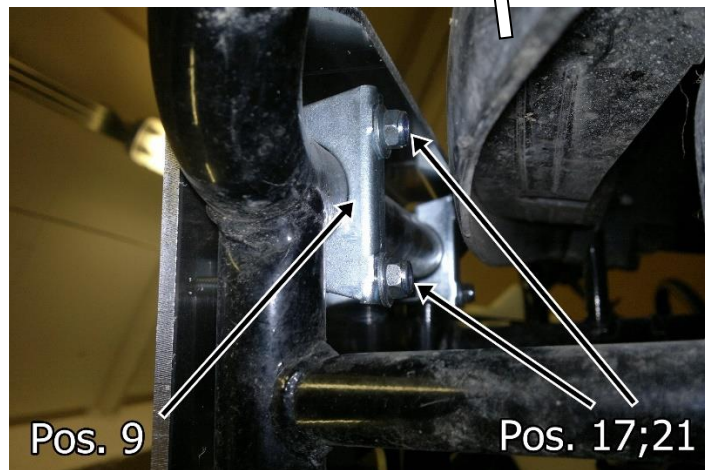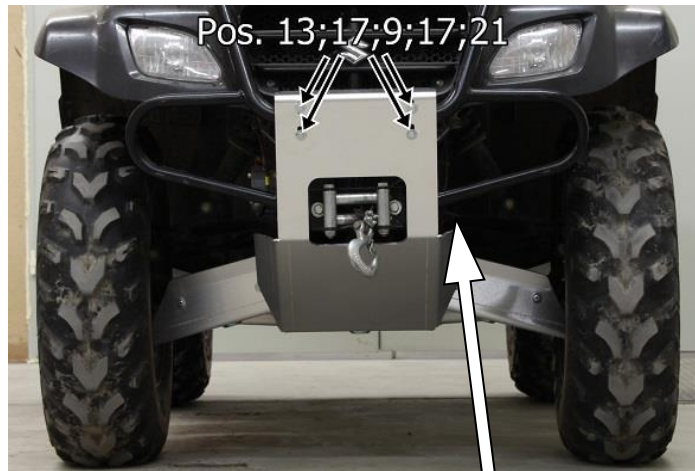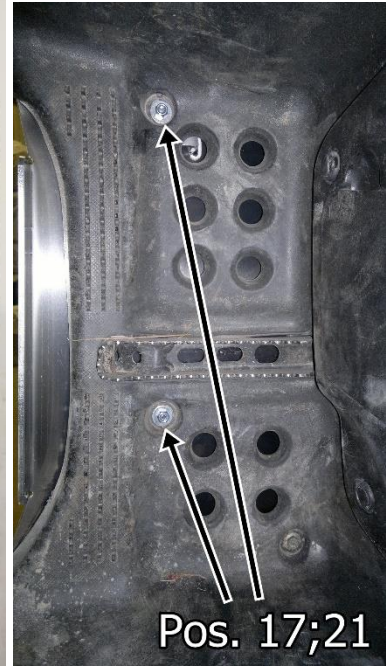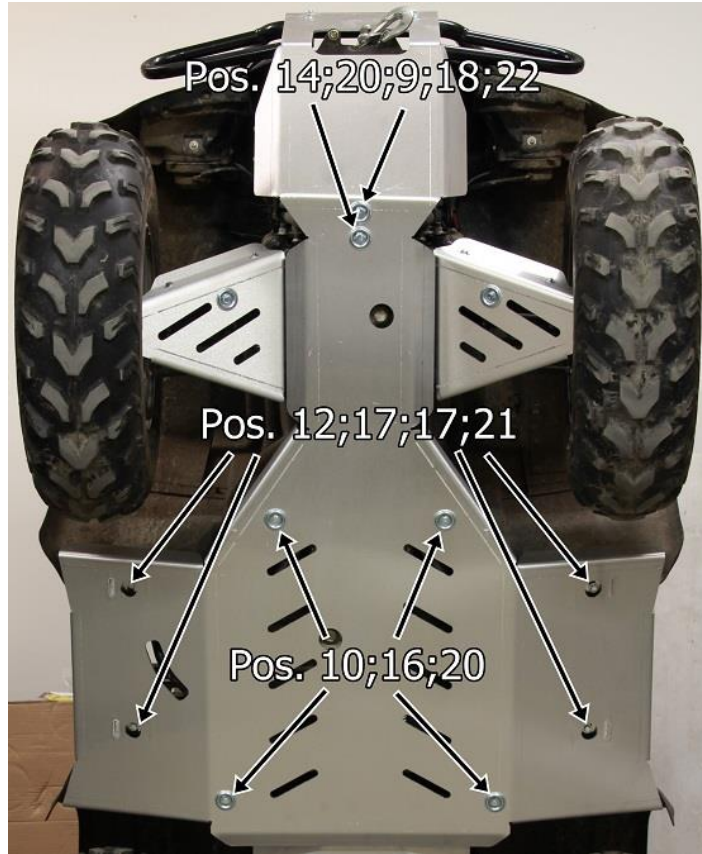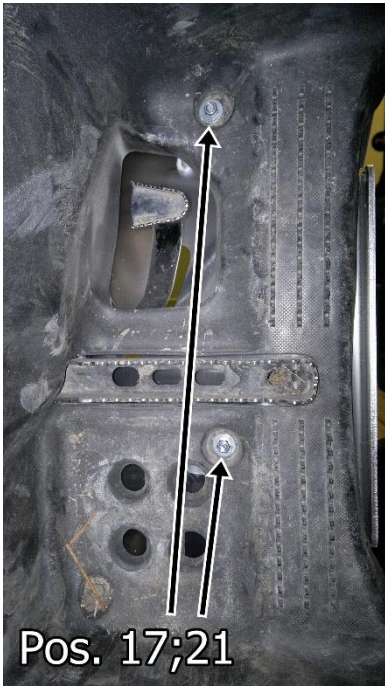

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

