

## SKID PLATE




[code.ironbaltic.com/u/22faDKku](https://code.ironbaltic.com/u/22faDKku)

# POLARIS

## General

Code 02.20000

Version 14092023


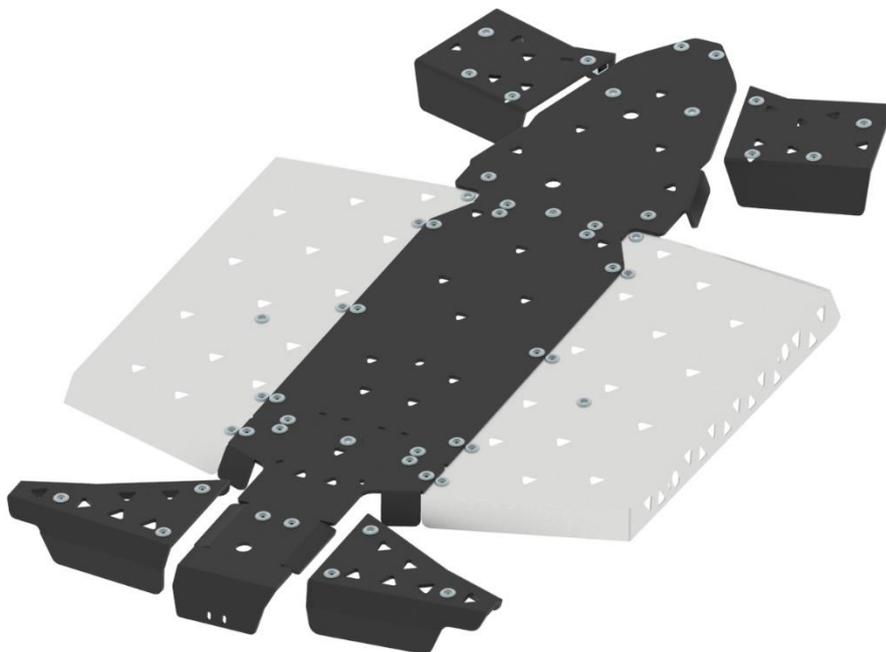


**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)



# SPECIFICATION

Pos.	Description	Code	Amount
1	Front part	02.20001	1
2	Middle part	02.20002	1
3	Rear part	02.20003	1
4	Right side protection	02.20004K	1
5	Left side protection	02.20005K	1
6	Front left arm protection	02.20006	1
7	Front right arm protection	02.20007	1
8	Rear left arm protection	02.20008	1
9	Rear right arm protection	02.20009	1
10	Rear part installation part	02.2304	2
11	Installation plate	02.2305	2
12	Plate	02.5006	14
13	Rear arm bracket	02.5709	2
14	Installation bracket	02.8210	4
15	Dished washer	14.503	52
16	Bolt M6x16 DIN 933	OT.02.02.050	26
17	Bolt M6x20 DIN 933	OT.02.02.060	7
18	Bolt M6x25 DIN 933	OT.02.02.070	4
19	Bolt M6x35 DIN 933	OT.02.02.090	4
20	Bolt M6x40 DIN 933	OT.02.02.100	2
21	Bolt M6x60 DIN 933	OT.02.02.140	6
22	Bolt M8x25 DIN 933	OT.02.02.190	2
23	Bolt M8x35 DIN 933	OT.02.02.210	2
24	Bolt M6x40 DIN 7991	OT.02.04.070	4
25	Conical washer Ø6	14.502	4
26	Washer Ø6/15 SFS 3738	OT.04.03.020	49
27	Washer Ø6/18 DIN 9021	OT.04.02.020	8
28	Washer Ø8/20 SFS 3738	OT.04.03.030	2
29	Nyloc nut M6 DIN 985	OT.03.02.030	8
30	Nyloc nut M8 DIN 985	OT.03.02.040	2

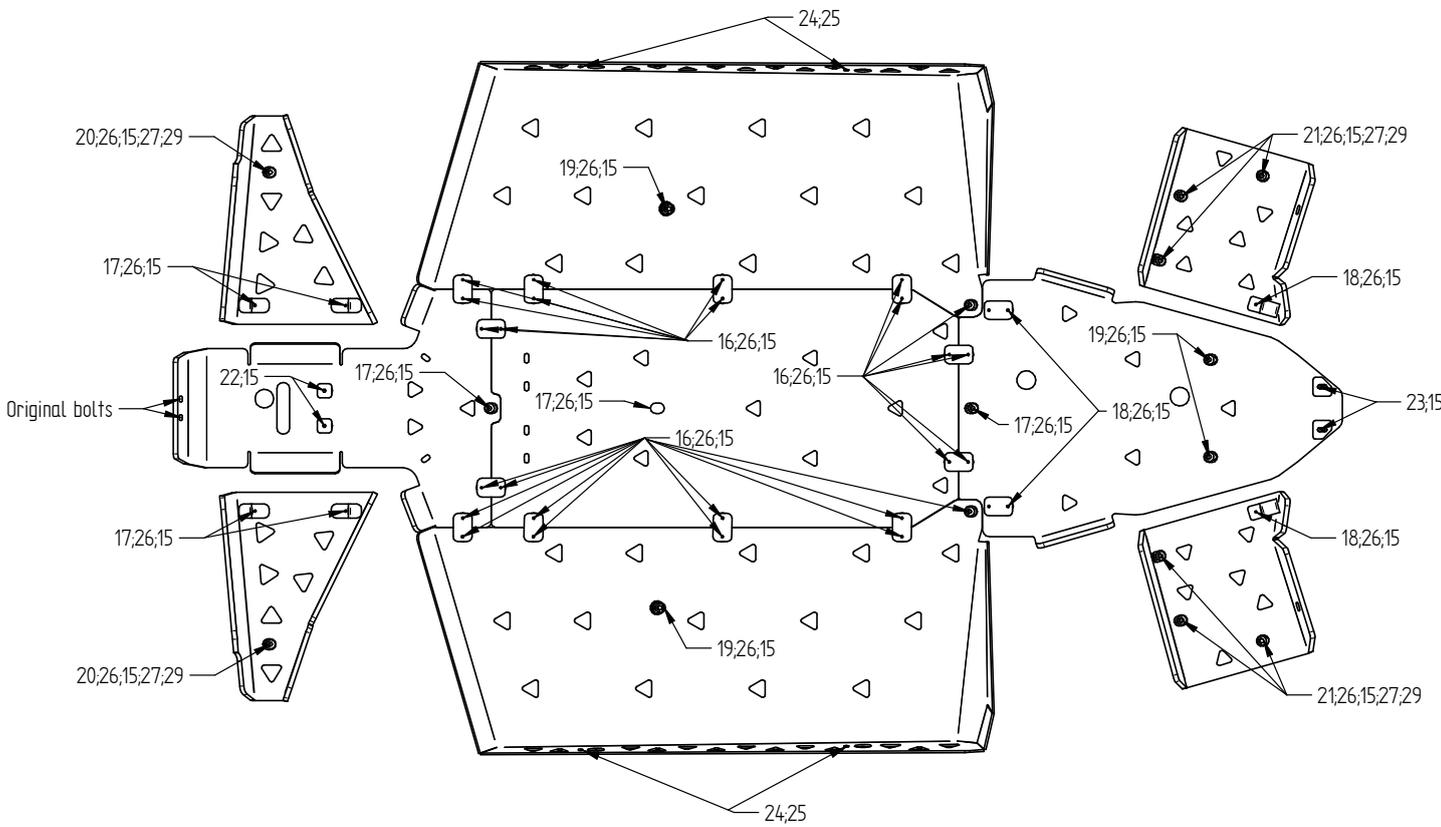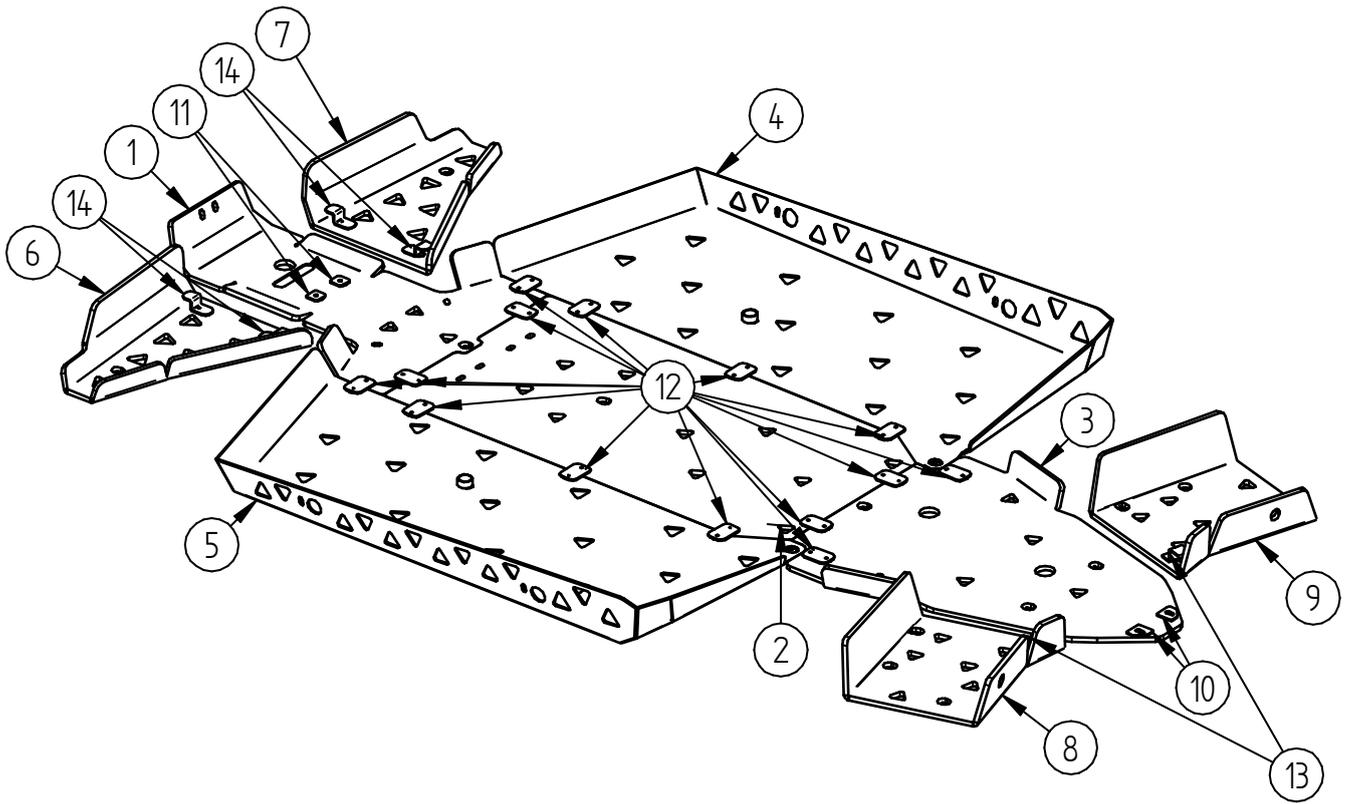


# FITTING INSTRUCTIONS


**Step 1** Remove all standard plastic covers. Remove bumper lower bolts and loosen upper bolts. To Access upper bolts, remove the plastic grille.

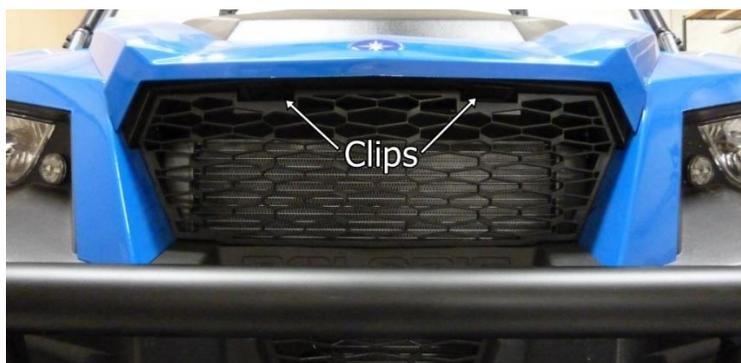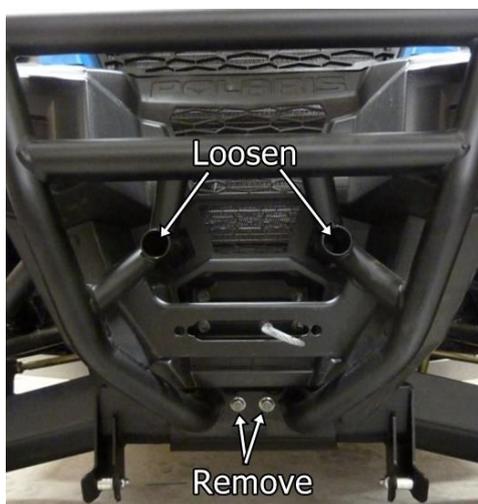


**Step 2** Install front arm protections 02.20006 and 02.20007.

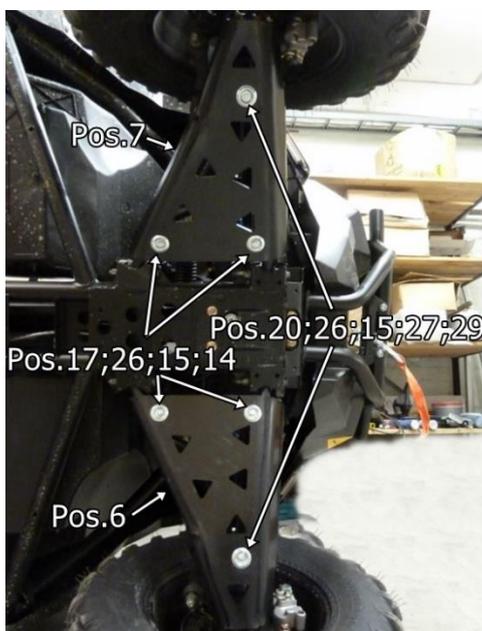


**Step 3** Install rear arm protections 02.20008 and 02.20009.

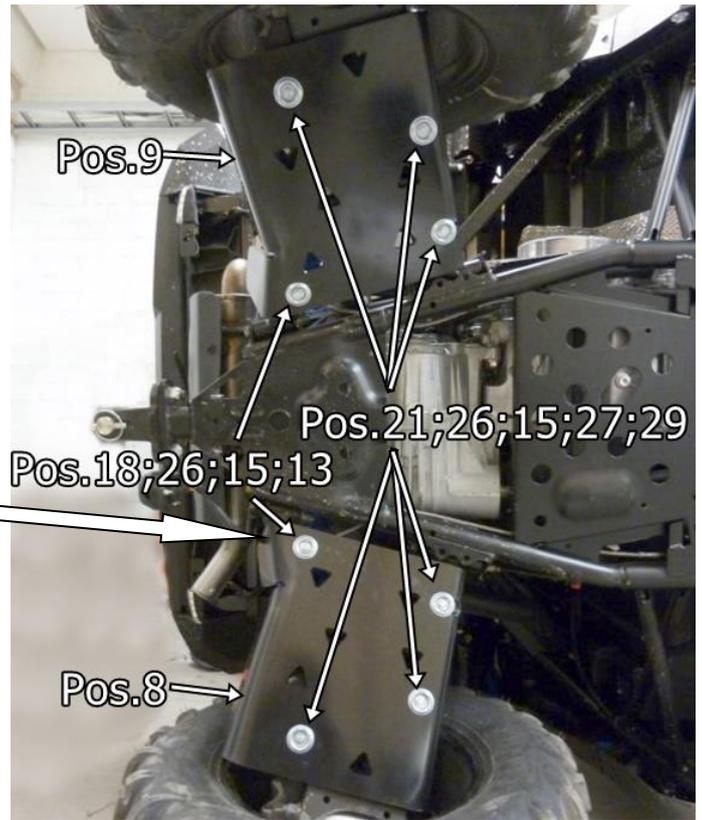


**Step 4** Install front protection. Tighten bumper bolts!

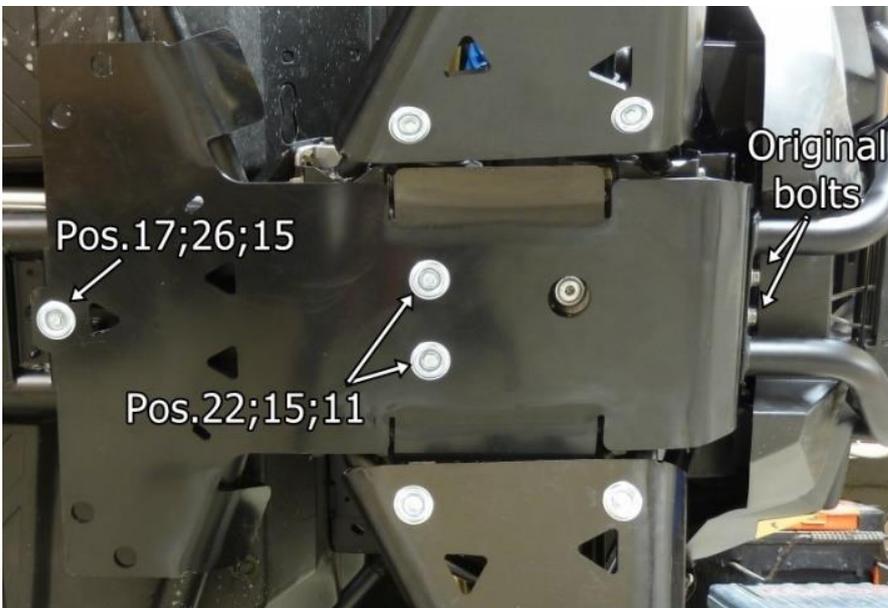


**Step 5** Install plates 02.5006 to front protection.

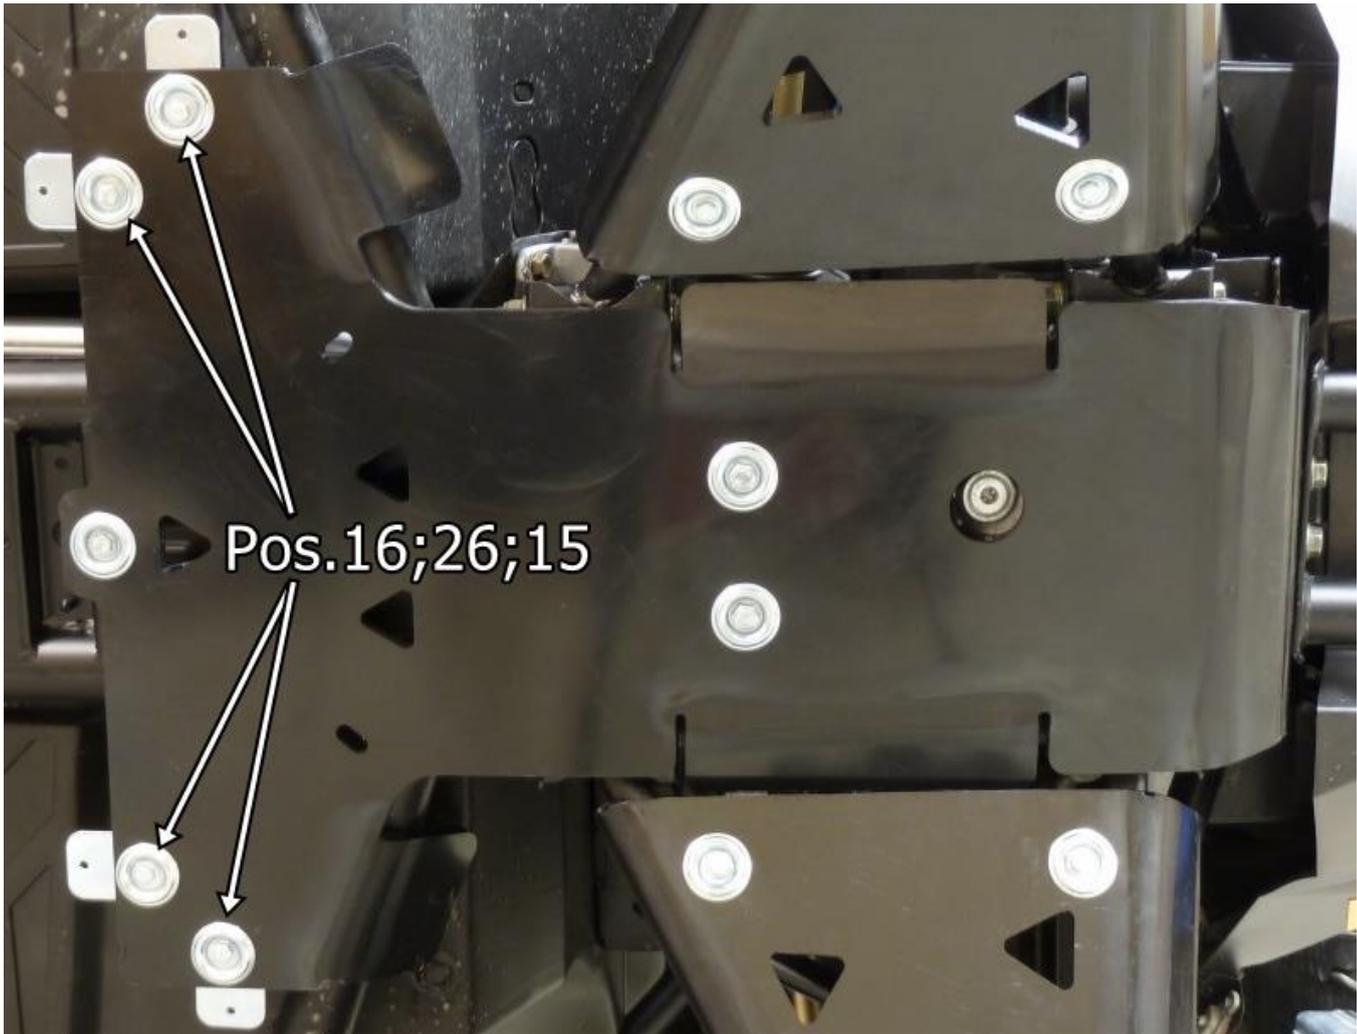


**Step 6** Install middle part and plates 02.5006 to middle part.

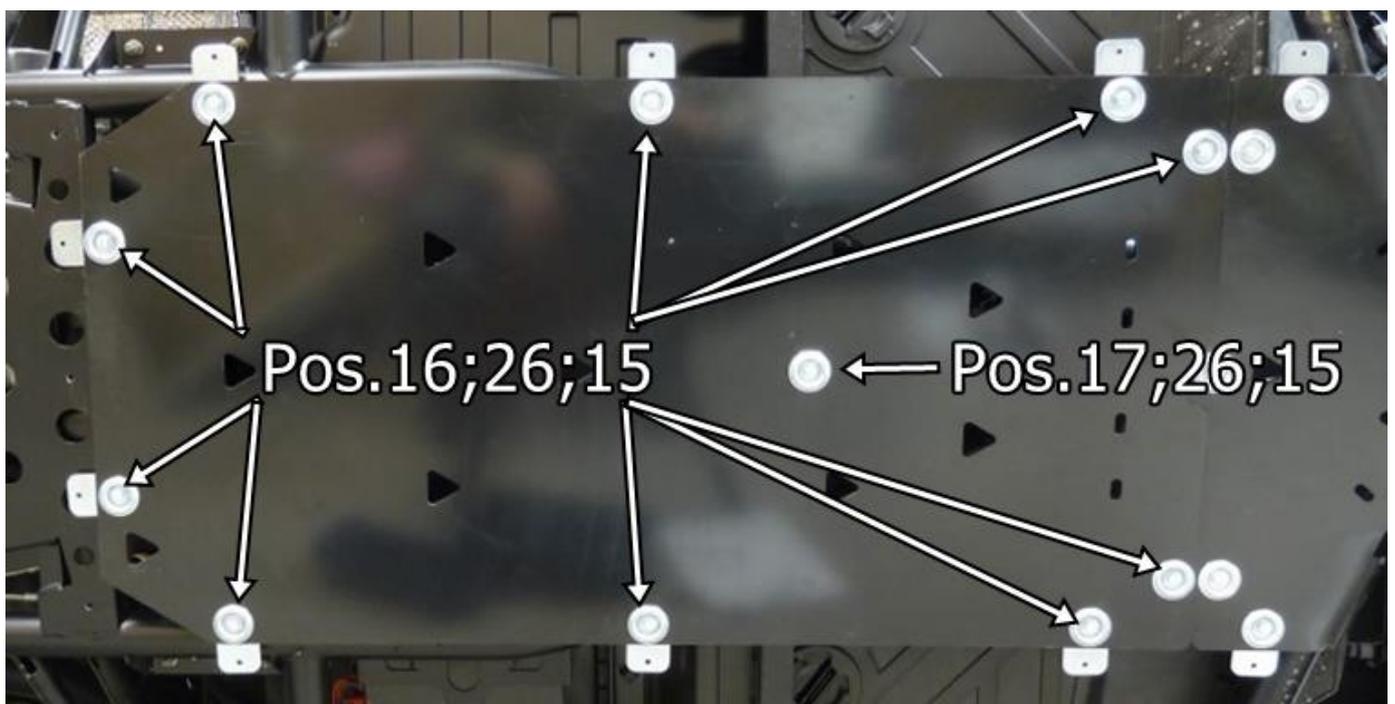

**Step 7** Install rear part 02.20003. Plate 02.5006 (Pos.12) goes on the lip of the frame.

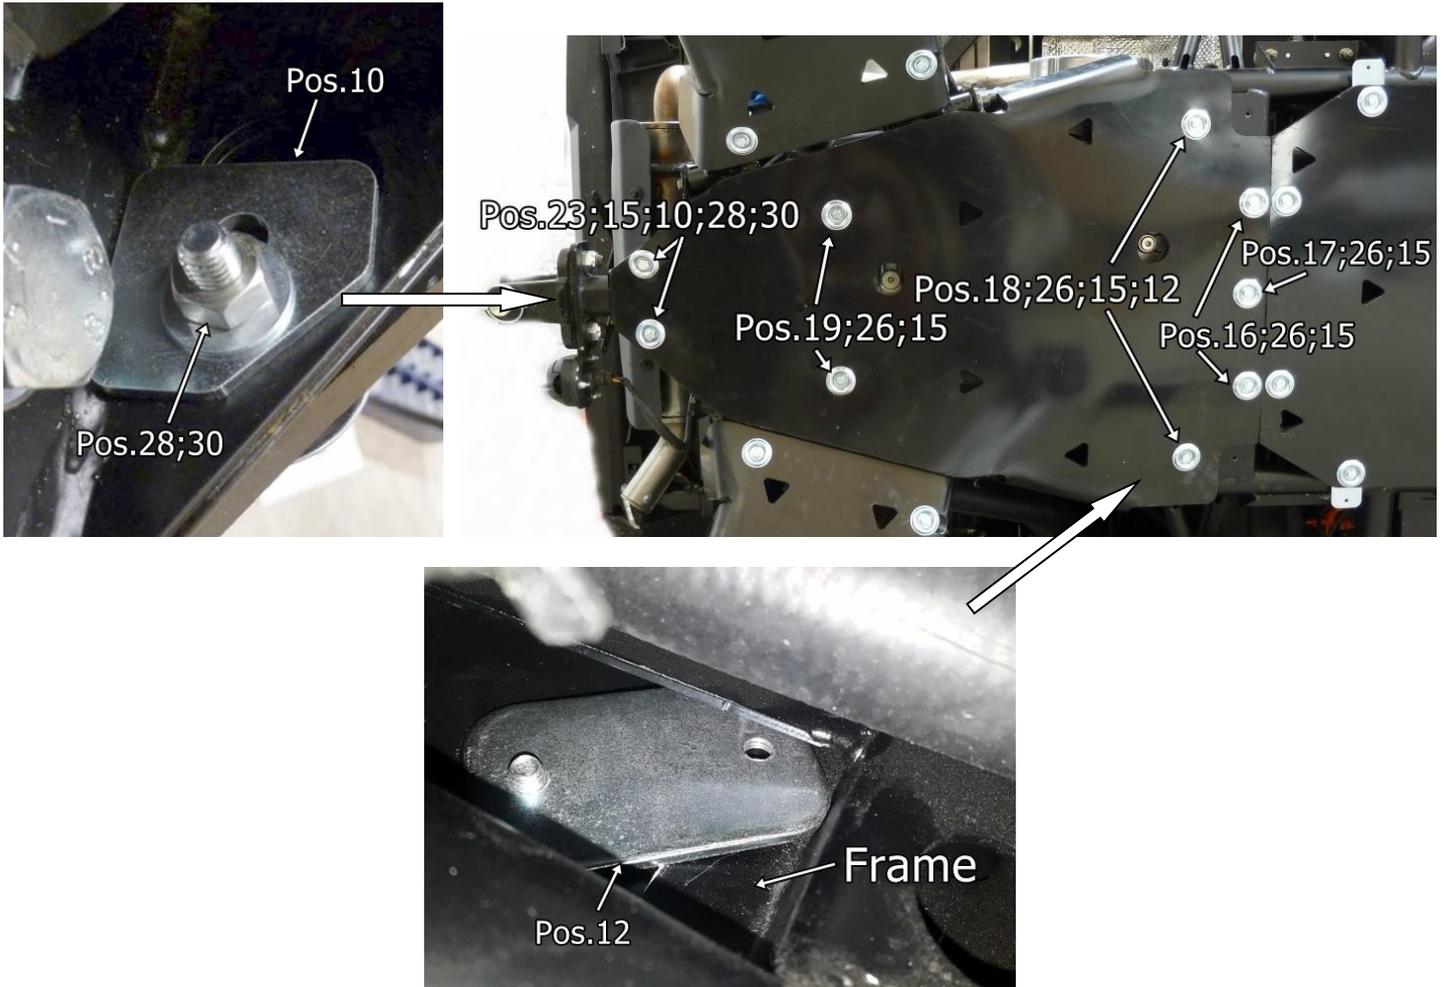

**Step 8** Install side protections 02.20004K and 02.20005K.

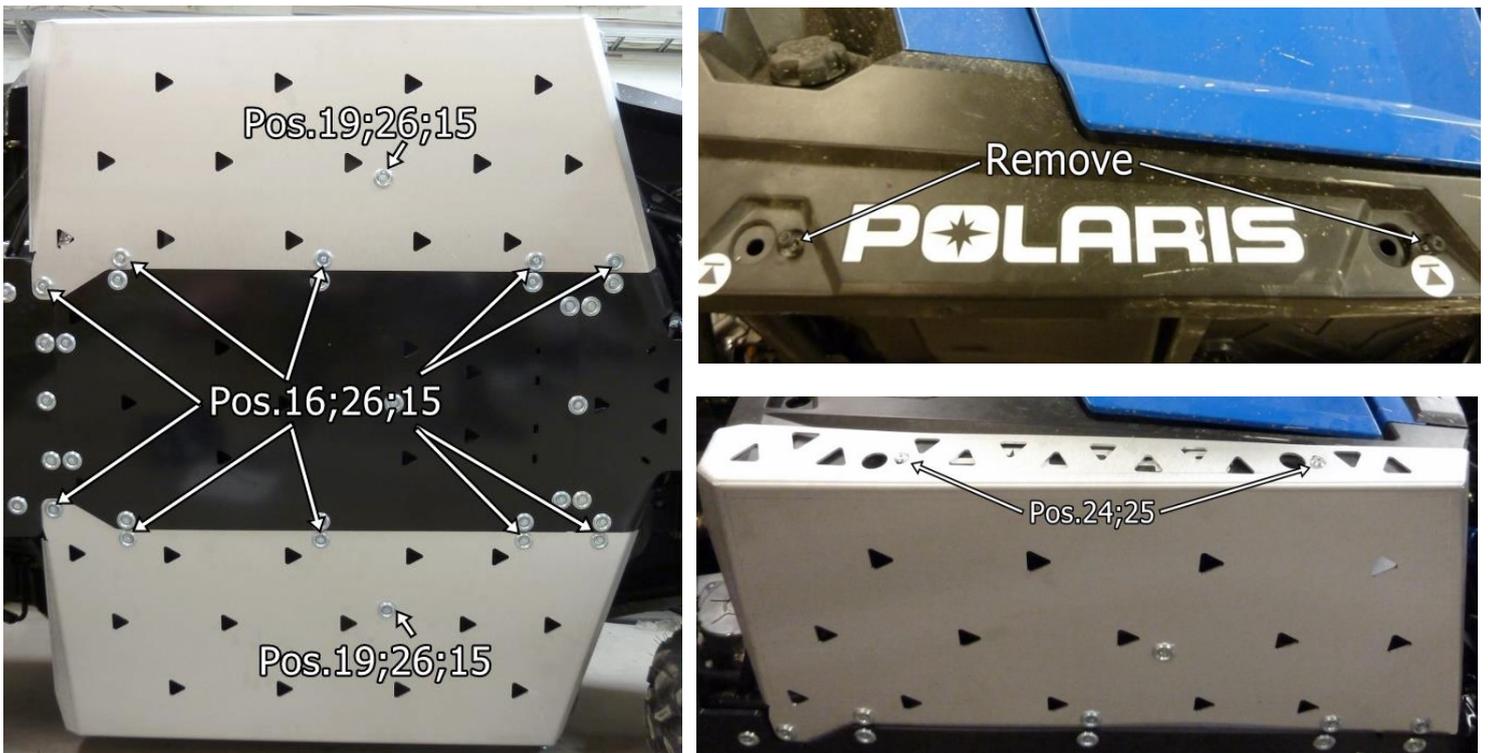

# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

