

IRON BALTIC

PLASTIC SKID PLATE

CAN AM

G2 Renegade (2017-...)

Code 02.20200

Version 14092023



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic
sales@ironbaltic.com



DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/BLqaxKkD

SPECIFICATION

| Pos. | Description | Code | Amount |
|------|------------------------------------|--------------|--------|
| 1 | Rear part | 02.20202 | 1 |
| 2 | Middle part | 02.8301 | 1 |
| 3 | Front part | 02.8302K | 1 |
| 4 | Front right arm protection | 02.8304 | 1 |
| 5 | Front left arm protection | 02.8305 | 1 |
| 6 | Rear right arm protection | 02.8308 | 1 |
| 7 | Rear left arm protection | 02.8309 | 1 |
| 8 | Rear right trailing arm protection | 02.18901 | 1 |
| 9 | Rear left trailing arm protection | 02.18902 | 1 |
| 10 | Bush D30h14 | 02.707 | 1 |
| 11 | Plate | 02.2305 | 1 |
| 12 | Plate | 02.5006 | 11 |
| 13 | Clamp for front arm protection | 02.8210 | 4 |
| 14 | Connecting plate (20) | 02.8311 | 2 |
| 15 | Connecting plate (10) | 02.8312 | 2 |
| 16 | Clamp for rear arm protection | 02.18803 | 2 |
| 17 | Bracket | 02.18804 | 2 |
| 18 | Angle (80) | 02.18805 | 2 |
| 19 | Angle (100) | 02.18806 | 2 |
| 20 | Clamp | 02.20201 | 1 |
| 21 | Bolt M6x16 DIN 933 | OT.02.02.050 | 12 |
| 22 | Bolt M6x20 DIN 933 | OT.02.02.060 | 6 |
| 23 | Bolt M6x25 DIN 933 | OT.02.02.070 | 4 |
| 24 | Bolt M6x30 DIN 933 | OT.02.02.080 | 6 |
| 25 | Bolt M6x40 DIN 933 | OT.02.02.100 | 2 |
| 26 | Bolt M6x90 DIN 933 | OT.02.02.162 | 2 |
| 27 | Bolt M8x20 DIN 933 | OT.02.02.180 | 6 |
| 28 | Bolt M8x35 DIN 933 | OT.02.02.210 | 1 |
| 29 | Bolt M10x30 DIN 933 | OT.02.02.320 | 2 |
| 30 | Bolt M6x20 DIN 7991 | OT.02.04.030 | 20 |
| 31 | Bolt M6x30 DIN 7991 | OT.02.04.050 | 2 |
| 32 | Washer Ø6/15 SFS 3738 | OT.04.03.020 | 40 |
| 33 | Washer Ø8/20 SFS 3738 | OT.04.03.030 | 1 |
| 34 | Washer Ø10/20 DIN 125 | OT.04.01.040 | 4 |
| 35 | Dished washer | 14.503 | 34 |
| 36 | Conical washer Ø6 | 14.502 | 22 |
| 37 | Nyloc nut M6 DIN 985 | OT.03.02.030 | 8 |

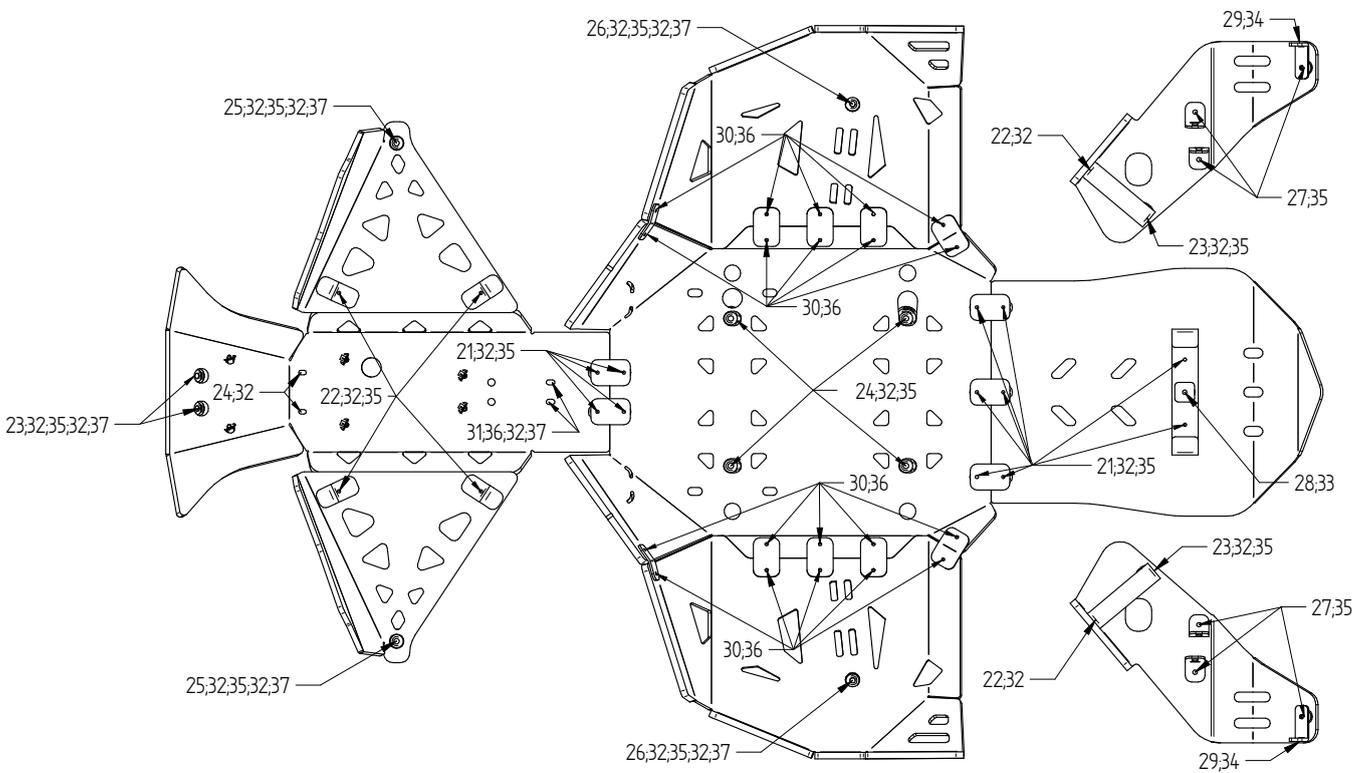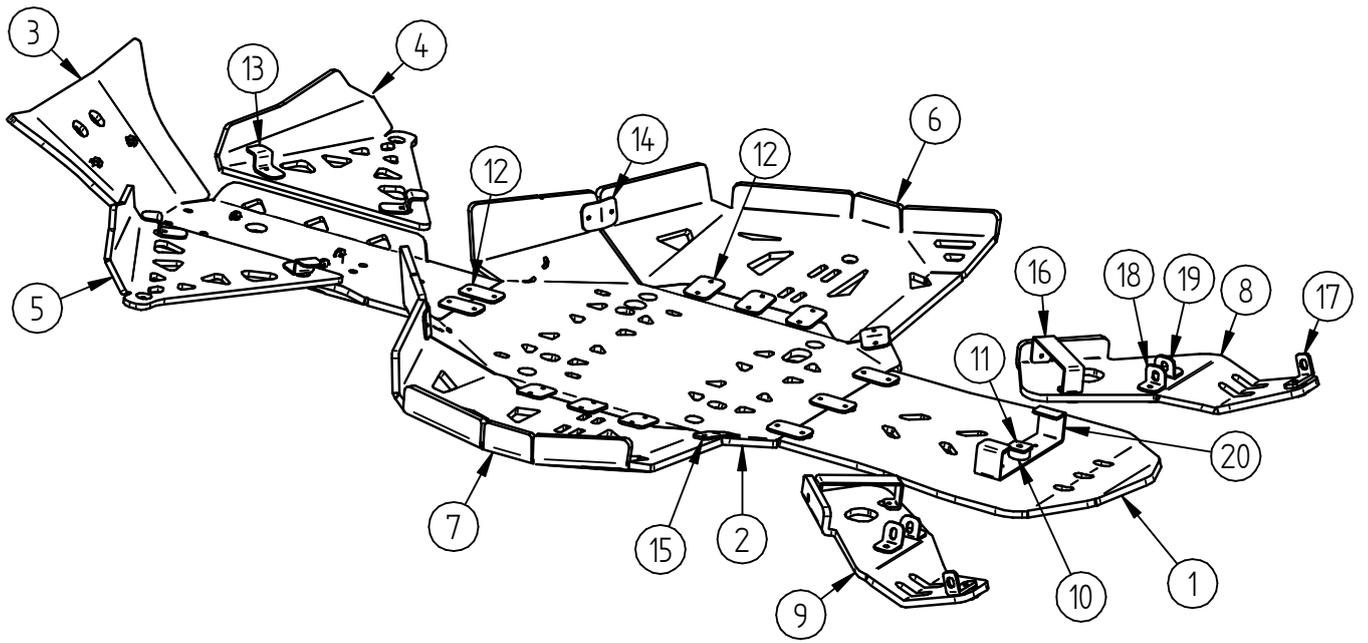


FITTING INSTRUCTIONS



Step 1 Remove all standard plastic covers.




Step 2 Install middle part 02.8301.

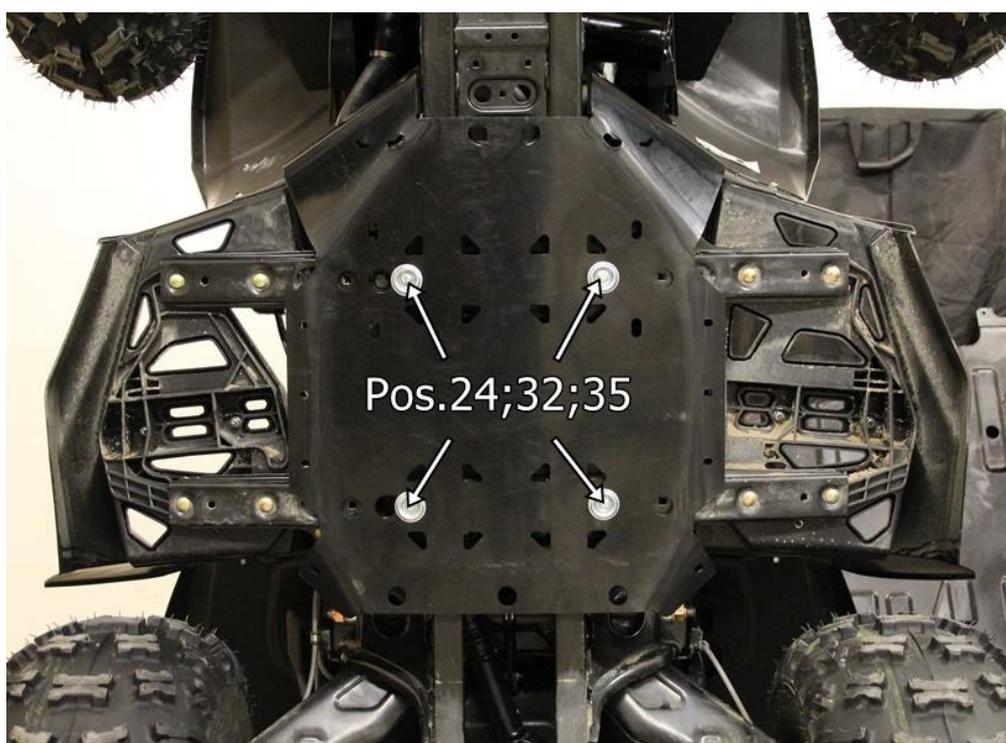


Step 3 Install plates.

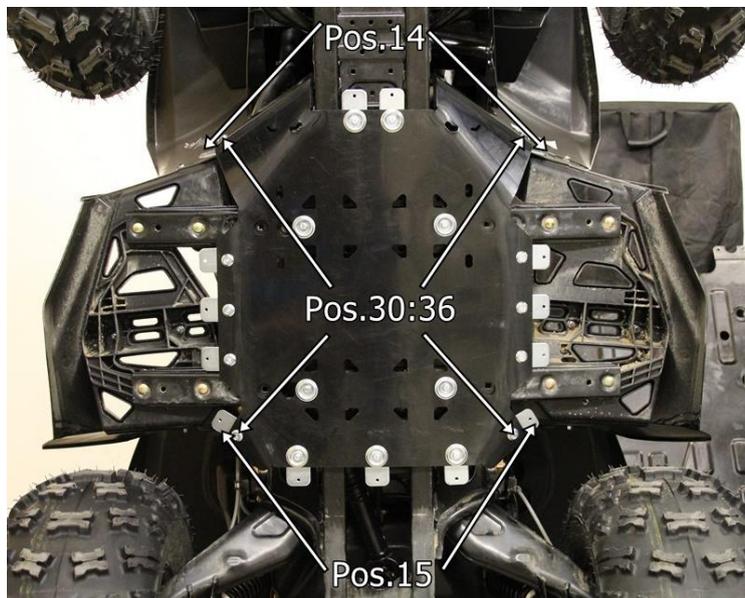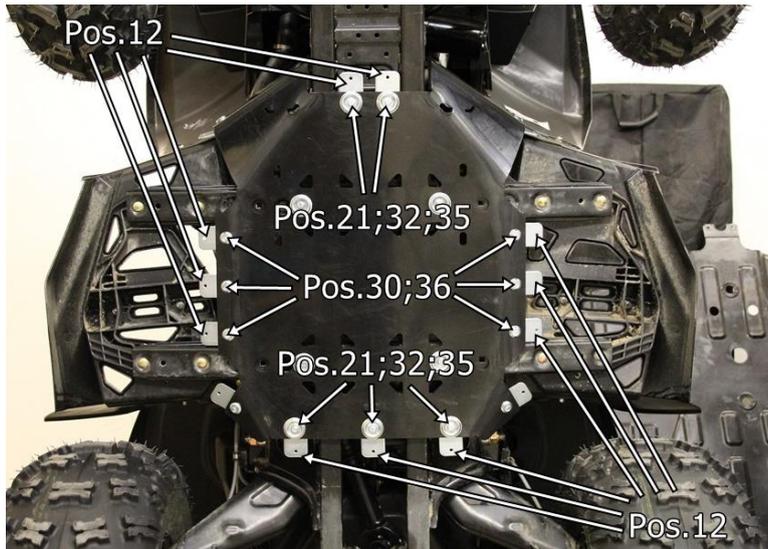



Step 4 Install right (02.8308) and left (02.8309) arm protections.

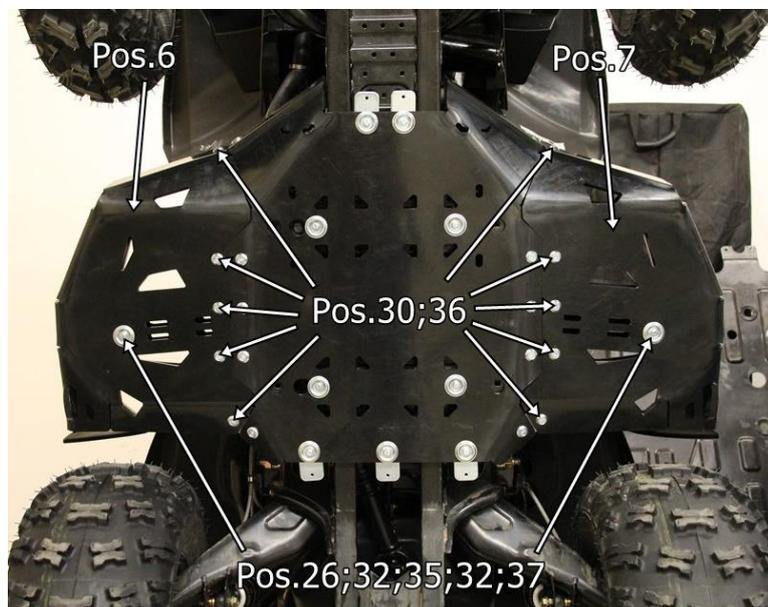


Step 5 Install front part 02.8302K.

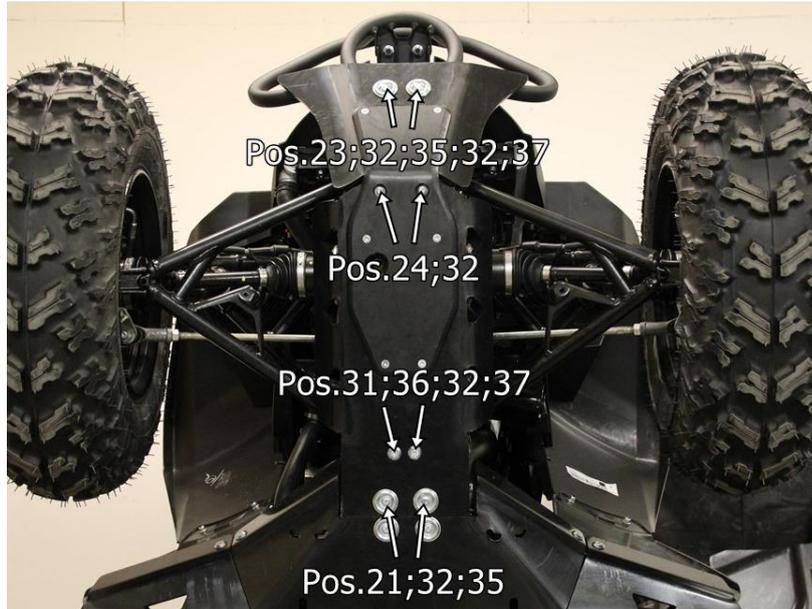



Step 6 Install bush (Pos.10) between plate (Pos.20) and frame.

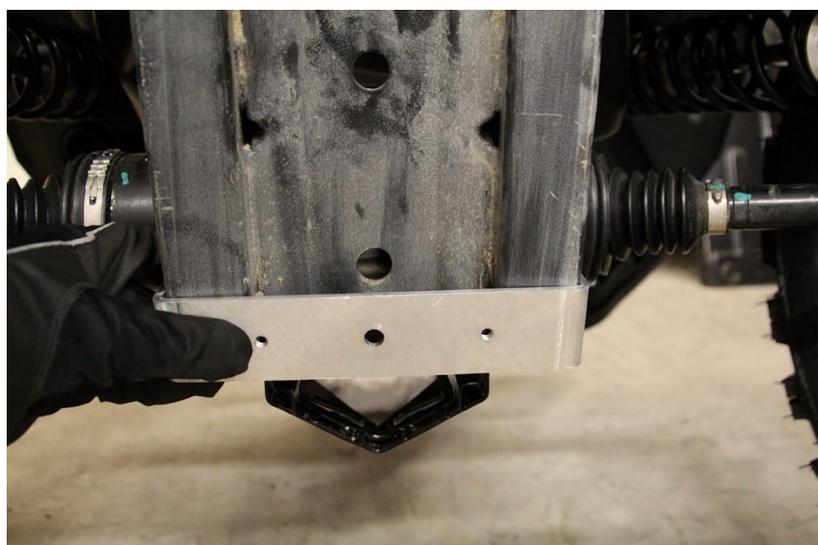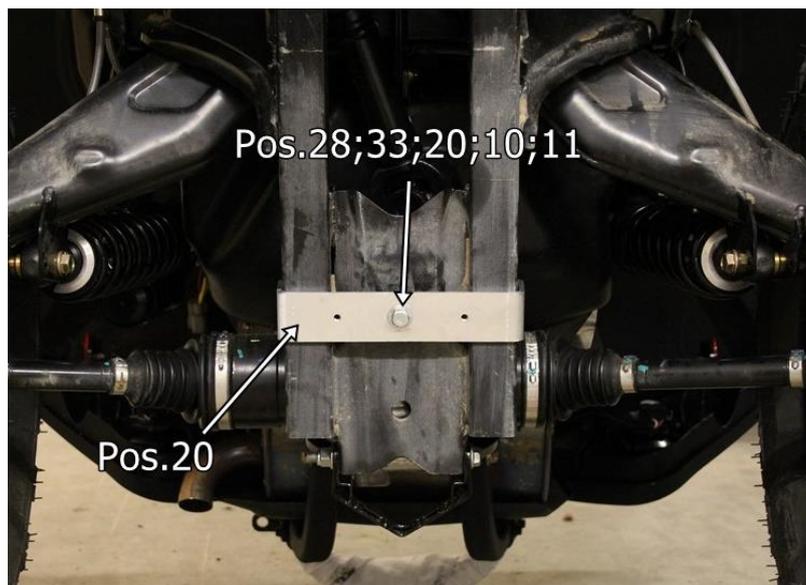

Step 7 Install rear part 02.20202.

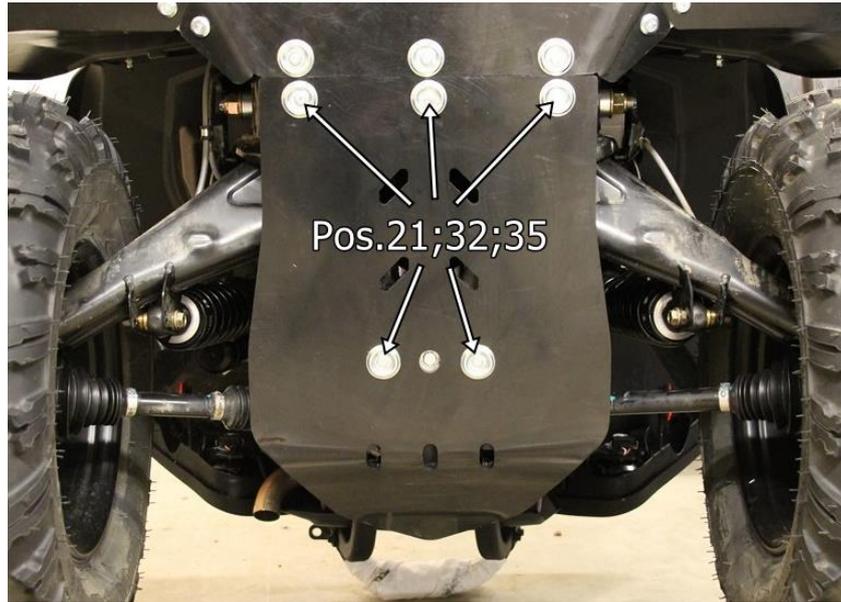

Step 8 Install front arms protections 02.8304 and 02.8305.

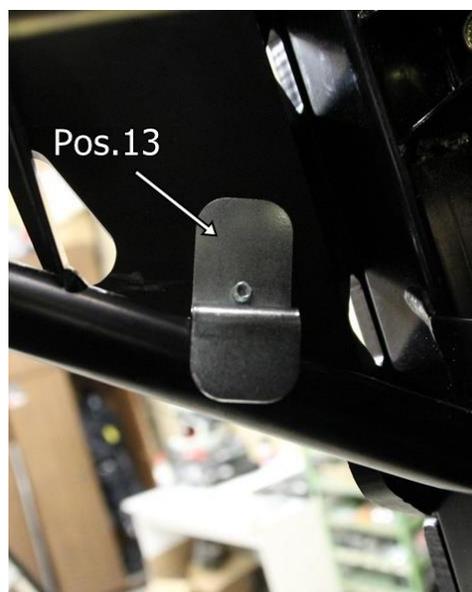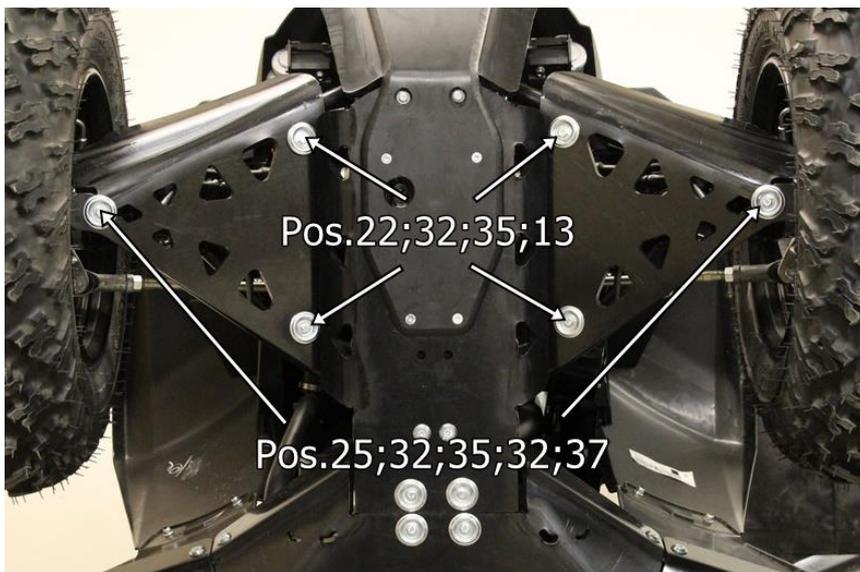

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

