

IRON BALTIC

PLASTIC SKID PLATE

CAN AM

Outlander 6x6 (...-2016)

Code 02.20400

Version 15092023



Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com



DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/BYj57Hil

SPECIFICATION

Pos.	Description	Code	Amount
1	Rear part 1	02.20401K	1
2	Rear part 1	02.20402	1
3	Middle part	02.8501	1
4	Front part	02.8502K	1
5	Right side part	02.8503	1
6	Left side part	02.8504	1
7	Front right arm protection	02.8304	1
8	Front left arm protection	02.8305	1
9	Rear right arm protection	02.8306	2
10	Rear left arm protection	02.8307	2
11	Rear part bracket	02.20303	1
12	Connecting plate (40)	02.10006	2
13	Bush for front part	02.10005	2
14	Plate for front part	02.10004	1
15	Front part bracket	02.8506	1
16	Connecting plate (20)	02.8311	2
17	Clamp for front arm protection	02.8210	4
18	Clamp for rear arm protection	02.5709	4
19	Plate	02.5006	14
20	Plate	02.2305	3
21	Bracket	03.3502	4
22	Dished washer	14.503	50
23	Bolt M6x16 DIN 933	OT.02.02.050	16
24	Bolt M6x20 DIN 933	OT.02.02.060	14
25	Bolt M6x30 DIN 933	OT.02.02.080	4
26	Bolt M6x40 DIN 933	OT.02.02.100	2
27	Bolt M6x60 DIN 933	OT.02.02.140	4
28	Bolt M8x20 DIN 933	OT.02.02.180	9
29	Bolt M8x40 DIN 933	OT.02.02.220	1
30	Bolt M6x20 DIN 7991	OT.02.04.030	20
31	Bolt M6x30 DIN 7991	OT.02.04.050	3
32	Bolt M8x60 DIN 7991	OT.02.04.210	2
33	Carriage bolt M8x25 DIN 603	OT.02.05.060	8
34	Washer Ø6/15 SFS 3738	OT.04.03.020	57
35	Washer Ø8/20 SFS 3738	OT.04.03.030	10
36	Conical washer Ø6	14.502	22
37	Conical washer Ø8	14.501	2
38	Nyloc nut M6 DIN 985	OT.03.02.030	17
39	Nyloc nut M8 DIN 985	OT.03.02.040	10

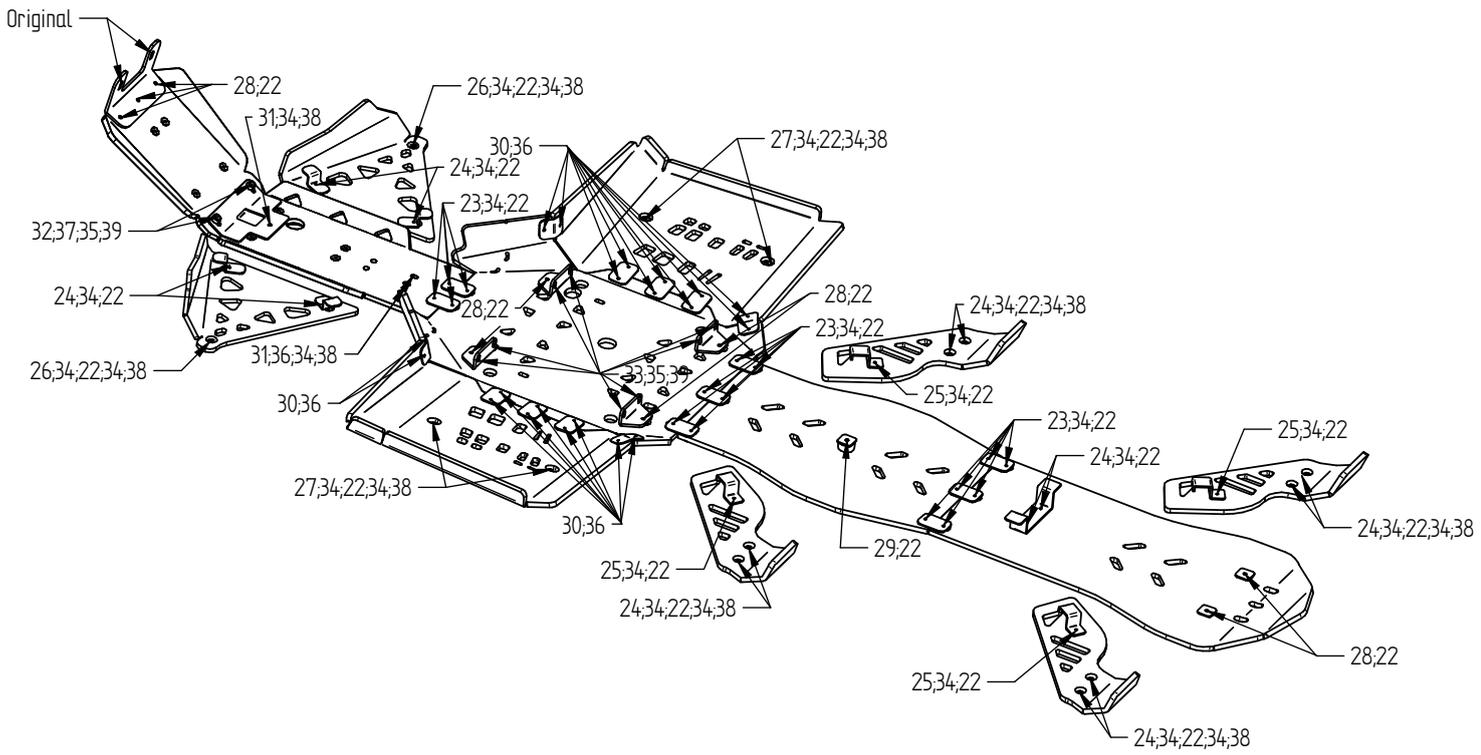
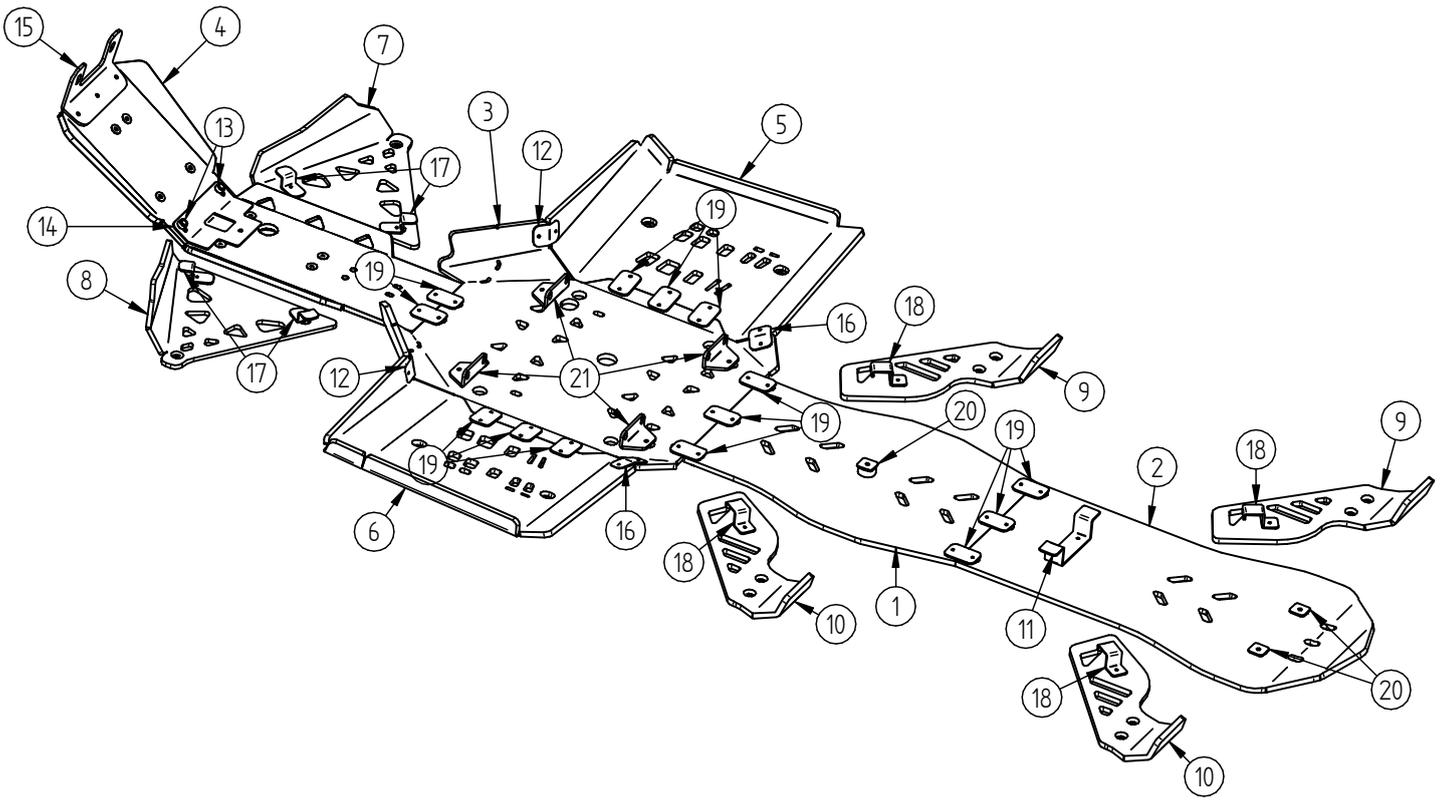


FITTING INSTRUCTIONS


Step 1 Remove all standard plastic covers.





Step 2 Install brackets 03.3502. Place brackets same plane as frame.

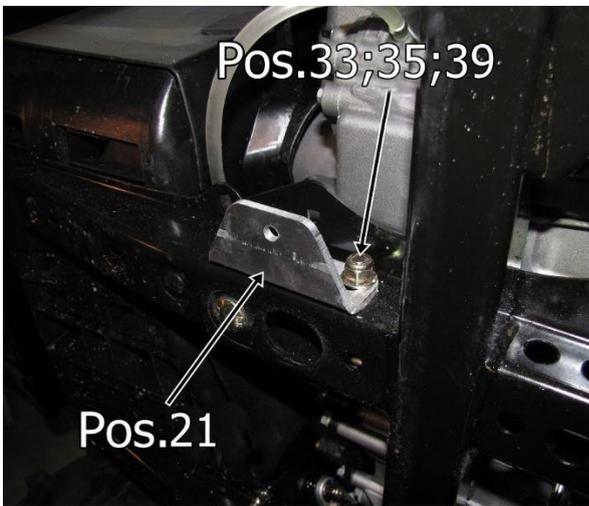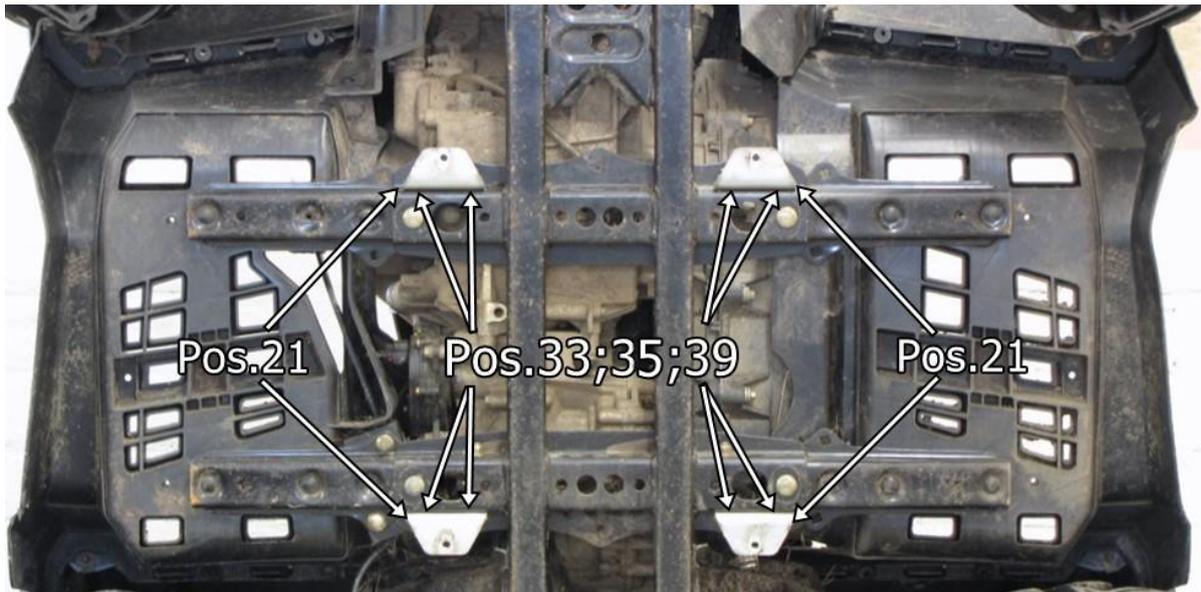


Step 3 Install middle part 02.8501.

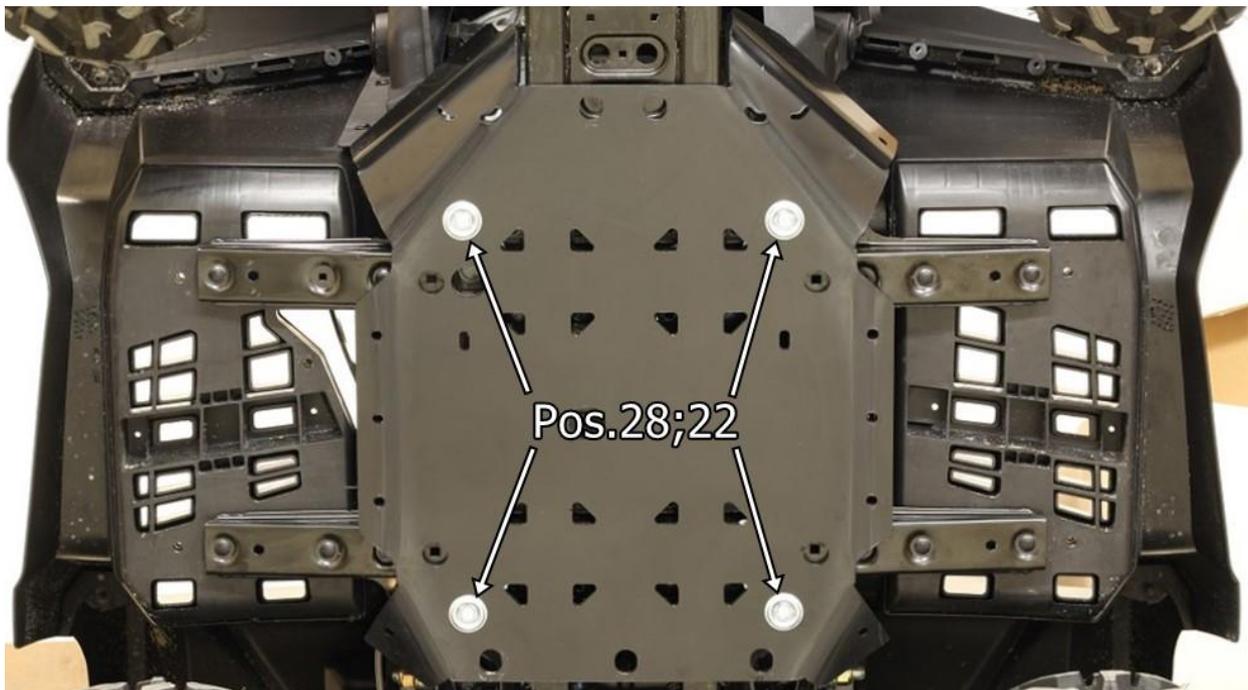



Step 4 Install plates 02.5006, 02.8311, 02.10006 to middle part.

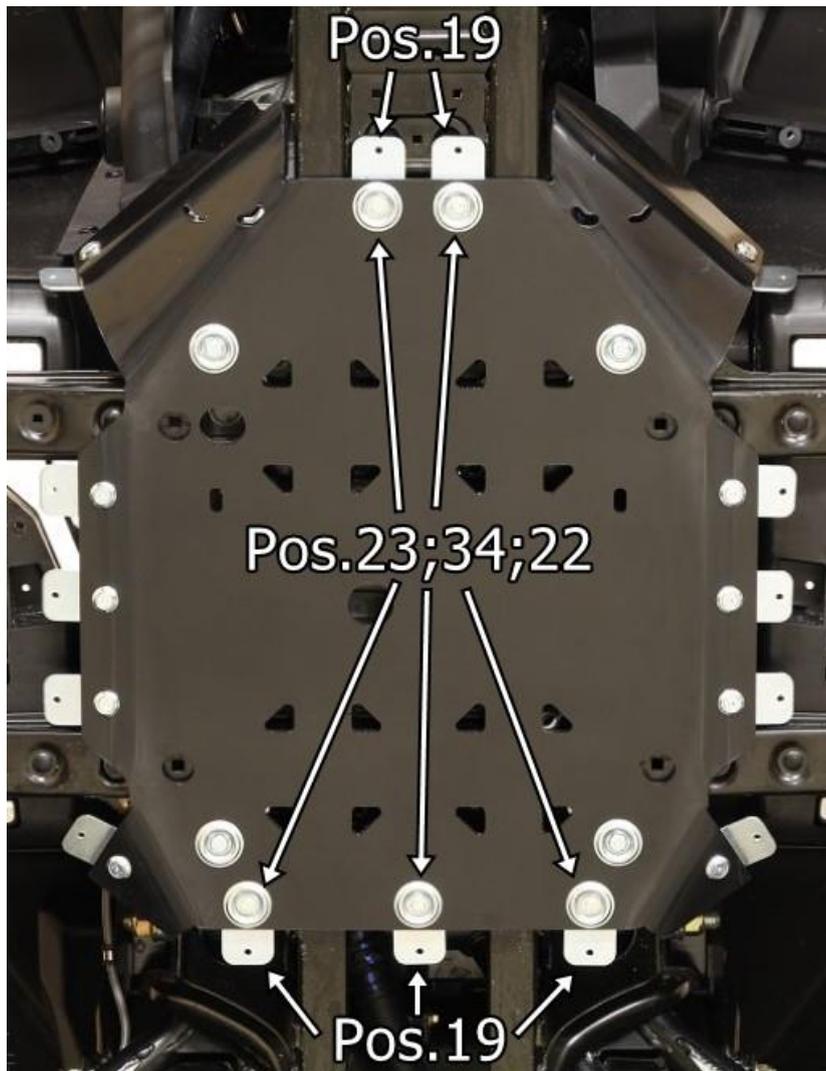
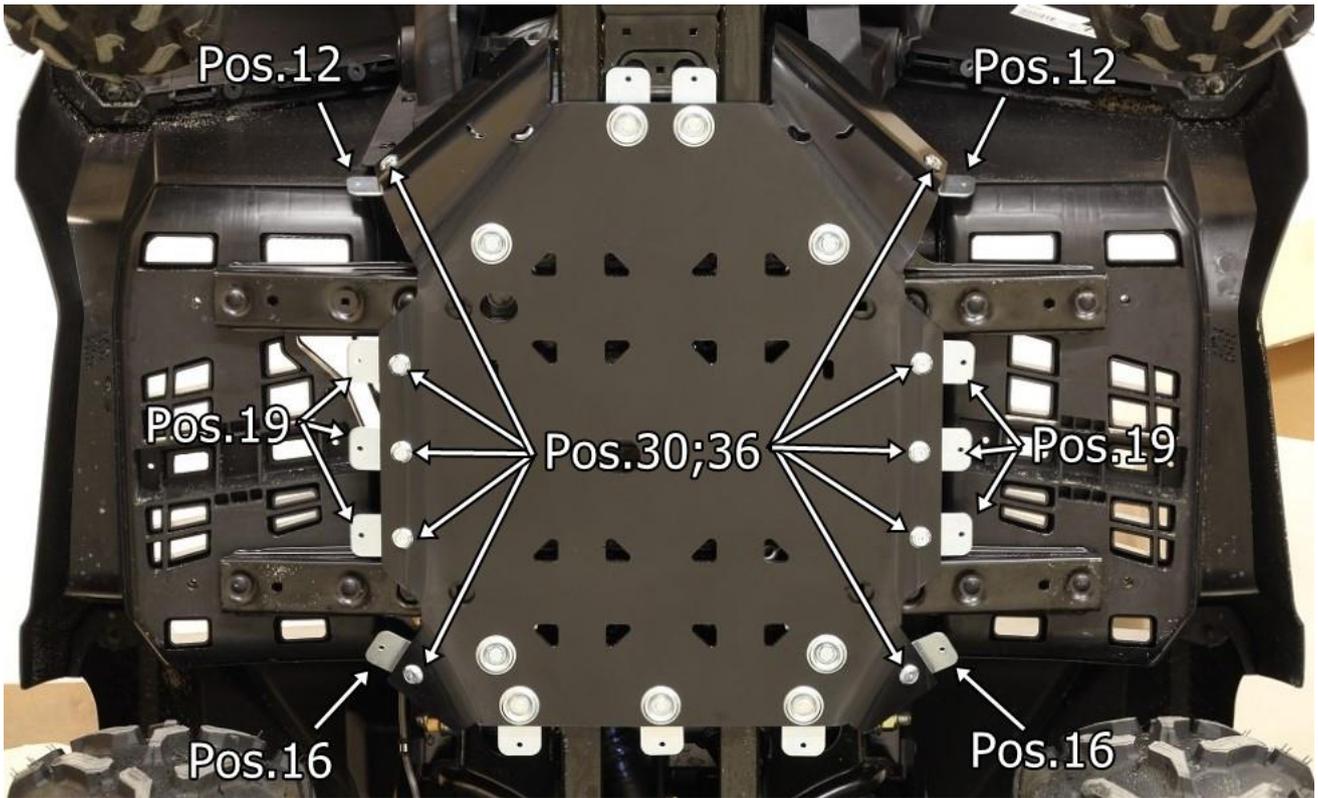


Step 5 Install right side part 02.8503 and left side part 02.8504.

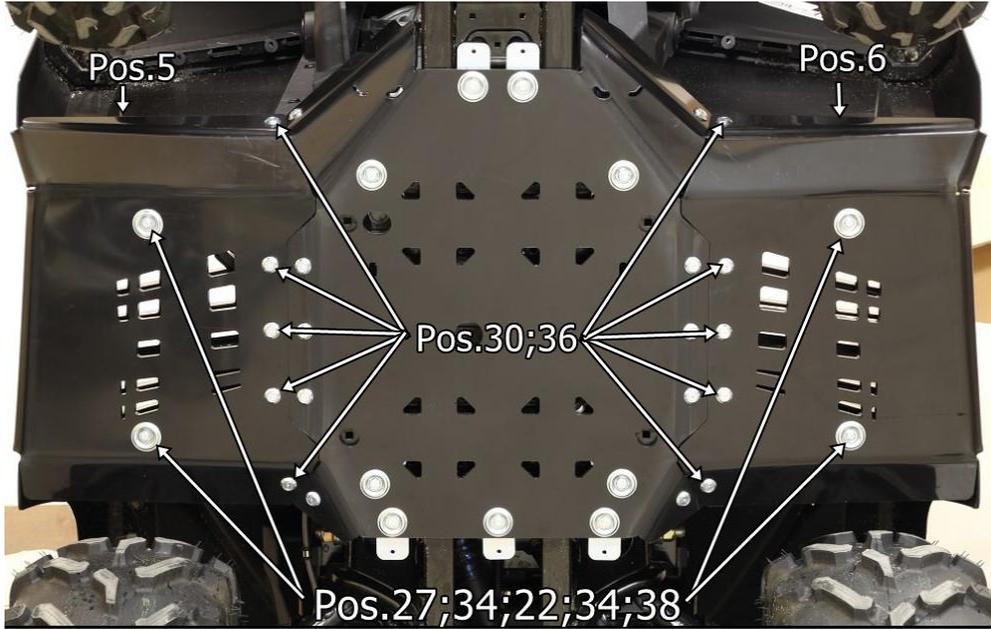


Step 6 Install front part 02.8502K.

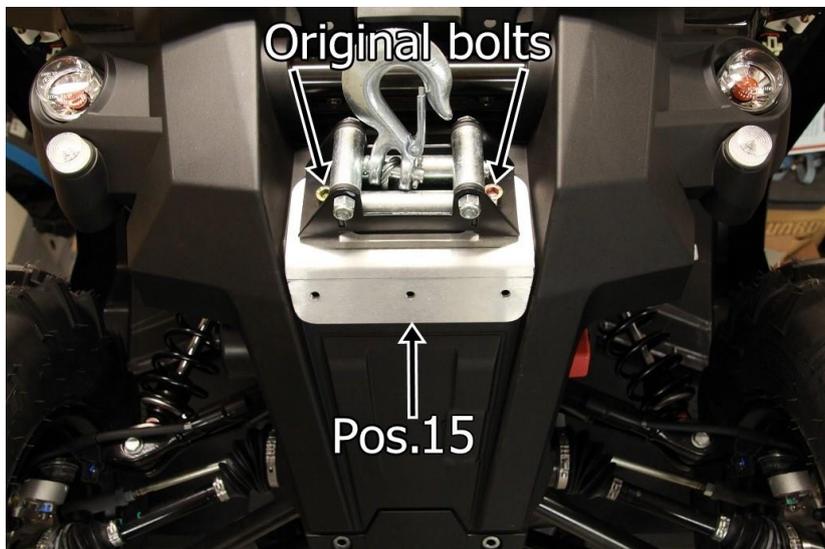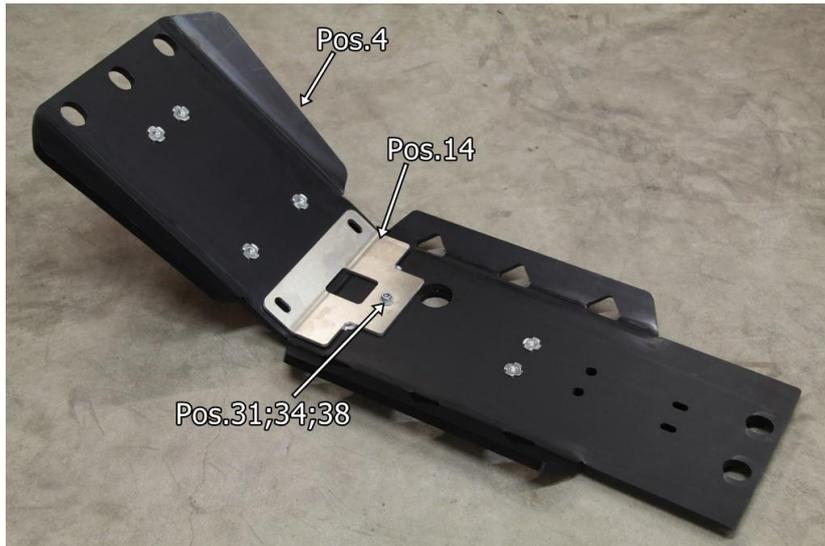


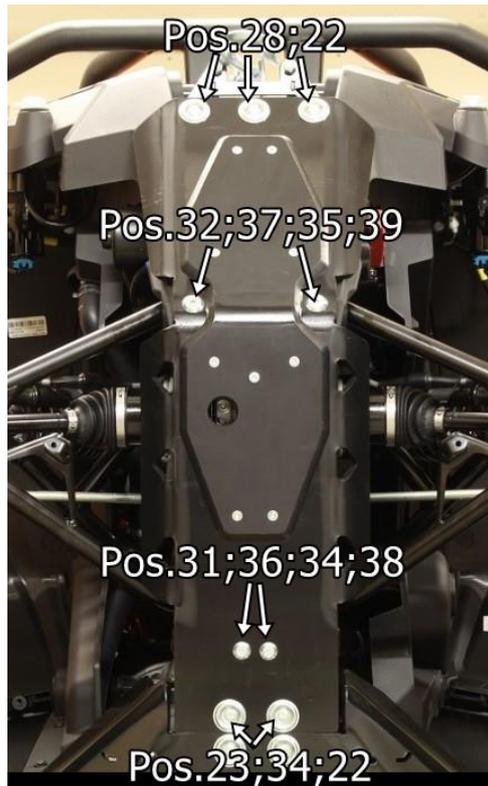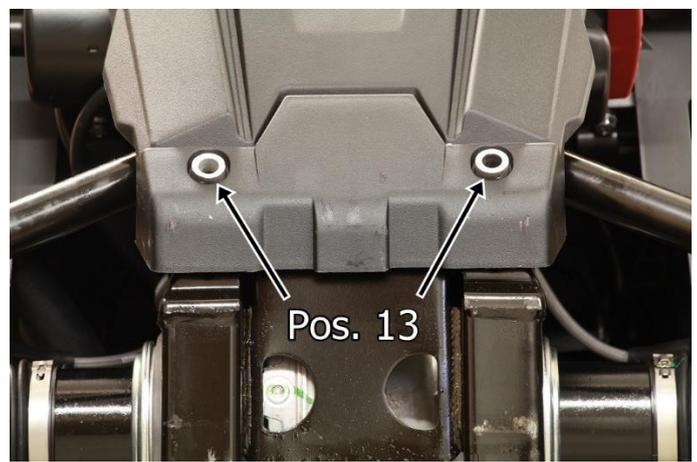


Step 7 Install first rear part 02.20401K and plates 02.5006 to the rear part.

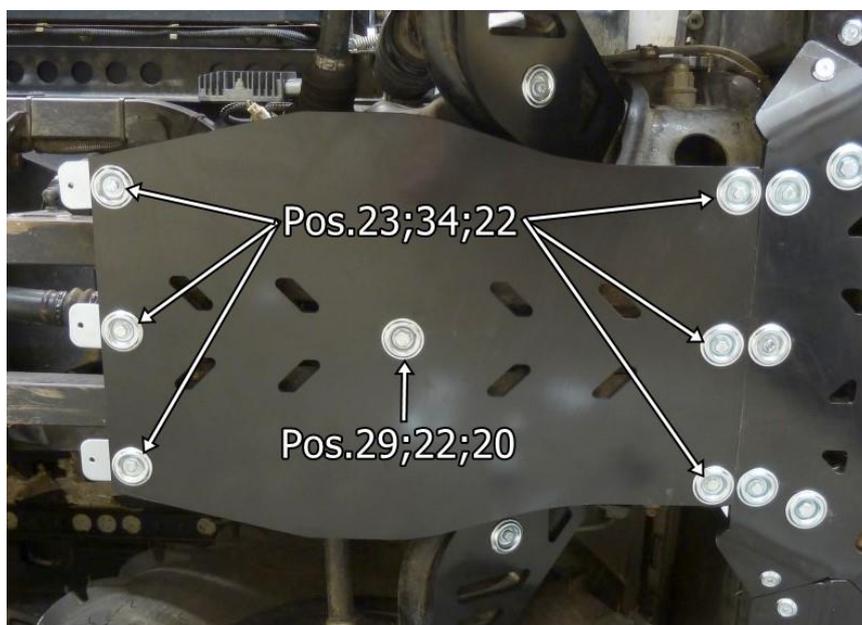


Step 8 Install first rear part 02.20402.

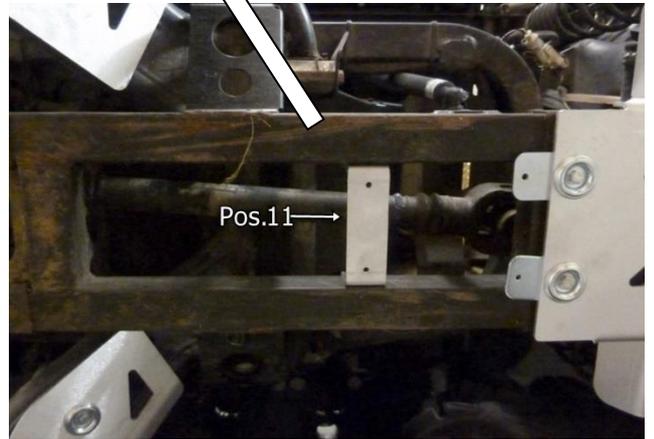

Step 9 Install front arms protections 02.8304 and 02.8305.

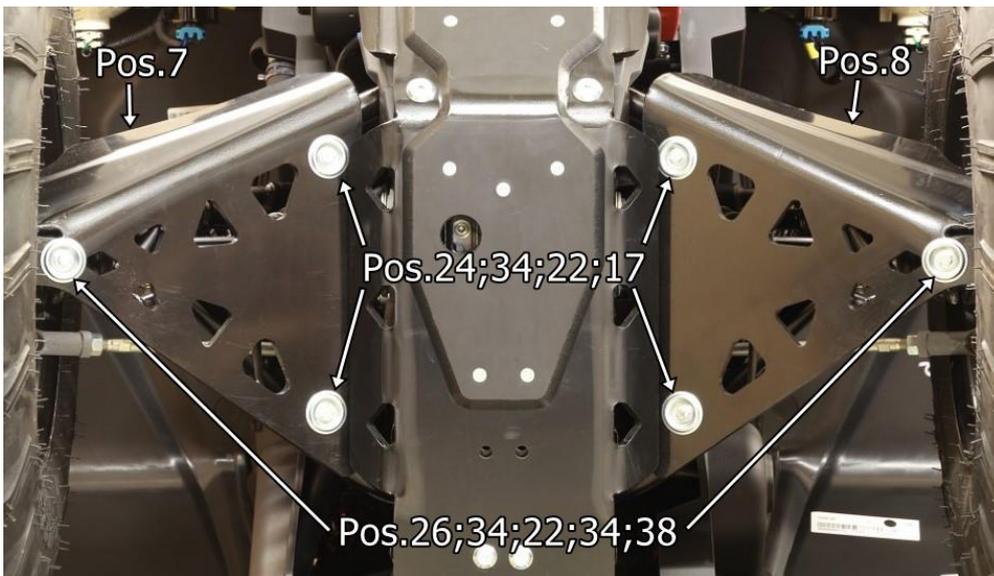

Step 10 Install rear arms protections 02.8306 and 02.8307.

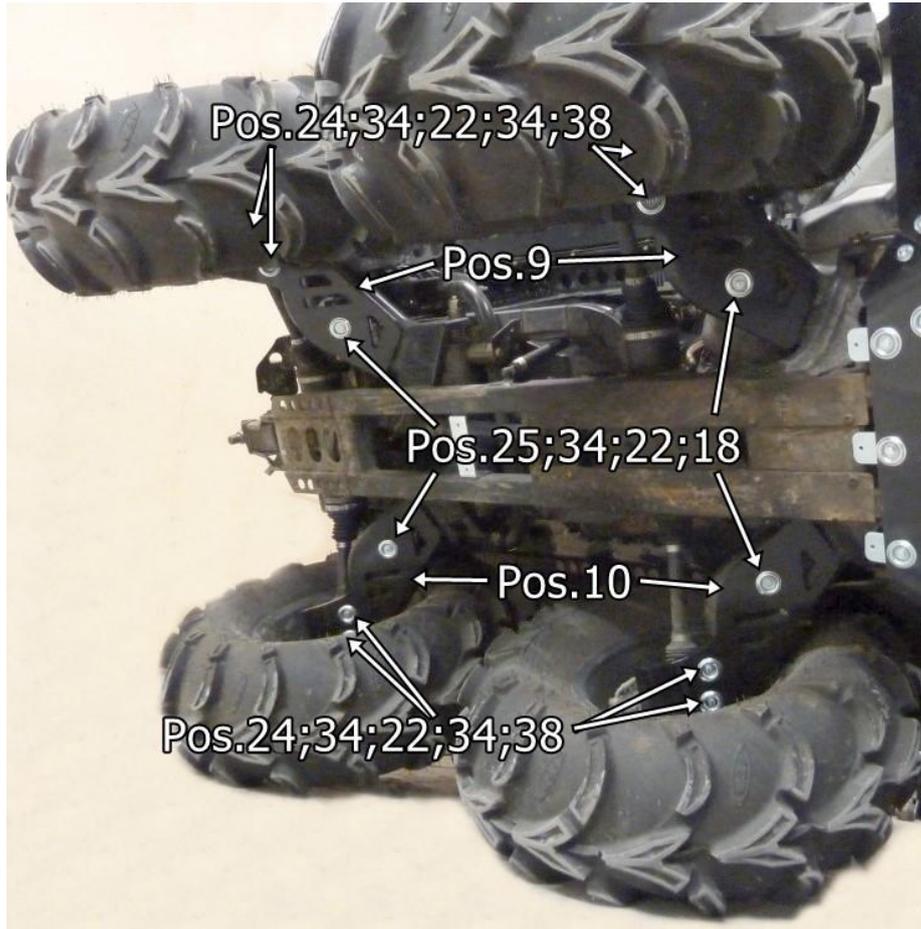

IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

