

IRON BALTIC


ALUMINIUM SKID PLATE

TGB

1000 Blade

Code 02.20500

Version 16092023

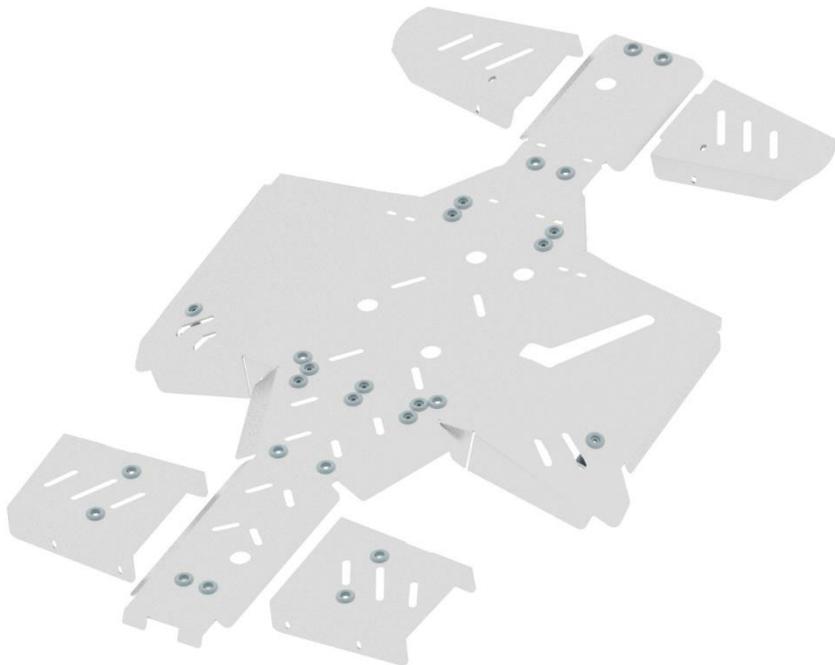

Keep this manual for future reference!

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic sales@ironbaltic.com

Iron Baltic Ltd | +372 653 3711 | sales@ironbaltic.com | www.ironbaltic.com



DOWNLOAD MULTILINGUAL
USER MANUAL



code.ironbaltic.com/u/dY1N0VWI


SPECIFICATION

Pos.	Description	Code	Amount
1	Middle protection	02.20501	1
2	Rear part	02.20502K	1
3	Rear left arm protection	02.22203	1
4	Rear right arm protection	02.22204	1
5	Front protection	02.14801K	1
6	Front left arm protection	02.14804	1
7	Front right arm protection	02.14805	1
8	Bracket	02.1419	2
9	Installation plate	02.5006	5
10	Installation bracket	02.5709	2
11	Dished washer	14.503	24
12	Bolt M6x14 DIN 933	OT.02.02.040	12
13	Bolt M6x20 DIN 933	OT.02.02.060	4
14	Bolt M6x25 DIN 933	OT.02.02.070	4
15	Bolt M6x30 DIN 933	OT.02.02.080	2
16	Bolt M6x60 DIN 933	OT.02.02.140	2
17	Bolt M6x20 DIN 7991	OT.02.04.030	12
18	Bolt M6x35 DIN 7991	OT.02.04.060	4
19	Conical washer Ø6	14.502	16
20	Washer Ø6/15 SFS 3738	OT.04.03.020	28
21	Washer Ø6/18 DIN 9021	OT.04.02.020	2
22	Nyloc nut M6 DIN 985	OT.03.02.030	6

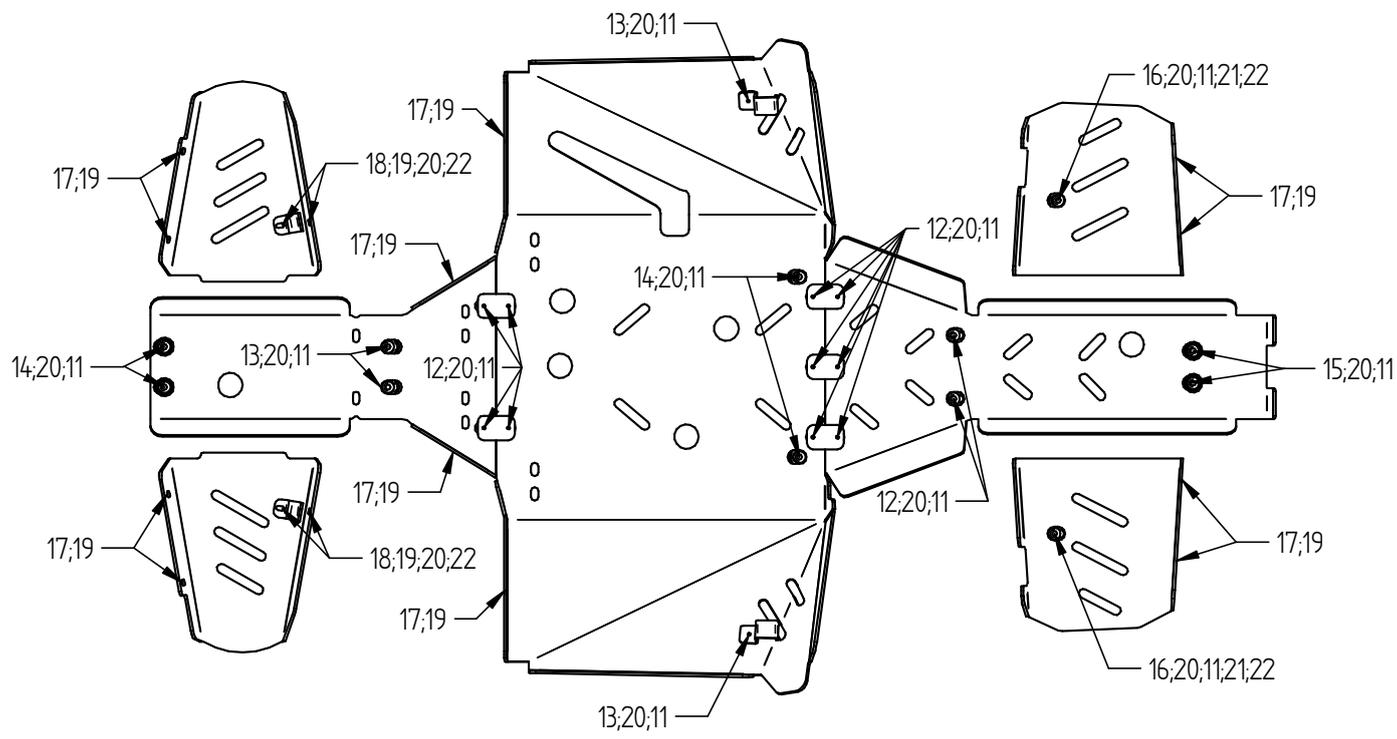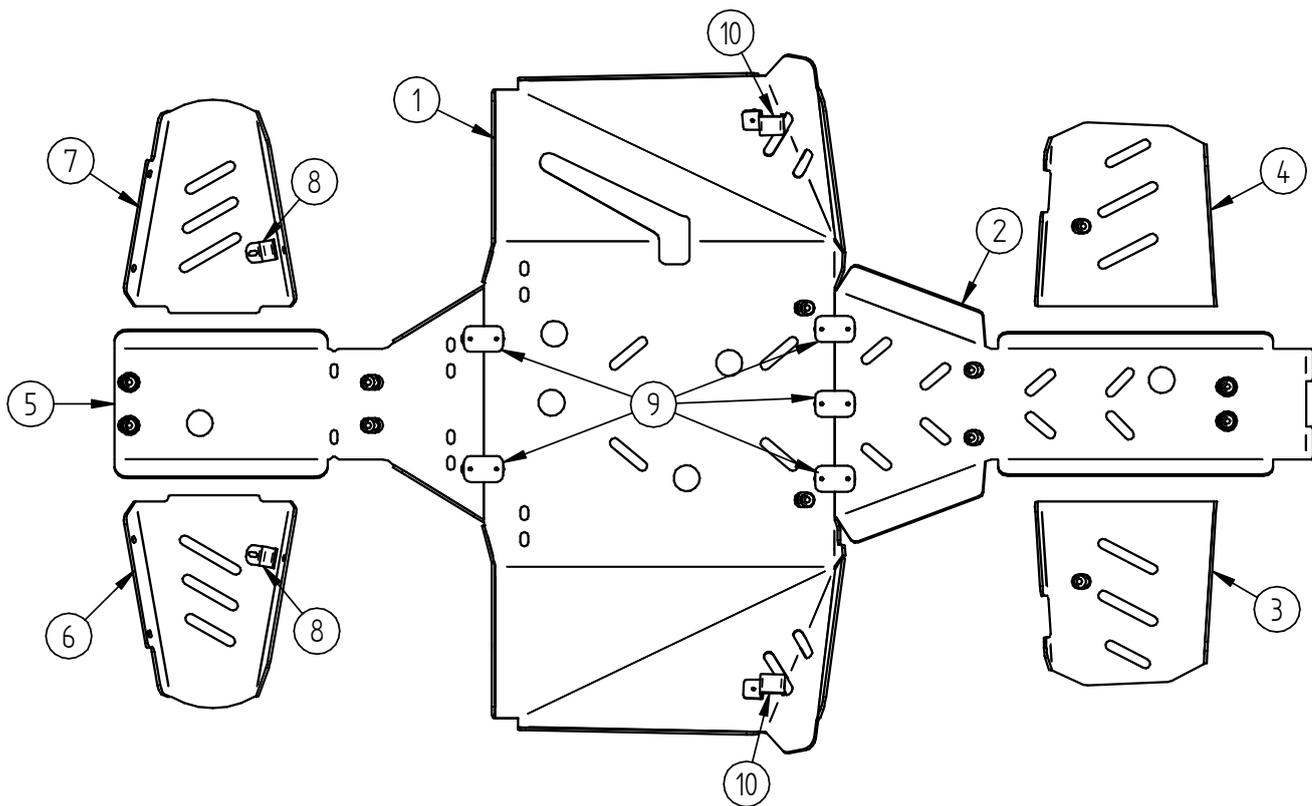


FITTING INSTRUCTIONS


Step 1 Remove all standard plastic covers. Remove also bolts indicated on the picture.

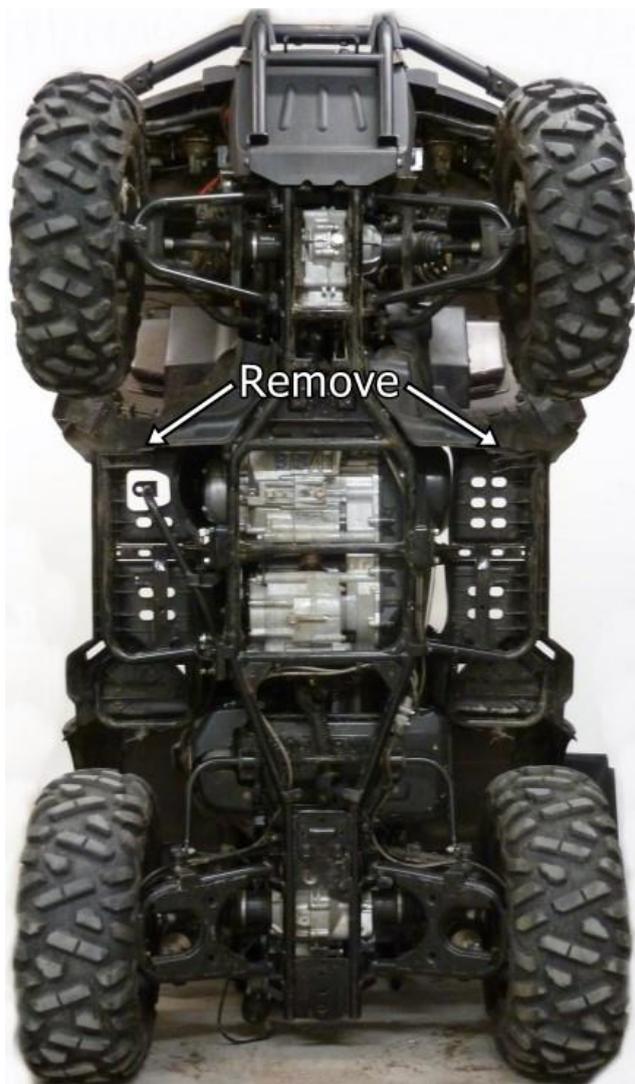


Step 2 Install front arm protections 02.14804 and 02.14805.

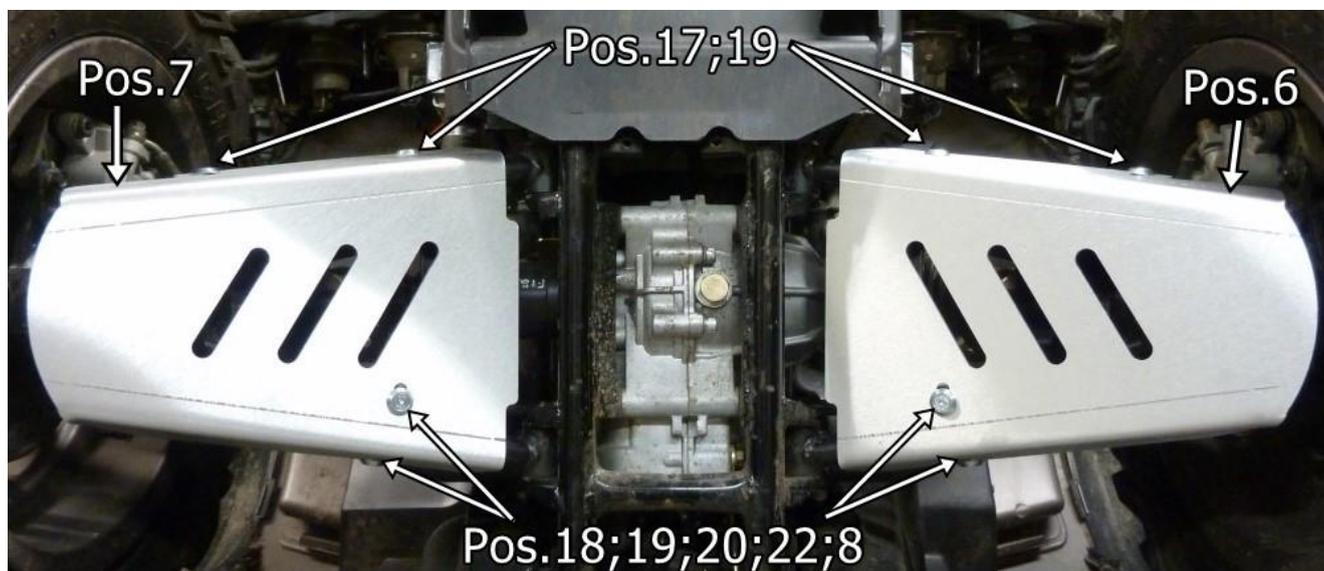


Step 3 Install rear arm protections 02.22203 and 02.22204.

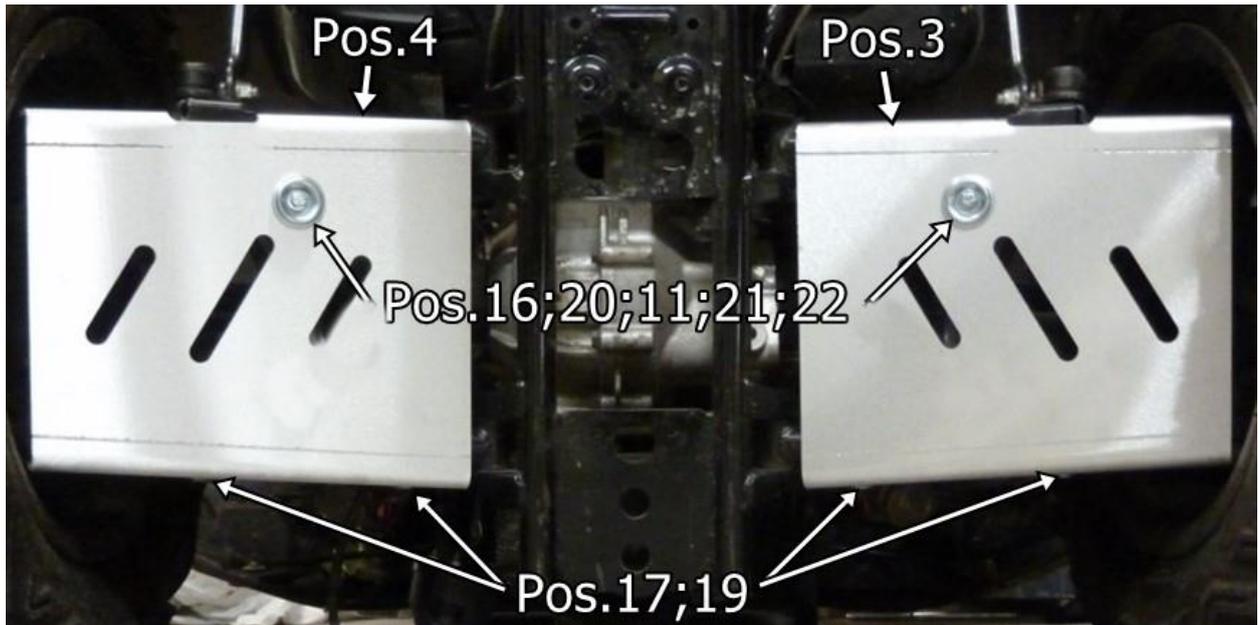


Step 4 Install front protection 02.14801K and plates 02.5006.

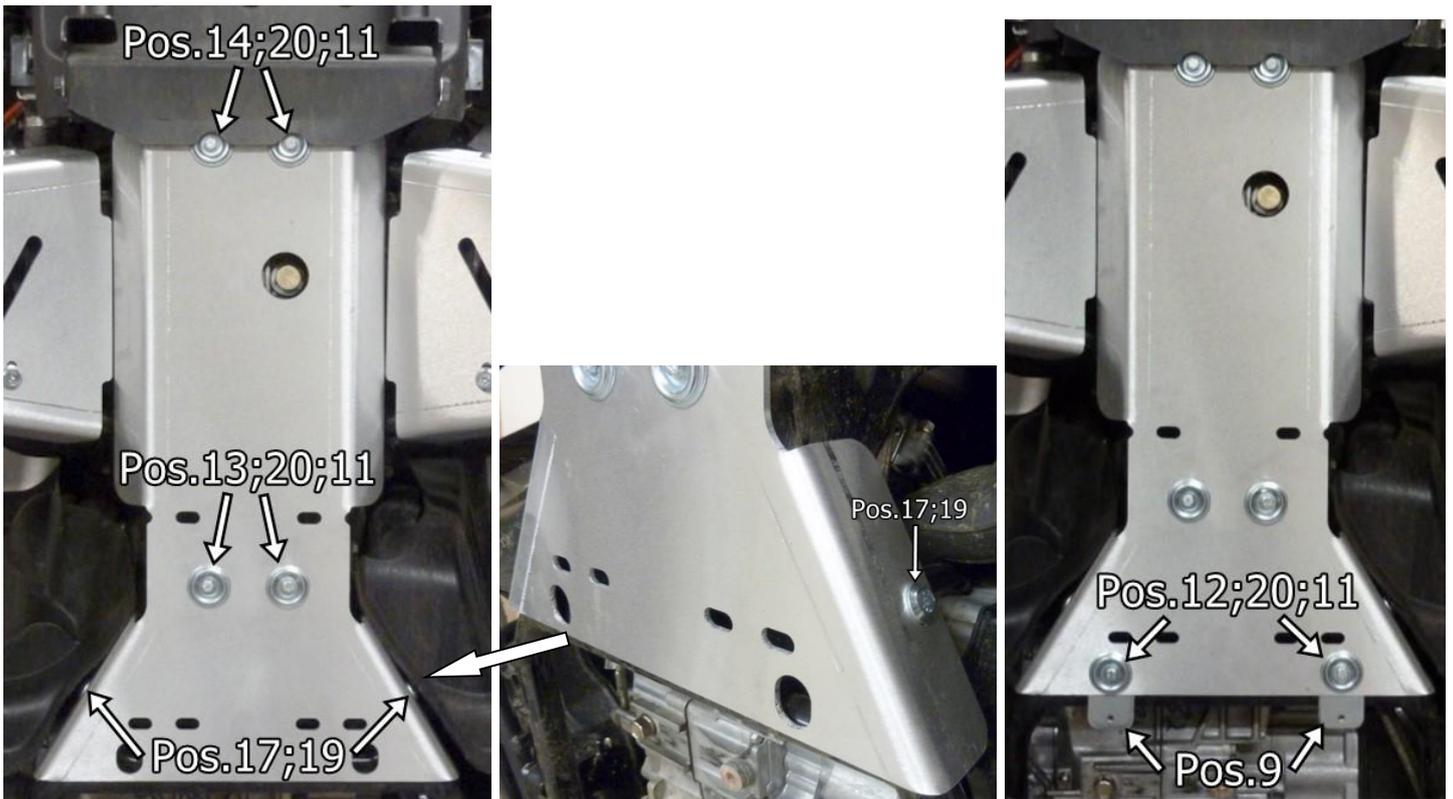

Step 5 Install middle protection 02.20501.

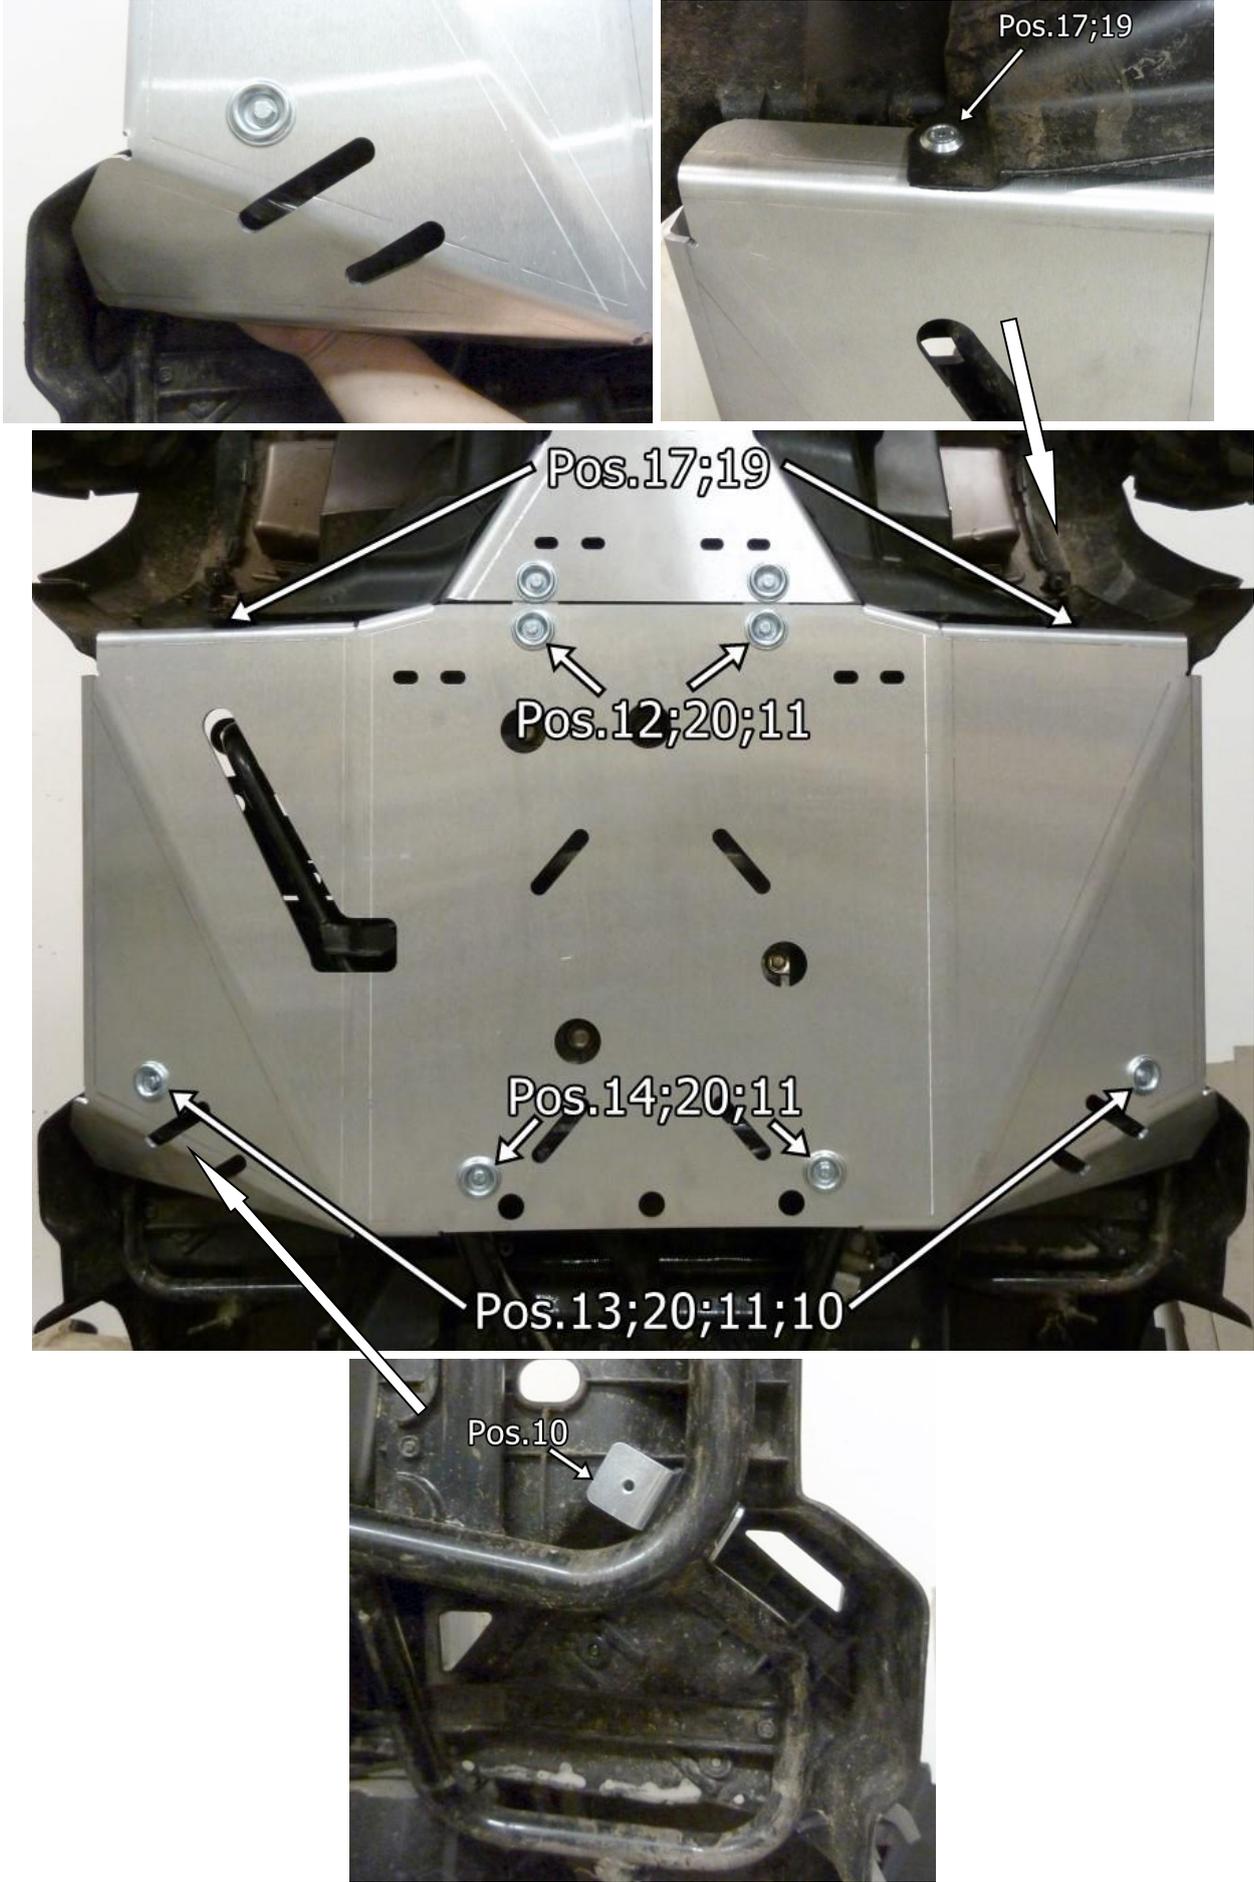

Step 6 Install plates 02.5006 to the middle protection.

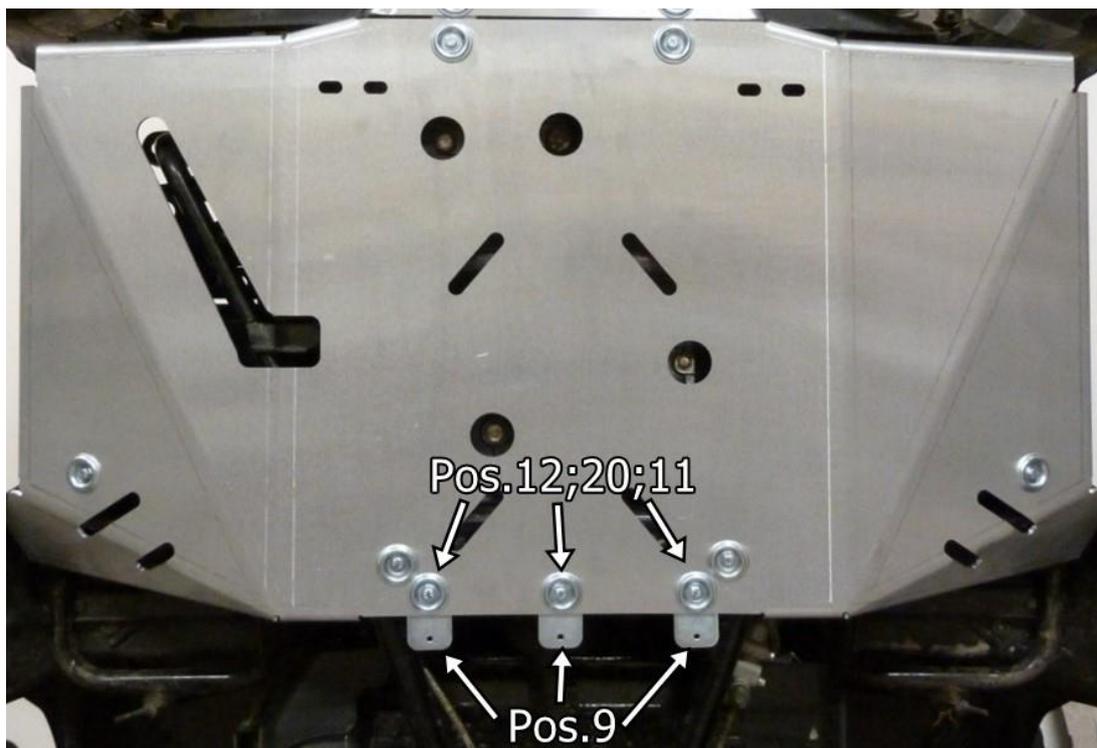

Step 7 Install rear part 02.20502K.



IRON BALTIC

IRON BALTIC OÜ
Joa tee 17
Vääna 76903
Estonia / Europe

+372 6 533 711
sales@ironbaltic.com

www.ironbaltic.com
www.facebook.com/ironbaltic
www.youtube.com/user/ironbalticLtd

