

# IRON BALTIC

## PLASTIC SKID PLATE

### CAN AM

### Outlander 6x6 (2017-...)

Code 02.21200

Version 16092023



**Keep this manual for future reference!**

If you need any spare parts, please send this packaging data to your local dealer or to Iron Baltic  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)



DOWNLOAD MULTILINGUAL  
USER MANUAL



[code.ironbaltic.com/u/8BR1oC8s](https://code.ironbaltic.com/u/8BR1oC8s)

# SPECIFICATION

Pos.	Description	Code	Amount
1	Rear part 1	02.20401K	1
2	Rear part 1	02.20402	1
3	Rear right trailing arm protection	02.18901	2
4	Rear left trailing arm protection	02.18902	2
5	Middle part	02.8501	1
6	Front part	02.8502K	1
7	Right side part	02.8503	1
8	Left side part	02.8504	1
9	Front right arm protection	02.8304	1
10	Front left arm protection	02.8305	1
11	Rear part bracket	02.20303	1
12	Rear arm protection clamp	02.18803	4
13	Bracket	02.18804	4
14	Bracket (80)	02.18805	4
15	Bracket (100)	02.18806	4
16	Connecting plate (40)	02.10006	2
17	Bush for front part	02.10005	2
18	Plate for front part	02.10004	1
19	Front part bracket	02.8506	1
20	Connecting plate (20)	02.8311	2
21	Clamp for front arm protection	02.8210	4
22	Plate	02.5006	14
23	Plate	02.2305	3
24	Bracket	03.3502	4
25	Dished washer	14.503	54
26	Bolt M6x16 DIN 933	OT.02.02.050	16
27	Bolt M6x20 DIN 933	OT.02.02.060	10
28	Bolt M6x25 DIN 933	OT.02.02.070	4
29	Bolt M6x40 DIN 933	OT.02.02.100	2
30	Bolt M6x60 DIN 933	OT.02.02.140	4
31	Bolt M8x20 DIN 933	OT.02.02.180	21
32	Bolt M8x40 DIN 933	OT.02.02.220	1
33	Bolt M10x30 DIN 933	OT.02.02.320	4
34	Bolt M6x20 DIN 7991	OT.02.04.030	20
35	Bolt M6x30 DIN 7991	OT.02.04.050	3
36	Bolt M8x60 DIN 7991	OT.02.04.210	2
37	Carriage bolt M8x25 DIN 603	OT.02.05.060	8
38	Washer Ø6/15 SFS 3738	OT.04.03.020	45
39	Washer Ø8/20 SFS 3738	OT.04.03.030	10
40	Washer Ø10/20 DIN 125	OT.04.01.040	8
41	Conical washer Ø6	14.502	22
42	Conical washer Ø8	14.501	2
43	Nyloc nut M6 DIN 985	OT.03.02.030	9
44	Nyloc nut M8 DIN 985	OT.03.02.040	10
45	Nyloc nut M10 DIN 985	OT.03.02.050	4

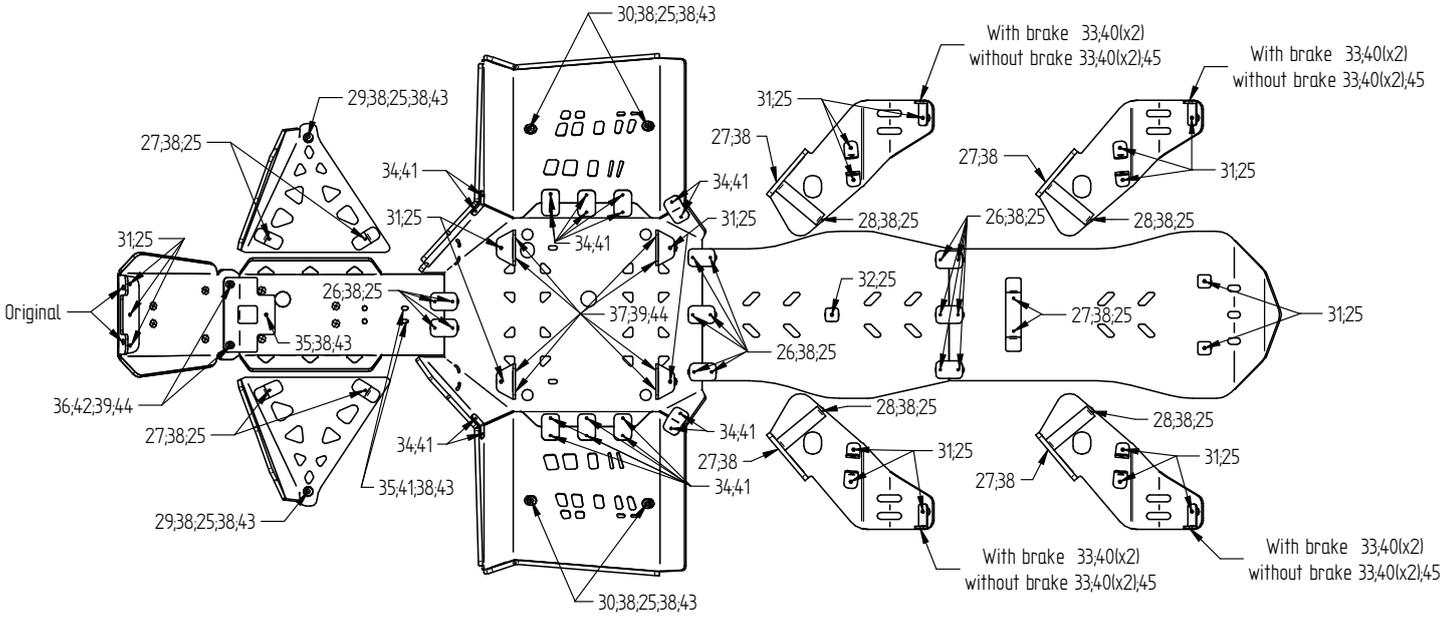
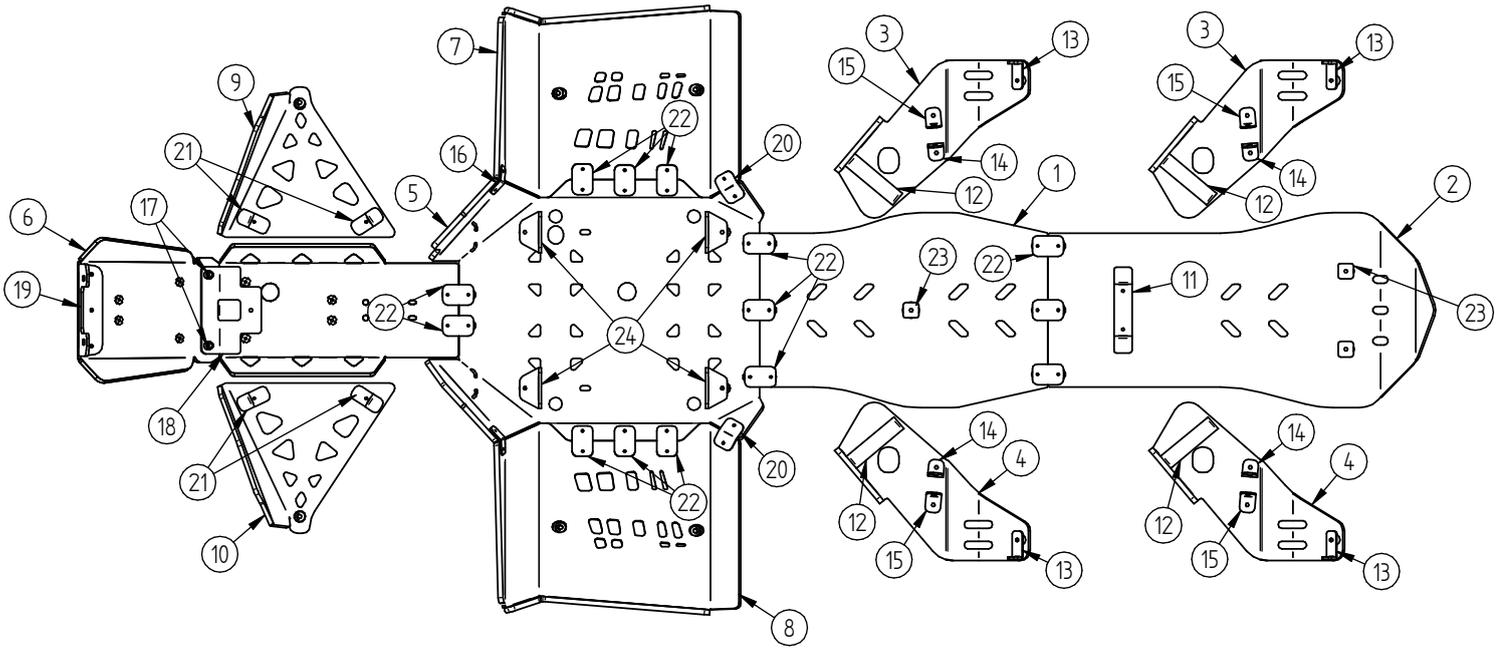


# FITTING INSTRUCTIONS


**Step 1** Remove all standard plastic covers.





**Step 2** Install brackets 03.3502. Place brackets same plane as frame.

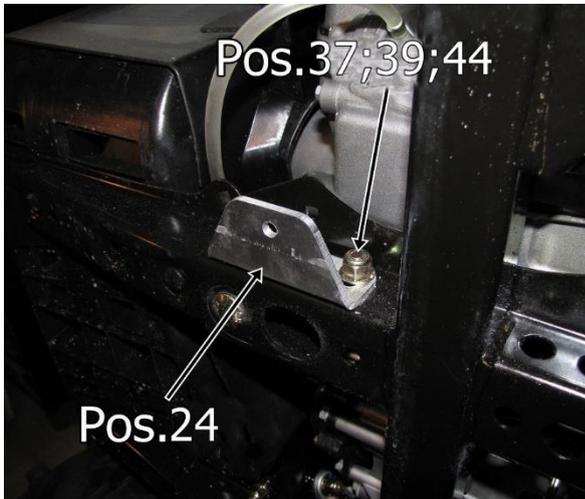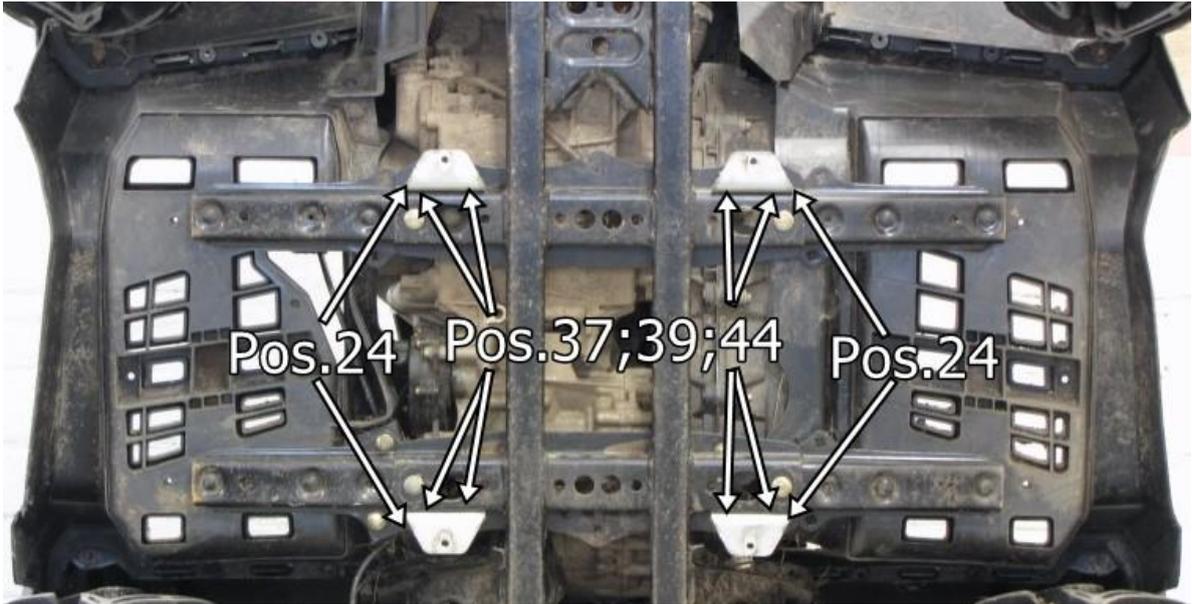


**Step 3** Install middle part 02.8501.

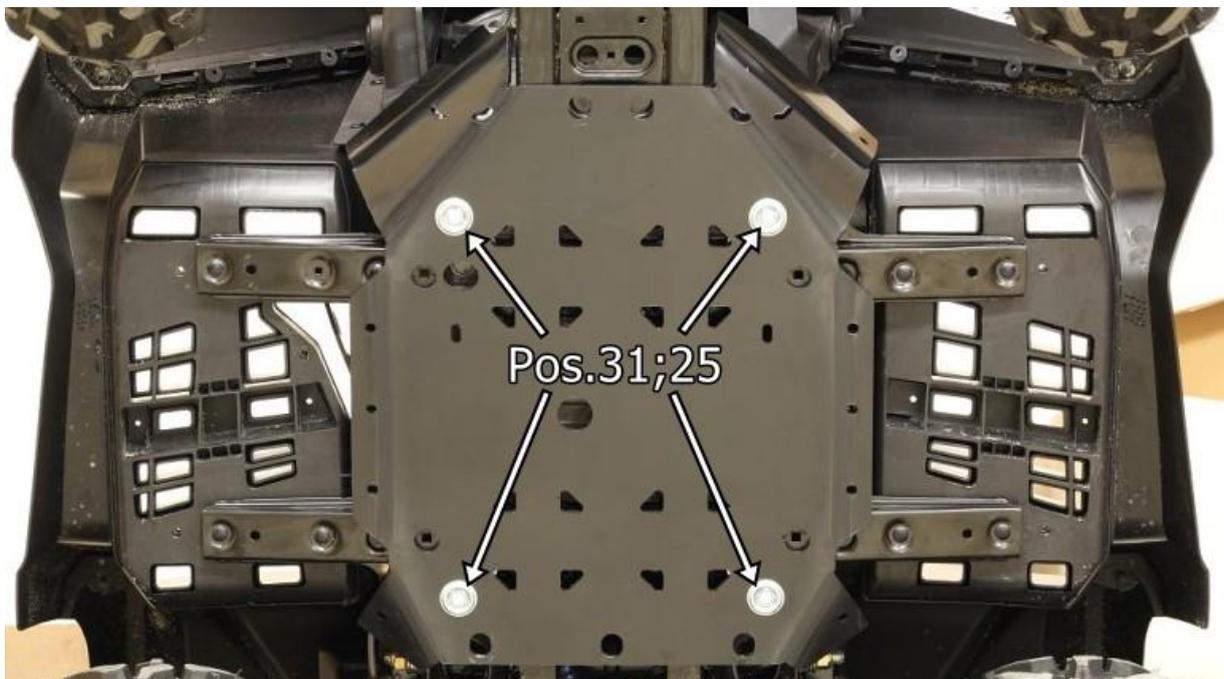



**Step 4** Install plates 02.5006, 02.8311, 02.10006 to middle part.

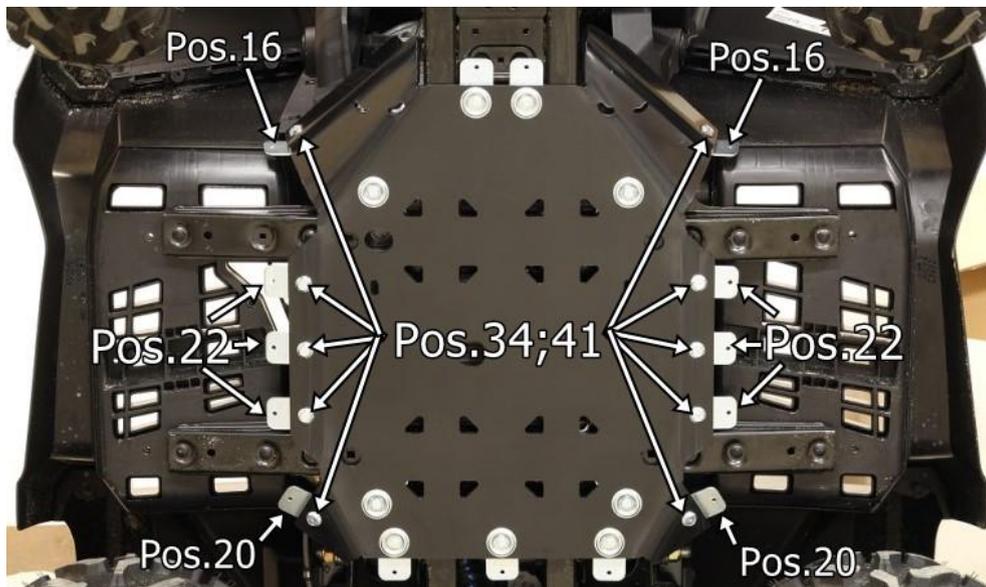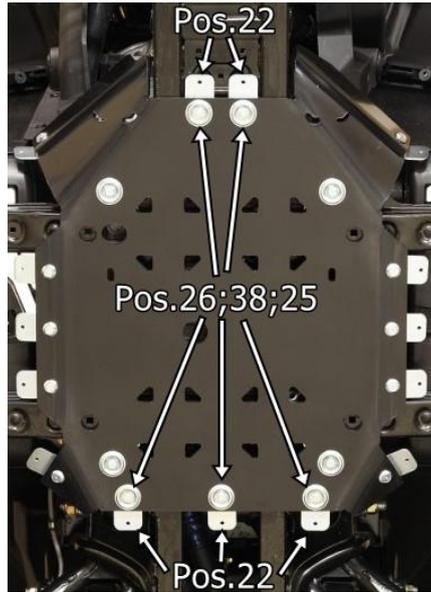


**Step 5** Install right side part 02.8503 and left side part 02.8504.

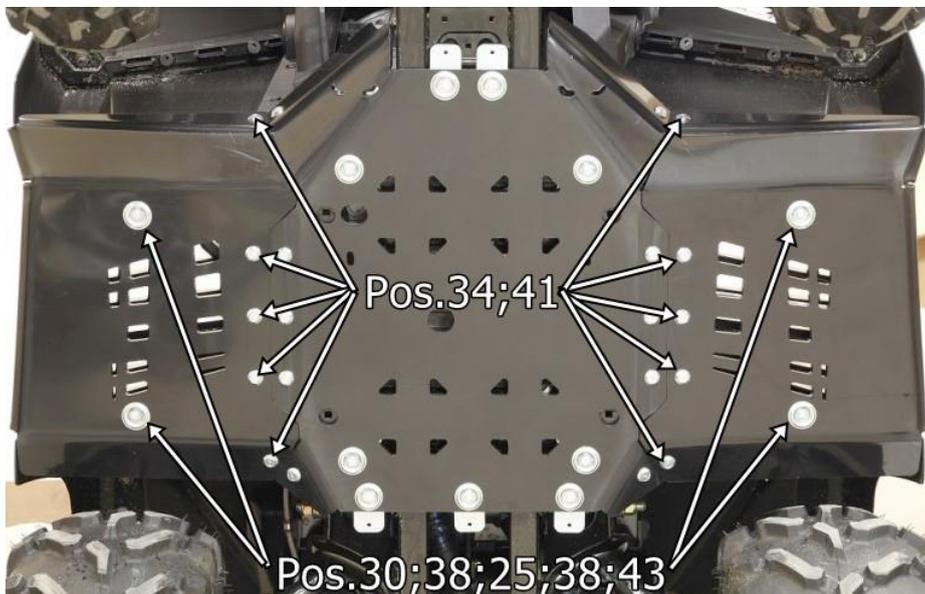


**Step 6** Install front part 02.8502K.

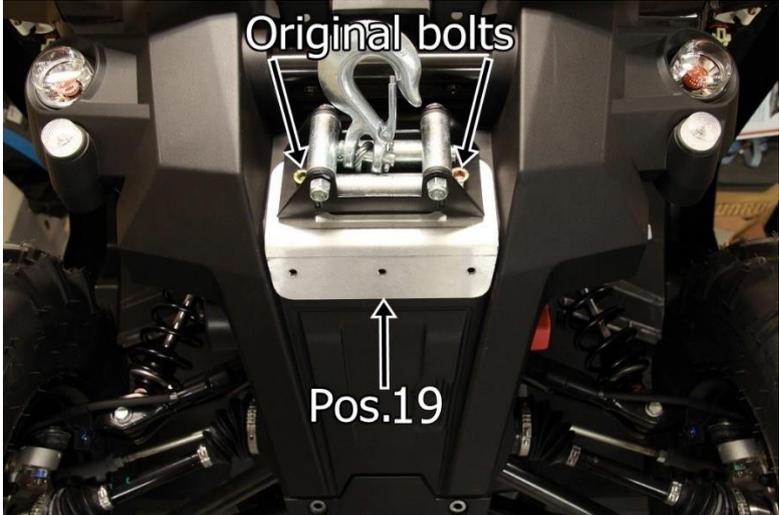
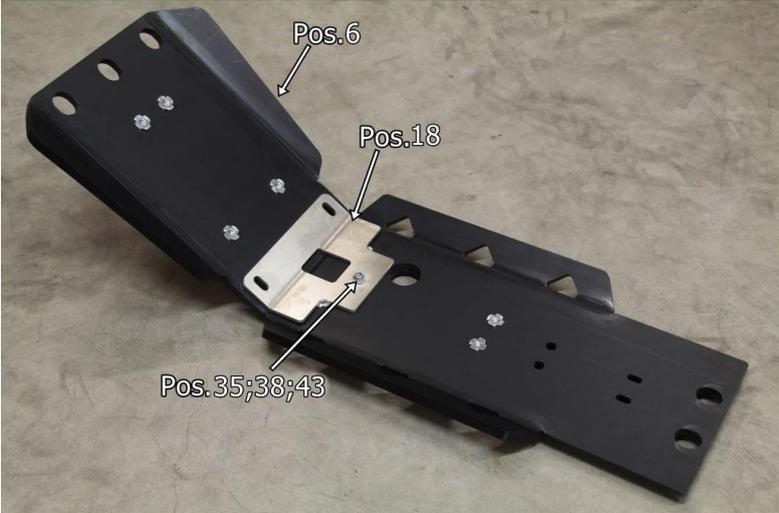


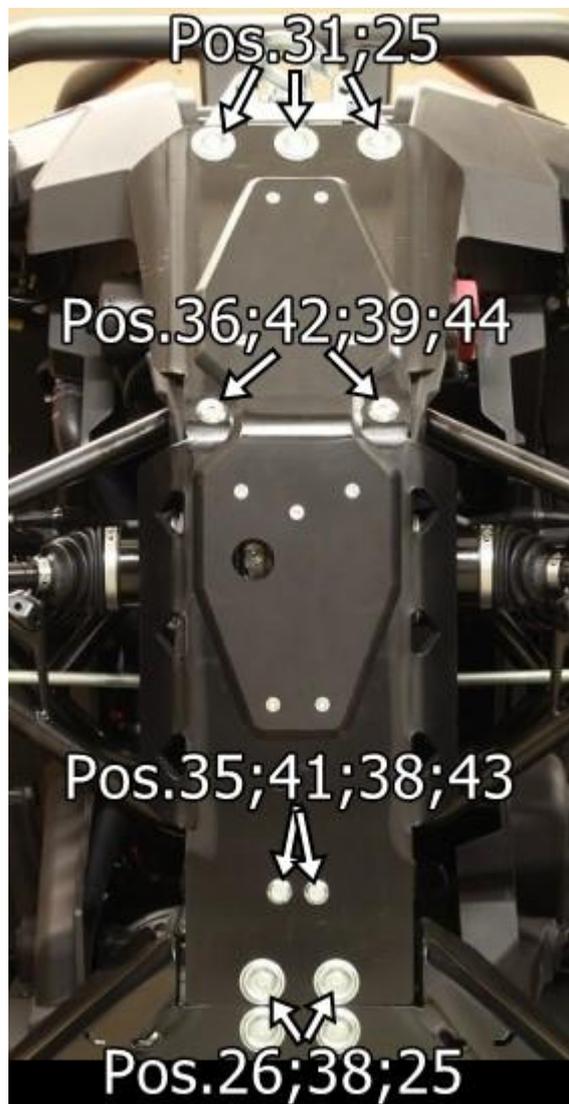


**Step 7** Install first rear part 02.20401K and plates 02.5006 to the rear part.

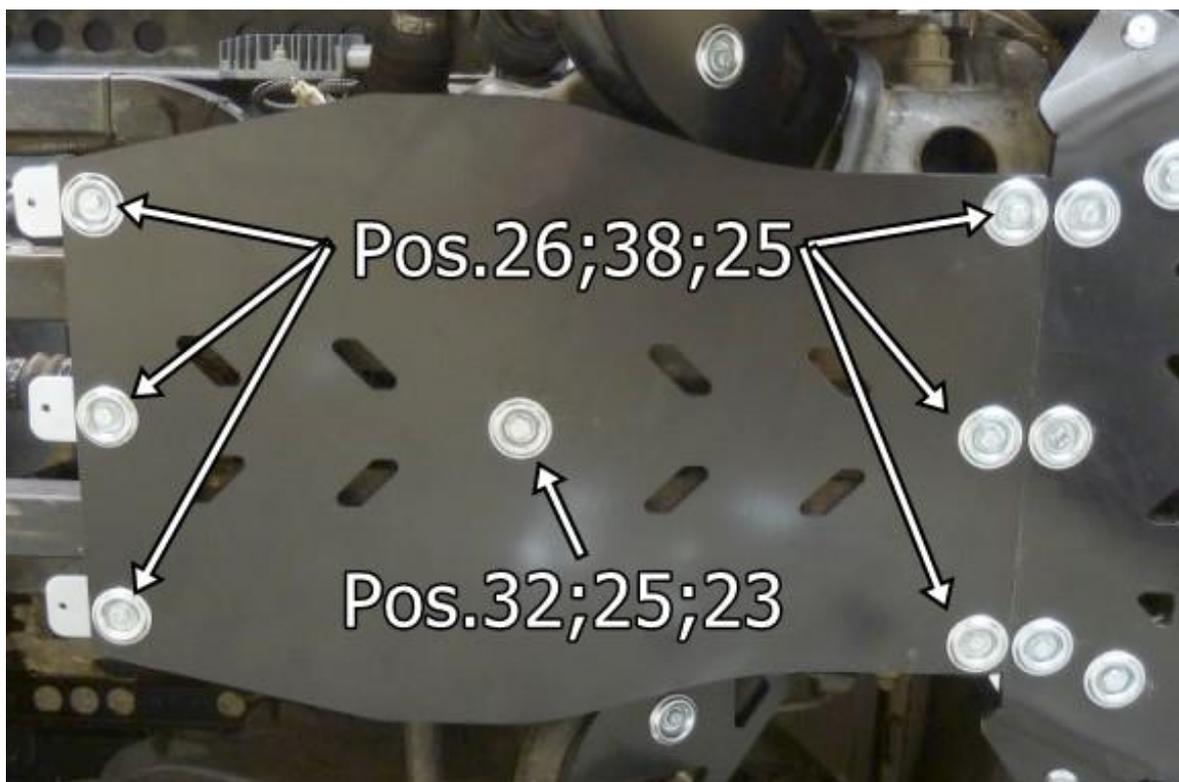

**Step 8** Install first rear part 02.20402.

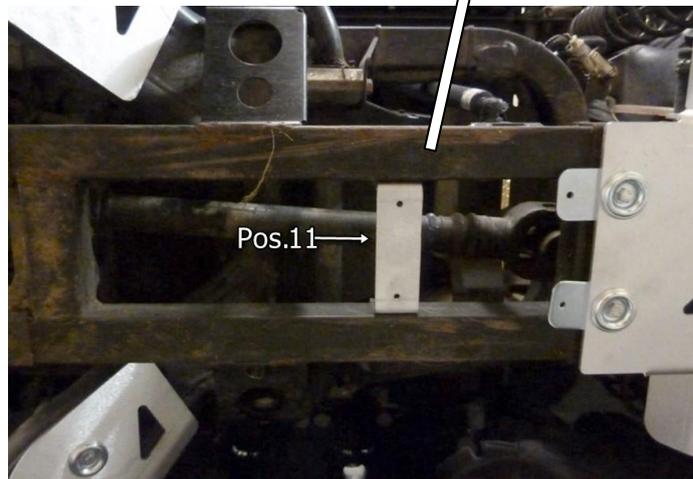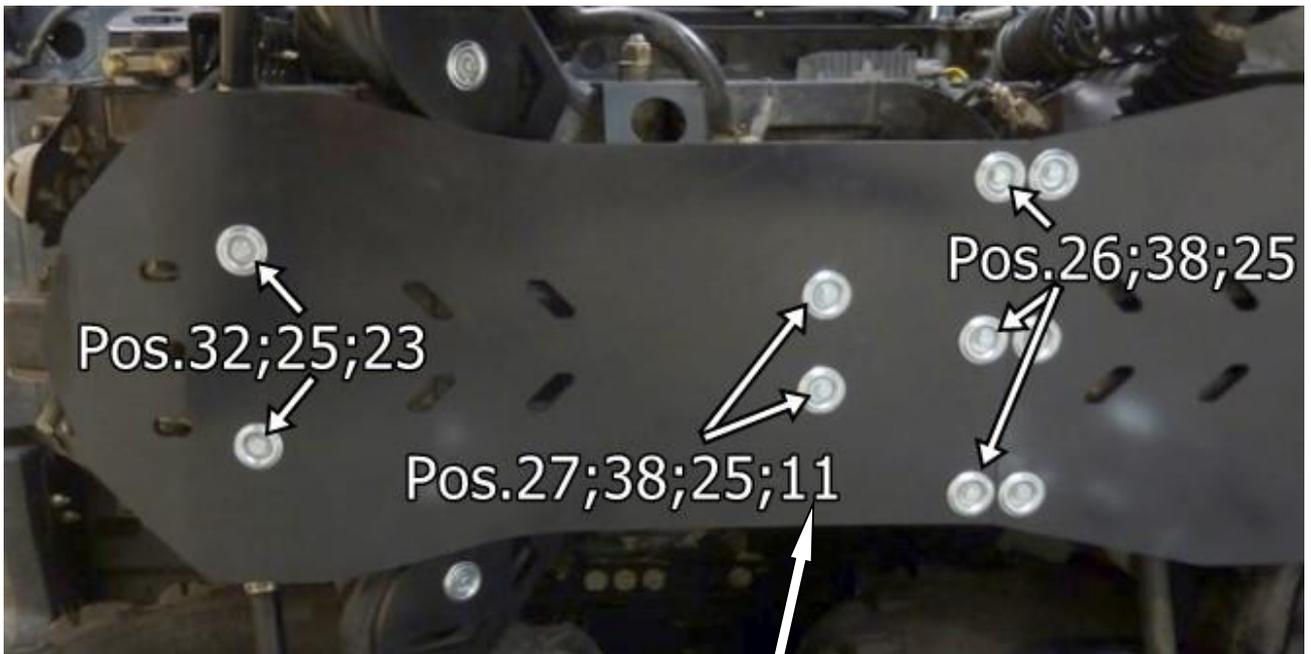


**Step 9** Install front arms protections 02.8304 and 02.8305.

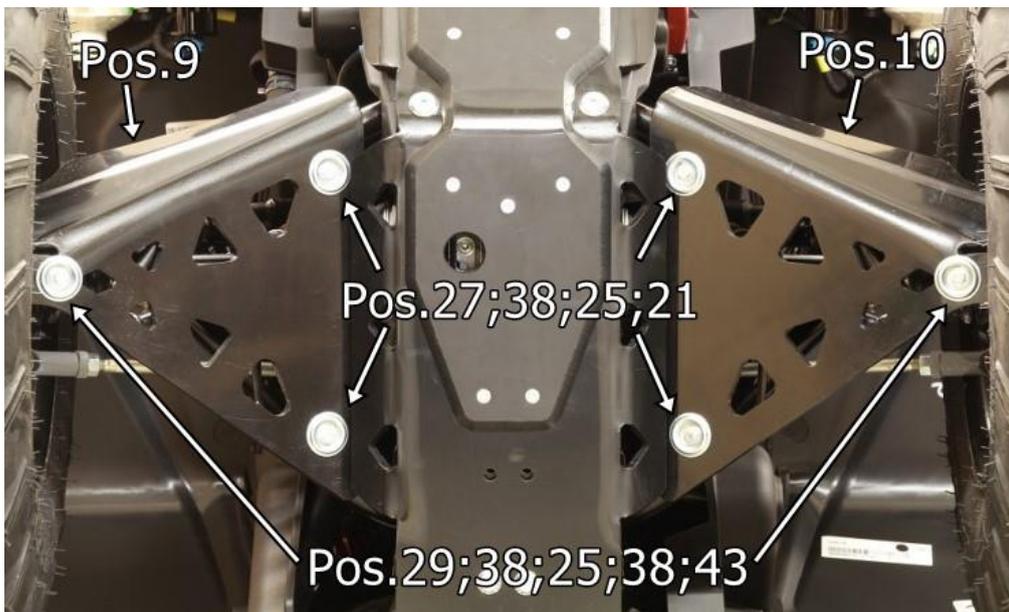


**Step 10** Install brackets 02.18804, 02.18805, 02.18806.

Wheel with brake

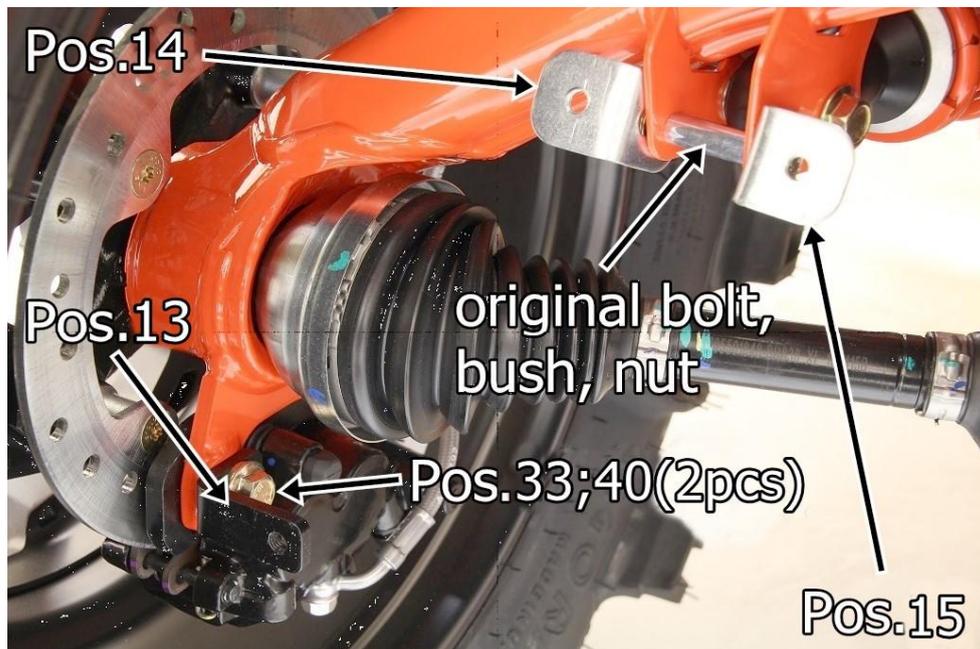

Wheel without brake

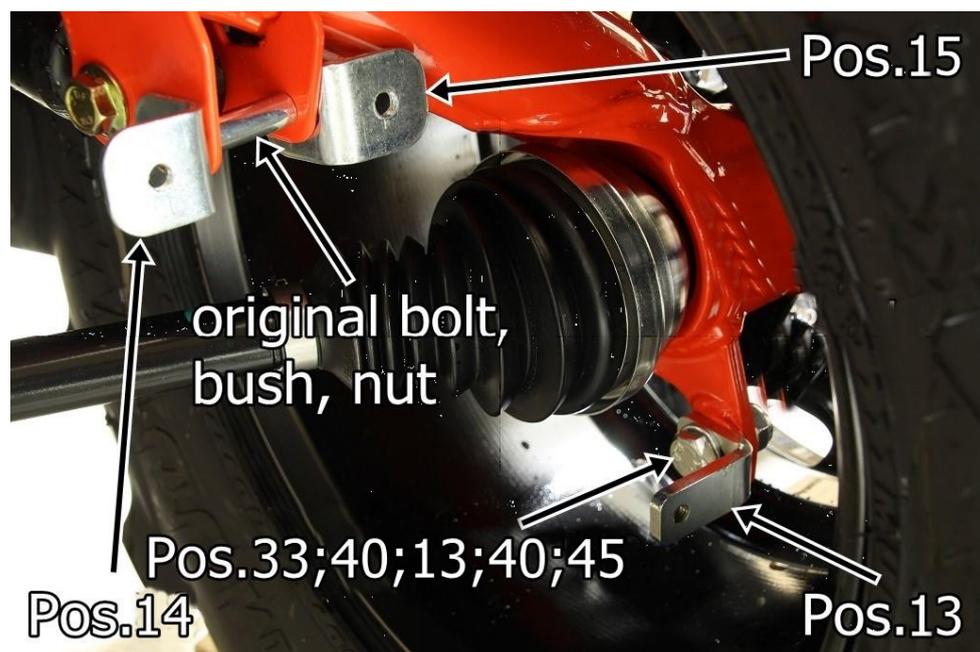

**NB!**

**Kontrolli, et poldi Pos.33 ja piduriketta vahele jääks piisav vahe (min 2mm).**

**Step 11** Install rear arm protections 02.18901 and 02.18902.



# IRON BALTIC

IRON BALTIC OÜ  
Joa tee 17  
Vääna 76903  
Estonia / Europe

+372 6 533 711  
[sales@ironbaltic.com](mailto:sales@ironbaltic.com)

[www.ironbaltic.com](http://www.ironbaltic.com)  
[www.facebook.com/ironbaltic](https://www.facebook.com/ironbaltic)  
[www.youtube.com/user/ironbalticLtd](https://www.youtube.com/user/ironbalticLtd)

